

**A**

A/C-ECU	
Removal and installation .....	55-129
ABS, ASC, acd, ayc and s-awc <M/T>.....	90-244
ABS, ASC, acd, ayc and s-awc <tc-sst> .....	90-254
Accessory socket	
General information .....	54A-270
Removal and installation .....	54A-270
Accessory socket and cigarette lighter.....	90-242
Adjustment snap ring and spacers.....	22B-6
Air bag module and seat belt pre-tensioner disposal procedures .....	52B-417
Air cleaner	
Removal and installation .....	15-10
Air conditioning system .....	90-190
Ambient temperature sensor	
Inspection .....	55-127
Removal and installation .....	55-127
Amplifier	
General information .....	54A-568
Removal and installation .....	54A-569
Antenna	
General information .....	54A-566
Removal and installation .....	54A-567
ASC off switch	
Inspection .....	35C-271
Removal and installation .....	35C-271
Audio system <vehicles with audio amplifier> .....	90-216
Audio system <vehicles without audio amplifier> .....	90-210
Auto A/C diagnosis	
Actuator test .....	55-109
Check at A/C-ECU terminal .....	55-109
Data list reference table.....	55-105
Diagnostic function .....	55-7
Diagnostic trouble code chart.....	55-9
Diagnostic trouble code procedures	
DTC B1000: control panel communication error.....	55-13
DTC B1003: mode dial sw error .....	55-17
DTC B1018: temperature control dial sw error .....	55-21
DTC B1021: fan dial sw error .....	55-24
DTC B1031, B1032: fin thermo sensor system .....	55-27
DTC B1034, B1035: ambient air temperature sensor system .....	55-30
DTC B1079: refrigerant leaks .....	55-33
DTC b10c0, b10c1: interior temperature sensor system .....	55-10
DTC B2214: control panel failure .....	55-37
DTC b223b: control panel improperly assembled.....	55-41
DTC U0019: bus off (can1).....	55-46
DTC U0141: ETACS-ECU time-out .....	55-47
DTC U0151: SRS-ECU time-out.....	55-50
DTC U0154: occupant classification ECU time out ...	55-52
DTC U0155: combination meter time-out .....	55-55
DTC U0168: wcm time-out .....	55-58
DTC U0184: audio time-out .....	55-60
DTC U0195: satellite radio tuner CAN timeout .....	55-63
DTC U0197: hands free module time-out .....	55-65
DTC U0245: audio visual navigation unit CAN timeout .....	55-68
DTC U1415: coding not completed.....	55-44
Heater, A/C and ventilation diagnostic troubleshooting strategy.....	55-6
Introduction to heater, A/C and ventilation diagnosis .....	55-6
Symptom chart .....	55-71
Symptom procedures	
Inspection procedure 1: when the A/C is operation, temperature inside the passenger compartment does not decrease (cool air is not emitted).....	55-72
Inspection procedure 2: malfunction of the A/C-ECU power supply system.....	55-74
Inspection procedure 3: the compressor does not work.	55-78
Inspection procedure 4: blower fan and motor do not turn.	55-85
Inspection procedure 5: blower air amount cannot be changed.....	55-90
Inspection procedure 6: outside/inside air changeover is not possible.....	55-93
Inspection procedure 7: A/C outlet air temperature does not increase.....	55-95
Inspection procedure 8: air outlet vent cannot be changed.....	55-98
Inspection procedure 9: blower motor power supply system.....	55-101
Auto-cruise control	
Auto-cruise control switch	
Removal and installation .....	17-69
Auto-cruise control system diagnosis	
Diagnostic function.....	17-10
Diagnostic troubleshooting strategy.....	17-10
Introduction to cruise control system diagnosis .....	17-10
Data list reference table .....	17-59
Diagnostic trouble code chart .....	17-13
Diagnostic trouble code procedures	
DTC 15: cruise control switch system.....	17-14
DTC 22: stoplight switch system.....	17-27
DTC 23: ECM and its related component .....	17-36
ECM terminal voltage reference chart for cruise control system operation .....	17-60
General information .....	17-9
On-vehicle service	
Cruise control switch check .....	17-65
Cruise control system component check .....	17-67
Special tools.....	17-63
Symptom chart.....	17-38
Symptom procedures	
Inspection procedure 1: when the brake pedal is depressed, cruise control system is not cancelled.....	17-38
Inspection procedure 2: when the clutch pedal is depressed, cruise control system is not cancelled <M/T> .....	17-41
Inspection procedure 3: when the shift lever is moved to "N" position, cruise control system is not cancelled <tc-sst> .....	17-44
Inspection procedure 4: when the cruise control "CANCEL" switch is set to on, cruise control system is not cancelled.	17-47
Inspection procedure 5: cruise control cannot be set ("coast/set" or "acc/res" switch operation is not available).	17-48
Inspection procedure 6: hunting (repeated acceleration and deceleration) occurs at the set vehicle speed....	17-53
Inspection procedure 7: when "on/off" switch is turned on, "CRUISE" indicator light inside combination meter does not illuminate (however, cruise control system is normal).....	17-56
Auto-cruise control system <M/T> .....	90-276
Auto-cruise control system <tc-sst> .....	90-282
Awc-ECU	
Removal and installation .....	22A-132
Manual transaxle.....	22C-349
Twin clutch-sportronic shift transmission (tc-sst) .....	
<b>B</b>	
Backup light <M/T>.....	90-134
Backup light <tc-sst> .....	90-136
Basic brake system diagnosis	
Basic brake system diagnostic troubleshooting strategy .....	35A-4
Introduction to basic brake system diagnosis .....	35A-4
Symptom chart.....	35A-4
Symptom procedures	
Inspection procedure 1: vehicle pulls to one side when brakes are applied.....	35A-5
Inspection procedure 2: insufficient braking power .....	35A-5
Inspection procedure 3: increased pedal stroke (reduced pedal-to-floor board clearance).....	35A-6
Inspection procedure 4: brake drag .....	35A-7
Inspection procedure 5: scraping or grinding noise when brakes are applied.....	35A-8
Inspection procedure 6: squealing, groaning or chattering noise when brakes are applied .....	35A-9
Inspection procedure 7: squealing noise when brakes are not applied .....	35A-10
Inspection procedure 8: groaning, clicking or rattling noise when brakes are not applied .....	35A-11

Battery		Inspection	
General information .....	54A-7	Column switch (switch body part) continuity check....	54A-280
On-vehicle service		Wiper/washer switch continuity check .....	54A-279
Battery test.....	54A-9	Removal and installation.....	54A-278
Charging .....	54A-8	Special tools.....	54A-273
Electrolyte level and specific gravity checks.....	54A-8	Troubleshooting	
Removal and installation .....	54A-10	Diagnostic function.....	54A-274
Brake pedal		Diagnostic trouble code table.....	54A-276
Inspection		Standard flow of diagnostic troubleshooting .....	54A-274
Brake pedal distortion check.....	35A-26	Combination meter	
Stoplight switch check.....	35A-26	Actuator test table.....	54A-82
Removal and installation .....	35A-25	Check at ECU terminals .....	54A-88
Brake warning light, fuel warning light and oil pressure	90-148	Check procedure for each multi information display screen .....	54A-82
warning light <M/T>.....		Combination meter	
Brake warning light, fuel warning light and oil pressure	90-152	Disassembly and assembly .....	54A-102
warning light <tc-sst> .....		Removal and installation.....	54A-101
		Diagnostic trouble code chart .....	54A-28
		Diagnostic trouble code procedures	
		DTC B1200: malfunction of odometer.....	54A-29
Camshaft	11B-44	DTC B1201: abnormal fuel information.....	54A-30
Inspection .....		DTC B1208: malfunction of lcd heater.....	54A-33
Removal and installation		DTC B1209: test mode .....	54A-34
Engine mechanical .....	11A-25	DTC B2203: vin not programmed .....	54A-35
Engine overhaul.....	11B-41	DTC B2463: the sticking of rheostat switch .....	54A-36
CAN communication-related DTC (u-code) table.....	54C-240	DTC B2464: the sticking of multi information meter switch .....	54A-38
Center differential		DTC B2465: ignition switch signal error .....	54A-40
Disassembly and assembly .....	22B-53	DTC U0019: bus off (CAN-b) .....	54A-42
Central door locking system .....	90-162	DTC U0100: engine control module CAN timeout .....	54A-43
Centralized junction .....	90-20	DTC U0141: ETACS CAN timeout .....	54A-45
Charge air cooler		DTC U0151: SRS-ECU CAN timeout .....	54A-47
Removal and installation .....	15-15	DTC U0154: occupant classification-ECU CAN timeout .....	54A-48
Charging system		DTC U0164: A/C-ECU CAN timeout .....	54A-50
Charging system diagnosis .....	16-3	DTC U0168: kos-ECU or wcm CAN timeout.....	54A-51
General information .....	16-2	DTC U0184: audio CAN timeout .....	54A-53
General specifications .....	16-3	DTC U0197: hands free module CAN timeout .....	54A-54
Generator assembly		DTC U0245: audio visual navigation unit CAN timeout .....	54A-56
Disassembly and assembly .....	16-16	DTC U1415: coding not completed/data fail .....	54A-57
Inspection .....	16-20	On-vehicle service	
Removal and installation.....	16-14	Fuel level sensor check .....	54A-91
On-vehicle service		Multi information meter switch check .....	54A-92
Generator output line voltage drop test .....	16-7	Service reminder function set .....	54A-93
Output current test .....	16-8	Speedometer check .....	54A-89
Regulated voltage test .....	16-10	Tachometer check .....	54A-91
Wave pattern check using an oscilloscope .....	16-11	Service data .....	54A-78
Service specifications .....	16-3	Service specifications .....	54A-23
Special tool .....	16-6	Special tools.....	54A-24
Charging system <M/T>.....	90-44	Symptom procedures	
Charging system <tc-sst>.....	90-48	Inspection procedure 1: power supply circuit check ..	54A-60
Cigarette lighter		Inspection procedure 2: the speedometer does not work (the other meters work).....	54A-65
Inspection .....	54A-271	Inspection procedure 3: the tachometer does not work (the other meters work).....	54A-67
Removal and installation .....	54A-271	Inspection procedure 4: tone alarm does not sound normally.....	54A-69
Clutch		Inspection procedure 5: the combination meter light does not illuminate normally or the multi information display is not displayed normally.....	54A-72
Inspection .....	21B-6	Inspection procedure 6: the multi information display screen cannot be changed with the operation of the multi information meter switch .....	54A-75
Removal and installation .....	21B-4	Trouble symptom chart .....	54A-59
Clutch control		Troubleshooting	
Inspection .....	21A-10	Diagnosis function.....	54A-25
Removal and installation .....	21A-8	Standard flow of diagnostic troubleshooting .....	54A-25
Clutch housing		Compressor assembly and tension pulley	
Disassembly and assembly .....	22B-44	Disassembly and assembly .....	55-132
Clutch pedal and master cylinder		Inspection	
Inspection		Heater, air conditioning and ventilation .....	55-132
Clutch switch check and adjustment.....	21B-7	Heater, air conditioning and ventilation .....	55-134
Interlock switch operating check.....	21A-7	Removal and installation.....	55-130
Removal and installation .....	21A-4	Condenser assembly	
Clutch release cylinder		Removal and installation.....	55-135
Disassembly and assembly .....	21B-7		
Inspection .....	21B-9		
Column switch			
Diagnostic trouble code procedures			
DTC B2350: lighting switch DTC B2351: wiper switch	54A-276		
General information .....	54A-272		

Control housing	
Disassembly and assembly .....	22B-40
Control link and lower arm	
Control link ball joint dust cover inspection.....	34-15
Control link ball joint dust cover replacement.....	34-16
Control link ball joint rotation starting torque check .....	34-14
Control link slide bushing rotation starting torque check	34-15
Lower arm pillow ball bushing rotation starting torque check	34-15
Removal and installation .....	34-12
Control unit .....	70-4
Controller area network (CAN) <M/T>.....	90-358
Controller area network (CAN) <tc-sst>.....	90-362
Coolant .....	14-3
Cooling system .....	90-76
Crankshaft and cylinder block	
Inspection .....	11B-76
Removal and installation .....	11B-71
Crankshaft oil seal	
Removal and installation .....	11A-54
Crankshaft pulley	
Removal and installation .....	11A-21
Curtain air bag module(s)	
Inspection .....	52B-412
Removal and installation .....	52B-409
Cylinder head and valves	
Inspection .....	11B-52
Removal and installation .....	11B-47
Cylinder head gasket	
Removal and installation .....	11A-57
Dash panel	
Configuration diagrams .....	80A-10
Splice locations .....	80B-5
Daytime running light (drl) <discharge type>.....	90-110
Daytime running light (drl) <halogen type> .....	90-106
Defogger	
General information .....	54A-713
On-vehicle service	
Printed heater check.....	54A-724
Rear window defogger relay check.....	54A-724
Removal and installation .....	54A-723
Special tools .....	54A-713
Symptom procedures	
Rear window defogger does not operate.....	54A-715
Troubleshooting	
Standard flow of diagnostic troubleshooting .....	54A-714
Symptom chart.....	54A-714
Diagnosis	
ABS warning light and brake warning light inspection...	35C-7
Actuator test reference table .....	35C-257
Actuator test table.....	42B-171
ASC diagnostic troubleshooting strategy.....	35C-6
CAN bus diagnostics	
Diagnostic item 1: diagnose when the scan tool cannot receive the data sent by ETACS-ECU. ....	54C-27
Diagnostic item 10: diagnose when the scan tool cannot receive the data sent by ECM. ....	54C-104
Diagnostic item 11: diagnose when the scan tool cannot receive the data sent by tc-sst-ECU. <tc-sst>	54C-109
Diagnostic item 12: diagnose the lines between the ETACS-ECU and joint connector (can2).....	54C-112
Diagnostic item 13: diagnose the lines between joint connector (can2) and joint connector (can3)....	54C-117
Diagnostic item 14: diagnose the lines between joint connector (can3) and joint connector (can4). <tc-sst>.....	54C-121
Diagnostic item 15: diagnose when the scan tool cannot receive the data sent by kos-ECU. ....	54C-124
Diagnostic item 16: diagnose when the scan tool cannot receive the data sent by wcm. ....	54C-127
Diagnostic item 17: diagnose when the scan tool cannot receive the data sent by SRS-ECU.....	54C-130
Diagnostic item 18: diagnose when the scan tool cannot receive the data sent by occupant classification-ECU.....	
Diagnostic item 19: diagnose when the scan tool cannot receive the data sent by A/C-ECU. ....	
Diagnostic item 2: malfunction of the ETACS-ECU ..	
Diagnostic item 20: diagnose when the scan tool cannot receive the data sent by radio and cd player or cd changer. ....	
Diagnostic item 21: diagnose when the scan tool cannot receive the data sent by CAN box unit.....	
Diagnostic item 22: diagnose when the scan tool cannot receive the data sent by satellite radio tuner..	
Diagnostic item 23: diagnose when the scan tool cannot receive the data sent by hands free module..	
Diagnostic item 24: diagnose when the scan tool cannot receive the data sent by combination meter...	
Diagnostic item 25: short to power supply or ground in both CAN_h and CAN_l lines of the CAN-bus lines.	
Diagnostic item 26: diagnose the ETACS-ECU joint connector (can1) or lines between ETACS-ECU and joint connector (can1).....	
Diagnostic item 27: short to power supply or ground, open circuit or line-to-line short in the CAN-bus lines.	
Diagnostic item 3: abnormal short between the CAN-c bus lines. ....	
Diagnostic item 4: diagnose shorts in the ground to CAN-c bus line. ....	
Diagnostic item 5: diagnose shorts in the power supply to CAN-c bus line. ....	
Diagnostic item 6: diagnose when the scan tool cannot receive the data sent by s-awc-ECU. ....	
Diagnostic item 7: diagnose when the scan tool cannot receive the data sent by steering wheel sensor.	
Diagnostic item 8: diagnose when the scan tool cannot receive the data sent by shift lever. <tc-sst>..	
Diagnostic item 9: diagnose when the scan tool cannot receive the data sent by ASC-ECU.....	
CAN bus diagnostics table.....	54C-100
CAN-related connector position.....	54C-14
Check at ECU terminals	
Active skid control system (ASC).....	54C-25
Wireless control module (wcm).....	42C-113
Data list reference table	
Active skid control system (ASC).....	35C-255
Keyless operation system (kos).....	42B-170
Wireless control module (wcm).....	42C-83
Diagnostic function	
Active skid control system (ASC).....	35C-8
Keyless operation system (kos).....	42B-10
Wireless control module (wcm).....	42C-6
Diagnostic trouble code chart	
Active skid control system (ASC).....	35C-20
Keyless operation system (kos).....	42B-20
Wireless control module (wcm).....	42C-14
Diagnostic trouble code procedures	
Code No.U1417 implausible coding data.....	42B-167
DTC B1731: engine control module communication timeout	
Keyless operation system (kos) .....	42B-22
Wireless control module (wcm).....	42C-16
DTC B1761: vin code not programmed	
Keyless operation system (kos) .....	42B-24
Wireless control module (wcm).....	42C-18
DTC b1a08: keyless/kos key1 performanceDTC b1a09: keyless/kos key2 performanceDTC b1a0a: keyless/kos key3 performanceDTC b1a0b: keyless/kos key4 performance.....	42B-26
DTC b1a08: keyless/kos key1 performanceDTC b1a09: keyless/kos key2 performanceDTC b1a0a: keyless/kos key3 performanceDTC b1a0b: keyless/kos key4 performanceDTC b1a0c: keyless key 5 performanceDTC b1a ..	42C-19
DTC b1a10: keyless/kos key 1 low batteryDTC b1a11: keyless/kos key 2 low batteryDTC b1a12: keyless/kos key 3 low batteryDTC b1a13: keyless/kos key 4 low battery.....	42B-27
DTC b1a10: keyless/kos key 1 low batteryDTC b1a11: keyless/kos key 2 low batteryDTC b1a12: keyless/kos key 3 low batteryDTC b1a13: keyless/kos key 4 low batteryDTC b1a14: keyless key 5 low batteryDTC ...	42C-21
DTC b1a24: key id not registered	
Keyless operation system (kos) .....	42B-28
Wireless control module (wcm).....	42C-22

DTC b1a25: key id unmatched		DTC c104b: abnormality in fl wheel inlet valve system	
Keyless operation system (kos).....	42B-29	DTC c104f: abnormality in fr wheel inlet valve system	
Wireless control module (wcm).....	42C-23	DTC C1053: abnormality in rl wheel inlet valve system	
DTC b1a28: engine control module authenticate error		DTC C1057: abnormality in rr wheel inlet valve system	
Keyless operation system (kos).....	42B-31	DTC C105f: .....	35C-116
Wireless control module (wcm).....	42C-25	DTC C1073: faulty motor drive circuit.....	35C-122
DTC b1a35: transponder read error		DTC C1210: abnormality in g and yaw rate sensor (longitudinal g sensor).....	35C-167
Keyless operation system (kos).....	42B-33	DTC C1219: abnormality in steering wheel sensor signal.....	35C-184
Wireless control module (wcm).....	42C-27	DTC c121a: abnormality in steering wheel sensor initialization .....	35C-187
DTC B2101: ig sw start pos.circuit low		DTC c121c: torque request signal rejection.....	35C-157
DTC B2102: ig sw start pos.circuit high		DTC c121d: abnormality in brake fluid pressure sensor circuit.....	35C-130
Keyless operation system (kos).....	42B-36	DTC c121e: abnormality in brake fluid pressure sensor output signal.....	35C-132
Wireless control module (wcm).....	42C-30	DTC c123a: abnormality in sensor calibration .....	35C-182
DTC B2204: coding data mismatch		DTC c123b: prolonged operation of ASC .....	35C-146
Keyless operation system (kos).....	42B-39	DTC c123c: abnormality in g and yaw rate sensor (lateral g or yaw rate).....	35C-171
Wireless control module (wcm).....	42C-33	DTC C1242: abnormality in g and yaw rate sensor (longitudinal g sensor).....	35C-169
DTC B2206: vin code mismatch		DTC C1290: CAN time-out error .....	35C-159
Keyless operation system (kos).....	42B-41	DTC C1395: brake fluid filling not completed.....	35C-156
Wireless control module (wcm).....	42C-35	DTC C1608: EEPROM error	
DTC B2352: antenna fail		Keyless operation system (kos) .....	42B-130
Keyless operation system (kos).....	42B-43	Wireless control module (wcm) .....	42C-45
Wireless control module (wcm).....	42C-37	DTC C1608: implausible diagnosis data .....	35C-190
DTC B2400: kos key registration fail		DTC C1900: No registration	
DTC B2401: keyless/kos key id not register		Keyless operation system (kos) .....	42B-131
DTC B2401: keyless/kos key id not registered		Wireless control module (wcm) .....	42C-46
DTC B2402: stl unit comm.(system id)		DTC C1901: vehicle speed information abnormality	
DTC B2403: stl unit comm.(crc)		Keyless operation system (kos) .....	42B-132
DTC B2404: stl unit comm.(function code)		Wireless control module (wcm) .....	42C-47
DTC B2405: stl unit comm.(rolling code)		DTC C1910: transmitter low battery voltage abnormality 1	
DTC B2406: stl unit comm.(ptc operate)		DTC C1920: transmitter low battery voltage abnormality 2	
DTC B2407: stl unit comm.(EEPROM)		DTC C1930: transmitter low battery voltage abnormality 3	
DTC B2409 stl unit comm.(No response)		DTC C1940: transmitter low battery voltage abnormality 4 .....	
DTC b240a: fr antenna(outdoor) open		Keyless operation system (kos) .....	42B-134
DTC b240b: fl antenna(outdoor) open		Wireless control module (wcm) .....	42C-49
DTC b240c: tail gate antenna(outdoor) open		DTC C1912: tire inflation pressure warning 1	
DTC b240d: front antenna(indoor) open		DTC C1922: tire inflation pressure warning 2	
DTC B2410: rear antenna(indoor) open		DTC C1932: tire inflation pressure warning 3	
DTC B2412: If antenna power voltage		DTC C1942: tire inflation pressure warning 4 .....	
DTC B2413: stl unit power voltage		Keyless operation system (kos) .....	42B-144
DTC B2414: unlock sensor fail		Wireless control module (wcm) .....	42C-58
DTC B2415: ra module power voltage		DTC C1913: acceleration sensor abnormality 1	
Keyless operation system (kos).....	42B-118	DTC C1923: acceleration sensor abnormality 2	
Wireless control module (wcm).....	42C-39	DTC C1933: acceleration sensor abnormality 3	
DTC B2416: ECU internal error		DTC C1943: acceleration sensor abnormality 4	
Keyless operation system (kos).....	42B-129	DTC C1944: pressure sensor abnormality 1 ...	
Wireless control module (wcm).....	42C-44	Keyless operation system (kos) .....	42B-142
DTC C1000: abnormality in stoplight switch circuit....		Wireless control module (wcm) .....	42C-56
DTC c100a: abnormality in fl wheel speed sensor circuit		DTC C1915: transmitter off mode 1	
DTC C1011: abnormality in fl wheel speed sensor signal		DTC C1925: transmitter off mode 2	
DTC C1014: mutual monitoring of fl wheel speed sensor		DTC C1935: transmitter off mode 3	
DTC C1015: abnormality in fr wheel speed sensor circuit		DTC C1945: transmitter off mode 4 .....	
DTC c101c: abnormality in fr wheel speed sensor signal		Keyless operation system (kos) .....	42B-147
DTC c101f: mutual monitoring of fr wheel speed sensor		Wireless control module (wcm) .....	42C-61
DTC C1020: abnormality in rl wheel speed sensor circuit		DTC C2000: abnormality in wheel fluid pressure sensor circuit.....	35C-135
DTC C1027: abnormality in rl wheel speed sensor signal		DTC C2001: abnormality in wheel fluid pressure sensor output signal.....	35C-136
DTC c102a: mutual monitoring of rl wheel speed sensor		DTC C2002: abnormality in valve calibration.....	35C-196
DTC c102b: abnormality in rr wheel speed sensor circuit		DTC C2101: abnormality in battery voltage (high voltage) .....	35C-150
DTC C1032: abnormality in rr wheel speed sensor signal		DTC C2104: faulty valve power supply circuit .....	35C-118
DTC C1035: mutual monitoring of rr wheel speed sensor		DTC C2111: brake fluid pressure sensor power supply circuit (low input)	
DTC C1041: abnormality in periodical signal for fl wheel speed sensor .....		DTC C2112: brake fluid pressure sensor power supply circuit (high input) .....	35C-176
DTC C1042: abnormality in periodical signal for fr wheel speed sensor .....		DTC C2114: abnormality in g and yaw rate sensor operation voltage .....	
DTC C1043: abnormality in periodical signal for rl wheel speed sensor .....		DTC C2115: abnormality in g and yaw rate sensor operation voltage .....	35C-178
DTC C1044: abnormality in periodical signal for rr wheel speed sensor .....		DTC C2116: abnormality in power supply voltage in pump motor .....	35C-126
DTC C1046: fl wheel speed sensor control phase time exceeded .....		DTC C2200: abnormality in ASC-ECU .....	35C-149
DTC C1047: fr wheel speed sensor control phase time exceeded .....		DTC C2203: vin not recorded .....	35C-162
DTC C1048: rl wheel speed sensor control phase time exceeded .....		DTC C2204: internal abnormality in g and yaw rate sensor .....	35C-174
DTC C1049: rr wheel speed sensor control phase time exceeded .....		DTC C2205: internal malfunction of steering wheel sensor .....	35C-188
		DTC C2206: re-execution of variant coding .....	35C-164

DTC U0001: bus-off .....	35C-198	Inspection procedure 1: the scan tool cannot communicate with the ABS/ASC system .....	35C-220
DTC U0019: bus off (CAN-b) Keyless operation system (kos) .....	42B-148	Inspection procedure 10: driver's door unlock sensor does not work .....	42B-213
Wireless control module (wcm) .....	42C-62	Inspection procedure 10: skid control/TCL does not operate .....	35C-241
DTC U0100: engine time-out error .....	35C-199	Inspection procedure 11: ASC-ECU power supply circuit system .....	35C-243
DTC U0101: tc-sst time-out error .....	35C-202	Inspection procedure 11: front passenger's door lock switch does not work .....	42B-217
DTC U0126: steering wheel sensor time-out error .....	42B-150	Inspection procedure 12: ABS/skid control/TCL operates too frequently .....	35C-251
DTC U0141: ETACS time-out error .....	42C-64	Inspection procedure 12: front passenger's door unlock sensor does not work .....	42B-223
DTC U0136: awc time-out error .....	42B-151	Inspection procedure 13: trunk lid opener switch does not work .....	42B-229
DTC U0125: g and yaw rate sensor message time-out error/message error .....	42C-65	Inspection procedure 14: keyless entry system does not work .....	42B-234
DTC U0141: ETACS-ECU CAN timeout Keyless operation system (kos) .....	42B-153	Inspection procedure 15: kos timer lock function does not work .....	42B-243
Wireless control module (wcm) .....	42C-67	Inspection procedure 16: keyless entry hazard light answerback function, the dome light answerback function or the horn answerback function does not work normally .....	42B-245
DTC U0155: combination meter CAN timeout Keyless operation system (kos) .....	42B-154	Inspection procedure 17: the trunk is not opened when the keyless operation key "TRUNK" button is operated .....	42B-248
Wireless control module (wcm) .....	42C-68	Inspection procedure 18: outer tone alarm does not sound .....	42B-255
DTC U0164: A/C-ECU CAN timeout Keyless operation system (kos) .....	42B-156	Inspection procedure 2: the ignition key cannot be registered using scan tool .....	42C-86
Wireless control module (wcm) .....	42C-70	Inspection procedure 2: the keyless operation key cannot be registered using scan tool .....	42B-174
DTC U0184: audio CAN timeout Keyless operation system (kos) .....	42B-157	Inspection procedure 2: with the parking brake released, the brake warning light remains illuminated (ABS warning light is turned off) .....	35C-221
Wireless control module (wcm) .....	42C-71	Inspection procedure 3: abnormality in kos-ECU power supply and ground circuits .....	42B-185
DTC U0195: satellite radio tuner CAN timeout Keyless operation system (kos) .....	42B-159	Inspection procedure 3: engine does not start (cranking but no initial combustion) .....	42C-88
Wireless control module (wcm) .....	42C-73	Inspection procedure 3: the ABS warning light does not illuminate when ignition switch is turned to the on position (engine stopped) .....	35C-225
DTC U0245: audio visual navigation unit CAN timeout Keyless operation system (kos) .....	42B-160	Inspection procedure 4: abnormality in wcm power supply and ground circuits .....	42C-90
Wireless control module (wcm) .....	42C-74	Inspection procedure 4: keyless operation warning display does not disappear .....	42B-188
DTC U0251: awc time-out error (local CAN) .....	35C-208	Inspection procedure 4: the brake warning light does not illuminate when ignition switch is turned to the on position (engine stopped) .....	35C-228
DTC U0440: awc communication error (local CAN) .....	35C-205	Inspection procedure 5: ig knob will not turn (keyless operation is not recognized) .....	42B-190
DTC U0435: awc signal abnormality (local CAN) .....	35C-206	Inspection procedure 5: keyless entry system does not work .....	42C-93
DTC U0401: engine malfunction detected .....	35C-210	Inspection procedure 5: the ABS warning light remains illuminated even after the engine is started .....	35C-230
DTC U0428: communication error in steering wheel sensor .....	42B-163	Inspection procedure 6: keyless entry hazard light answerback function, the dome light answerback function or the horn answerback function does not work normally .....	42C-102
DTC U1003: g and yaw rate sensor bus-off .....	42C-77	Inspection procedure 6: the ASC warning display stays on even after the engine is started .....	35C-232
DTC U1412: implausible vehicle speed signal received Keyless operation system (kos) .....	42B-165	Inspection procedure 6: the engine will not start with kos (ig knob operates normally) .....	42B-199
Wireless control module (wcm) .....	42C-79	Inspection procedure 7: engine does not start with emergency key (cranking but no initial combustion) .....	42B-201
DTC U1415: variant coding not completed .....	35C-213	Inspection procedure 7: the ASC off display remains illuminated after the engine is started .....	35C-234
DTC U1417: implausible coding data .....	42C-80	Inspection procedure 7: the timer lock function does not work after the doors have been unlocked by the keyless entry system .....	42C-104
DTC U1417: variant coding value invalid (includes faulty installation) .....	35C-215	Inspection procedure 8: after the ASC off switch is pressed to turn "off," the skid control/TCL cannot be cancelled .....	35C-237
Id code registration necessity judgment table .....	42B-12	Inspection procedure 8: No door will be locked or unlocked by operating a lock switch on any door, or by touching the unlock sensor .....	42B-203
Id codes registration judgment table .....	42C-9	Inspection procedure 8: the trunk is not opened when the keyless entry transmitter "TRUNK" button is operated .....	42C-105
Input signal procedures Signals from transmitter switches are not received. Keyless operation system (kos) .....	42B-260	Inspection procedure 9: abnormality in brake operation .....	35C-239
Wireless control module (wcm) .....	42C-111	Inspection procedure 9: driver's door lock switch does not work .....	42B-208
Input signal reference table Keyless operation system (kos) .....	42B-259	Terminal voltage reference chart .....	42B-262
Wireless control module (wcm) .....	42C-111	Trouble symptom chart .....	
Introduction to ASC diagnosis .....	35C-6	Active skid control system (ASC) .....	35C-219
Precautions for diagnosis .....	35C-7	Keyless operation system (kos) .....	42B-172
Standard flow of diagnostic troubleshooting Keyless operation system (kos) .....	42B-10	Wireless control module (wcm) .....	42C-84
Wireless control module (wcm) .....	42C-6		
Symptom procedures Inspection procedure 1: scan tool cannot communicate with kos-ECU .....	42B-172		
Inspection procedure 1: scan tool cannot communicate with wcm .....	42C-85		

Warnings/alarms		Twin clutch-sportronic shift transmission (tc-sst) .....	22C-328
Keyless operation system (kos).....	42B-16	Special function reference table.....	22A-113
Wireless control module (wcm).....	42C-12	Symptom chart.....	22A-14
Diagnosis <s-awc(super all wheel control)>		Symptom procedures	
AWD-ECU terminal voltage reference chart for acd .....	22A-114	Inspection procedure 1: communication between the scan tool and awc-ECU cannot be established .....	22A-99
Data list reference table.....	22A-107	Inspection procedure 2: mode does not change even when the awc switch is pressed <vehicles with steering wheel audio remote control switch>.....	22A-99
Diagnostic function .....	22A-9	Inspection procedure 2: mode does not change even when the awc switch is pressed <vehicles without steering wheel audio remote control switch>.....	22A-102
Diagnostic trouble code chart.....	22A-11	Inspection procedure 3: awc-ECU power supply circuit malfunction .....	22A-104
Diagnostic trouble code procedures		Troubleshooting strategy .....	22A-8
DTC C1000: stoplight switch system .....	22A-15	Diagnosis <shift lever>	
DTC c100a <fl>, C1015 <fr>, C1020 <rl>, c102b <rr>: wheel speed sensor system (faulty circuit) .....	22A-19	Data list reference table .....	22C-322
DTC C1011 <fl>, c101c <fr>, C1027 <rl>, C1032 <rr>: wheel speed sensor system (faulty signal) .....	22A-20	Diagnosis function .....	22C-300
DTC C1014 <fl>, c101f <fr>, c102a <rl>, C1035 <rr>: wheel speed sensor system (characteristics abnormality) .....	22A-21	Diagnostic trouble code chart .....	22C-302
DTC C1078: tire turning malfunction .....	22A-22	Diagnostic trouble code procedures	
DTC C1219: steering wheel sensor system (faulty signal) .....	22A-24	DTC P0563: power supply system.....	22C-303
DTC c121a: steering wheel sensor system (neutral learning abnormality) .....	22A-26	DTC p198d: EEPROM system.....	22C-304
DTC c123c: g and yaw rate sensor (faulty signal) .....	22A-27	DTC p198e, p198f: lever position sensor system .....	22C-304
DTC C1242: g and yaw rate sensor (longitudinal g output data error) .....	22A-29	DTC U0001: bus-off .....	22C-305
DTC C1610: awc actuator power supply electronic relay malfunction .....	22A-31	DTC U0100: engine time-out error.....	22C-306
DTC C1611: awc pressure sensor system (low voltage) .....	22A-33	DTC U0101: tc-sst time-out error .....	22C-306
DTC C1612: awc pressure sensor system (high voltage) .....	22A-35	DTC U0121: ASC time-out error .....	22C-307
DTC C1613: awc mode select switch system (clogging) <vehicles with steering audio remote control switch > .....	22A-37	DTC U0141: ETACS time-out error .....	22C-308
DTC C1613: awc mode select switch system (clogging) <vehicles without steering audio remote control switch > .....	22A-40	Introduction .....	22C-300
DTC C1614: parking brake switch system (clogging on) .....	22A-43	Shift lever -ECU terminal voltage reference chart .....	22C-325
DTC C1615: brake control prohibition request .....	22A-45	Special function (actuator test reference table) .....	22C-325
DTC C1616: cranking signal system (on sticking) .....	22A-46	Symptom chart.....	22C-302
DTC C1617: awc CAN main data system (data not received) .....	22A-49	Symptom procedures	
DTC C1618: awc CAN local data system (data not received) .....	22A-50	Inspection procedure 1: the scan tool cannot communicate with the shift lever-ECU .....	22C-309
DTC c161c: acd proportioning valve system (malfunction) .....	22A-53	Inspection procedure 2: shift indicator light does not illuminate .....	22C-309
DTC c161d: electric pump relay circuit system (malfunction) .....	22A-56	Inspection procedure 3: back-up light does not illuminate .....	22C-312
DTC c161e: electric pump relay circuit system (stuck) .....	22A-59	Inspection procedure 4: the driving mode cannot be changed .....	22C-316
DTC C1622: acd controlled system (malfunction) .....	22A-61	Inspection procedure 5: speed change with the paddle shift is impossible .....	22C-317
DTC C1623: brake controlled system (malfunction) .....	22A-62	Inspection procedure 6: shift lever-ECU power supply circuit abnormality .....	22C-319
DTC C1624: awc-ECU system (internal malfunction) .....	22A-63	Troubleshooting strategy .....	22C-300
DTC C1625: awc pressure sensor system (abnormal power supply voltage) .....	22A-64	Diagnosis <tc-sst>	
DTC C2100: battery voltage malfunction (low voltage) .....	22A-66	Data list reference table .....	22C-298
DTC C2101: battery voltage malfunction (high voltage) .....	22A-70	Diagnosis function .....	22C-6
DTC C2114: g and yaw rate sensor power supply (low voltage) .....	22A-72	Diagnostic trouble code chart .....	22C-10
DTC C2115: g and yaw rate sensor power supply (high voltage) .....	22A-75	Diagnostic trouble code procedures	
DTC C2203: vin not recorded .....	22A-77	DTC P0630: vin not recorded .....	22C-15
DTC C2204: g and yaw rate sensor system (internal malfunction) .....	22A-78	DTC P0701: EEPROM system (malfunction) .....	22C-16
DTC C2205: steering wheel sensor system (internal malfunction) .....	22A-79	DTC P0702: internal control module, monitoring processor system (malfunction) .....	22C-16
DTC U0001: bus off .....	22A-80	DTC P0711: tc-sst-ECU temperature sensor system (gradient error) .....	22C-18
DTC U0100: engine time-out error .....	22A-81	DTC P0712: tc-sst-ECU temperature sensor system (output low range out) .....	22C-20
DTC U0101: tc-sst time-out error .....	22A-82	DTC P0713: tc-sst-ECU temperature sensor system (output high range out) .....	22C-22
DTC U0121: ASC time-out error .....	22A-83	DTC P0715: input shaft 1 (odd number gear axle) speed sensor system (output high range out) .....	22C-24
DTC U0126: steering wheel sensor time-out error .....	22A-84	DTC P0716: input shaft 1 (odd number gear axle) speed sensor system (poor performance) .....	22C-26
DTC U0141: ETACS time-out error .....	22A-85	DTC P0717: input shaft 1 (odd number gear axle) speed sensor system (output current low range out) .....	22C-30
DTC U0401: engine data error .....	22A-86	DTC P0725: engine speed signal abnormality .....	22C-32
DTC U0428: steering wheel sensor data error .....	22A-87	DTC P0746: line pressure solenoid system (drive current range out) .....	22C-33
DTC U0431: ETACS data error .....	22A-88	DTC P0753: shift select solenoid 1 system (open circuit) .....	22C-35
DTC U1003: bas-off (local CAN) .....	22A-89	DTC P0758: shift select solenoid 2 system (open circuit) .....	22C-36
DTC U1415: coding incomplete/fail .....	22A-91	DTC P0776: clutch cooling flow solenoid system (drive current range out) .....	22C-38
DTC U1417: coding data malfunction .....	22A-93	DTC P0777: clutch cooling flow solenoid system (stuck) .....	22C-39
DTC U1425: tc-sst data error .....	22A-94	DTC P0841: clutch 1 pressure sensor system (poor performance) .....	22C-41
DTC U1426: ASC data error .....	22A-95	DTC P0842: clutch 1 pressure sensor system (output low range out) .....	22C-43
DTC U1427: wheel speed sensor data error .....	22A-96		
DTC U1428: g and yaw rate sensor data error .....	22A-97		
Introduction			
Manual transaxle .....	22A-8		

DTC P0843: clutch 1 pressure sensor system (output high range out) .....	22C-45	DTC p182d: shift fork position sensor 3 system (neutral).....	22C-133
DTC P0846: clutch 2 pressure sensor system (poor performance).....	22C-47	DTC p182e: shift fork position sensor 3 system (poor performance).....	22C-135
DTC P0847: clutch 2 pressure sensor system (output low range out).....	22C-49	DTC P1831: shift fork position sensor 4 system (voltage low range out) .....	22C-137
DTC P0848: clutch 2 pressure sensor system (output high range out) .....	22C-51	DTC P1832: shift fork position sensor 4 system (voltage high range out) .....	22C-139
DTC P0960: line pressure solenoid system (open circuit).....	22C-53	DTC P1833: shift fork position sensor 4 system (output range out) .....	22C-141
DTC P0961: line pressure solenoid system (overcurrent).....	22C-54	DTC P1834: shift fork position sensor 4 system (neutral).....	22C-143
DTC P0962: line pressure solenoid system (short to ground) .....	22C-56	DTC P1835: shift fork position sensor 4 system (poor performance) .....	22C-145
DTC P0963: line pressure solenoid system (short to power supply) .....	22C-58	DTC P1836: shift fork 1 malfunction .....	22C-148
DTC P0964: clutch cooling flow solenoid system (open circuit) .....	22C-59	DTC p183d: shift fork 2 malfunction.....	22C-156
DTC P0965: clutch cooling flow solenoid system (overcurrent) .....	22C-61	DTC P1844: shift fork 3 malfunction .....	22C-164
DTC P0966: clutch cooling flow solenoid system (short to ground) .....	22C-63	DTC p184b: shift fork 4 malfunction.....	22C-171
DTC P0967: clutch cooling flow solenoid system (short to power supply) .....	22C-65	DTC P1852: shift fork 1 or 2 opposite direction movement .....	22C-179
DTC P0968: shift/cooling changeover solenoid system (open circuit) .....	22C-66	DTC P1855: shift fork 3 or 4 opposite direction movement .....	22C-182
DTC P0970: shift/cooling changeover solenoid system (short to ground) .....	22C-68	DTC P1857: odd number gear axle interlock.....	22C-185
DTC P0971: shift/cooling changeover solenoid system (short to power supply) .....	22C-69	DTC P1858: even number gear axle interlock .....	22C-187
DTC P0973: shift select solenoid 1 system (short to ground) .....	22C-71	DTC P1859: disengagement too late with clutch 1 .....	22C-189
DTC P0974: shift select solenoid 1 system (short to power supply) .....	22C-72	DTC p185a: engagement too late with clutch 1 .....	22C-190
DTC P0976: shift select solenoid 2 system (short to ground) .....	22C-74	DTC p185b: disengagement too late with clutch 2 .....	22C-191
DTC P0977: shift select solenoid 2 system (short to power supply) .....	22C-75	DTC p185c: engagement too late with clutch 2 .....	22C-193
DTC P1637: EEPROM system (DTC storing malfunction) .....	22C-77	DTC p185d: clutch open not possible .....	22C-193
DTC P1676: coding incomplete .....	22C-78	DTC P1862: high side 1 system (overcurrent).....	22C-195
DTC P1802: shift lever system (in communication malfunction) .....	22C-80	DTC P1863: high side 1 system (open circuit).....	22C-197
DTC P1803: shift lever system (CAN, in time-out error) .....	22C-82	DTC P1864: high side 1 system (short to power supply)	22C-199
DTC P1804: shift fork position sensor 1 and 2 system (power supply voltage low range out) .....	22C-84	DTC P1866: high side 2 system (overcurrent).....	22C-201
DTC P1805: shift fork position sensor 1 and 2 system (power supply voltage high range out) .....	22C-86	DTC P1867: high side 2 system (open circuit).....	22C-203
DTC P1806: shift fork position sensor 3 and 4 system (power supply voltage low range out) .....	22C-88	DTC P1868: high side 2 system (short to power supply)	22C-205
DTC P1807: shift fork position sensor 3 and 4 system (power supply voltage high range out) .....	22C-90	DTC p186a: high side 3 system (overcurrent) .....	22C-207
DTC P1808: tc-sst-ECU temperature, fluid temperature sensor system (correlation error) .....	22C-92	DTC p186b: high side 3 system (open circuit).....	22C-209
DTC p180c: clutch pressure cut spool sticking .....	22C-93	DTC p186c: high side 3 system (short to power supply)	22C-211
DTC p181b: clutch 1 (pressure low range out) .....	22C-94	DTC p186d: high side 1 system (voltage low range out)	22C-213
DTC p181c: clutch 1 (pressure high range out) .....	22C-95	DTC p186e: high side 2 system (voltage low range out)	22C-215
DTC p181e: clutch 2 (pressure low range out) .....	22C-99	DTC p186f: high side 3 system (voltage low range out)	22C-217
DTC p181f: clutch 2 (pressure high range out) .....	22C-101	DTC P1870: engine torque signal abnormality .....	22C-219
DTC P1820: shift fork position sensor 1 system (voltage low range out) .....	22C-105	DTC P1871: aps system (signal abnormality).....	22C-221
DTC P1821: shift fork position sensor 1 system (voltage high range out) .....	22C-107	DTC P1872: between shift lever and tc-sst system (q-a function abnormality) .....	22C-223
DTC P1822: shift fork position sensor 1 system (output range out) .....	22C-109	DTC P1873: clutch 1 system (pressure abnormality)	22C-225
DTC P1823: shift fork position sensor 1 system (neutral) .....	22C-111	DTC P1874: clutch 2 system (pressure abnormality)	22C-225
DTC P1824: shift fork position sensor 1 system (poor performance) .....	22C-113	DTC P1875: damper speed sensor system (poor performance) .....	22C-226
DTC P1825: shift fork position sensor 2 system (voltage low range out) .....	22C-116	DTC P1876: 1st gear block .....	22C-229
DTC P1826: shift fork position sensor 2 system (voltage high range out) .....	22C-118	DTC P1877: gear block 2nd gear .....	22C-230
DTC P1827: shift fork position sensor 2 system (output range out) .....	22C-120	DTC P1878: gear block 3rd gear .....	22C-232
DTC P1828: shift fork position sensor 2 system (neutral) .....	22C-122	DTC P1879: gear block 4th gear .....	22C-233
DTC P1829: shift fork position sensor 2 system (poor performance) .....	22C-124	DTC p187a: gear block 5th gear .....	22C-235
DTC p182a: shift fork position sensor 3 system (voltage low range out) .....	22C-127	DTC p187b: gear block 6th gear .....	22C-236
DTC p182b: shift fork position sensor 3 system (voltage high range out) .....	22C-129	DTC p187c: gear block reverse gear .....	22C-238
DTC p182c: shift fork position sensor 3 system (output range out) .....	22C-131	DTC P1880: eol mode active .....	22C-239
		DTC P1881: twin clutch sst control mode switch system (malfunction) .....	22C-240
		DTC P2718: clutch/shift pressure solenoid 1 system (open circuit) .....	22C-241
		DTC P2719: clutch/shift pressure solenoid 1 system (overcurrent) .....	22C-243
		DTC P2720: clutch/shift pressure solenoid 1 system (short to ground) .....	22C-245
		DTC P2721: clutch/shift pressure solenoid 1 system (short to power supply) .....	22C-247
		DTC P2727: clutch/shift pressure solenoid 2 system (open circuit) .....	22C-249
		DTC P2728: clutch/shift pressure solenoid 2 system (overcurrent) .....	22C-251
		DTC P2729: clutch/shift pressure solenoid 2 system (short to ground) .....	22C-253
		DTC P2730: clutch/shift pressure solenoid 2 system (short to power supply) .....	22C-255
		DTC P2733: clutch/shift changeover solenoid 1, spool stuck .....	22C-257
		DTC P2736: clutch/shift changeover solenoid 1 system (open circuit) .....	22C-259

DTC P2738: clutch/shift changeover solenoid 1 system (short to ground).....	<a href="#">22C-261</a>	Inspection.....	<a href="#">42A-123</a>
DTC P2739: clutch/shift changeover solenoid 1 system (short to power supply).....	<a href="#">22C-262</a>	Removal and installation.....	<a href="#">42A-121</a>
DTC P2741: fluid temperature sensor system (gradient error).....	<a href="#">22C-264</a>	Door diagnosis	
DTC P2742: fluid temperature sensor system (output low range out).....	<a href="#">22C-266</a>	Glass and door diagnostic troubleshooting strategy ..	<a href="#">42A-104</a>
DTC P2743: fluid temperature sensor system (output high range out).....	<a href="#">22C-268</a>	Introduction to glass and door diagnosis .....	<a href="#">42A-104</a>
DTC P2766: input shaft 2 (even number gear axle) speed sensor system (poor performance).....	<a href="#">22C-270</a>	Symptom chart.....	<a href="#">42A-104</a>
DTC P2809: clutch/shift changeover solenoid 2, spool stuck.....	<a href="#">22C-274</a>	Door glass and regulator	
DTC P2812: clutch/shift changeover solenoid 2 system (open circuit).....	<a href="#">22C-276</a>	Inspection.....	<a href="#">42A-127</a>
DTC P2814: clutch/shift changeover solenoid 2 system (short to ground).....	<a href="#">22C-278</a>	Removal and installation.....	<a href="#">42A-124</a>
DTC P2815: clutch/shift changeover solenoid 2 system (short to power supply).....	<a href="#">22C-280</a>	Door handle and latch	
DTC U0001: bus-off.....	<a href="#">22C-282</a>	Inspection.....	<a href="#">42A-133</a>
DTC U0100: engine time-out error .....	<a href="#">22C-284</a>	Removal and installation.....	<a href="#">42A-129</a>
DTC U0103: shift lever time-out error.....	<a href="#">22C-286</a>	General information .....	<a href="#">42A-28</a>
DTC U0121: ASC time-out error.....	<a href="#">22C-287</a>	How to locate wind noise .....	<a href="#">42A-107</a>
DTC U0136: awc time-out error.....	<a href="#">22C-288</a>	On-vehicle service	
DTC U0141: ETACS time-out error .....	<a href="#">22C-6</a>	Central door locking system check .....	<a href="#">42A-118</a>
Introduction.....	<a href="#">22C-15</a>	Check of key lock prevention function .....	<a href="#">42A-118</a>
Symptom chart .....	<a href="#">22C-289</a>	Configuration function .....	<a href="#">42A-120</a>
Symptom procedures		Door fit adjustment.....	<a href="#">42A-111</a>
Inspection procedure 1: the scan tool cannot communicate with tc-sst-ECU.....	<a href="#">22C-290</a>	Door inside handle check.....	<a href="#">42A-119</a>
Inspection procedure 2: the driving mode cannot be changed.....	<a href="#">22C-292</a>	Door outside handle play check.....	<a href="#">42A-118</a>
Inspection procedure 3: speed change with the paddle shift is impossible.....	<a href="#">22C-295</a>	Door window glass adjustment .....	<a href="#">42A-114</a>
Inspection procedure 4: tc-sst-ECU power supply circuit malfunction .....	<a href="#">22C-299</a>	Glass sliding mechanism check and adjustment .....	<a href="#">42A-115</a>
Tc-sst-ECU terminal voltage reference chart.....	<a href="#">22C-299</a>	Learning procedures of the power window fully closed position <driver's side> .....	<a href="#">42A-117</a>
Troubleshooting strategy .....	<a href="#">22C-6</a>	Power window check .....	<a href="#">42A-115</a>
Differential carrier assembly		Power window operating current check .....	<a href="#">42A-116</a>
Disassembly and reassembly.....	<a href="#">27-54</a>	Power window safety mechanism check <driver's side> .....	<a href="#">42A-116</a>
Removal and installation .....	<a href="#">27-52</a>	Power window timer function check .....	<a href="#">42A-116</a>
Dome light		Shift "P" interlink door unlock function check <vehicles with tc-sst> .....	<a href="#">42A-118</a>
Diagnosis		Power window diagnosis	
Diagnostic function .....	<a href="#">54A-241</a>	Diagnostic trouble code chart .....	<a href="#">42A-58</a>
Standard flow of diagnostic troubleshooting .....	<a href="#">54A-241</a>	Trouble symptom chart .....	<a href="#">42A-58</a>
Dome light removal and installation.....	<a href="#">54A-259</a>	Troubleshooting strategy .....	<a href="#">42A-57</a>
General information .....	<a href="#">54A-239</a>	Protector film	
Luggage compartment light removal and installation ....	<a href="#">54A-260</a>	Removal and installation.....	<a href="#">42A-141</a>
On-vehicle service		Special tools.....	<a href="#">42A-109</a>
Customization function .....	<a href="#">54A-258</a>	Specification(s)	
Special tools .....	<a href="#">54A-240</a>	Component identifications .....	<a href="#">42A-28</a>
Symptom procedures		Sealant.....	<a href="#">42A-28</a>
Inspection procedure 1: the front dome light does not illuminate normally.....	<a href="#">54A-243</a>	Service specifications .....	<a href="#">42A-28</a>
Inspection procedure 2: the rear dome light does not illuminate normally.....	<a href="#">54A-248</a>	Symptom procedures	
Inspection procedure 3: the luggage compartment light does not illuminate normally.....	<a href="#">54A-252</a>	Inspection procedure 1: water leak through door window glass.....	<a href="#">42A-104</a>
Inspection procedure 4: the interior light auto-cut function does not operate correctly.....	<a href="#">54A-255</a>	Inspection procedure 2: door window glass malfunction .....	<a href="#">42A-105</a>
Trouble symptom chart .....	<a href="#">54A-243</a>	Inspection procedure 3: water leak through door edge .....	<a href="#">42A-105</a>
Dome light, luggage compartment light and ignition key hole illumination light .....	<a href="#">90-122</a>	Inspection procedure 4: water leak from door center .....	<a href="#">42A-105</a>
Door.....	<a href="#">80A-18</a>	Inspection procedure 5: door hard to open .....	<a href="#">42A-106</a>
Door		Inspection procedure 6: door does not open or close completely .....	<a href="#">42A-106</a>
Central door locking system diagnosis		Inspection procedure 7: uneven gap between body .....	<a href="#">42A-106</a>
Trouble symptom chart .....	<a href="#">42A-30</a>	Inspection procedure 8: wind noise around door.....	<a href="#">42A-107</a>
Troubleshooting strategy .....	<a href="#">42A-30</a>	Symptom procedures <central door locking system>	
Check at ECU terminal .....	<a href="#">42A-103</a>	Inspection procedure 1: central door locking system does not work at all.....	<a href="#">42A-31</a>
Diagnostic trouble code procedures <power window>		Inspection procedure 2: central door locking system does not operate even when door lock switch of power window main switch operated (door lock switch of front power window sub switch operate normally).....	<a href="#">42A-36</a>
Code no. L0730 p/w (dr) sw pulse 1 disconnection ...	<a href="#">42A-59</a>	Inspection procedure 3: central door locking system does not operate even when door lock switch of front power window sub switch operated (door lock switch of power window main switch operate normally).....	<a href="#">42A-40</a>
Code no. L0732 p/w (dr) sw pulse 2 disconnection ...	<a href="#">42A-61</a>	Inspection procedure 4: a door cannot be locked or unlocked by the central door locking system .....	<a href="#">42A-44</a>
Code no. L0734 p/w (dr) above window position.....	<a href="#">42A-63</a>	Inspection procedure 5: selector "P" position-linked door unlock func does not operate normally. <vehicles with tc-sst> .....	<a href="#">42A-55</a>
Code no. L0736 p/w (dr) sensor fail (ground).....	<a href="#">42A-64</a>	Symptom procedures <power window>	
Code no. L0740 p/w (dr) 3 times jam - protection.....	<a href="#">42A-66</a>	Inspection procedure 1: power windows do not work at all.....	<a href="#">42A-68</a>
Code no. L0746 p/w (dr) parameter read failcode no. L0750 p/w (dr) position read fail .....	<a href="#">42A-67</a>	Inspection procedure 2: driver's power window does not work by means of the power window main switch .....	<a href="#">42A-75</a>
Door assembly		Inspection procedure 3: relevant power window(s) does not work by means of the front and rear passenger's power window sub switches.....	<a href="#">42A-78</a>

Inspection procedure 4: front and/or rear passenger's power window(s) do not work by means of the power window main switch.....	42A-94	Engine and transaxle Configuration diagrams.....	80A-6
Inspection procedure 5: the power window timer function does not work normally.....	42A-98	Splice locations .....	80B-4
Inspection procedure 6: power window anti-trap function does not work normally. <driver's side seat>.....	42A-100	Engine assembly Removal and installation.....	11A-80
Inspection procedure 7: the window glass lowers automatically while it is rising.....	42A-102	Engine compartment Configuration diagrams.....	80A-4
Window glass runchannel and door opening weatherstrip Removal and installation.....	42A-136	Splice locations .....	80B-4
Door ajar warning tone alarm .....	90-340	Engine control Accelerator pedal Removal and installation.....	17-8
Door mirror Inspection .....	51-81	Engine control system diagnosis Introduction .....	17-3
Removal and installation .....	51-79	Troubleshooting strategy .....	17-3
Door sash tape Removal and installation .....	51-10	General information .....	17-3
Special tool .....	51-9	Special tool .....	17-7
Door trim Removal and installation .....	52A-15	Symptom chart.....	17-3
Driver's air bag module and clock spring Inspection .....	52B-392	Symptom procedures Inspection procedure 1: throttle valve will not fully open or close .....	17-4
Removal and installation .....	52B-386	Inspection procedure 2: accelerator pedal operation not smooth (over acceleration) .....	17-5
Driveshaft assembly Disassembly and assembly Front axle.....	26-20	Engine control module (ECM) Removal and installation.....	13A-920
Rear axle .....	27-48	Engine control resistor Removal and installation.....	13A-919
Ebj boot replacement Front axle.....	26-23	Engine cooling diagnosis Introduction .....	14-3
Rear axle .....	27-51	Symptom chart.....	14-3
Removal and installation Front axle.....	26-15	Symptom procedures Inspection procedure 1: coolant leak .....	14-4
Rear axle .....	27-43	Inspection procedure 2: engine overheating .....	14-5
Ducts Removal and installation .....	55-138	Inspection procedure 3: radiator fan and condenser fan do not operate.....	14-6
E		Troubleshooting strategy .....	14-3
Emission control MFI - t/c Catalytic converter Removal and installation.....	17-81	Engine diagnosis .....	11A-2
Diagnosis.....	17-69	Engine mounting Removal and installation.....	32-4
Evaporative emission canister and fuel tank pressure relief valve Inspection .....	17-80	Engine oil cooler Removal and installation.....	12-9
Removal and installation.....	17-79	Engine oil pressure switch Removal and installation.....	12-7
Evaporative emission control system Barometric pressure sensor check .....	17-78	ETACS Check with terminal voltage .....	54A-677
Component location.....	17-76	Diagnosis trouble code procedures DTC B1761: vin not recorded .....	54A-619
Crankshaft position sensor check.....	17-78	DTC b210a: +b power supply (low input) .....	54A-621
Engine coolant temperature sensor check .....	17-78	DTC b210b: +b power supply (high input) .....	54A-625
Evaporative emission purge solenoid check.....	17-77	DTC B2206: chassis number does not match .....	54A-627
General information (evaporative emission system)..	17-74	DTC B2215: ECU internal error .....	54A-627
Mass airflow sensor check.....	17-78	DTC b222c: coding incomplete .....	54A-625
No. 1 intake air temperature sensor check .....	17-78	DTC B2353: ignition power supply (low input) .....	54A-627
Purge control system check (purge flow check) .....	17-76	DTC B2354: ignition power supply (high input) .....	54A-627
Throttle position sensor check .....	17-78	DTC U0001: bus off (CAN-c)DTC U0019: bus off (CAN-b) .....	54A-584
General information .....	17-69	DTC U0100: engine control module CAN timeout .....	54A-585
Positive crankcase ventilation system Component location.....	17-73	DTC U0101: tc-sst-ECU CAN timeout .....	54A-587
General information (positive crankcase ventilation system) .....	17-72	DTC U0103: shift lever CAN timeout .....	54A-589
Positive crankcase ventilation (pcv) system check Engine and emission control.....	17-73	DTC U0121: ASC-ECU CAN timeout .....	54A-591
Engine and emission control.....	17-73	DTC U0126: steering wheel sensor CAN timeout .....	54A-593
Service specifications .....	17-69	DTC U0136: s-awc-ECU CAN timeout .....	54A-595
Special tools .....	17-69	DTC U0151: SRS-ECU CAN timeout .....	54A-597
Vacuum hoses .....	17-70	DTC U0154: occupant classification-ECU CAN timeout .....	54A-599
Vacuum hoses Vacuum circuit diagram .....	17-71	DTC U0155: combination meter CAN timeout .....	54A-601
Vacuum hose check.....	17-72	DTC U0164: A/C-ECU CAN timeout .....	54A-603
Vacuum hose installation .....	17-72	DTC U0168: wcm or kos-ECU CAN timeout.....	54A-605
Vacuum hose routing .....	17-70	DTC U0184: audio CAN timeout.....	54A-607

DTC U1120: bus line (CAN-c) low input.....	54A-617	Inspection	
DTC U1121: bus line (CAN-c) high input.....	54A-582	Front fog light relay check.....	54A-237
Diagnostic trouble code chart.....	54A-582	On-vehicle service	
ETACS-ECU		Front fog light aiming .....	54A-234
Removal and installation.....	54A-676	Front fog light bulb replacement .....	54A-235
Input signal procedures		Removal and installation.....	54A-236
Inspection procedure 1: ETACS-ECU does not receive any signal from the ignition switch (acc).....	54A-640	Service specifications .....	54A-217
Inspection procedure 10: ETACS-ECU does not receive any signal from the hazard warning light switch. ....	54A-667	Special tools.....	54A-218
Inspection procedure 11: ETACS-ECU does not receive any signal from the column switch signal. ....	54A-669	Symptom procedures	
Inspection procedure 12: ETACS-ECU does not receive any signal from the hood switch. ....	54A-670	Inspection procedure 1: all the front fog lights do not illuminate normally.....	54A-222
Inspection procedure 2: ETACS-ECU does not receive any signal from the ignition switch (lg1).....	54A-642	Inspection procedure 2: one of the fog lights does not illuminate.....	54A-228
Inspection procedure 3: ETACS-ECU does not receive any signal from the key reminder switch.....	54A-644	Inspection procedure 3: the front fog light indicator does not illuminate normally.....	54A-232
Inspection procedure 4: ETACS-ECU does not receive any signal from the front door lock actuator.....	54A-647	Trouble symptom chart .....	54A-221
Inspection procedure 5: ETACS-ECU does not receive any signal from the front door switch (lh).....	54A-654	Front axle diagnosis	
Inspection procedure 6: ETACS-ECU does not receive any signal from the front door switch (rh).....	54A-656	Symptom chart.....	26-4
Inspection procedure 7: ETACS-ECU does not receive any signal from the rear door switch (lh).....	54A-658	Symptom procedures	
Inspection procedure 8: ETACS-ECU does not receive any signal from the rear door switch (rh).....	54A-661	Inspection procedure 1: noise during wheel rotation .....	26-5
Inspection procedure 9: ETACS-ECU does not receive any signal from the trunk lid latch. ....	54A-663	Inspection procedure 2: noise due to excessive play of wheel in turning direction .....	26-6
On-vehicle service		Troubleshooting strategy .....	26-4
Customization function .....	54A-673	Front axle hub assembly	
Service data.....	54A-630	Inspection .....	26-13
Special tool.....	54A-578	Removal and installation.....	26-9
Symptom procedures		Front bumper assembly and radiator grille	
Malfunction of ETACS-ECU power supply circuit .....	54A-636	Disassembly and assembly .....	51-4
Trouble symptom chart.....	54A-635	Removal and installation.....	51-3
Trouble symptom chart for input signal.....	54A-639	Front disc brake assembly	
Troubleshooting		Disassembly and assembly .....	35A-35
Diagnostic function .....	54A-579	Inspection	
Standard flow of diagnostic troubleshooting .....	54A-579	Basic brake system.....	35A-34
ETACS-ECU .....	90-10	Basic brake system.....	35A-36
Exhaust manifold		Removal and installation.....	35A-33
Removal and installation .....	11B-20	Front impact sensors	
Exhaust manifold and turbocharger		Inspection .....	52B-382
Inspection .....	15-23	Removal and installation.....	52B-380
Removal and installation .....	15-16	Front roll stopper and centermember	
Exhaust pipe and main muffler		Removal and installation.....	32-8
Removal and installation .....	15-24	Front suspension diagnosis	
Explanation about the SCAN tool (M.U.T.-III) CAN bus diagnostics .....	54C-9	Front suspension diagnosis troubleshooting strategy....	33-4
Exterior transmitter antenna assembly, interior transmitter antenna assembly, receiver antenna module		Introduction to front suspension diagnosis .....	33-4
Removal and installation .....	42B-279	Symptom chart.....	33-4
F		Symptom procedures	
Fastener tightening specification .....		Inspection procedure 1: steering wheel is heavy, vibrates or pulls to one side .....	33-4
Fastener tightening specifications		Inspection procedure 2: excessive body rolling .....	33-5
Engine overhaul.....		Inspection procedure 3: poor ride .....	33-5
Manual transaxle overhaul .....		Inspection procedure 4: unequal ride height.....	33-5
Front suspension.....		Inspection procedure 5: noise.....	33-6
Rear suspension.....		Fuel filler lid	
Heater, air conditioning and ventilation.....		Removal and installation.....	42A-14
Fender		Fuel supply diagnosis	
Removal and installation .....	22D-2	Introduction .....	13B-2
Floor and roof		Symptom procedures.....	13B-3
Configuration diagrams .....	11B-4	Troubleshooting strategy .....	13B-2
Splice locations.....	22B-4	Fuel tank	
Floor console assembly		Disassembly and assembly .....	13B-15
Removal and installation .....	33-2	Disassembly and reassembly .....	13B-17
Fog light.....	34-4	Fuel tank inspection .....	13B-18
Fog light		Removal and installation.....	13B-10
Diagnosis	55-5	Fusible link, fuse and iod or storage connector .....	70-13
Diagnostic function .....	52A-9	G	
Standard flow of diagnostic troubleshooting .....	90-114	G and yaw rate sensor	
Garnishes and moldings	54A-219	Removal and installation.....	35C-278
Removal and installation.....	54A-219	Garnishes and moldings	
Special tool .....	54A-219	Removal and installation.....	51-8
General data and specifications .....	54A-219	Special tool .....	51-8
General data and specifications .....		General data and specifications .....	00-52

General description .....	22D-2	DTC U0154: ocm CAN timeout.....	54A-478
General information .....		DTC U0155: meter CAN timeout .....	54A-479
Engine mechanical .....	11A-2	DTC U0164: A/C CAN timeout.....	54A-481
Engine lubrication .....	12-2	DTC U0168: wcm CAN timeout .....	54A-482
Multiport fuel injection (MFI) .....	13A-2	DTC U0195: satellite radio CAN timeout .....	54A-485
Fuel supply .....	13B-2	DTC U0245 and CAN timeout.....	54A-487
Engine cooling .....	14-2	General information .....	54A-455
Intake and exhaust .....	15-2	On-vehicle service	
Clutch .....	21A-2	Erase the passcode .....	54A-516
Manual transaxle .....	22A-2	Pairing a cellular phone or deleting a phone.....	54A-513
Manual transaxle overhaul .....	22B-2	Removal and installation.....	54A-517
Twin clutch-sportronic shift transmission (tc-sst) .....	22C-3	Service data.....	54A-516
Propeller shaft .....	25-2	Special tools.....	54A-458
Front axle.....	26-2	Steering wheel voice control switch continuity check .....	54A-518
Rear axle .....	27-2	Symptom procedures	
Power plant mount.....	32-2	Inspection procedure 1: hands free cellular phone system does not work normally.....	54A-489
Front suspension .....	33-2	Inspection procedure 2: during the conversation with the hands free cellular phone system, the speaker's voice cannot be heard by the other party .....	54A-497
Rear suspension.....	34-2	Inspection procedure 3: during the conversation with the hands free cellular phone system, the voice of other party cannot be heard .....	54A-500
Basic brake system .....	35A-2	Inspection procedure 4: even when the steering wheel voice control switch is operated, the conversation is not possible.....	54A-501
Active skid control system (ASC) .....	35C-2	Inspection procedure 5: the cellular phone is not recognized or the connection cannot be established.	54A-506
Parking brakes.....	36-2	Inspection procedure 6: steering wheel voice control switch illumination does not come on .....	54A-507
Power steering.....	37-2	Inspection procedure 7: check the hands free module power supply circuit .....	54A-511
Keyless operation system (kos).....	42B-2	Trouble symptom chart .....	54A-488
Wireless control module (wcm) .....	42C-2	Harness connector inspection .....	00E-2
Interior .....	52A-2	Hazard warning light switch	
Supplemental restraint system (SRS) .....	52B-3	Diagnosis	
Local interconnect network (lin).....	54B-2	Diagnostic function.....	54A-263
Controller area network (CAN) .....	54C-2	Standard flow of diagnostic troubleshooting .....	54A-263
Heater, air conditioning and ventilation.....	55-3	Diagnostic trouble code chart .....	54A-265
General specification.....	22D-2	Diagnostic trouble code procedures	
General specification(s).....	13A-5	DTC b16a6: turn-signal fuse blown.....	54A-265
General specifications		Inspection	
Engine overhaul.....	11B-2	Hazard warning light switch check .....	54A-268
Clutch overhaul.....	21B-2	Removal and installation.....	54A-268
Manual transaxle overhaul .....	22B-3	Special tools.....	54A-262
Propeller shaft .....	25-2	Symptom procedures	
Front axle.....	26-3	Inspection procedure 1: the hazard warning lights do not illuminate.....	54A-266
Rear axle .....	27-3	Trouble symptom chart .....	54A-266
Wheel and tire .....	31-2	Headlight	
Front suspension .....	33-3	Data list reference table .....	54A-174
Rear suspension.....	34-4	Diagnosis	
Basic brake system .....	35A-2	Diagnostic function.....	54A-105
Power steering.....	37-2	Standard flow of diagnostic troubleshooting .....	54A-105
Heater, air conditioning and ventilation.....	55-5	Diagnostic trouble code chart .....	54A-107
Generator and ignition system		Diagnostic trouble code procedures	
Removal and installation .....	11B-10	DTC b16a2: blown turn-signal light (lh) bulb .....	54A-107
Glove box		DTC b16a3: turn-signal light (lh) short circuit.....	54A-113
Removal and installation .....	52A-6	DTC b16a4: blown turn-signal light (rh) bulb .....	54A-116
Grounding.....	70-17	DTC b16a5: turn-signal light (rh) short circuit .....	54A-121
Grounding cable .....	70-16	DTC L0432: rls rs adaptation error .....	54A-124
		DTC L0434: rls rain sensor error	54A-125
		DTC L0436: rls light sensor error.....	54A-125
		General information .....	54A-102
Hands free system .....	90-318	Headlight leveling switch removal and installation.....	54A-186
Hands-free cellular phone system		Headlight removal and installation .....	54A-184
Diagnosis.....	54A-459	Inspection	
Diagnosis		Headlight leveling switch check, <Vehicles with headlight manual leveling system> .....	54A-190
Diagnosis function .....	54A-459	Headlight relay check.....	54A-189
Standard flow of diagnostic troubleshooting .....	54A-459	Lighting control sensor (light sensor) check.....	54A-191
Diagnostic trouble code chart .....	54A-462	Lighting control sensor removal and installation .....	54A-187
Diagnostic trouble code procedures		On-vehicle service	
Code No.U0184 audio CAN timeout.....	54A-484	Customization function.....	54A-183
DTC B2468: microphone input short to batt	54A-463	Headlight aiming .....	54A-175
DTC B2470: microphone input short to ground .....		Headlight auto light function check .....	54A-182
DTC B2471: on hook button stuck	54A-466		
DTC B2472: off hook button stuck	54A-472		
DTC B2473: vr button stuck.....	54A-473		
DTC B2475: vin not programmed .....	54A-475		
DTC U0019: bus off (CAN-b).....	54A-475		
DTC U0141: ETACS CAN timeout.....	54A-476		
DTC U0151: SRS-abg CAN timeout.....			

**H**

Hands free system .....	
Hands-free cellular phone system	
Diagnosis.....	54A-459
Diagnosis	
Diagnosis function .....	54A-459
Standard flow of diagnostic troubleshooting .....	54A-459
Diagnostic trouble code chart .....	54A-462
Diagnostic trouble code procedures	
Code No.U0184 audio CAN timeout.....	54A-484
DTC B2468: microphone input short to batt	54A-463
DTC B2470: microphone input short to ground .....	
DTC B2471: on hook button stuck	54A-466
DTC B2472: off hook button stuck	54A-472
DTC B2473: vr button stuck.....	54A-473
DTC B2475: vin not programmed .....	54A-475
DTC U0019: bus off (CAN-b).....	54A-475
DTC U0141: ETACS CAN timeout.....	54A-476
DTC U0151: SRS-abg CAN timeout.....	

Headlight automatic-shutdown function check .....	54A-182	Checking relays .....	00E-11
Luminous intensity measurement.....	54A-178	Checking switches .....	00E-10
Replace the bulb.....	54A-179	General electrical system check .....	00E-12
Service specifications .....	54A-103	How to diagnose .....	00E-6
Special tools .....	54A-104	Information for diagnosis .....	00E-6
Symptom procedures		Inspection .....	00E-7
Inspection procedure 1: all the headlights (low-beam) do not illuminate.....	54A-128	Inspection instruments .....	00E-7
Inspection procedure 10: the auto light function does not work normally.....	54A-166	Troubleshooting steps.....	00E-6
Inspection procedure 11: all the turn-signal lights do not illuminate.....	54A-168	How to read circuit diagrams .....	90-4
Inspection procedure 12: the comfort flashing function does not work normally.....	54A-170	How to read configuration diagrams .....	80A-3
Inspection procedure 13: the turn-signal indicator light do not illuminate.....	54A-172	How to read splice locations .....	80B-2
Inspection procedure 2: all the headlights (high-beam) do not illuminate.....	54A-133	How to use this manual .....	00-3
Inspection procedure 3: the headlights illuminate at low-beam (high-beam does not illuminate) regardless of the lighting switch positions .....	54A-137	How to use troubleshooting/inspection service points	
Inspection procedure 4: headlights do not illuminate when the passing switch is operated.....	54A-138	Connector inspection service points .....	00-14
Inspection procedure 5: one of the headlights does not illuminate.....	54A-140	Connector measurement service points .....	00-12
Inspection procedure 6: high-beam indicator light does not illuminate normally.....	54A-144	How to cope with intermittent malfunctions .....	00-15
Inspection procedure 7: the headlight automatic shutdown function does not work normally.....	54A-146	How to treat past trouble.....	00-16
Inspection procedure 8: daytime running light function does not work normally. <discharge type headlight>.	54A-153	How to use the inspection procedures .....	00-10
Inspection procedure 8: daytime running light function does not work normally. <halogen type headlight>....	54A-149	Inspection service points for a blown fuse .....	00-17
Inspection procedure 9: any of the tail lights, the position lights or the license plate lights does not illuminate.....	54A-160	Troubleshooting contents .....	00-7
Trouble symptom chart.....	54A-127	Hydraulic unit	
Headlight <discharge type>.....	90-96	Hydraulic unit disposal	
Headlight <halogen type> .....	90-90	Manual transaxle.....	22A-134
Headlight leveling system.....	90-102	Rear axle.....	27-60
Headlining		Removal and installation	
Removal and installation .....	52A-17	Manual transaxle.....	22A-134
Heated seat.....	90-314	Twin clutch-sportronic shift transmission (tc-sst) .....	22C-349
Heater control unit		Rear axle.....	27-58
Removal and installation .....	54A-160	Active skid control system (ASC).....	35C-272
Heater unit and blower assembly		I	
Disassembly and reassembly.....	54A-127		
Inspection .....	90-96	Ignition key reminder tone alarm <vehicles with kos> .....	90-332
Removal and installation .....	90-90	Ignition key reminder tone alarm <vehicles without kos> .....	90-330
High-mounted stoplight		Ignition switch	
Removal and installation .....	52A-17	Inspection	
Hood		Ignition switch continuity check .....	54A-22
Hood		Key reminder switch inspection .....	54A-22
Disassembly and assembly .....	54A-127	On-vehicle service	
Hood removal and installation .....	90-96	Check of ignition key reminder warning function (steering lock reminder buzzer by kos) .....	54A-19
Inspection .....	90-90	Removal and installation .....	54A-19
Hood diagnosis		Special tools .....	54A-12
Introduction.....	54A-127	Symptom procedures	
Troubleshooting strategy .....	90-90	Ignition key cylinder illumination light does not illuminate/extinguish normally. <vehicles with wcm> .....	54A-15
On-vehicle service		Trouble symptom chart .....	54A-15
Adjustment of clearance around hood .....	42A-9	Troubleshooting	
Adjustment of hood height.....	42A-7	Diagnosis function .....	54A-13
Alignment of hood latch and striker .....	42A-8	Standard flow of diagnostic trouble shooting .....	54A-13
Symptom procedures		Ignition system .....	
Inspection procedure 1: difficult locking and unlocking .....	42A-4	Ignition system	
Inspection procedure 2: uneven body clearance .....	42A-4	Camshaft position sensor	
Inspection procedure 3: uneven height.....	42A-5	Removal and installation .....	16-40
Trouble symptom chart .....	42A-5	Crankshaft position sensor	
Horn.....	42A-5	Removal and installation .....	16-41
Horn		General information .....	16-34
Inspection		General specification(s) .....	16-35
Horn relay check.....	42A-5	Ignition coil	
Removal and installation .....	42A-5	Removal and installation .....	16-39
How to diagnose		Knock sensor	
Battery handling.....	42A-5	Removal and installation .....	16-42
Cables and wires check.....	42A-5	On-vehicle service .....	
Checking fuses .....	42A-4	Camshaft position sensor check .....	16-38
		Crankshaft position sensor check .....	16-38
		Ignition coil check .....	16-36
		Knock control system check .....	16-36
		Spark plug check and cleaning .....	16-37
		Spark plug test .....	16-37
		Service specification(s) .....	16-35

Immobilizer system <M/T> .....	90-304	Lubricants .....	12-3
Immobilizer system <tc-sst> .....	90-308	Engine lubrication .....	21B-2
Index .....	80B-3	Clutch overhaul .....	22B-5
Individual component service .....	52B-377	Manual transaxle overhaul .....	25-3
Injector .....	13A-914	Propeller shaft .....	26-4
Injector		Front axle .....	27-4
Removal and installation .....		Rear axle .....	34-5
Input shaft		Rear suspension .....	35A-4
Disassembly and assembly .....		Basic brake system .....	37-3
Inspection .....		Power steering .....	55-5
Inside rear view mirror .....		Heater, air conditioning and ventilation .....	00-55
Inspection terminal .....		Lubrication and maintenance .....	00A-20
Instrument center panel		Luggage compartment .....	80B-6
Removal and installation .....		Configuration diagrams .....	80A-20
Instrument lower panel		Splice locations .....	80B-20
Removal and installation .....			
Instrument panel assembly			
Removal and installation .....			
Intake and exhaust diagnosis			
Introduction .....		Main sealant and adhesive table .....	00-80
Symptom chart .....		Maintenance service .....	
Symptom procedures		1. fuel system (tank, pipe line and connection, and fuel tank filler tube cap) (check for leaks) .....	00-63
Inspection procedure 1: exhaust leakage .....		10. engine oil filter (replace) .....	00-68
Inspection procedure 2: abnormal noise .....		11. manual transaxle oil (check oil level and condition/rchange) .....	00-68
Troubleshooting strategy .....		12. twin clutch sportronic shift transmission [check oil leaks (if necessary, check the oil level) /change] .....	00-70
Intake manifold		13. transfer oil (check oil level/change) .....	00-71
Inspection .....		14. reserve tank fluid (for active center differential and active yaw control system) (check fluid level) .....	00-72
Removal and installation .....		15. engine coolant (change) .....	00-73
Intake manifold and fuel system		16. coolant hoses (radiator hose, heater hose) (inspect) .....	00-74
Removal and installation .....		17. disk brake pads and rotors (inspect for wear) .....	00-75
Interior temperature sensor		18. brake hoses (check for deterioration or leaks) .....	00-78
Inspection .....		19. ball joint and steering linkage seals (inspect for grease leaks and damage) .....	00-78
Removal and installation .....		2. fuel hoses (check condition) .....	00-63
<b>J</b>		20. drive shaft boots (inspect for grease leaks and damage) .....	00-78
Joint connector .....		21. suspension system (inspect for looseness and damage) .....	00-78
<b>K</b>		22. rear axle oil (for differential part) (change) .....	00-79
Key interlock and shift lock mechanisms		23. rear axle oil (for torque transfer mechanism part) (change) .....	00-79
Removal and installation .....		24. tires (rotate) .....	00-79
Keyless operating system (kos)		25. air purifier filter (replace) .....	00-80
Keyless operation key		3. air cleaner element (replace) .....	00-63
Disassembly and assembly .....		4. evaporative emission control system (except evaporative emission canister) (check for leaks and clogging) .....	00-63
Inspection .....		5. spark plugs (replace) .....	00-64
Knee air bag module		6. intake and exhaust valve clearance (inspect and adjust) .....	00-64
Inspection .....		7. drive belt (for the generator and power steering oil pump) (replace) .....	00-66
Removal and installation .....		8. exhaust system (connections portion of muffler, muffler pipes and converter heat shields) (check and service) .....	00-67
Knuckle		9. engine oil (change) .....	00-67
Removal and installation .....		Manual transaxle diagnosis <manual transaxle>	
Kos-ECU		Introduction .....	22A-5
Removal and installation .....		Symptom chart .....	22A-5
<b>L</b>		Symptom procedures	
License plate light		Inspection procedure 1: noise, vibration .....	22A-5
Removal and installation .....		Inspection procedure 2: oil leaks .....	22A-6
Loose panel		Inspection procedure 3: hard shifting .....	22A-7
Removal and installation .....		Inspection procedure 4: jumps out of gear .....	22A-8
Lower arm		Troubleshooting strategy .....	22A-5
Lower arm ball joint dust cover replacement .....		Mark	
Lower arm check .....		Removal and installation .....	51-77
Removal and installation .....		Master cylinder assembly and brake booster assembly	
Lubricant		Removal and installation .....	35A-27
Manual transaxle .....		Meter and gauge <M/T> .....	90-140
Twin clutch-sportronic shift transmission (tc-sst) .....		Meter and gauge <tc-sst> .....	90-144
Twin clutch sst overhaul .....		MFI system <M/T> .....	90-52
Parking brakes .....			
Lubricant(s) .....			

MFI system <tc-sst> .....	90-64	DTC P0037: heated oxygen sensor (rear) heater circuit low .....	13A-77
Mitsubishi multi-communication system (mmcs) .....	90-228	DTC P0038: heated oxygen sensor (rear) heater circuit high .....	13A-84
Mmcs		DTC P0069: abnormal correlation between manifold absolute pressure sensor and barometric pressure sensor .....	13A-88
Diagnosis		DTC P0096: intake air temperature circuit range/ performance problem (sensor 2) .....	13A-92
Diagnosis function .....	54A-382	DTC P0097: intake air temperature circuit low input (sensor 2) .....	13A-98
Precautions on servicing mmcs .....	54A-368	DTC P0098: intake air temperature circuit high input (sensor 2) .....	13A-101
Service mode .....	54A-369	DTC P0101: mass airflow circuit range/ performance problem .....	13A-107
Standard flow of diagnostic troubleshooting .....	54A-368	DTC P0102: mass airflow circuit low input .....	13A-113
Diagnostic trouble code chart .....	54A-384	DTC P0103: mass airflow circuit high input .....	13A-120
Diagnostic trouble code procedures		DTC P0106: manifold absolute pressure circuit range/ performance problem .....	13A-125
DTC B2226: and error .....	54A-385	DTC P0107: manifold absolute pressure circuit low input .....	13A-134
DTC B2240: communication error with CAN box .....	54A-387	DTC P0108: manifold absolute pressure circuit high input .....	13A-142
DTC B2477: vin not programmed .....	54A-390	DTC P0111: intake air temperature circuit range/ performance problem (sensor 1) .....	13A-147
DTC U0019: bus off (CAN-b) .....	54A-391	DTC P0112: intake air temperature circuit low input (sensor 1) .....	13A-153
DTC U0141: ETACS CAN timeout .....	54A-392	DTC P0113: intake air temperature circuit high input (sensor 1) .....	13A-157
DTC U0151: SRS-agb CAN timeout .....	54A-394	DTC P0116: engine coolant temperature circuit range/ performance problem .....	13A-163
DTC U0154: ocm CAN timeout .....	54A-396	DTC P0117: engine coolant temperature circuit low input .....	13A-169
DTC U0155: meter CAN timeout .....	54A-397	DTC P0118: engine coolant temperature circuit high input .....	13A-174
DTC U0164: A/C CAN timeout .....	54A-399	DTC P0122: throttle position sensor (main) circuit low input .....	13A-181
DTC U0168: wcm CAN timeout .....	54A-400	DTC P0123: throttle position sensor (main) circuit high input .....	13A-185
DTC U0195: satellite radio CAN timeout .....	54A-402	DTC P0125: insufficient coolant temperature for closed loop fuel control .....	13A-192
DTC U0197: hands free module CAN timeout .....	54A-403	DTC P0128: coolant thermostat (coolant temperature below thermostat regulating temperature) .....	13A-200
DTC U1415: coding not completed/data fail .....	54A-405	DTC P0131: heated oxygen sensor (front) circuit low voltage .....	13A-203
DTC U1417: implausible coding data .....	54A-406	DTC P0132: heated oxygen sensor (front) circuit high voltage .....	13A-211
ETACS function customization function .....	54A-450	DTC P0133: heated oxygen sensor (front) circuit slow response .....	13A-215
Inspection		DTC P0134: heated oxygen sensor (front) circuit No activity detected .....	13A-220
Audio and video adapter inspection .....	54A-455	DTC P0137: heated oxygen sensor (rear) circuit low voltage .....	13A-226
Mitsubishi multi communication sysyem .....	54A-366	DTC P0138: heated oxygen sensor (rear) circuit high voltage .....	13A-234
Removal and installation .....	54A-453	DTC P0139: heated oxygen sensor (rear) circuit slow response .....	13A-238
Special tools .....	54A-367	DTC P0140: heated oxygen sensor (rear) circuit No activity detected .....	13A-242
Symptom procedures		DTC P0171: system too lean .....	13A-246
Inspection procedure 1: No navigation screen is displayed .....	54A-409	DTC P0172: system too rich .....	13A-252
Inspection procedure 10: sound of a dvd (video disk) can be played, but no image is played .....	54A-441	DTC P0181: fuel tank temperature sensor circuit range/ performance .....	13A-258
Inspection procedure 11: the picture and sound of external input are not played .....	54A-443	DTC P0182: fuel tank temperature sensor circuit low input .....	13A-265
Inspection procedure 12: check the CAN box unit power supply circuit .....	54A-445	DTC P0183: fuel tank temperature sensor circuit high input .....	13A-270
Inspection procedure 2: No sound is heard. <vehicles with audio amplifier> .....	54A-415	DTC P0201: injector circuit-cylinder 1 .....	13A-277
Inspection procedure 3: No sound is heard from one of the speakers. <vehicles with audio amplifier> .....	54A-424	DTC P0202: injector circuit-cylinder 2 .....	13A-287
Inspection procedure 4: the navigation system can be operated while the vehicle is driven .....	54A-432	DTC P0203: injector circuit-cylinder 3 .....	13A-297
Inspection procedure 5: the screen is not normal in the navigation mode. (the own vehicle mark is dislocated.) .....	54A-434	DTC P0204: injector circuit-cylinder 4 .....	13A-307
Inspection procedure 6: poor reception .....	54A-437	DTC P0222: throttle position sensor (sub) circuit low input .....	13A-317
Inspection procedure 7: gps signal can not be received .....	54A-438	DTC P0223: throttle position sensor (sub) circuit high input .....	13A-323
Inspection procedure 8: cd (compact disk)/ dvd (video disk) cannot be played .....	54A-439	DTC P0234: turbocharger wastegate system malfunction .....	13A-328
Inspection procedure 9: image of a dvd (video disk) is played, but no sound is played .....	54A-440	DTC P0243: turbocharger wastegate solenoid 1 circuit .....	13A-330
Trouble symptom chart .....	54A-408	DTC P0247: turbocharger wastegate solenoid 2 circuit .....	13A-337
Motors and transistor		DTC P0300: random/multiple cylinder misfire detected .....	13A-343
Inspection .....	55-126	DTC P0301: cylinder 1 misfire detected .....	13A-348
Removal and installation .....	55-125	DTC P0302: cylinder 2 misfire detected .....	13A-351
Multiport fuel injection (MFI) diagnosis		DTC P0303: cylinder 3 misfire detected .....	13A-354
Actuator test reference table .....	13A-871	DTC P0304: cylinder 4 misfire detected .....	13A-357
Check at the engine control module (ECM) .....	13A-872	DTC P0327: knock sensor circuit low .....	13A-361
Data list reference table .....	13A-852		
Diagnostic function .....	13A-9		
Diagnostic trouble code chart .....	13A-44		
Diagnostic trouble code procedures			
DTC P0011: intake variable valve timing system target error .....	13A-51		
DTC P0012: camshaft position -timing over-retarded .....	13A-54		
DTC P0014: exhaust variable valve timing system target error .....	13A-55		
DTC P0016: crankshaft/camshaft (intake) position sensor phase problem .....	13A-58		
DTC P0017: crankshaft/camshaft (exhaust) position sensor phase problem .....	13A-62		
DTC P0031: heated oxygen sensor (front) heater circuit low .....	13A-66		
DTC P0032: heated oxygen sensor (front) heater circuit high .....	13A-73		

DTC P0328: knock sensor circuit high.....	13A-364	DTC P1244: ram test for all area .....	13A-638
DTC P0335: crankshaft position sensor circuit.....	13A-367	DTC P1245: cycle ram test (engine).....	13A-639
DTC P0340: intake camshaft position sensor circuit .....	13A-377	DTC P1247: tc-sst plausibility <tc-sst>.....	13A-640
DTC P0365: exhaust camshaft position sensor circuit .....	13A-385	DTC P1320: ignition timing retard insufficient.....	13A-641
DTC P0420: warm up catalyst efficiency below threshold .....	13A-394	DTC P1506: idle control system rpm lower than expected at low temperature.....	13A-644
DTC P0441: evaporative emission control system incorrect purge flow .....	13A-396	DTC P1507: idle control system rpm higher than expected at low temperature.....	13A-647
DTC P0442: evaporative emission system leak detected (small leak).....	13A-400	DTC P1590: tcm to ECM communication error in torque reduction request .....	13A-650
DTC P0443: evaporative emission purge solenoid circuit Multiport fuel injection (MFI).....	13A-412	DTC P1603: battery backup circuit malfunction.....	13A-653
Multiport fuel injection (MFI).....	13A-463	DTC P1676: variant coding .....	13A-657
DTC P0446: evaporative emission ventilation solenoid circuit Multiport fuel injection (MFI).....	13A-419	DTC P2066: fuel level sensor (sub) circuit range/ performance .....	13A-659
Multiport fuel injection (MFI).....	13A-470	DTC P2100: throttle actuator control motor circuit (open).....	13A-663
DTC P0450: fuel tank differential pressure sensor malfunction Multiport fuel injection (MFI).....	13A-426	DTC P2101: throttle actuator control motor magneto malfunction.....	13A-668
Multiport fuel injection (MFI).....	13A-477	DTC P2122: accelerator pedal position sensor (main) circuit low input .....	13A-672
DTC P0451: fuel tank differential pressure circuit range/performance problem Multiport fuel injection (MFI).....	13A-435	DTC P2123: accelerator pedal position sensor (main) circuit high input .....	13A-677
Multiport fuel injection (MFI).....	13A-485	DTC P2127: accelerator pedal position sensor (sub) circuit low input .....	13A-682
DTC P0452: fuel tank differential pressure circuit low input Multiport fuel injection (MFI).....	13A-444	DTC P2128: accelerator pedal position sensor (sub) circuit high input .....	13A-687
Multiport fuel injection (MFI).....	13A-494	DTC P2135: throttle position sensor (main and sub) range/performance problem .....	13A-691
DTC P0453: fuel tank differential pressure circuit high input Multiport fuel injection (MFI).....	13A-455	DTC P2138: accelerator pedal position sensor (main and sub) range/performance problem .....	13A-697
Multiport fuel injection (MFI).....	13A-504	DTC P2195: heated oxygen sensor (front) inactive .....	13A-704
DTC P0455: evaporative emission system leak detected (gross leak) .....	13A-512	DTC P2228: barometric pressure circuit low input .....	13A-707
DTC P0456: evaporative emission system leak detected (very small leak) .....	13A-523	DTC P2229: barometric pressure circuit high input .....	13A-709
DTC P0461: fuel level sensor (main) circuit range/ performance .....	13A-534	DTC P2252: heated oxygen sensor offset circuit low voltage .....	13A-711
DTC P0462: fuel level sensor circuit low input .....	13A-537	DTC P2253: heated oxygen sensor offset circuit high voltage .....	13A-713
DTC P0463: fuel level sensor circuit high input .....	13A-540	DTC P2263: intake charge system malfunction .....	13A-715
DTC P0500: vehicle speed signal malfunction .....	13A-542	DTC U0001: bus off .....	13A-718
DTC P0506: idle control system rpm lower than expected .....	13A-545	DTC U0101: tc-sst-ECU time-out .....	13A-719
DTC P0507: idle control system rpm higher than expected .....	13A-548	DTC U0121: ASC-ECU time-out .....	13A-723
DTC P0513: immobilizer malfunction .....	13A-551	DTC U0141: ETACS-ECU time-out .....	13A-727
DTC P0551: power steering pressure switch circuit range/ performance .....	13A-553	DTC U0167: immobilizer communication error .....	13A-731
DTC P0554: power steering pressure switch circuit intermittent .....	13A-560	DTC U1180: combination meter time-out .....	13A-733
DTC P0603: EEPROM malfunction .....	13A-564	Fail-safe function reference table .....	13A-40
DTC P0606: engine control module main processor malfunction .....	13A-566	General scan tool (gst) mode 01 reference table .....	13A-866
DTC P0622: generator fr terminal circuit malfunction .....	13A-568	Inspection procedure using an oscilloscope .....	13A-881
DTC P0630: vehicle identification number (vin) malfunction .....	13A-573	Symptom chart .....	13A-48
DTC P0638: throttle actuator control motor circuit range/ performance .....	13A-575	Symptom procedures	
DTC P0642: throttle position sensor power supply....	13A-579	Inspection procedure 1: communication with ECM only is not possible .....	13A-737
DTC P0657: throttle actuator control motor relay circuit malfunction .....	13A-581	Inspection procedure 10: when the engine is cold, it stalls at idle (die out) .....	13A-766
DTC P0830: clutch pedal position switch circuit range/ performance .....	13A-589	Inspection procedure 11: when the engine is hot, it stalls at idle (die out) .....	13A-769
DTC P1021: intake engine oil control valve circuit ....	13A-594	Inspection procedure 12: the engine stalls accelerating (pass out) .....	13A-772
DTC P1025: exhaust engine oil control valve circuit .....	13A-601	Inspection procedure 13: the engine stalls decelerating .....	13A-774
DTC P1231: active stability control plausibility .....	13A-607	Inspection procedure 14: hesitation, sag, stumble, poor acceleration or surge .....	13A-776
DTC P1232: fail safe system .....	13A-609	Inspection procedure 15: acceleration shock .....	13A-779
DTC P1233: throttle position sensor (main) plausibility .....	13A-610	Inspection procedure 16: knocking .....	13A-781
DTC P1234: throttle position sensor (sub) plausibility .....	13A-614	Inspection procedure 17: too high co and hc concentration when idling .....	13A-782
DTC P1235: mass airflow sensor plausibility.....	13A-617	Inspection procedure 18: transient, mass emission tailpipe test failure .....	13A-785
DTC P1236: a/d converter .....	13A-620	Inspection procedure 19: purge flow test of the evaporative emission canister failure .....	13A-789
DTC P1237: accelerator pedal position sensor plausibility .....	13A-621	Inspection procedure 20: pressure test of the evaporative system failure .....	13A-789
DTC P1238: mass airflow sensor plausibility (torque monitor) .....	13A-624	Inspection procedure 21: generator output voltage is low (approximately 12.3 volts) .....	13A-791
DTC P1239: engine rpm plausibility .....	13A-628	Inspection procedure 22: power supply system and ignition switch-ig system .....	13A-794
DTC P1240: ignition angle .....	13A-630	Inspection procedure 23: fuel pump system .....	13A-805
DTC P1241: torque monitor .....	13A-631	Inspection procedure 24: ignition switch-st system and stator relay system <M/T> .....	13A-818
DTC P1242: fail safe control monitor .....	13A-635	Inspection procedure 25: ignition switch-st system and stator relay system <tc-sst> .....	13A-830
DTC P1243: inquiry/response error .....	13A-637		

Inspection procedure 26: ignition circuit system .....	13A-842	Drive belt tension check .....	11A-8
Inspection procedure 27: A/C system .....	13A-847	Drive belt tension check and adjustment .....	37-17
Inspection procedure 28: engine oil pressure switch system .....	13A-849	Engine coolant change .....	14-17
Inspection procedure 3: the malfunction indicator lamp (service engine soon or check engine lamp) remains illuminated and never goes out .....	13A-742	Engine coolant concentration test .....	14-18
Inspection procedure 4: cranks, won't start .....	13A-744	Engine coolant leak check .....	14-16
Inspection procedure 5: starts up and dies .....	13A-751	Engine coolant temperature sensor check .....	13A-907
Inspection procedure 6: hard starting .....	13A-755	Engine oil check .....	12-4
Inspection procedure 7: unstable idle (rough idle, hunting) .....	13A-760	Engine oil control valve check .....	13A-912
Inspection procedure 8: idle speed is high (improper idle speed) .....	13A-764	Engine oil filter replacement .....	12-5
Inspection procedure 9: idle speed is low (improper idle speed) .....	13A-765	Engine oil replacement .....	12-5
Troubleshooting strategy .....	13A-9	Evaporative emission purge solenoid check .....	13A-913
		Evaporative emission ventilation solenoid check .....	13A-913
		Fluid check	
		Manual transaxle .....	22A-118
		Twin clutch-sportronic shift transmission (tc-sst) .....	22C-332
		Fluid level check	
		Rear axle .....	27-29
		Power steering .....	37-17
	22C-347	Fluid replacement .....	37-18
		Front wheel alignment check and adjustment .....	33-7
		Fuel level sensor (sub) check .....	13B-6
	11A-54	Fuel level sensor (sub) replacement .....	13B-9
	11A-51	Fuel pressure test .....	13A-897
	11B-27	Fuel pump circuit resistor check .....	13A-906
		Fuel pump connector disconnection (how to reduce pressurized fuel pressure) .....	13A-901
	12-12	Fuel pump module replacement .....	13B-6
		Fuel pump operation check	
	11B-61	Multiport fuel injection (MFI) .....	13A-901
		Fuel supply .....	13B-6
	11B-56	Fuel pump relay continuity check .....	13A-903
	12-10	G and yaw rate sensor calibration .....	35C-266
	55-113	Gear oil level check .....	27-28
	52B-378	Gear oil replacement .....	27-29
		Heated oxygen sensor check .....	13A-908
		Hub bolt replacement	
	22A-119	Front axle .....	26-8
	22C-333	Rear axle .....	27-34
	42B-275	Hydraulic pressure check	
	11A-8	Manual transaxle .....	22A-119
	27-30	Twin clutch-sportronic shift transmission (tc-sst) .....	22C-333
	27-34	Hydraulic unit check .....	35C-263
	27-31	Id codes registration procedure .....	42C-114
	33-8	Id codes registration procedures .....	42B-265
	34-10	Idle mixture check .....	11A-13
	22A-118	Idle-up operation check .....	55-118
	22C-332	Ignition timing check .....	11A-10
	35A-16	In the event of a discharged battery .....	35C-266
	35A-15	Injector check .....	13A-910
	35A-24	Injector relay continuity check .....	13A-905
	35A-17	Inspection of keyless entry timer lock function	
	35A-17	Keyless operation system (kos) .....	42B-275
	35A-18	Wireless control module (wcm) .....	42C-125
	35A-12	Intake air temperature sensor check .....	13A-906
	35C-269	Intake charge pressure check .....	15-5
	55-114	Intake charge pressure control system check .....	15-7
	35A-24	Key interlock mechanism check .....	22C-330
	55-114	Keyless entry system check	
	35A-16	Keyless operation system (kos) .....	42B-275
	21A-3	Wireless control module (wcm) .....	42C-125
	21A-2	Lower arm ball joint looseness check .....	33-8
	13A-891	Manifold vacuum check	
	11A-15	Engine mechanical .....	11A-16
	55-114	Intake and exhaust .....	15-5
	55-117	Master cylinder brake fluid pressure sensor calibration .....	35C-268
	14-21	Multipoint fuel injection (MFI) relay continuity check .....	13A-903
	14-19	Oil pressure check	
	11A-12	Engine lubrication .....	12-6
	42B-276	Rear axle .....	27-32
	42C-126	Oil pump pressure test .....	37-20
	35A-21		

Parking brake lever stroke check and adjustment.....	36-11	Panic alarm
Parking brake lining seating procedure .....	36-12	Diagnosis
Parking brake switch check .....	36-12	Diagnostic function.....
Performance test .....	55-115	Standard flow of diagnostic troubleshooting .....
Power relay check .....	55-117	General information .....
Power steering pressure switch check .....	37-21	On-vehicle service
Power steering system air bleeding.....	37-19	Customization function.....
Radiator cap opening pressure check .....	14-16	Removal and installation.....
Rear axle total backlash check .....	27-27	Special tools.....
Rear wheel alignment check and adjustment.....	34-9	Symptom procedures
Refrigerant leak repair procedure .....	55-116	Panic alarm does not work normally.....
Refrigerant level test.....	55-113	Trouble symptom chart .....
Replace the clean air filter .....	55-119	Parking brake cable
Shift lever operation check .....	22C-330	Removal and installation.....
Shift lock mechanism check .....	22C-332	Parking brake diagnosis
Simple inspection of the A/C pressure sensor.....	55-113	Introduction .....
Stationary steering effort check .....	37-16	Symptom chart.....
Steering angle check .....	37-14	Symptom procedures
Steering wheel free play check .....	37-14	Inspection procedure 1: insufficient parking brake function .....
Steering wheel return to center check .....	37-17	Inspection procedure 2: when the parking brake lever is pulled, the brake warning light does not illuminate .....
Steering wheel sensor calibration .....	35C-267	Inspection procedure 3: when the parking brake lever is released, the brake warning light does not turn off .....
Throttle actuator control motor check .....	13A-911	Troubleshooting strategy .....
Throttle actuator control motor relay continuity check .....	13A-905	Parking brake lever
Throttle body (throttle valve area) cleaning .....	13A-897	Removal and installation.....
Tie rod end ball joint breakaway torque check .....	37-15	Parking brake lining and drum
Tie rod end ball joint dust cover check .....	37-15	Inspection .....
Timing chain elongation visual check .....	11A-17	Removal and installation.....
Tire inflation pressure check .....	31-8	Parking brake reminder tone alarm .....
Tire wear check .....	31-8	Passenger's (front) air bag module
TPMS transmitter check	42B-275	Inspection .....
Keyless operation system (kos).....	42C-125	Removal and installation.....
Wireless control module (wcm).....	42B-275	Piston and connecting rod
TPMS transmitter id check	42C-125	Inspection .....
Keyless operation system (kos).....	42B-275	Removal and installation.....
Wireless control module (wcm).....	42C-125	Post-collision diagnosis .....
Transfer oil change	22A-117	Power distribution system.....
Manual transaxle .....	22C-329	Power steering diagnosis
Twin clutch-sportronic shift transmission (tc-sst) .....	22A-117	Introduction to power steering diagnosis .....
Transfer oil check	22C-329	Power steering diagnosis troubleshooting strategy .....
Manual transaxle .....	22A-116	Symptom chart.....
Twin clutch-sportronic shift transmission (tc-sst) .....	22C-328	Symptom procedures
Transmission oil change	22A-116	Inspection procedure 1: excessive play of steering wheel.....
Manual transaxle .....	22C-328	Inspection procedure 10: oil leakage from hose connection.....
Twin clutch-sportronic shift transmission (tc-sst) .....	15-9	Inspection procedure 11: oil leakage from hose assembly .....
Turbocharger bypass valve check .....	15-8	Inspection procedure 12: oil leakage from oil reservoir .....
Turbocharger waste gate solenoid check .....	15-6	Inspection procedure 13: oil leakage from oil pump .....
Turbocharger wastegate actuator check .....	11A-10	Inspection procedure 14: oil leakage from steering gear .....
Valve clearance check and adjustment .....	14-18	Inspection procedure 2: difficult steering wheel operation (insufficient power assist).....
Water pump coolant leak check .....	26-7	Inspection procedure 3: rattling noise .....
Wheel bearing end play check	27-33	Inspection procedure 4: shrill noise .....
Front axle .....	31-8	Inspection procedure 5: squealing noise .....
Rear axle .....	70-3	Inspection procedure 6: hissing noise .....
Wheel runout check .....	22B-29	Inspection procedure 7: droning noise .....
Other devices .....	22B-29	Inspection procedure 8: squeaking noise .....
Output shaft .....	22B-35	Inspection procedure 9: vibration .....
Output shaft	80A-2	Power steering gear box and linkage
Disassembly and assembly .....	22B-29	Disassembly and reassembly .....
Inspection .....	22B-35	Inspection .....
Overall configuration diagram .....	22B-29	Removal and installation.....
	22C-348	Power steering hoses
	22C-348	Removal and installation.....
	22C-348	Power steering oil pump assembly
	22C-348	Removal and installation.....
	22C-348	Power windows.....
	22C-348	Precautions before service
	22C-348	Application of anti-corrosion agents and undercoats .....
	22C-348	Bolts and nuts with stabilizer for coefficient of friction .....
		00-38
		00-47

**P****Paddle shift assembly****Inspection**

Paddle shift switch check.....	22C-348
Removal and installation .....	22C-348

Cautions for working in engine compartment .....	00-26	Inspection procedure 17: poor reception. ....	54A-357
Coding list.....	00-39	Inspection procedure 18: distortion on am and/or fm.	54A-358
Engine idling learning procedure .....	00-32	Inspection procedure 19: distortion on fm only. ....	54A-359
How to perform vehicle identification number (vin) writing .....	00-27	Inspection procedure 2: No sound is heard. <vehicles with audio amplifier> .....	54A-322
Initialization procedure for learning value in MFI engine .....	00-31	Inspection procedure 20: auto select function inoperative, too few automatic stations are selected.....	54A-359
Scan tool (multi use tester { M.U.T.-III } sub assembly). ....	00-39	Inspection procedure 21: preset stations are erased. ....	54A-360
Servicing electrical system .....	00-37	Inspection procedure 22: cd can not be inserted.....	54A-360
Supplemental restraint system (SRS) .....	00-26	Inspection procedure 23: No sound. (cd only) .....	54A-361
Timing chain maintenance.....	00-33	Inspection procedure 24: cd sound skips.....	54A-361
Vehicle washing.....	00-38	Inspection procedure 25: sound quality is poor.....	54A-362
Precautions on how to repair the CAN bus lines .....	54C-8	Inspection procedure 26: cd can not be ejected. ....	54A-362
Propeller shaft		Inspection procedure 3: No sound is heard from one of the speakers. <vehicles with audio amplifier>	54A-333
Disassembly and assembly .....	25-9	Inspection procedure 3: No sound is heard from one of the speakers. <vehicles without audio amplifier>	54A-328
Inspection .....	25-8		
Removal and installation .....	25-6		
Propeller shaft diagnosis		Inspection procedure 4: the audio does not operate normally by operating the radio and cd player of the center panel unit. ....	54A-340
Introduction to propeller shaft diagnosis.....	25-3	Inspection procedure 5: audio illuminations does not work normally.....	54A-344
Propeller shaft diagnostic troubleshooting strategy .....	25-3	Inspection procedure 6: the sound of external input are not played. ....	54A-348
Symptom chart .....	25-4	Inspection procedure 7: noise is present while moving (am). ....	54A-350
Symptom procedures		Inspection procedure 8: noise is present while moving (fm). ....	54A-350
Inspection procedure 1: noise at start.....	25-4	Inspection procedure 9: sound mixed with noise, only at night (am). ....	54A-351
Inspection procedure 2: noise and vibration at high speed	25-4	Trouble symptom chart.....	54A-317
		Rear axle diagnosis <ayc>	
Radiator		Actuator test reference table.....	27-22
Removal and installation .....	14-31	Check at awc-ECU .....	27-22
Radio and cd player		Data list reference table .....	27-22
Diagnosis		Diagnostic function .....	27-6
Diagnosis function .....	54A-285	Diagnostic trouble code chart .....	27-8
Introduction to audio system diagnosis.....	54A-283	Inspection procedure for diagnosis code	
Standard flow of diagnostic troubleshooting .....	54A-285	Code No. C1619 ayc current value abnormality .....	27-9
Diagnostic trouble code chart .....	54A-288	Code No. c161a ayc direction valve (rh) output error	27-13
Diagnostic trouble code procedures		Code No. c161b ayc direction valve (lh) output error.	27-17
DTC B2420: power integrated circuit.....	54A-304	Code No. C1620 ayc control abnormality .....	27-21
DTC B2421: radio tuner .....	54A-305	Inspection procedure for trouble symptoms	
DTC B2423: 6cd player error.....	54A-307	Inspection procedure 1: abnormal noise from ayc differential (torque transfer mechanism) during cornering .....	27-22
DTC B2424: cd player error.....	54A-309	Standard flow of diagnostic troubleshooting .....	27-6
DTC B2450: switch panel communication .....	54A-311	Trouble symptom chart .....	27-22
DTC B2451: audio panel type error .....	54A-315	Rear axle diagnosis <except ayc>	
DTC U0019: bus off (CAN-b).....	54A-288	Inspection procedure for trouble symptoms	
DTC U0141: ETACS CAN timeout.....	54A-290	Inspection procedure 1: noise during wheel rotation <driveshaft> .....	27-5
DTC U0151: SRS-abg CAN timeout.....	54A-291	Inspection procedure 8: oil leakage <differential> .....	27-5
DTC U0154: ocm CAN timeout.....	54A-293	Introduction .....	27-4
DTC U0155: meter CAN timeout .....	54A-294	Symptom chart.....	27-4
DTC U0164: A/C CAN timeout .....	54A-296	Troubleshooting strategy .....	27-4
DTC U0168: wcm CAN timeout .....	54A-297	Rear axle hub assembly	
DTC U0195: satellite radio CAN timeout .....	54A-299	Inspection .....	27-39
DTC U0197: hands free module CAN timeout.....	54A-300	Removal and installation.....	27-36
DTC U1415: coding not completed/data fail .....	54A-302	Rear bumper assembly	
General information.....	54A-281	Removal and installation.....	51-6
Inspection		Rear combination light	
Audio adapter inspection .....	54A-365	Diagnosis	
On-vehicle service		Diagnostic function.....	54A-194
Adjustment of volume and sound quality automatic correction function .....	54A-363	Standard flow of diagnostic troubleshooting .....	54A-194
Removal and installation .....	54A-364	Diagnostic trouble code chart .....	54A-196
Service data.....	54A-363	Diagnostic trouble code procedures	
Special tools .....	54A-282	DTC b16a0: taillight (rh) circuit open (open circuit in taillight (rh) or position light (rh)) .....	
Symptom procedures		DTC b16a7: taillight (rh) circuit short (short circuit in taillight (rh) or position light (rh)) .....	
Inspection procedure 1: power is not turned on when the power switch is turned on.....	54A-318	DTC b16a1: taillight (lh) circuit open (open circuit in taillight (lh) or position light (lh), or license plate light)	
Inspection procedure 10: noise is overpowering both am and fm.....	54A-352	DTC b16a8: taillight (lh) circuit short (short circuit in taillight (lh), position light (lh), or license plate light) .....	
Inspection procedure 11: excessive noise on am and fm.	54A-352	General information .....	
Inspection procedure 12: noise is detected with engine running.....	54A-353	Rear combination light removal and installation .....	
Inspection procedure 13: noise appears during vibration or shocks. ....	54A-354	Special tools.....	
Inspection procedure 14: noise is present while moving (fm).....	54A-355		
Inspection procedure 15: constant noise. ....	54A-356		
Inspection procedure 16: No reception (am). ....	54A-356		

Symptom procedures		Scheduled maintenance table .....	00-59
Inspection procedure 1: all the taillights do not illuminate.....	54A-209	Sealant	
Inspection procedure 2: one of the headlights does not illuminate.....	54A-212	Engine lubrication .....	12-3
Taillight removal and installation.....	54A-217	Engine cooling .....	14-3
Trouble symptom chart.....	54A-209	Propeller shaft.....	25-3
Rear disc brake assembly		Sealant and adhesive	
Disassembly and assembly .....	35A-40	Multiport fuel injection (MFI) .....	13A-6
Inspection		Rear axle .....	27-4
Basic brake system.....	35A-39	Sealants	
Basic brake system.....	35A-41	Engine mechanical .....	11A-4
Removal and installation .....	35A-38	Power steering.....	37-3
Rear roll stopper and crossmember		Sealants and adhesives	
Removal and installation .....	32-10	Engine overhaul.....	11B-7
Rear spoiler		Manual transaxle overhaul.....	22B-4
Removal and installation .....		Seat assembly	
Rear suspension crossmember		Front seat assembly	
Removal and installation .....		Disassembly and assembly .....	52A-24
Rear suspension diagnosis		Inspection.....	52A-22
Introduction to rear suspension diagnosis .....		Removal and installation.....	52A-20
Rear suspension diagnostic troubleshooting strategy .....		Rear seat assembly	
Symptom chart .....		Disassembly and assembly .....	52A-27
Symptom procedures		Removal and installation.....	52A-25
Inspection procedure 1: squeaks or other abnormal noise .....	34-6	Seat belt	
Inspection procedure 2: poor ride .....	34-7	Front seat belt	
Inspection procedure 3: body tilting .....	34-7	Inspection.....	52A-29
Rear window defogger .....	90-208	Removal and installation.....	52A-28
Receiver antenna assembly		Rear seat belt	
Removal and installation .....		Removal and installation.....	52A-30
Recommended lubricants and lubricant capacities table ..		Seat belt warning tone alarm .....	90-336
Refrigerant line		Seat belts with pre-tensioner	
Removal and installation .....		Inspection .....	52B-416
Relay .....	42C-137	Removal and installation.....	52B-413
Remote controlled mirror .....	00-56	Select lever	
Reverse idler gear		Disassembly and assembly .....	22B-43
Disassembly and assembly .....	55-136	Sensor .....	70-8
Inspection .....	70-2	Sensor, switch and relay	
Refrigerant line		Inspection	
Removal and installation .....	90-206	Awc switch check .....	22A-133
Relay .....		Electric pump relay check .....	22A-133
Remote controlled mirror .....		Removal and installation	
Reverse idler gear		Manual transaxle .....	22A-132
Disassembly and assembly .....	22B-37	Twin clutch-sportronic shift transmission (tc-sst) .....	22C-349
Inspection .....	22B-39	Service precautions	
Refrigerant line		Supplemental restraint system (SRS).....	52B-25
Removal and installation .....		Controller area network (CAN) .....	54C-7
Relay .....		Service precautions	
Disassembly and assembly .....	54A-537	Caution label .....	55-6
Inspection .....	54A-537	Service specification	
Standard flow of diagnostic troubleshooting .....	54A-537	Intake and exhaust .....	15-2
Diagnostic trouble code chart .....	54A-540	Manual transaxle .....	22A-2
Diagnostic trouble code procedures		Propeller shaft.....	25-3
DTC B2222: radio receiver internal fail .....	54A-540	Service specification(s)	
DTC U0019: bus off (CAN-b) .....	54A-542	Engine lubrication .....	12-2
DTC U0141: ETACS CAN timeout .....	54A-543	Multiport fuel injection (MFI) .....	13A-6
DTC U0151: SRS-abg CAN timeout .....	54A-545	Clutch.....	21A-2
DTC U0154: ocm CAN timeout .....	54A-546	Service specifications	
DTC U0155: meter CAN timeout .....	54A-548	Engine mechanical .....	11A-3
DTC U0164: A/C CAN timeout .....	54A-549	Engine overhaul .....	11B-2
DTC U0168: wcm CAN timeout .....	54A-551	Engine cooling .....	14-2
DTC U0184: audio CAN timeout .....	54A-552	Clutch overhaul .....	21B-2
DTC U0197: hands free module CAN timeout .....	54A-554	Manual transaxle overhaul .....	22B-3
General information .....	54A-536	Front axle .....	26-4
On-vehicle service		Rear axle .....	27-3
How to read sirius id .....	54A-565	Wheel and tire .....	31-2
Removal and installation .....	54A-565	Front suspension .....	33-3
Special tools .....	54A-536	Rear suspension .....	34-5
Symptom procedures .....	54A-556	Basic brake system .....	35A-3
Symptom procedures		Active skid control system (ASC) .....	35C-6
Inspection procedure 1: a satellite radio cannot be received .....	54A-556	Parking brakes .....	36-2
Inspection procedure 2: check the satellite radio tuner power supply circuit .....	54A-561	Power steering .....	37-3
Inspection procedure 3: the error code "antenna error" is displayed on the display .....	54A-564	Keyless operation system (kos) .....	42B-8
Trouble symptom chart .....	54A-555		

Wireless control module (wcm) .....	42C-4	Diagnostic trouble code procedures
Heater, air conditioning and ventilation.....	55-5	<occupant classification-ECU>
Shift lock mechanism .....	90-80	DTC b1b78: passenger seat weight sensor (front: lh) performance
Shock absorber assembly		DTC b1b7d: passenger seat weight sensor (front: rh) performance
Disassembly and assembly .....	34-25	DTC b1b82: passenger seat weight sensor (rear: lh) performance
Removal and installation .....	34-24	DTC b1b87: passenger seat weight sensor (.....)
Side air dam		DTC b1b79: passenger seat weight sensor (ground side) short-circuited (front: lh)
Removal and installation .....	51-14	DTC b1b7e: passenger seat weight sensor (ground side) short-circuited (front: rh)
Side impact sensor		DTC b1b83: passenger seat weight sensor (ground side) short-circuited (re ..)
Inspection .....	52B-404	DTC b1b7a: passenger seat weight sensor (power supply side) short-circuited or open (front: lh)
Removal and installation .....	52B-402	DTC b1b7f: passenger seat weight sensor (power supply side) short-circuited or open (front: rh)
Side turn-signal light		DTC b1b84: passenger seat weight sensor (power ...)
Removal and installation .....	54A-237	DTC b1b8c: seat slide sensor circuit performance ..
Side-airbag module(s)		DTC b1b8d: seat slide sensor open circuit .....
Inspection .....	52B-408	DTC b1b8e: seat slide sensor (power supply side) short circuit.....
Removal and installation .....	52B-405	DTC b1b91: driver seat slide sensor configuration mismatch.....
Solenoid and solenoid valve.....	70-14	DTC b1ba7: occupant classification system verification required.....
Spare connector (for navigation system).....	90-240	DTC b1ba8: occupant classification-ECU out of calibration not/calibrated .....
Spare connector (multi-purpose).....	90-357	DTC b1bba: passenger seat weight sensor power supply circuit.....
Speaker		DTC b1bbc: occupant classification system negative system weight .....
General information .....	54A-570	DTC b1bbd: occupant classification-ECU current configuration table unprogrammed .....
On-vehicle service		DTC b1c23: passenger seat weight sensor (front: lh) configuration mismatch
Speaker test <vehicles with mmcs>.....	13A-7	DTC b1c24: passenger seat weight sensor (front: rh) configuration mismatch
Speaker test <vehicles with radio and cd player>.....	25-5	DTC b1c25: passenger seat weight sensor (rear: lh) configuration mismatch
Removal and installation .....	27-23	DTC b1c2 .....
Special tool		DTC b1cb2: occupant classification-ECU parameter table incompatible
Multiport fuel injection (MFI) .....	32-3	DTC B2212: occupant classification-ECU internal failure
Propeller shaft .....	36-10	DTC B2250: occupant classification-ECU not parameter flash requiredDTC B2262: occupant classification-ECU
Rear axle .....	42B-8	e .....
Power plant mount.....	42C-5	DTC b210d: battery voltage lowDTC b210e: battery voltage high .....
Parking brakes.....	52A-2	DTC B2206: chassis number does not match .....
Keyless operation system (kos).....	11A-5	DTC U0020: CAN-b bus off performance
Wireless control module (wcm) .....	11B-8	DTC U0021: CAN-b bus (hi) circuit open
Interior .....	12-4	DTC U0022: CAN-b bus (hi) shorted to circuit ground
Special tools		DTC U0023: CAN-b bus (hi) shorted to circuit power supply
Engine mechanical .....	13B-5	DTC U0024: CAN-b bus (lo) circuit open .....
Engine overhaul.....	14-14	DTC U0141: ETACS CAN timeout.....
Engine lubrication .....	15-4	DTC U0151: SRS-ECU CAN timeout .....
Fuel supply .....	21B-3	DTC U0155: combination meter CAN timeout.....
Engine cooling .....	22A-3	DTC U0164: A/C-ECU CAN timeout.....
Intake and exhaust .....	22B-8	DTC U0168: kos-ECU or wcm CAN timeout.....
Clutch overhaul.....	22C-4	DTC U0184: audio CAN timeout .....
Manual transaxle .....	26-6	DTC U0195: satellite radio tuner CAN timeout .....
Manual transaxle overhaul .....	33-6	DTC U0197: hands free module CAN timeout.....
Twin clutch-sportronic shift transmission (tc-sst) .....	34-8	DTC U0245: audio visual navigation unit CAN timeout
Front axle.....	35A-12	DTC U1419: the signal from a weight sensor (front: lh) is unusual
Front suspension .....	35C-262	DTC u141a: the signal from a weight sensor (front: rh) is unusual
Rear suspension .....	37-12	DTC u141b: the signal from a weight sensor (rear: lh) is unusual
Basic brake system .....	52B-369	DTC u141c: the signal from a weight .....
Active skid control system (ASC) .....	54B-3	Diagnostic trouble code procedures <SRS-ECU>
Power steering.....	54C-5	DTC B1206: passenger's air bag off indicator light (open circuit).....
Supplemental restraint system (SRS) .....	55-111	DTC B1207: passenger's air bag off indicator light (short circuit between circuit terminal).....
Local interconnect network (lin).....	51-2	DTC b1b00: driver's air bag module (1st squib) system (shorted to squib circuit ground)
Controller area network (CAN) .....	51-2	DTC b1b04: driver's air bag module (2nd squib) system (shorted to squib circuit ground) .....
Heater, air conditioning and ventilation.....	42A-13	DTC b1b01: driver's air bag module (1st squib) system (shorted to squib circuit power supply)
Specification(s) .....	52B-368	DTC b1b05: driver's air bag module (2nd squib) system (shorted to squib circuit power supply).....
Specification(s)		DTC b1b02: driver's air bag module (1st squib) system (squib circuit open)
Adhesive .....	52B-368	DTC b1b06: driver's air bag module (2nd squib) system (squib circuit open).....
Lubricant .....	52B-367	DTC b1b03: driver's air bag module (1st squib) system (short circuit between squib circuit terminals)
Service specifications .....	52B-367	DTC b1b07: driver's air bag module (2nd squib) system (short circuit between squib circuit terminals).....
Splash shield		
Removal and installation .....	52B-368	
SRS air bag diagnosis		
Accuracy check of occupant classification sensor reference table.....	52B-368	
Actuator test reference table .....	52B-368	
Data list reference table .....	52B-367	
Diagnostic function .....	52B-28	
Diagnostic trouble code chart <occupant classification-ECU>.....	52B-297	
Diagnostic trouble code chart <SRS-ECU>.....	52B-31	

DTC b1b08: passenger's (front) air bag module (1st squib) system (shorted to squib circuit ground)	52B-71	DTC b1c4a: front passenger's pre-tensioner (squib) system (short circuit between squib circuit terminals)	52B-249
DTC b1b0c: passenger's (front) air bag module (2nd squib) system (shorted to squib circuit ground).		DTC b210d: battery abnormal low voltage.....	52B-255
DTC b1b09: passenger's (front) air bag module (1st squib) system (shorted to squib circuit power supply)	52B-77	DTC b212c: open circuit to ig1 power supply (fuse No.12 circuit)	
DTC b1b0d: passenger's (front) air bag module (2nd squib) system (shorted to squib circuit power supply)		DTC b212d: open circuit to ig1 power supply (fuse No.18 circuit).....	52B-260
DTC b1b0a: passenger's (front) air bag module (1st squib) system (squib circuit open)	52B-83	DTC B2207: occupant restraint controller internal 1	
DTC b1b0e: passenger's (front) air bag module (2nd squib) system (squib circuit open).....		DTC B2208: occupant restraint controller internal 2	
DTC b1b0b: passenger's (front) air bag module (1st squib) system (short circuit between squib circuit terminals)	52B-88	DTC B2209: occupant restraint controller internal 3	
DTC b1b0f: passenger's (front) air bag module (2nd squib) system (short circuit between squib circuit terminals).....		DTC b220a: occupant restraint controller internal 4	
DTC b1b10: driver's knee air bag (squib) system (shorted to squib circuit ground).....	52B-95	DTC b220b: occupan .....	
DTC b1b11: driver's knee air bag (squib) system (shorted to squib circuit power supply).....	52B-100	DTC b223d: ocm (occupant classification-ECU) DTC present.....	52B-265
DTC b1b12: driver's knee air bag (squib) system (squib circuit open).....	52B-105	DTC U0019: bus off (CAN-b).....	52B-267
DTC b1b13: driver's knee air bag (squib) system (short circuit between squib circuit terminals).....	52B-110	DTC U0141: ETACS CAN timeout.....	52B-268
DTC b1b18: curtain air bag module (lh) (squib) system (shorted to squib circuit ground).....	52B-116	DTC U0154: occupant classification-ECU CAN timeout	52B-270
DTC b1b19: curtain air bag module (lh) (squib) system (shorted to squib circuit power supply).....	52B-122	DTC U0155: combination meter CAN timeout.....	52B-271
DTC b1b1a: curtain air bag module (lh) (squib) system (squib circuit open).....	52B-128	DTC U0164: A/C-ECU CAN timeout.....	52B-273
DTC b1b1b: curtain air bag module (lh) (squib) system (short circuit between squib circuit terminals).....	52B-134	DTC U0168: kos-ECU or wcm CAN timeout.....	52B-274
DTC b1b20: curtain air bag module (rh) (squib) system (shorted to squib circuit ground).....	52B-140	DTC U0170: front impact sensor (lh) communication error.....	52B-276
DTC b1b21: curtain air bag module (rh) (squib) system (shorted to squib circuit power supply).....	52B-146	DTC U0171: front impact sensor (rh) communication error.....	52B-277
DTC b1b22: curtain air bag module (rh) (squib) system (squib circuit open).....	52B-152	DTC U0172: side impact sensor (lh) communication error.....	52B-281
DTC b1b23: curtain air bag module (rh) (squib) system (short circuit between squib circuit terminals).....	52B-158	DTC U0175: side impact sensor (rh) communication error.....	52B-284
DTC b1b54: seat belt switch (rh) circuit (ground side) shorted		DTC U0184: audio CAN timeout.....	52B-287
DTC b1b55: seat belt switch (rh) circuit (power supply side) shorted		DTC U0195: satellite radio tuner CAN timeout.....	52B-291
DTC b1b56: seat belt switch (rh) circuit open.....	52B-164	DTC U0197: hands free module CAN timeout.....	52B-293
DTC b1b70: malfunction of G-sensor inside front impact sensor (lh).....	52B-169	DTC U1414: defective coding data .....	52B-294
DTC b1b71: malfunction of G-sensor inside front impact sensor (rh).....		DTC U1415: coding not completed/data fail .....	52B-296
DTC b1b72: malfunction of G-sensor inside side impact sensor (lh).....	52B-170	Fail-safe function reference table .....	52B-368
DTC b1b75: malfunction of G-sensor inside side impact sensor (rh).....	52B-172	Introduction to diagnosis.....	52B-28
DTC b1ba3: driver's seat slide sensor malfunction (occupant classification-ECU).....	52B-174	Passenger's air bag off indicator light check.....	52B-30
DTC b1ba5: SRS-ECU squib count mismatch .....	52B-175	Passenger's seat belt warning light check .....	52B-30
DTC b1baa: occupant classification-ECU configuration mismatch .....	52B-177	SRS warning light check .....	52B-30
DTC b1bc7: SRS-ECU (record data full) system.....	52B-178	Symptom procedures	
DTC b1c27: side-air bag module (lh) (squib) system (shorted to squib circuit ground).....	52B-183	Inspection procedure 1: communication between the scan tool and the SRS-ECU is not possible.....	52B-358
DTC b1c28: side-air bag module (lh) (squib) system (shorted to squib circuit power supply).....		Inspection procedure 2: power supply circuit system	52B-359
DTC b1c29: side-air bag module (lh) (squib) system (squib circuit open).....		Inspection procedure 3:the SRS warning light does not illuminate .....	52B-362
DTC b1c2a: side-air bag module (lh) (squib) system (short circuit between squib circuit terminals).....	52B-187	Inspection procedure 4: the SRS warning light does not go out .....	52B-365
DTC b1c2b: side-air bag module (rh) (squib) system (shorted to squib circuit ground).....	52B-191	Trouble symptom chart .....	52B-357
DTC b1c2c: side-air bag module (rh) (squib) system (shorted to squib circuit power supply).....	52B-195	Troubleshooting strategy .....	52B-28
DTC b1c2d: side-air bag module (rh) (squib) system (squib circuit open).....	52B-200	SRS control unit (SRS-ECU)	
DTC b1c2e: side-air bag module (rh) (squib) system (short circuit between squib circuit terminals).....	52B-204	Inspection .....	52B-385
DTC b1c38: driver's pre-tensioner (squib) system (shorted to squib circuit ground).....	52B-208	Removal and installation.....	52B-383
DTC b1c39: driver's pre-tensioner (squib) system (shorted to squib circuit power supply).....	52B-212	Stabilizer bar	
DTC b1c3a: driver's pre-tensioner (squib) system (squib circuit open).....	52B-218	Removal and installation	
DTC b1c3b: driver's pre-tensioner (squib) system (short circuit between squib circuit terminals).....	52B-222	Front suspension .....	33-17
DTC b1c47: front passenger's pre-tensioner (squib) system (shorted to squib circuit ground).....	52B-228	Rear suspension .....	34-28
DTC b1c48: front passenger's pre-tensioner (squib) system (shorted to squib circuit power supply).....	52B-234	Stabilizer link check	
DTC b1c49: front passenger's pre-tensioner (squib) system (squib circuit open).....	52B-239	Front suspension .....	33-18
	52B-243	Rear suspension .....	34-29
		Starting system	
		General information .....	16-23
		General specifications .....	16-24
		On-vehicle service	
		Starter relay check .....	16-26
		Service specifications .....	16-24
		Starter motor assembly	
		Disassembly and assembly .....	16-30
		Inspection	
		Engine electrical.....	16-28
		Engine electrical.....	16-32
		Removal and installation.....	16-27
		Starting system diagnosis .....	16-24
		Starting system <M/T>.....	90-36
		Starting system <tc-sst> .....	90-38
		Steering column.....	80B-5
		Steering shaft	
		Disassembly and reassembly .....	37-29
		Removal and installation.....	37-26

Steering wheel		<b>T</b>
Removal and installation .....	37-22	
Steering wheel audio remote control switch		
Diagnosis		
Standard flow of diagnostic troubleshooting .....	54A-521	Taillight, position light, license plate light and lighting monitor tone alarm .....
Trouble symptom chart .....	54A-521	90-116
General information.....	54A-519	Test equipment
Removal and installation .....	54A-534	Supplemental restraint system (SRS).....
Special tools .....	54A-520	52B-370
Steering wheel audio remote control switch inspection	54A-535	Controller area network (CAN) .....
Symptom procedures		54C-6
Inspection procedure 1: steering wheel audio remote control switch does not function. <vehicles with radio and cd player> .....	54A-522	Theft alarm
Inspection procedure 2: steering wheel audio remote control switch does not function. <vehicles with mmcs> .....	54A-527	Diagnosis
Inspection procedure 3: steering wheel audio remote control switch illumination does not come on. ....	54A-531	Diagnostic function.....
Steering wheel sensor		Standard flow of diagnostic troubleshooting .....
Removal and installation .....	35C-279	General information .....
Stoplight.....	90-138	Inspection
Strut assembly		Theft-alarm indicator check .....
Disassembly and reassembly.....	33-11	Removal and installation.....
Inspection		Special tools.....
Front suspension .....	33-11	Symptom procedures.....
Front suspension .....	33-14	Symptom procedures
Removal and installation .....	33-10	Inspection procedure 1: the theft-alarm is not armed (the theft-alarm indicator does not illuminate). ....
Strut tower bar		Inspection procedure 2: the interior alarm does not work normally while the theft-alarm is triggered .....
Removal and installation .....	42A-15	Inspection procedure 3: theft-alarm horn does not sound while the theft-alarm system is triggered .....
Sunroof.....	90-312	Inspection procedure 4: horn (high or low) does not sound while the theft-alarm system is triggered .....
Sunroof		Trouble symptom chart .....
Check at ECU terminal .....	42A-179	Theft-alarm system .....
Diagnostic trouble code procedures		Thermostat
Code no. L0630 s/r power supply .....	42A-153	Inspection .....
Code no. L0632 s/r switch fail.....	42A-155	Removal and installation.....
Code no. L0634 s/r sensor signal.....	42A-157	Throttle body
Code no. L0637 s/r position.....	42A-157	Removal and installation.....
Code no. L0640 s/r over load .....	42A-158	Throttle body assembly
General information .....	42A-150	Removal and installation.....
On-vehicle service		Tightening torque.....
Learning procedures of the sunroof fully closed position .....	42A-183	Timing chain
Sunroof check .....	42A-182	Inspection .....
Sunroof fit adjustment.....	42A-182	Removal and installation
Sunroof lid glass operation current check.....	42A-183	Engine mechanical.....
Sunroof operation check.....	42A-184	Engine overhaul.....
Sunroof safety function check.....	42A-182	Tire pressure monitoring system (TPMS)
Sunroof timer function check .....	42A-182	Removal and installation .....
Water test .....	42A-181	31-8
Special tools .....	42A-180	Tire pressure monitoring system (TPMS) <M/T> .....
Specification(s)		90-290
Sealant.....	42A-150	Tire pressure monitoring system (TPMS) <tc-sst> .....
Service specification .....	42A-150	Torque specifications .....
Sunroof		Towing and hoisting .....
Disassembly and assembly .....	42A-190	TPMS transmitter
Inspection .....	42A-189	Removal and installation
Sunroof assembly removal and installation .....	42A-187	Keyless operation system (kos) .....
Sunroof diagnosis		Wireless control module (wcm) .....
Diagnostic trouble code chart .....	42A-152	Trailing arm
Trouble symptom chart .....	42A-152	Removal and installation .....
Troubleshooting strategy .....	42A-152	Trailing arm ball joint dust cover inspection .....
Symptom procedures		Trailing arm ball joint dust cover replacement .....
Inspection procedure 1: sunroof does not work at all.	42A-159	Trailing arm ball joint rotation starting torque check .....
Inspection procedure 2: the sunroof lid glass does not tilt-up (tilt-down, open, and close normally).	42A-164	Trailing arm pillow ball bushing rotation torque check .....
Inspection procedure 3: the sunroof lid glass does not open (tilt-up, tilt-down, and close normally).	42A-167	Transaxle .....
Inspection procedure 4: the sunroof lid glass does not tilt-down or close (tilt-up and open normally).	42A-170	Disassembly and assembly
Inspection procedure 5: sunroof safety function does not work normally. ....	42A-173	Manual transaxle overhaul .....
Inspection procedure 6: the sunroof timer function does not work. ....	42A-175	Twin clutch sst overhaul .....
Supplemental restraint system (SRS) .....	90-266	Inspection .....
		Transaxle adjustment .....
		Transaxle (transmission) mounting
		Removal and installation .....
		Transaxle assembly
		Removal and installation
		Manual transaxle .....
		Twin clutch-sportronic shift transmission (tc-sst) .....

Transaxle case		<b>U</b>
Disassembly and assembly .....	22B-48	
Transaxle control		
Removal and installation .....	22A-121	
Transfer		
Disassembly and assembly		
Manual transaxle overhaul.....	22B-56	
Twin clutch sst overhaul.....	22D-4	
Transfer assembly		
Removal and installation		
Manual transaxle .....	22A-125	
Twin clutch-sportronic shift transmission (tc-sst) .....	22C-339	
Transmission control		
Removal and installation .....	22C-334	
Transmitter		
Disassembly and assembly .....	42C-129	
Inspection .....	42C-130	
Trims		
Removal and installation .....	52A-11	
Troubleshooting		
Troubleshooting		
Diagnosis function .....	54B-4	
Diagnostic trouble code chart .....	54B-5	
Diagnostic trouble code procedures		
DTC U0169: sunroof lin timeout <vehicles with sunroof> .....	54B-6	
DTC U0215: p/w sw (dr) lin timeout.....	54B-9	
DTC U0231: rain light sensor lin timeout <vehicles with auto light function> .....	54B-12	
DTC U1109: column sw lin timeout.....	54B-14	
DTC u150b: column sw checksum error.....	54B-16	
DTC u150c: p/w sw (dr) checksum error .....	54B-17	
DTC U1511: sunroof checksum error <vehicles with sunroof> .....	54B-18	
DTC U1512: rain light sensor checksum error <vehicles with auto light function> .....	54B-19	
DTC U1514: bit error (lin) .....	54B-20	
DTC U1515: No-bus activity error (lin).....	54B-22	
00-6	54B-22	
Troubleshooting guidelines.....	54B-22	
Trunk lid		
On-vehicle service		
Adjustment of clearance around trunk lid .....	42A-145	
Trunk lid height adjustment.....	42A-146	
Trunk lid striker adjustment.....	42A-146	
Special tools .....	42A-145	
Specification(s)		
Sealant.....	42A-143	
Symptom procedures		
Inspection procedure 1: difficult locking and unlocking .....	42A-143	
Inspection procedure 2: uneven body clearance .....	42A-144	
Inspection procedure 3: uneven height.....	42A-144	
Trouble symptom chart.....	42A-143	
Trunk lid		
Inspection .....	42A-149	
Removal and installation.....	42A-147	
Trunk lid diagnosis		
Introduction to trunk lid diagnosis .....	42A-143	
Trunk lid diagnostic troubleshooting strategy .....	42A-143	
Trunk lid opener.....	90-184	
Turn-signal light and hazard warning light.....	90-130	
Twin clutch sport shift transaxle (tc-sst) .....	90-82	
Twin clutch sst control mode switch		
Inspection .....	22C-333	
Inspection		
Twin clutch sst control mode switch check .....	22C-333	
Removal and installation .....	22C-333	
Under cover		
Removal and installation.....	51-16	
Upper arm assembly		
Removal and installation.....	34-21	
Upper arm ball joint dust cover inspection.....	34-22	
Upper arm ball joint dust cover replacement .....	34-22	
Upper arm ball joint rotation starting torque check .....	34-22	
Upper arm pillow ball bushing rotation torque check.....	34-22	
Valve stem seal		
Removal and installation.....	11A-43	
Vehicle identification		
Chassis number .....	00-19	
Engine model stamping .....	00-19	
Models .....	00-18	
National safety mark <canada> .....	00-20	
Theft protection label .....	00-21	
Tire and loading information placard.....	00-20	
Vehicle identification code plate.....	00-19	
Vehicle identification number plate .....	00-17	
Vehicle safety certification label.....	00-20	
Ventilators		
Removal and installation.....	55-140	
Water hose and pipe		
Removal and installation.....	11B-24	
Water hose and water pipe		
Inspection .....	14-30	
Removal and installation.....	14-26	
Water pump		
Removal and installation.....	14-25	
Wcm		
Removal and installation.....	42C-128	
Wheel and tire		
Installation service point .....	31-8	
Wheel and tire diagnosis		
Wheel and tire diagnosis		
Diagnosis .....	31-3	
Wheel balance accuracy.....	31-4	
Wheel speed sensor		
Inspection .....	35C-277	
Removal and installation.....	35C-274	
Window glass		
General information .....	42A-16	
Rear window glass		
Removal and installation.....	42A-24	
Special tool .....	42A-18	
Specification(s)		
Adhesives .....	42A-15	
Symptom procedures		
Inspection procedure 1: water leak through windshield/ rear window glass .....	42A-18	
Window glass diagnosis		
Introduction to window glass diagnosis.....	42A-17	
Window glass diagnostic troubleshooting strategy .....	42A-18	
Window glass diagnostic trouble symptom chart.....	42A-18	
Windshield		
Removal and installation.....	42A-19	
Windshield wiper and washer		
Data list reference table .....	90-202	
General information .....	51-19	
Lighting control sensor		
Adaptation.....	51-76	

Removal and installation.....	51-76
On-vehicle service	
Configuration function.....	51-65
Lighting control sensor (rain sensor) inspection .....	51-65
Windshield intermittent wiper interval check.....	51-64
Special tools .....	51-22
Symptom procedures .....	51-25
Symptom procedures	
Inspection procedure 1: the windshield wipers do not work at all.....	51-25
Inspection procedure 10: the windshield washer does not work normally.....	51-59
Inspection procedure 2: the windshield wipers do not work when the wiper switch is at the "INT", "washer" or "mist" position, however, the wipers work at low speed when the switch is at the "lo" or "hi" position. ....	51-32
Inspection procedure 3: windshield wipers do not stop at the specified park position. ....	51-35
Inspection procedure 4: windshield wipers do not work normally.....	51-38
Inspection procedure 5: the windshield intermittent wiper interval cannot be adjusted by operating the windshield intermittent wiper interval control switch..	51-44
Inspection procedure 6: the windshield intermittent wiper interval is not changed according to the vehicle speed.....	51-46
Inspection procedure 7: the rain sensitive auto wiper function does not work at all <vehicles with lighting control sensor>.....	51-48
Inspection procedure 8: the rain sensitive auto wiper function works even though there is no rainfall <vehicles with lighting control sensor> .....	51-53
Inspection procedure 9: sometimes the rain sensitive auto wiper function works even though there is no rainfall < vehicles with lighting control sensor> .....	51-56
Windshield washer	
Inspection .....	51-73
Removal and installation.....	51-72
Windshield wiper	
Inspection .....	51-70
Removal and installation.....	51-66
Windshield wiper and washer diagnosis	
Standard flow of diagnostic troubleshooting .....	51-23
Trouble symptom chart .....	51-23