
GROUP 80B**SPLICING LOCATIONS****CONTENTS**

HOW TO READ SPLICE LOCATIONS.....	80B-2	DASH PANEL.....	80B-5
INDEX.....	80B-3	STEERING COLUMN	80B-5
ENGINE COMPARTMENT.....	80B-4	FLOOR AND ROOF	80B-6
ENGINE AND TRANSAXLE	80B-4	LUGGAGE COMPARTMENT.....	80B-6

HOW TO READ SPLICE LOCATIONS

M1802000100454

"Splice locations" describes splice points of each wiring harness on an actual vehicle. Some variations are included in one splice location. Accordingly, some locations may not be applicable for individual vehicles.


Indicates a splice point number.

The splice point numbers are identical to those in "CIRCUIT DIAGRAMS," making them easy to use.
In addition, the splice point numbers are usually numbered clockwise.

Example: S 013

Sequential number

Prefix meaning splice point

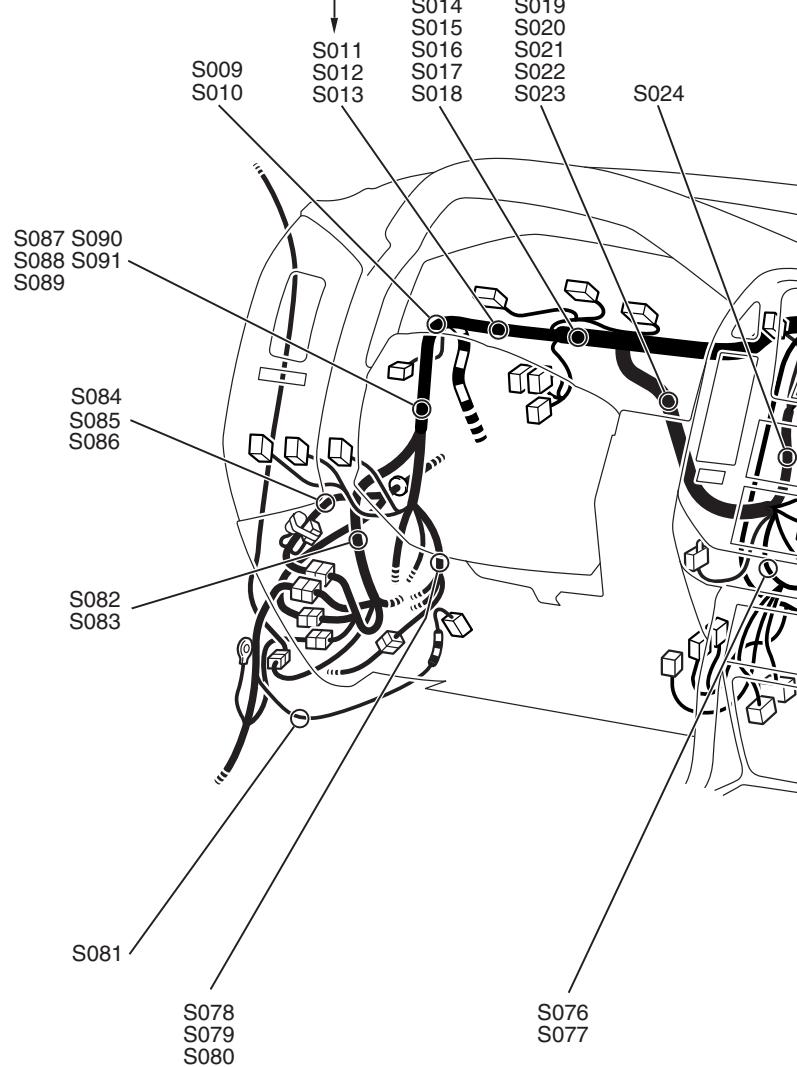

ACX02177AC

INDEX


M1802000901497

This index shows the page numbers where the splice locations are.

SPLICE LOCATION NO.	PAGE						
S001	P.80B-4	S002	P.80B-4	S003	P.80B-4	S004	P.80B-4
S005	P.80B-4	S006	P.80B-4	S007	P.80B-4	S008	P.80B-4
S009	P.80B-4	S010	P.80B-4	S011	P.80B-4	S012	P.80B-4
S013	P.80B-4	S014	P.80B-5	S015	P.80B-5	S016	P.80B-5
S017	P.80B-5	S018	P.80B-5	S019	P.80B-5	S020	P.80B-5
S021	P.80B-5	S022	P.80B-5	S023	P.80B-5	S024	P.80B-5
S025	P.80B-5	S026	P.80B-5	S027	P.80B-5	S028	P.80B-5
S031	P.80B-5	S032	P.80B-5	S034	P.80B-5	S035	P.80B-5
S036	P.80B-5	S037	P.80B-5	S038	P.80B-5	S039	P.80B-5
S040	P.80B-5	S041	P.80B-5	S043	P.80B-5	S044	P.80B-5
S045	P.80B-5	S046	P.80B-5	S047	P.80B-5	S048	P.80B-5
S049	P.80B-5	S050	P.80B-5	S051	P.80B-5	S052	P.80B-5
S053	P.80B-6	S054	P.80B-6	S055	P.80B-6	S056	P.80B-6
S058	P.80B-6	S059	P.80B-6	S060	P.80B-6	S061	P.80B-6
S062	P.80B-6	S063	P.80B-6	S064	P.80B-5	S065	P.80B-6
S066	P.80B-5						

ENGINE COMPARTMENT


M1802000201090

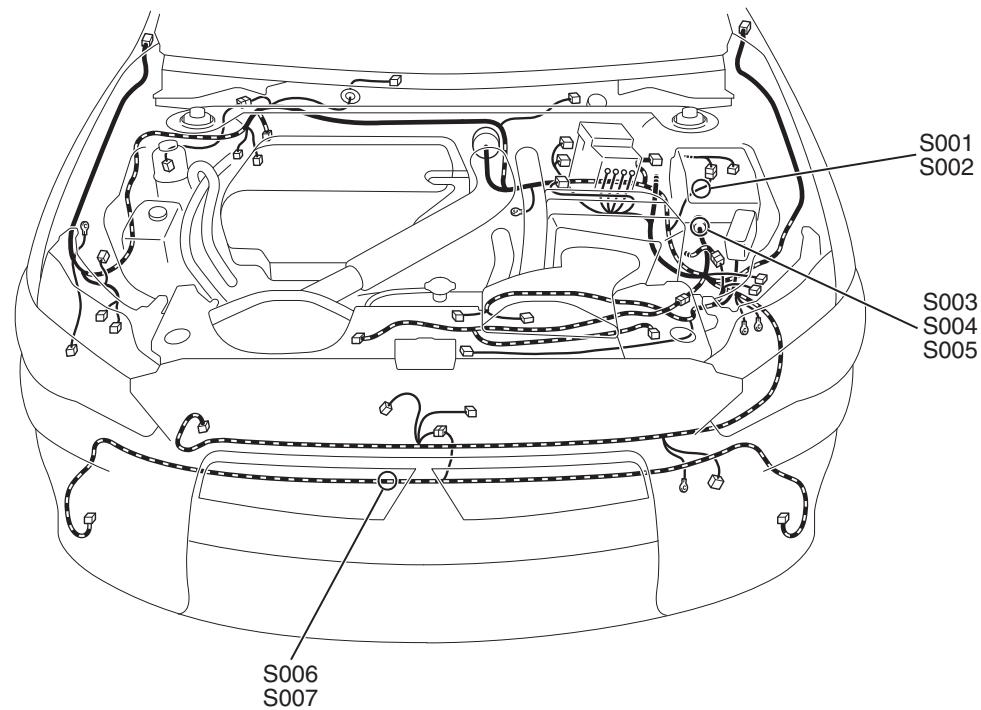

AC901354AB

ENGINE AND TRANSAXLE

M1802001401127

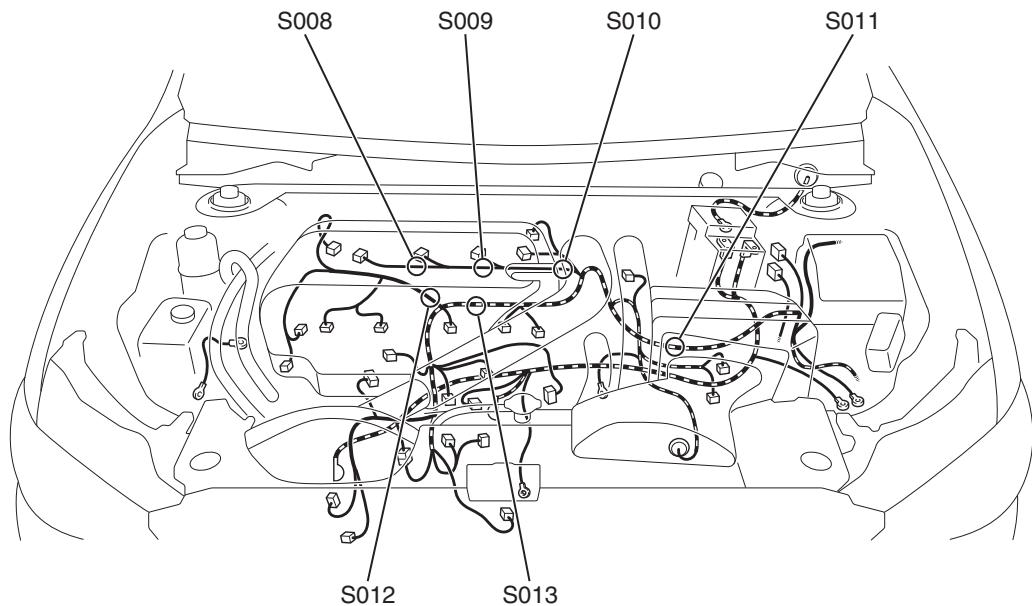


AC902454AB

**SPLICE LOCATIONS
DASH PANEL**

80B-5

DASH PANEL


M1802000301310

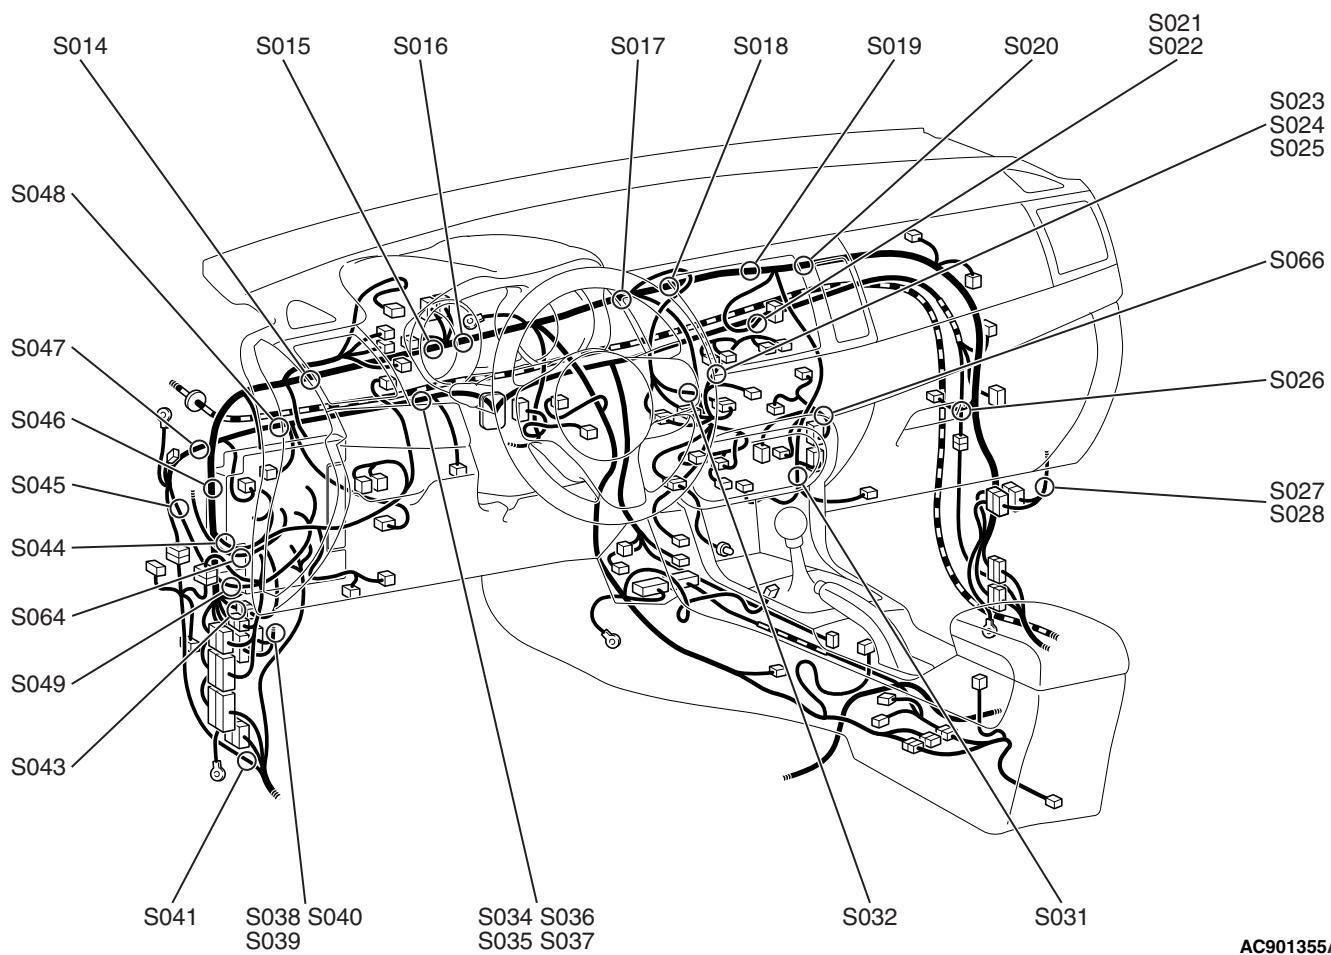

AC901355AB

STEERING COLUMN


M1802000400240

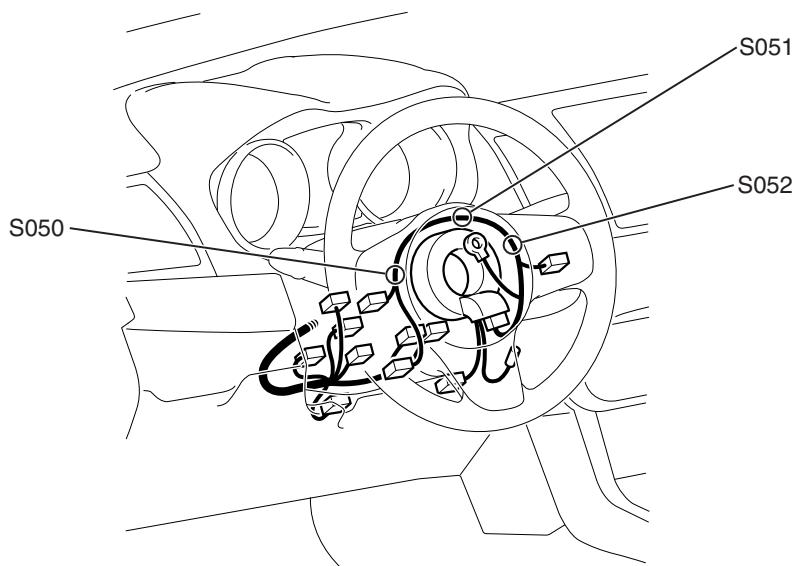

AC708226AC

FLOOR AND ROOF


M1802001201060

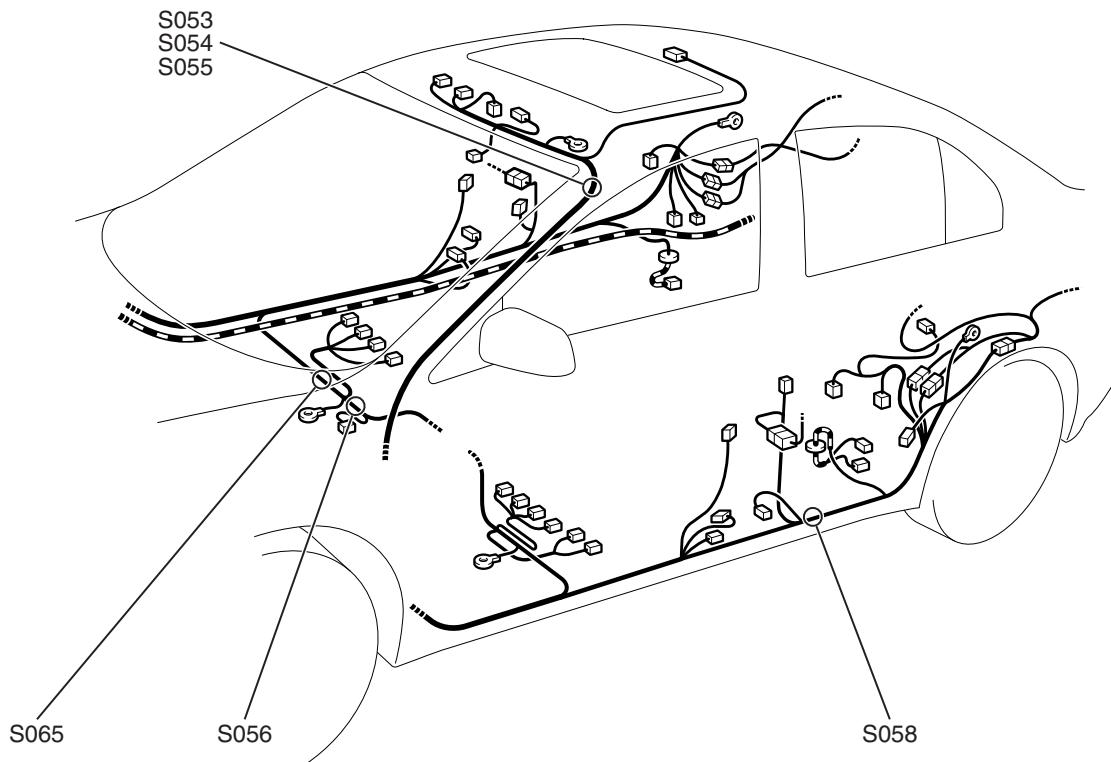

AC805694AC

LUGGAGE COMPARTMENT

M1802000700296

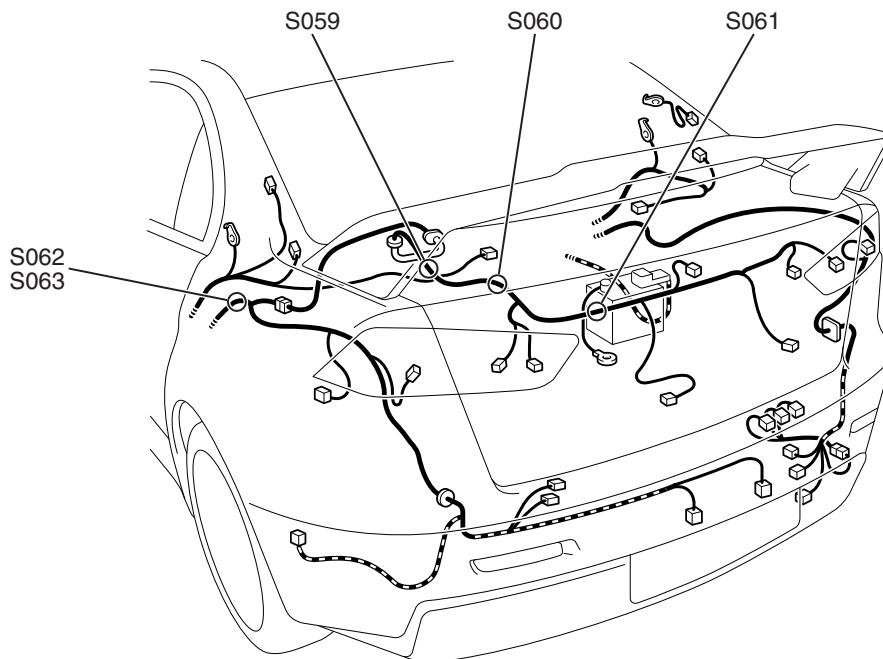

AC708485AB