

GROUP 55

HEATER, AIR CONDITIONING AND VENTILATION

CONTENTS

GENERAL INFORMATION	55-3	DIAGNOSTIC FUNCTION.....	55-7
FASTENER TIGHTENING SPECIFICATIONS	55-5	DIAGNOSTIC TROUBLE CODE CHART ..	55-10
GENERAL SPECIFICATIONS.....	55-5	DIAGNOSTIC TROUBLE CODE PROCEDURES	55-12
SERVICE SPECIFICATIONS.....	55-5	SYMPTOM CHART <VEHICLES WITHOUT A/C>	55-96
LUBRICANTS	55-5	SYMPTOM PROCEDURES <VEHICLES WITHOUT A/C>.....	55-97
SERVICE PRECAUTIONS.....	55-6	MALFUNCTION OF THE A/C-ECU POWER SUPPLY SYSTEM <VEHICLES WITHOUT A/C>	55-97
CAUTION LABELS	55-6	BLOWER FAN AND MOTOR DOES NOT RUN. <VEHICLES WITHOUT A/C>	55-101
AUTO A/C DIAGNOSIS	55-6	BLOWER FAN AND MOTOR DOES NOT STOP TURNING. <VEHICLES WITHOUT A/C> ..	55-106
INTRODUCTION.....	55-6	INSIDE/OUTSIDE AIR CHANGEOVER IS NOT POSSIBLE. <VEHICLES WITHOUT A/C> .	55-109
TROUBLESHOOTING STRATEGY	55-6	A/C OUTLET AIR TEMPERATURE DOES NOT INCREASE <VEHICLES WITHOUT A/C>..	55-112

Continued on next page

WARNINGS REGARDING SERVICING OF SUPPLEMENTAL RESTRAINT SYSTEM (SRS) EQUIPPED VEHICLES

⚠ WARNING

- *Improper service or maintenance of any component of the SRS, or any SRS-related component, can lead to personal injury or death to service personnel (from inadvertent firing of the air bag) or to the driver and passenger (from rendering the SRS inoperative).*
- *Service or maintenance of any SRS component or SRS-related component must be performed only at an authorized MITSUBISHI dealer.*
- *MITSUBISHI dealer personnel must thoroughly review this manual, and especially its GROUP 52B - Supplemental Restraint System (SRS) before beginning any service or maintenance of any component of the SRS or any SRS-related component.*

NOTE

The SRS includes the following components: SRS air bag control unit, SRS warning light, front impact sensors, air bag module, side-airbag module, curtain air bag module, side impact sensors, seat belt pre-tensioners, clock spring, and interconnecting wiring. Other SRS-related components (that may have to be removed/installed in connection with SRS service or maintenance) are indicated in the table of contents by an asterisk (*).

AIR OUTLET VENT CANNOT BE CHANGED.....	55-114	HEATER UNIT AND BLOWER ASSEMBLY*	55-172
BLOWER MOTOR POWER SUPPLY SYSTEM <VEHICLES WITHOUT A/C>.....	55-117	HEATER UNIT AND BLOWER ASSEMBLY REMOVAL AND INSTALLATION.....	55-172
SYMPTOM CHART.....	55-121	HEATER UNIT AND BLOWER ASSEMBLY DISASSEMBLY AND REASSEMBLY.....	55-174
SYMPTOM PROCEDURES.....	55-97	INSPECTION.....	55-175
WHEN THE IGNITION SWITCH IS "ON," THE A/C DOES NOT WORK.....	55-121	MOTORS AND TRANSISTOR.....	55-176
MALFUNCTION OF THE A/C-ECU POWER SUPPLY SYSTEM.....	55-124	MOTORS AND TRANSISTOR REMOVAL AND INSTALLATION.....	55-176
THE COMPRESSOR DOES NOT WORK.....	55-128	INSPECTION.....	55-177
BLOWER FAN AND MOTOR DOES NOT RUN.....	55-135	AMBIENT AIR TEMPERATURE SENSOR.....	55-178
BLOWER FAN AND MOTOR DOES NOT STOP TURNING.....	55-140	AMBIENT AIR TEMPERATURE SENSOR REMOVAL AND INSTALLATION.....	55-178
INSIDE/OUTSIDE AIR CHANGEOVER IS NOT POSSIBLE.....	55-143	INSPECTION.....	55-178
A/C OUTLET AIR TEMPERATURE DOES NOT INCREASE.....	55-146	INTERIOR TEMPERATURE SENSOR.....	55-179
AIR OUTLET VENT CANNOT BE CHANGED.....	55-148	INTERIOR TEMPERATURE SENSOR REMOVAL AND INSTALLATION.....	55-179
BLOWER MOTOR POWER SUPPLY SYSTEM.....	55-151	INSPECTION.....	55-179
DATA LIST REFERENCE TABLE.....	55-155	A/C-ECU.....	55-180
ACTUATOR TEST REFERENCE TABLE.....	55-159	A/C-ECU REMOVAL AND INSTALLATION.....	55-180
CHECK AT ECU TERMINAL.....	55-160	COMPRESSOR ASSEMBLY AND TENSION PULLEY.....	55-181
SPECIAL TOOLS.....	55-161	COMPRESSOR ASSEMBLY AND TENSION PULLEY REMOVAL AND INSTALLATION.....	55-181
ON-VEHICLE SERVICE.....	55-164	INSPECTION.....	55-183
SIGHT GLASS REFRIGERANT LEVEL TEST.....	55-164	COMPRESSOR ASSEMBLY DISASSEMBLY AND ASSEMBLY.....	55-183
A/C COMPRESSOR CLUTCH TEST.....	55-164	INSPECTION.....	55-185
SIMPLE INSPECTION OF THE A/C PRESSURE SENSOR.....	55-164	CONDENSER ASSEMBLY.....	55-186
COMPRESSOR DRIVE BELT ADJUSTMENT.....	55-165	CONDENSER ASSEMBLY REMOVAL AND INSTALLATION.....	55-186
CHARGING <VEHICLES USING R-134a REFRIGERANT>.....	55-165	REFRIGERANT LINE.....	55-187
PERFORMANCE TEST <VEHICLES USING R-134a REFRIGERANT>.....	55-166	REFRIGERANT LINE REMOVAL AND INSTALLATION.....	55-187
REFRIGERANT LEAK REPAIR PROCEDURE.....	55-167	DUCTS*.....	55-189
COMPRESSOR NOISE CHECK.....	55-168	DUCT REMOVAL AND INSTALLATION... ..	55-189
POWER RELAY CHECK.....	55-168	VENTILATORS.....	55-190
IDLE-UP OPERATION CHECK.....	55-169	VENTILATOR (INSTRUMENT PANEL AND FLOOR) REMOVAL AND INSTALLATION.....	55-190
CLEAN AIR FILTER REPLACEMENT PROCEDURE.....	55-170		
HEATER CONTROL UNIT.....	55-171		
HEATER CONTROL UNIT REMOVAL AND INSTALLATION.....	55-171		

GENERAL INFORMATION

M1552023500112

The blower, heater, and evaporator have been integrated with the heater and A/C system to achieve greater fan power and noise reduction.

Item	Specification
Heater control assembly	Dial type
Compressor mode	MSC90CAS
Compressor type	Scroll type
Refrigerant and quantity g (oz)	R-134a (HFC-134a), 480 –520 (16.9 –18.3)

SAFETY PRECAUTIONS

⚠ WARNING

Wear safety goggles and gloves when servicing the refrigeration system to prevent severe damage to eyes and hands.

Because R-134a refrigerant is a hydro fluorocarbon (HFC) which contains hydrogen atoms in place of chlorine atoms, it will not cause damage to the ozone layer.

Ozone filters out harmful radiation from the sun. To assist in protecting the ozone layer, Mitsubishi Motors Corporation recommends an R-134a refrigerant recycling device.

Refrigerant R-134a is transparent and colorless in both the liquid and vapor state. Since it has a boiling point of -29.8° C (-21.64° F) at atmospheric pressure, it will be a vapor at all normal temperatures and pressures. The vapor is heavier than air, non-flammable, and non-explosive. The following precautions must be observed when handling R-134a.

⚠ WARNING

Do not heat R-134a above 40° C (104.0° F) or it may catch fire and explode.

R-134a evaporates so rapidly at normal atmospheric pressures and temperatures that it tends to freeze anything it contacts. For this reason, extreme care must be taken to prevent any liquid refrigerant from contacting the skin and especially the eyes. Always wear safety goggles when servicing the refrigeration part of the A/C system. Keep a bottle of sterile mineral oil handy when working on the refrigeration system.

1. Should any liquid refrigerant get into your eyes, use a few drops of mineral oil to wash them out. R-134a is rapidly absorbed by the oil.
2. Next, splash your eyes with plenty of cold water.
3. Call your doctor immediately even if irritation has ceased.

⚠ CAUTION

Keep R-134a containers upright when charging the system.

In most instances, moderate heat is required to bring the pressure of the refrigerant in its container above the pressure of the system when charging or adding refrigerant.

A bucket or large pan of hot water not over 40° C (104.0° F) is all the heat required for this purpose. Do not heat the refrigerant container with a blow torch or any other means that would raise temperature and pressure above this temperature. Do not weld or steam-clean on or near the system components or refrigerant lines.

⚠ WARNING

The leak detector for R-134a should be used to check for refrigerant gas leaks.

⚠ CAUTION

Do not allow liquid refrigerant to touch bright metal or it will be stained.

When metering R-134a into the refrigeration system, keep the supply tank or cans in an upright position. If the refrigerant container is on its side or upside down, liquid refrigerant will enter the system and damage the compressor.

Refrigerant will tarnish bright metal and chrome surfaces, and in combination with moisture can severely corrode all metal surfaces.

OPERATION

CONDENSER FAN AND RADIATOR FAN CONTROL

The ECM judges the required revolution speed of radiator fan motor and condenser fan motor using the input signals transmitted from A/C switch or vehicle speed sensor (VSS) <M/T> and engine coolant temperature sensor.

COMPRESSOR CONTROL**When operating the A/C switch**

- The fin thermo sensor, which senses the temperature of the air flowing out of the evaporator, deactivates the compressor at 1° C (33.8° F) or below.
- The dual pressure switch turns OFF when the refrigerant pressure becomes excessively high or low, thus protecting the compressor circuit (See Table below).

- When the fin thermo sensor is activated, and the ignition switch, blower switch, and A/C switch are ON, the A/C compressor clutch relay is energized.

When operating the mode selection dial

- The A/C will work when the mode selection dial is set to the "Defroster" or "Defroster/foot" position, or the temperature control dial is set to the "MAX A/C" position. In other dial positions, when the A/C switch is turned on, the A/C will work.

A/C Compressor Clutch Relay ON Conditions

Ignition switch (IG2)		ON	<i>NOTE: A/C compressor clutch relay is de-energized when any one switch, sensor or control unit shown on the left turns off.</i> <i>NOTE: The components marked by * communicate with the ECM. If the air thermo sensor detects a temperature of 1° C (33.8° F), the A/C-ECU will turn off the A/C compressor clutch relay.</i>
Blower switch		ON	
A/C switch, mode selection dial defroster, defroster/foot position or temperature control MAX A/C		ON	
Fin thermo sensor		*	
Pressure detected by A/C pressure sensor	2.94 MPa (427psi) or less (If the refrigerant pressure exceeds 2.94 MPa (427psi), A/C compressor clutch relay is not ON condition until the refrigerant pressure has been measured up to 2.35 MPa (341psi) or less.) 0.19 MPa (27psi) or more (If the refrigerant pressure falls short of 0.19 MPa (27psi), A/C compressor clutch relay is not ON condition until the refrigerant pressure has been measured up to 0.22 MPa (32psi) or more.)	ON	
A/C compressor clutch relay driving transistor (within powertrain control module)		ON	

FASTENER TIGHTENING SPECIFICATIONS

M1552012100370

Item	Specification
Armature plate mounting bolt	16 ± 1 N· m (11.8 ± 0.7 ft-lb)
Discharge flexible hose mounting bolt (compressor side)	25 ± 4 N· m (18 ± 3 ft-lb)
Discharge flexible hose mounting nut (condenser side)	4.9 ± 0.9 N· m (43 ± 8 in-lb)
Connection between the liquid pipe A and B	13 ± 1 N· m (115 ± 9 in-lb)
Liquid pipe A mounting bolt (condenser side)	4.9 ± 0.9 N· m (43 ± 8 in-lb)
Suction flexible hose mounting bolt (compressor side)	25 ± 4 N· m (18 ± 3 ft-lb)
Suction flexible hose mounting nut (heater unit side)	4.9 ± 0.9 N· m (43 ± 8 in-lb)
Front deck crossmember mounting bolt (left side)	23 ± 6 N· m (17 ± 4 ft-lb)
Front deck crossmember mounting bolt (right side)	20 ± 5 N· m (15 ± 3 ft-lb)
Front deck crossmember mounting bolt (front deck side)	20 ± 5 N· m (15 ± 3 ft-lb)

GENERAL SPECIFICATIONS

M1552000200336

Item	Standard value
Heater control assembly	Rotary type
A/C switch	Push-button type
Compressor model, type	MSC90CAS, Scroll type
Refrigerant	Type
	Amount g (oz)
	R134a (HFC-134a)
	480 -520 (16.9 -18.3)

SERVICE SPECIFICATIONS

M1552000300678

Item	Standard value
Idle speed r/min	700 ± 100
Idle-up speed r/min	800 ± 100
Air gap (A/C compressor clutch) mm (in)	0.3 -0.5 (0.012 -0.020)

LUBRICANTS



M1552000400567

Item	Specified lubricant	Quantity
Each connection of refrigerant line	SUN PAG 56	As required
Compressor refrigerant unit lubricant cm ³ (fl.oz)	SUN PAG 56	80 -100 (2.7 -3.4)

SERVICE PRECAUTIONS**CAUTION LABEL**

M1552017400387

The refrigerant gas caution label must be affixed in the location shown in the figure on the left. Follow the instructions on the label when servicing.

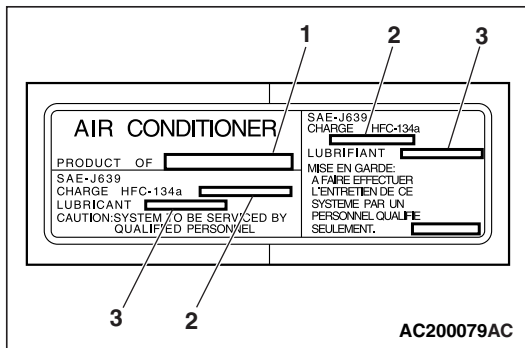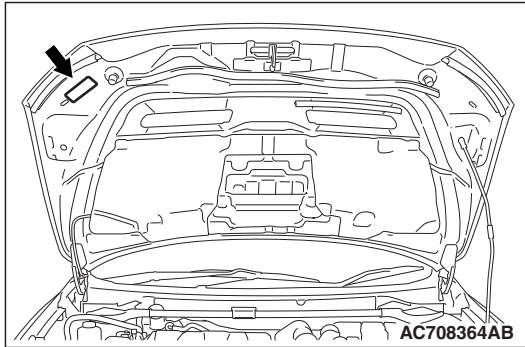

No.	Content
1	Name of A/C manufacturer
2	Amount of refrigerant
3	Name of compressor oil

AUTO A/C DIAGNOSIS**INTRODUCTION TO HEATER, A/C AND VENTILATION DIAGNOSIS**

M1552012200418

Air is drawn into the heater assembly from either the outside, or from the inside of the passenger cabin if DEFROST, maximum cooling or RECIRCULATION are selected. The air is then forced through the evaporator where heat is removed, cooling and de-humidifying the air. Depending on the temperature selected, a portion of this air is then forced through the heater core to achieve the selected discharge temperature.

If the system does not cool properly, look for a problem with the refrigerant, blower or air distribution systems. If the system does not heat properly, look for a problem with the coolant, blower or air distribution systems. In either case all system fuses, circuit breaker and relays should be checked.

HEATER, A/C AND VENTILATION DIAGNOSTIC TROUBLESHOOTING STRATEGY

M1552009600494

Use these steps to plan your diagnostic strategy. If you follow them carefully, you will be sure that you have exhausted most of the possible ways to find a heater, A/C and ventilation fault.

1. Gather information from the customer.

2. Verify that the condition described by the customer exists.
3. Find the malfunction by following the Symptom Chart.
4. Verify that the malfunction is eliminated.

DIAGNOSTIC FUNCTION

M1552019800295

HOW TO CONNECT THE SCAN TOOL (M.U.T.-III)

Required Special Tools:

- MB991958: Scan Tool (M.U.T.-III Sub Assembly)
 - MB991824: Vehicle Communication Interface (V.C.I.)
 - MB991827: M.U.T.-III USB Cable
 - MB991910: M.U.T.-III Main Harness A

⚠ CAUTION


To prevent damage to scan tool MB991958, always turn the ignition switch to the "LOCK" (OFF) position before connecting or disconnecting scan tool MB991958.

1. Ensure that the ignition switch is at the "LOCK" (OFF) position.
2. Start up the personal computer.
3. Connect special tool MB991827 to special tool MB991824 and the personal computer.
4. Connect special tool MB991910 to special tool MB991824
5. Connect special tool MB991910 to the data link connector.
6. Turn the power switch of special tool MB991824 to the "ON" position.

NOTE: When the special tool MB991824 is energized, the special tool MB991824 indicator light will be illuminated in a green color.

7. Start the M.U.T.-III system on the personal computer.


NOTE: Disconnecting the scan tool special tool MB991824 is the reverse of the connecting sequence, making sure that the ignition switch is at the "LOCK" (OFF) position.

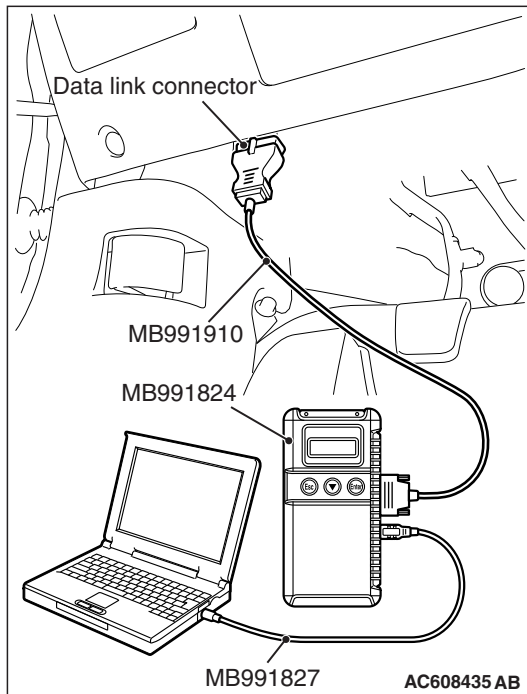

HOW TO READ AND ERASE DIAGNOSTIC TROUBLE CODES

Required Special Tools:

- MB991958: Scan Tool (M.U.T.-III Sub Assembly)
 - MB991824: Vehicle Communication Interface (V.C.I.)
 - MB991827: M.U.T.-III USB Cable
 - MB991910: M.U.T.-III Main Harness A

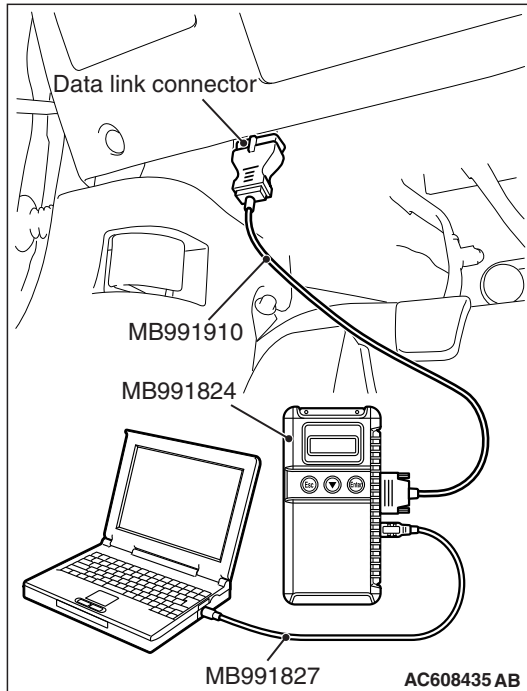**⚠ CAUTION**

To prevent damage to scan tool MB991958, always turn the ignition switch to the "LOCK" (OFF) position before connecting or disconnecting scan tool MB991958.

NOTE: If the battery voltage is low, diagnostic trouble codes will not be output. Check the battery if scan tool MB991958 does not display.

1. Connect the scan tool MB991958 to the data link connector.
2. Turn the ignition switch to the "ON" position.
3. Select "System select" from the start-up screen.
4. Select "From 2006 MY" of "Model Year." When the "Vehicle Information" is displayed, check the contents.
5. Select "AUTO A/C" from "System List," and press the "OK" button.

NOTE: When the "Loading Option Setup" list is displayed, check the applicable item.

6. Select "Diagnostic Trouble Code" to read the DTC.
7. If a DTC is set, it is shown.
8. Choose "Erase DTCs" to erase the DTC.


HOW TO DIAGNOSE THE CAN BUS LINE**Required Special Tools:**

- MB991958: Scan Tool (M.U.T.-III Sub Assembly)
 - MB991824: Vehicle Communication Interface (V.C.I.)
 - MB991827: M.U.T.-III USB Cable
 - MB991910: M.U.T.-III Main Harness A

⚠ CAUTION

To prevent damage to scan tool MB991958, always turn the ignition switch to the "LOCK" (OFF) position before connecting or disconnecting scan tool MB991958.

1. Connect scan tool MB991958 to the data link connector.
2. Turn the ignition switch to the "ON" position.
3. Select "CAN bus diagnosis" from the start-up screen.
4. When the vehicle information is displayed, confirm that it matches the vehicle whose CAN bus lines will be diagnosed.
 - If they match, go to step 8.
 - If not, go to step 5.
5. Select "view vehicle information" button.
6. When the vehicle information is displayed, confirm again that it matches the vehicle which is diagnosed CAN bus line.
 - If they match, go to step 8.
 - If not, go to step 5.
7. Press the "OK" button.
8. When the options are displayed, choose the options (mark the check) and then select "OK".

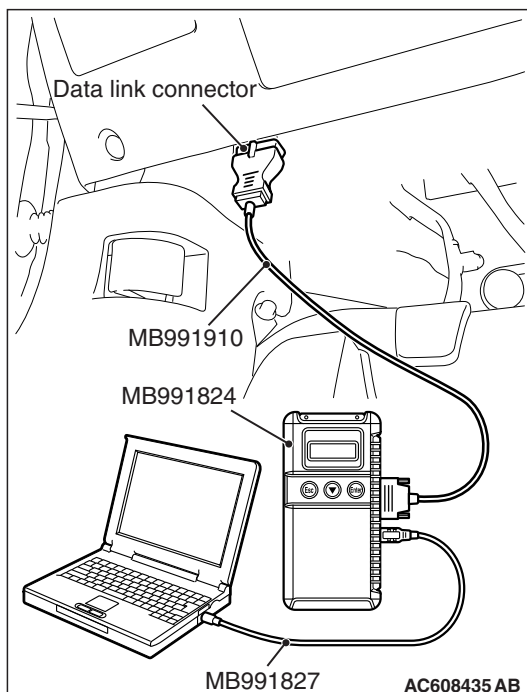

CHECK OF FREEZE FRAME DATA

The freeze frame data can be checked by using the scan tool (GROUP 00, How to Cope with Intermittent Malfunction P.00-15).

When detecting fault and storing the DTC, the ECU connected to CAN bus line obtains the data before the determination of the DTC and the data when the DTC is determined, and then stores the ECU status of that time. By analyzing the data from scan tool, the troubleshooting can be performed more efficiently. The displayed items are as shown in the table below.

Display item list

Item No.	Item name	Content item	Unit
01	Odometer	Total driving distance after the diagnostic trouble code is generated	mile [*]
02	Ignition cycle	Number of times the ignition switch is turned "ON" or "LOCK (OFF)" after the past failure transition	Number of counts is displayed.
04	Current trouble accumulative time	Cumulative time for current malfunction of diagnostic trouble code	min

NOTE:

- **: If a failure occurs to both the ABS-ECU and ETACS-ECU, 0000 mile or FFFF km is displayed to the scan tool MB991958.*

DIAGNOSTIC TROUBLE CODE CHART

⚠ CAUTION

During diagnosis, a DTC code associated with other system may be set when the ignition switch is turned on with connector(s) disconnected. On completion of repairs, check all systems for DTC code(s). If DTC code(s) are set, erase them all.

<VEHICLES WITHOUT A/C>

Diagnostic trouble code No.	Diagnostic item	Reference page
B1000	Control panel communication error <Vehicles without A/C>	P.55-15
B1003	Mode dial SW error <Vehicles without A/C>	P.55-24
B1018	Temperature control dial SW error <Vehicles without A/C>	P.55-31
B1021	Fan dial SW error <Vehicles without A/C>	P.55-37
B1031	Fin thermo sensor system (short circuit) <Vehicles without A/C>	P.55-43
B1032	Fin thermo sensor system (open circuit) <Vehicles without A/C>	P.55-43
B1034*	Ambient air temperature sensor system (short circuit)	P.55-49
B1035*	Ambient air temperature sensor system (open circuit)	P.55-49
B2214	Control panel failure <Vehicles without A/C>	P.55-56
B223B	Control panel improperly assembled <Vehicles without A/C>	P.55-63
U1415	Coding not completed	P.55-69
U0019	Bus off (CAN1)	P.55-71
U0141	ETACS-ECU time-out	P.55-72
U0151	SRS-ECU time-out	P.55-75
U0154	Occupant classification-ECU time-out	P.55-77
U0155	Combination meter time-out	P.55-80
U0168	WCM time-out	P.55-82
U0184	Audio time-out	P.55-85
U0195	Satellite radio tuner time-out	P.55-87
U0197	Hands free module time-out	P.55-90

<VEHICLES WITH A/C>


Diagnostic trouble code No.	Diagnostic item	Reference page
B10C0	Interior temperature sensor system (short circuit)	P.55-12
B10C1	Interior temperature sensor system (open circuit)	P.55-12
B1000	Control panel communication error	P.55-20
B1003	Mode dial SW error	P.55-28
B1018	Temperature control dial SW error	P.55-34
B1021	Fan dial SW error	P.55-40
B1031	Fin thermo sensor system (short circuit)	P.55-46
B1032	Fin thermo sensor system (open circuit)	P.55-46
B1034*	Ambient air temperature sensor system (short circuit)	P.55-49
B1035*	Ambient air temperature sensor system (open circuit)	P.55-49
B1079	Refrigerant leaks	P.55-52
B2214	Control panel failure	P.55-60
B223B	Control panel improperly assembled	P.55-66
U1415	Coding not completed	P.55-69
U0019	Bus off (CAN1)	P.55-71
U0141	ETACS-ECU time-out	P.55-72
U0151	SRS-ECU time-out	P.55-75
U0154	Occupant classification ECU time-out	P.55-77
U0155	Combination meter time-out	P.55-80
U0168	WCM time-out	P.55-82
U0184	Audio time-out	P.55-85
U0195	Satellite radio tuner time-out	P.55-87
U0197	Hands free module time-out	P.55-90
U0245	Audio visual navigation unit CAN time-out	P.55-93

*NOTE: The diagnostic trouble codes marked by * are set from the ETACS-ECU.*



DIAGNOSTIC TROUBLE CODE PROCEDURES

DTC B10C0, B10C1: Interior Temperature Sensor System

Interior Temperature Sensor Circuit

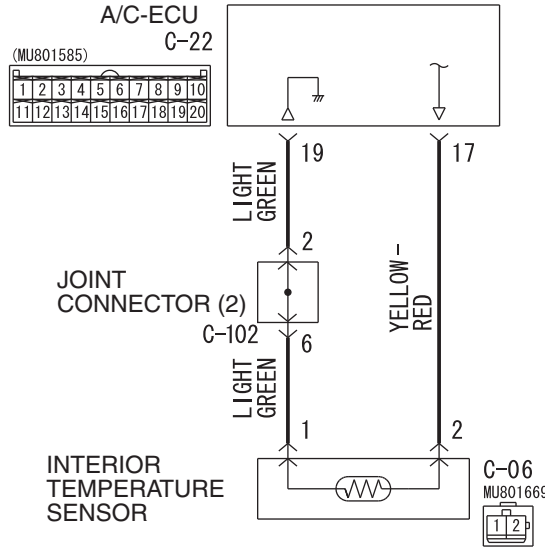

AC804911
 W8G55M012A

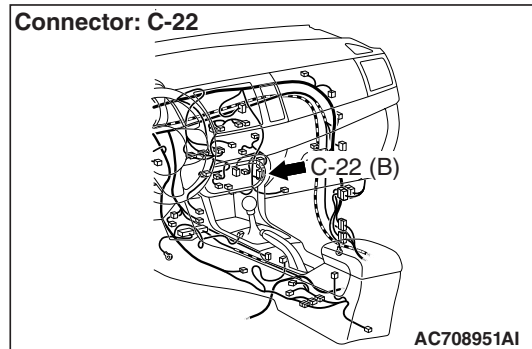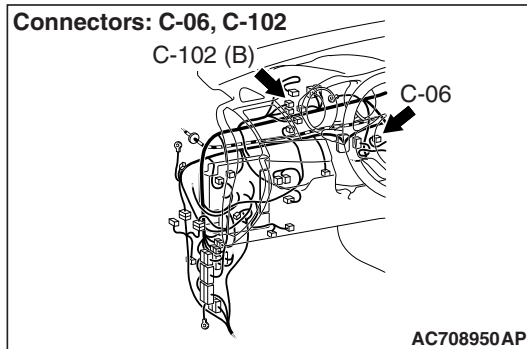

DTC SET CONDITION

- DTC B10C0 is set if there is a short circuit in the interior temperature sensor input circuit.
- DTC B10C1 is set if there is a defective connector connection, or if there is an open circuit in the harness.

TECHNICAL DESCRIPTION (COMMENT)

Current trouble

- The A/C-ECU, the interior temperature sensor, or connector(s) or wiring between the two may be defective.

Past trouble

- If DTC B10C0 or B10C1 is stored as a past trouble, carry out diagnosis with particular emphasis on wiring and connector(s) between the A/C-ECU and the interior temperature sensor. If the connectors and wiring are normal, and obviously the ECU is the cause of the trouble, replace the ECU. If in doubt, do not replace the ECU.

TROUBLESHOOTING HINT

- Malfunction of connector.
- Malfunction of the harness.
- Malfunction of the interior temperature sensor.
- Malfunction of the A/C-ECU.

DIAGNOSIS

Required Special Tool:

- MB991958: Scan Tool (M.U.T.-III Sub Assembly)
 - MB991824: Vehicle Communication Interface (V.C.I.)
 - MB991827: M.U.T.-III USB Cable
 - MB991910: M.U.T.-III Main Harness A

STEP 1. Using scan tool MB991958, diagnose the CAN bus line.

CAUTION

To prevent damage to scan tool MB991958, always turn the ignition switch to the "LOCK" (OFF) position before connecting or disconnecting scan tool MB991958.

Use scan tool MB991958 to diagnose the CAN bus lines.

- (1) Connect scan tool MB991958. Refer to "How to connect the Scan Tool (M.U.T.-III) P.55-7."
- (2) Turn the ignition switch to "ON" position.
- (3) Diagnose the CAN bus line.

Q: Is the check result satisfactory?

YES : Go to Step 2.

NO : Repair the CAN bus lines. Repair the CAN bus lines (Refer to GROUP 54C, Diagnosis-Can Bus Diagnostic Chart P.54C-15).

STEP 2. Recheck for diagnostic trouble code.

Recheck if the DTC is set.

- (1) Erase the DTC.
- (2) Turn the ignition switch to "ON" position.
- (3) Check if the DTC is set.

Q: Is the check result satisfactory?

YES : It can be assumed that this malfunction is intermittent. Refer to GROUP 00, How to Use Troubleshooting/Inspection Service Points –How to Cope with Intermittent Malfunctions P.00-15.

NO : Go to Step 3.

STEP 3. Check interior temperature sensor connector C-06 and A/C-ECU connector C-22 for loose, corroded or damaged terminals, or terminals pushed back in the connector.

Q: Are interior temperature sensor connector C-06 and A/C-ECU connector C-22 in good condition?

YES : Go to Step 4.

NO : Repair or replace the connector. Refer to GROUP 00E, Harness Connector Inspection [P.00E-2](#).

STEP 4. Check the wiring harness between A/C-ECU connector C-22 (terminals 17 and 19) and interior temperature sensor connector C-06 (terminals 2 and 1).

NOTE: Also check joint connector C-102 for loose, corroded, or damaged terminals, or terminals pushed back in the connector. If joint connector C-102 is damaged, repair or replace the connector as described in GROUP 00E, Harness Connector Inspection [P.00E-2](#).

- Check the sensor signal line and ground line for open and short circuit.

Q: Is the wiring harness between A/C-ECU connector C-22 (terminals 17 and 19) and interior temperature sensor connector C-06 (terminals 1 and 2) in good condition?

YES : Go to Step 5.

NO : Repair the wiring harness.

STEP 5. Check the interior temperature sensor.


Measure the resistance between connector terminals 2 and 1 under at least two different temperatures. The resistance values should generally match those in the graph.

NOTE: The temperature at the check should not exceed the range in the graph.

Q: Is the interior temperature sensor in good condition?

YES : Replace the A/C-ECU. Then go to Step 6.

NO : Replace the interior temperature sensor. Then go to Step 6.

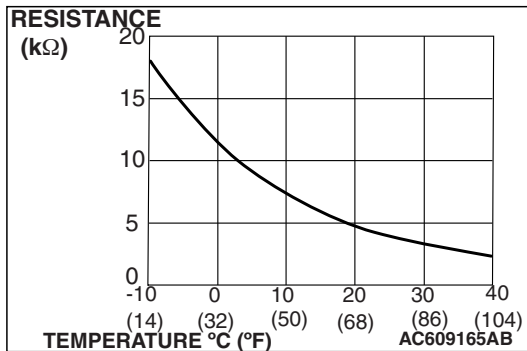

STEP 6. Recheck for diagnostic trouble code.

Check again if the DTC is set.

- (1) Connect scan tool MB991958 to the data link connector
- (2) Turn the ignition switch to the "ON" position.
- (3) Check if the DTC is set.
- (4) Turn the ignition switch to the "LOCK" (OFF) position.


Q: Is the check result satisfactory?

YES : The procedure is complete.



NO : Return to Step 1.

DTC B1000: Control panel communication error <Vehicles without A/C>

Heater Control Panel Circuit

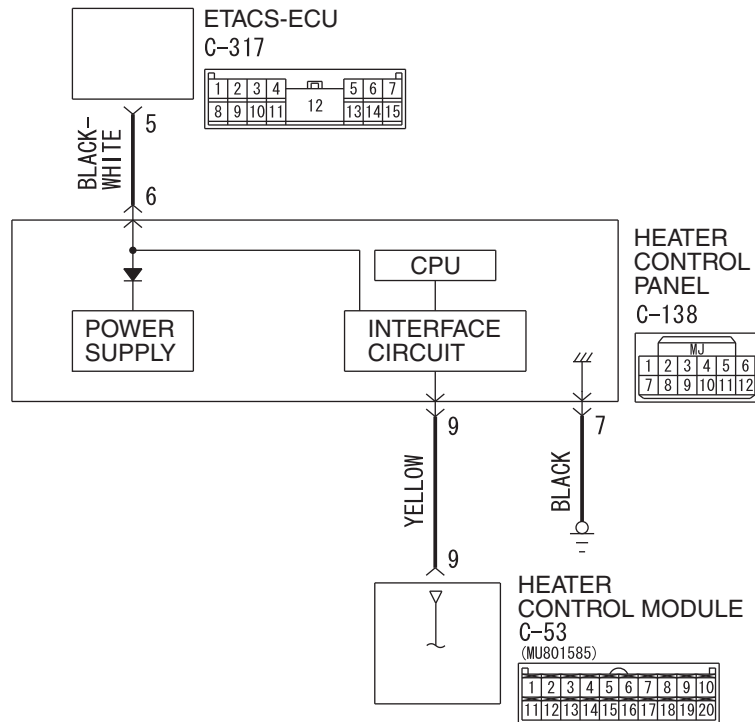

AC901564
W8G55M000A

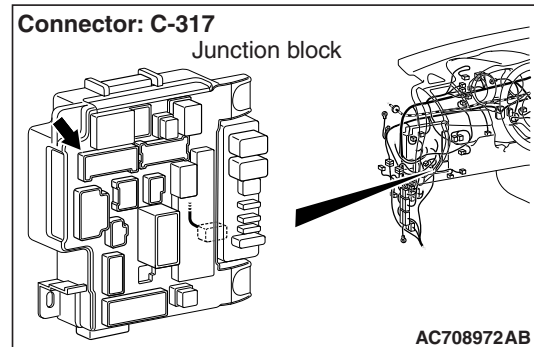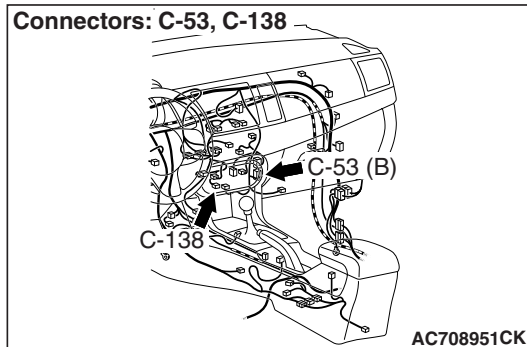

DTC SET CONDITION

DTC B1000 will be set when the communication between heater control module and heater control panel cannot be performed.

TECHNICAL DESCRIPTION (COMMENT)

Current trouble

- The heater control module, the heater control panel, or connector(s) or wiring between the two may be defective.

Past trouble

- If DTC B1000 is stored as a past trouble, carry out diagnosis with particular emphasis on wiring and connector(s) between the heater control module and the heater control panel. If the connectors and wiring are normal, and obviously the ECU is the cause of the trouble, replace the ECU. If in doubt, do not replace the ECU.

TROUBLESHOOTING HINT

- Malfunction of connector.
- Malfunction of the harness.
- Malfunction of the heater control panel.
- Malfunction of the heater control module.

DIAGNOSIS**Required Special Tool:**

- MB991958: Scan Tool (M.U.T.-III Sub Assembly)
 - MB991824: Vehicle Communication Interface (V.C.I.)
 - MB991827: M.U.T.-III USB Cable
 - MB991910: M.U.T.-III Main Harness A

STEP 1. Using scan tool MB991958, diagnose the CAN bus line.


Use scan tool MB991958 to diagnose the CAN bus lines.

- (1) Connect scan tool MB991958 to the data link connector.
- (2) Turn the ignition switch to "ON" position.
- (3) Diagnose the CAN bus line.

Q: Is the check result satisfactory?

YES : Go to Step 2.

NO : Repair the CAN bus lines. Repair the CAN bus lines (Refer to GROUP 54C, Diagnosis-Can Bus Diagnostic Chart [P.54C-15](#)).

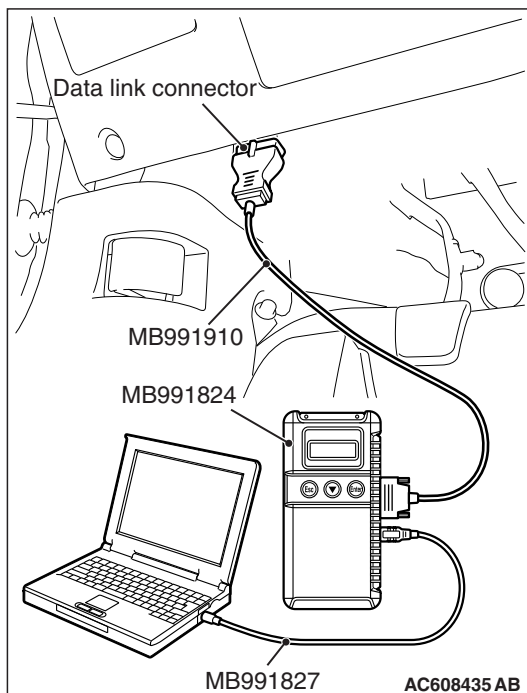

STEP 2. Recheck for diagnostic trouble code.

Recheck if the DTC is set.

- (1) Erase the DTC.
- (2) Turn the ignition switch to "ON" position.
- (3) Check if the DTC is set.

Q: Is the DTC set?

YES : Go to Step 3.

NO : It can be assumed that this malfunction is intermittent. Refer to GROUP 00, How to Use Troubleshooting/Inspection Service Points –How to Cope with Intermittent Malfunctions [P.00-15](#).

STEP 3. Check heater control panel connector C-138 for loose, corroded or damaged terminals, or terminals pushed back in the connector.

Q: Is heater control panel connector C-138 in good condition?

YES : Go to Step 4.

NO : Repair or replace the connector. Refer to GROUP 00E, Harness Connector Inspection [P.00E-2](#).


STEP 4. Measure the voltage at heater control panel connector C-138.

- (1) Disconnect heater control panel connector C-138, and measure the voltage at the harness side.
- (2) Turn the ignition switch to the "ON" position.
- (3) Measure the voltage between terminal 6 and ground.
 - The measured value should be approximately 12 volts (battery positive voltage).

Q: Is the measured voltage approximately 12 volts?

YES : Go to Step 6.

NO : Go to Step 5.

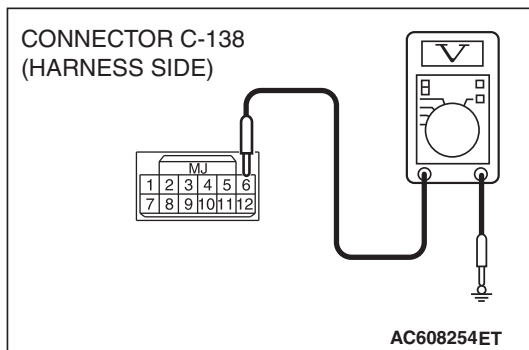


STEP 5. Check the wiring harness between heater control panel connector C-138 (terminal 6) and ETACS-ECU connector C-317 (terminal 5).

- Check the heater control panel power supply line for open circuit.

Q: Is the wiring harness between heater control panel connector C-138 (terminal 6) and ETACS-ECU connector C-317 (terminal 5) in good condition?

YES : It can be assumed that this malfunction is intermittent. Refer to GROUP 00, How to Use Troubleshooting/Inspection Service Points –How to Cope with Intermittent Malfunctions [P.00-15](#).

NO : Repair the wiring harness.

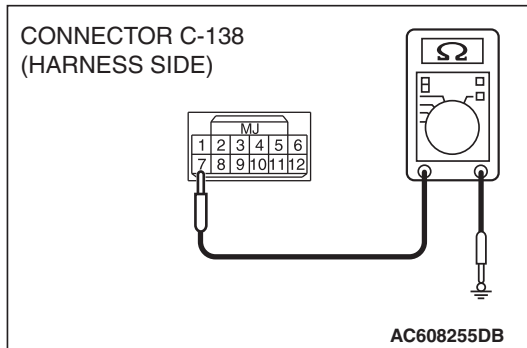

STEP 6. Measure the resistance at heater control panel connector C-138.

- (1) Disconnect heater control panel connector C-138, and measure the resistance at the wiring harness side.
- (2) Measure the resistance value between terminal 7 and ground.
 - The measured value should be 2 ohms or less.

Q: Does the measured resistance value correspond with this range?

YES : Go to Step 8.

NO : Go to Step 7.

STEP 7. Check the wiring harness between heater control panel connector C-138 (terminal 7) and ground.

- Check the heater control panel ground line for open circuit.

Q: Is the wiring harness between heater control panel connector C-138 (terminal 7) and ground in good condition?

YES : It can be assumed that this malfunction is intermittent. Refer to GROUP 00, How to Use Troubleshooting/Inspection Service Points –How to Cope with Intermittent Malfunctions [P.00-15](#).

NO : Repair the wiring harness.

STEP 8. Check heater control module connector C-53 for loose, corroded or damaged terminals, or terminals pushed back in the connector.

Q: Is heater control module connector C-53 in good condition?

YES : Go to Step 9.

NO : Repair or replace the connector. Refer to GROUP 00E, Harness Connector Inspection [P.00E-2](#).

STEP 9. Check the wiring harness between heater control module connector C-53 (terminal 9) and heater control panel connector C-138 (terminal 9).

- Check the heater control panel signal line and ground line for open and short circuit.

Q: Is the wiring harness between heater control module connector C-53 (terminal 9) and heater control panel connector C-138 (terminal 9) in good condition?

YES : Go to Step 10.

NO : Repair the wiring harness.

STEP 10. Recheck for diagnostic trouble code.

Recheck if the DTC is set.

- (1) Erase the DTC.
- (2) Turn the ignition switch to "ON" position.
- (3) Check if the DTC is set.

Q: Is the DTC set?

YES : Replace the heater control panel. Then go to Step 11.

NO : It can be assumed that this malfunction is intermittent.
Refer to GROUP 00, How to Use
Troubleshooting/Inspection Service Points –How to
Cope with Intermittent Malfunctions [P.00-15](#).

STEP 11. Recheck for diagnostic trouble code.

Recheck if the DTC is set.

- (1) Erase the DTC.
- (2) Turn the ignition switch to "ON" position.
- (3) Check if the DTC is set.


Q: Is the DTC set?

YES : Replace the heater control module.



NO : It can be assumed that this malfunction is intermittent.
Refer to GROUP 00, How to Use
Troubleshooting/Inspection Service Points –How to
Cope with Intermittent Malfunctions [P.00-15](#).

DTC B1000: Control Panel Communication Error

A/C Control Panel Circuit

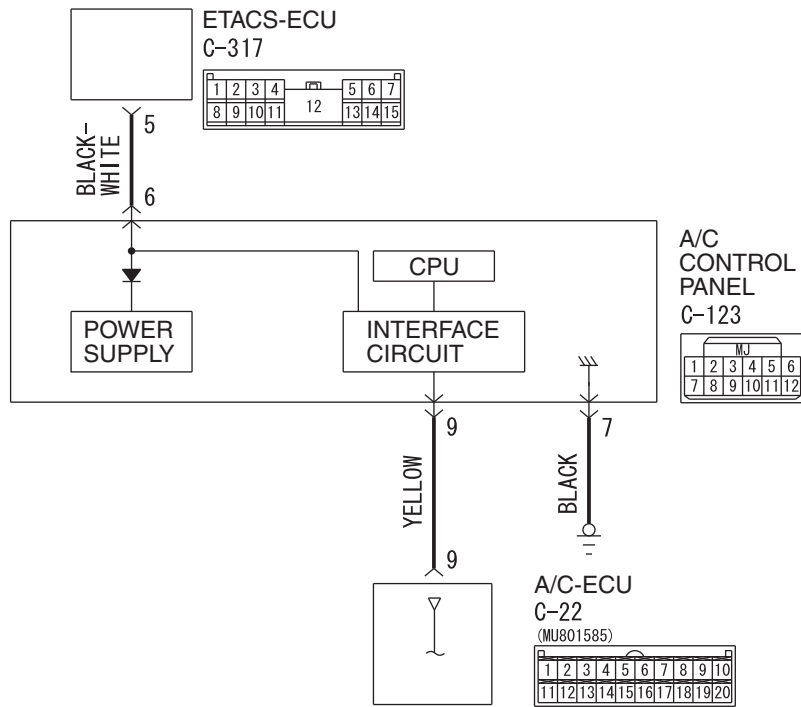

AC901387
W8G55M000A

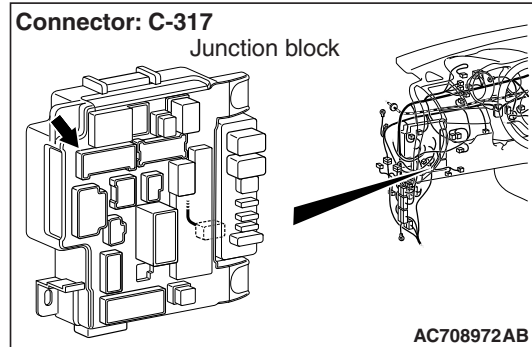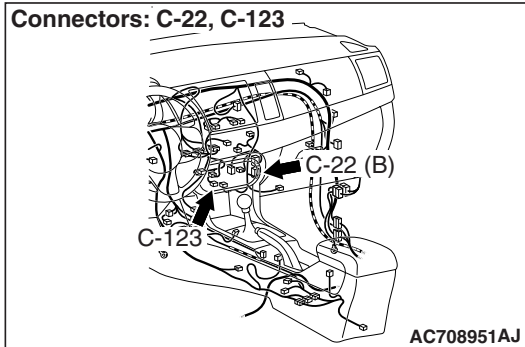

DTC SET CONDITION

DTC B1000 will be set when the communication between A/C-ECU and A/C control panel cannot be performed.

TECHNICAL DESCRIPTION (COMMENT)

Current trouble

- The A/C-ECU, the A/C control panel, or connector(s) or wiring between the two may be defective.

Past trouble

- If DTC B1000 is stored as a past trouble, carry out diagnosis with particular emphasis on wiring and connector(s) between the A/C-ECU and the A/C control panel. If the connectors and wiring are normal, and obviously the ECU is the cause of the trouble, replace the ECU. If in doubt, do not replace the ECU.

TROUBLESHOOTING HINT

- Malfunction of connector.
- Malfunction of the harness.
- Malfunction of the A/C control panel.
- Malfunction of the A/C-ECU.

DIAGNOSIS

Required Special Tool:

- MB991958: Scan Tool (M.U.T.-III Sub Assembly)
 - MB991824: Vehicle Communication Interface (V.C.I.)
 - MB991827: M.U.T.-III USB Cable
 - MB991910: M.U.T.-III Main Harness A

STEP 1. Using scan tool MB991958, diagnose the CAN bus line.


Use scan tool MB991958 to diagnose the CAN bus lines.

- (1) Connect scan tool MB991958 to the data link connector.
- (2) Turn the ignition switch to "ON" position.
- (3) Diagnose the CAN bus line.

Q: Is the check result satisfactory?

YES : Go to Step 2.

NO : Repair the CAN bus lines. Repair the CAN bus lines (Refer to GROUP 54C, Diagnosis-Can Bus Diagnostic Chart [P.54C-15](#)).

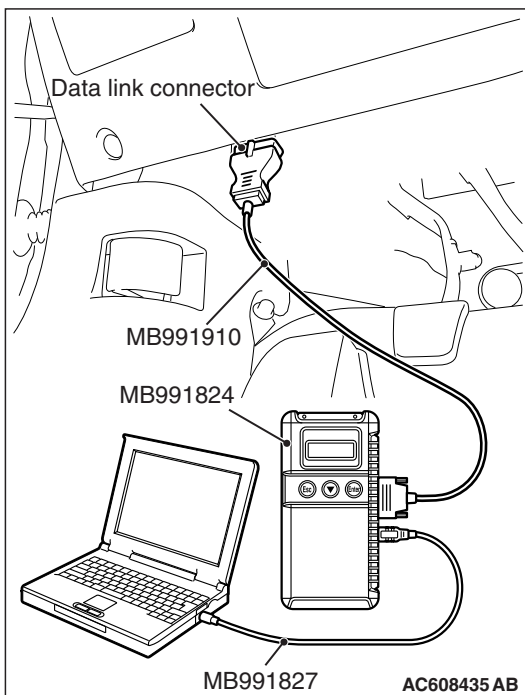

STEP 2. Recheck for diagnostic trouble code.

Recheck if the DTC is set.

- (1) Erase the DTC.
- (2) Turn the ignition switch to "ON" position.
- (3) Check if the DTC is set.

Q: Is the DTC set?

YES : Go to Step 3.

NO : It can be assumed that this malfunction is intermittent.
Refer to GROUP 00, How to Use
Troubleshooting/Inspection Service Points –How to
Cope with Intermittent Malfunctions [P.00-15](#).

STEP 3. Check A/C control panel connector C-123 for loose, corroded or damaged terminals, or terminals pushed back in the connector.**Q: Is A/C control panel connector C-123 in good condition?**

YES : Go to Step 4.

NO : Repair or replace the connector. Refer to GROUP
00E, Harness Connector Inspection [P.00E-2](#).


STEP 4. Measure the voltage at A/C control panel connector C-123.

- (1) Disconnect A/C control panel connector C-123, and measure the voltage at the harness side.
- (2) Turn the ignition switch to the "ON" position.
- (3) Measure the voltage between terminal 6 and ground.
 - The measured value should be approximately 12 volts (battery positive voltage).

Q: Is the measured voltage approximately 12 volts?

YES : Go to Step 6.

NO : Go to Step 5.

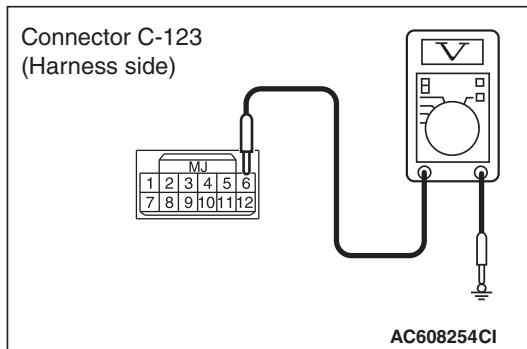
**STEP 5. Check the wiring harness between A/C control panel connector C-123 (terminal 6) and ETACS-ECU connector C-317 (terminal 5).**

- Check the A/C control panel power supply line for open circuit.

Q: Is the wiring harness between A/C control panel connector C-123 (terminal 6) and ETACS-ECU connector C-317 (terminal 5) in good condition?

YES : It can be assumed that this malfunction is intermittent.
Refer to GROUP 00, How to Use
Troubleshooting/Inspection Service Points –How to
Cope with Intermittent Malfunctions [P.00-15](#).

NO : Repair the wiring harness.

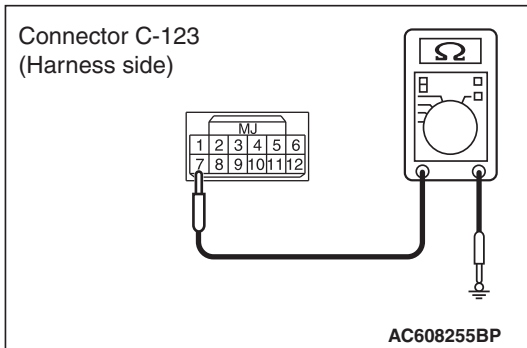

STEP 6. Measure the resistance at A/C control panel connector C-123.

- (1) Disconnect A/C control panel connector C-123, and measure the resistance at the wiring harness side.
- (2) Measure the resistance value between terminal 7 and ground.
 - The measured value should be 2 ohms or less.

Q: Does the measured resistance value correspond with this range?

YES : Go to Step 8.

NO : Go to Step 7.

STEP 7. Check the wiring harness between A/C control panel connector C-123 (terminal 7) and ground.

- Check the A/C control panel ground line for open circuit.

Q: Is the wiring harness between A/C control panel connector C-123 (terminal 7) and ground in good condition?

YES : It can be assumed that this malfunction is intermittent. Refer to GROUP 00, How to Use Troubleshooting/Inspection Service Points –How to Cope with Intermittent Malfunctions [P.00-15](#).

NO : Repair the wiring harness.

STEP 8. Check A/C-ECU connector C-22 for loose, corroded or damaged terminals, or terminals pushed back in the connector.

Q: Is A/C-ECU connector C-22 in good condition?

YES : Go to Step 9.

NO : Repair or replace the connector. Refer to GROUP 00E, Harness Connector Inspection [P.00E-2](#).

STEP 9. Check the wiring harness between A/C-ECU connector C-22 (terminal 9) and A/C control panel connector C-123 (terminal 9).

- Check the AC control panel signal line and ground line for open and short circuit.

Q: Is the wiring harness between A/C-ECU connector C-22 (terminal 9) and A/C control panel connector C-123 (terminal 9) in good condition?

YES : Go to Step 10.

NO : Repair the wiring harness.

STEP 10. Recheck for diagnostic trouble code.

Recheck if the DTC is set.

- (1) Erase the DTC.
- (2) Turn the ignition switch to "ON" position.
- (3) Check if the DTC is set.

Q: Is the DTC set?

YES : Replace the A/C control panel. Then go to Step 11.

NO : It can be assumed that this malfunction is intermittent.
Refer to GROUP 00, How to Use
Troubleshooting/Inspection Service Points –How to
Cope with Intermittent Malfunctions [P.00-15](#).

STEP 11. Recheck for diagnostic trouble code.


Recheck if the DTC is set.

- (1) Erase the DTC.
- (2) Turn the ignition switch to "ON" position.
- (3) Check if the DTC is set.


Q: Is the DTC set?

YES : Replace the A/C-ECU.

NO : It can be assumed that this malfunction is intermittent.
Refer to GROUP 00, How to Use
Troubleshooting/Inspection Service Points –How to
Cope with Intermittent Malfunctions [P.00-15](#).

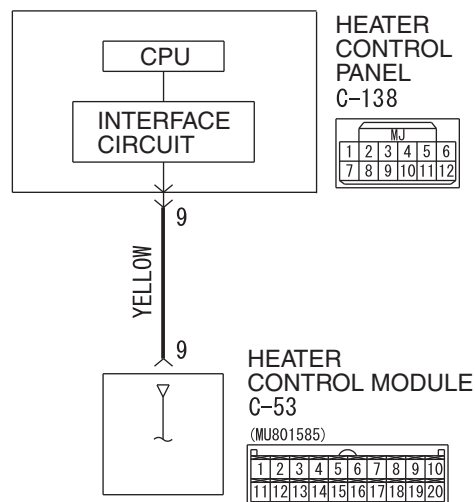DTC B1003: Mode Dial SW Error <Vehicles without A/C>**Heater Control Panel Circuit**

AC901566
W8G55M001A

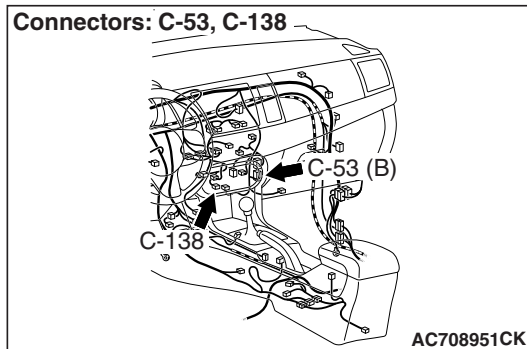

DTC SET CONDITION

DTC B1003 will be set when the heater control module cannot receive the signal of mode selection knob.

TECHNICAL DESCRIPTION (COMMENT)

Current trouble

- The heater control module, the heater control panel, or connector(s) or wiring between the two may be defective.

Past trouble

- If DTC B1003 is stored as a past trouble, carry out diagnosis with particular emphasis on wiring and connector(s) between the heater control module and the heater control panel. If the connectors and wiring are normal, and obviously the ECU is the cause of the trouble, replace the ECU. If in doubt, do not replace the ECU.


TROUBLESHOOTING HINT

- Malfunction of connector.
- Malfunction of the harness.
- Malfunction of the heater control panel.
- Malfunction of the heater control module.

DIAGNOSIS

Required Special Tool:

- MB991958: Scan Tool (M.U.T.-III Sub Assembly)
 - MB991824: Vehicle Communication Interface (V.C.I.)
 - MB991827: M.U.T.-III USB Cable
 - MB991910: M.U.T.-III Main Harness A

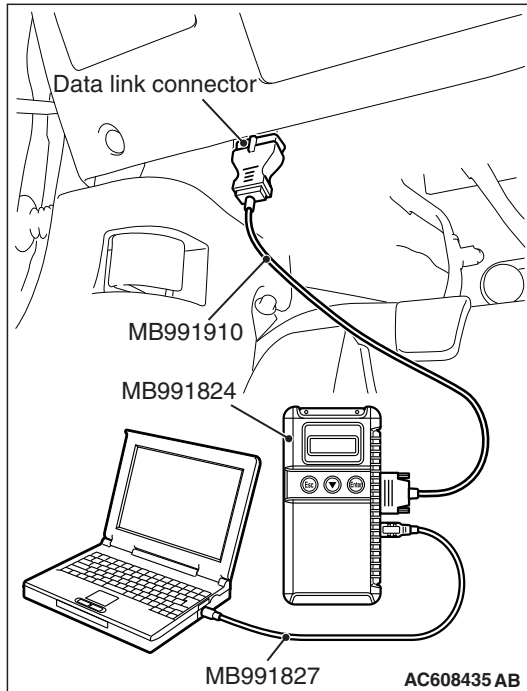

STEP 1. Using scan tool MB991958, diagnose the CAN bus line

⚠ CAUTION

To prevent damage to scan tool MB991958, always turn the ignition switch to the "LOCK" (OFF) position before connecting or disconnecting scan tool MB991958.

- (1) Connect scan tool MB991958. Refer to "How to connect the Scan Tool (M.U.T.-III) P.55-7."
- (2) Turn the ignition switch to the "ON" position.
- (3) Diagnose the CAN bus line.
- (4) Turn the ignition switch to the "LOCK" (OFF) position.

Q: Is the CAN bus line found to be normal?

YES : Go to Step 2.

NO : Repair the CAN bus line. (Refer to GROUP 54C, Diagnosis P.54C-15).

STEP 2. Recheck for diagnostic trouble code.

Recheck if the DTC is set.

- (1) Erase the DTC.
- (2) Turn the ignition switch to "ON" position.
- (3) Check if the DTC is set.

Q: Is the DTC set?

YES : Go to Step 3.

NO : It can be assumed that this malfunction is intermittent. Refer to GROUP 00, How to Use Troubleshooting/Inspection Service Points –How to Cope with Intermittent Malfunctions P.00-15.

STEP 3. Check heater control panel connector C-138 and heater control module connector C-53 for loose, corroded or damaged terminals, or terminals pushed back in the connector.

Q: Are heater control panel connector C-138 and heater control module connector C-53 in good condition?

YES : Go to Step 4.

NO : Repair or replace the connector. Refer to GROUP 00E, Harness Connector Inspection P.00E-2.

STEP 4. Check the wiring harness between heater control module connector C-53 (terminal 9) and heater control panel connector C-138 (terminal 9).

- Check the heater control panel signal line and ground line for open and short circuit.

Q: Is the wiring harness between heater control module connector C-53 (terminal 9) and heater control panel connector C-138 (terminal 9) in good condition?

YES : Go to Step 5.

NO : Repair the wiring harness.

STEP 5. Recheck for diagnostic trouble code.

Recheck if the DTC is set.

- (1) Erase the DTC.
- (2) Turn the ignition switch to "ON" position.
- (3) Check if the DTC is set.

Q: Is the DTC set?

YES : Replace the heater control panel. Then go to Step 6.

NO : It can be assumed that this malfunction is intermittent. Refer to GROUP 00, How to Use Troubleshooting/Inspection Service Points –How to Cope with Intermittent Malfunctions [P.00-15](#).

STEP 6. Recheck for diagnostic trouble code.

Recheck if the DTC is set.



- (1) Erase the DTC.
- (2) Turn the ignition switch to "ON" position.
- (3) Check if the DTC is set.

Q: Is the DTC set?

YES : Replace the heater control module.

NO : It can be assumed that this malfunction is intermittent. Refer to GROUP 00, How to Use Troubleshooting/Inspection Service Points –How to Cope with Intermittent Malfunctions [P.00-15](#).

DTC B1003: Mode Dial SW Error

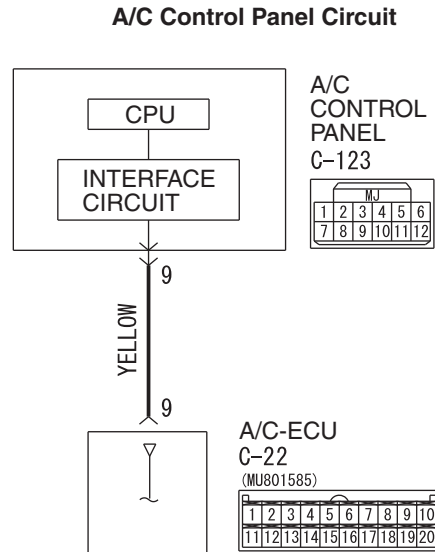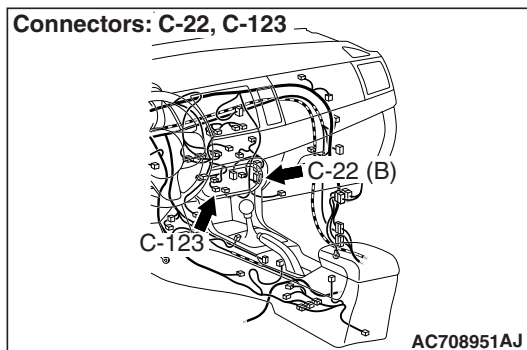AC901388
W8G55M001A**DTC SET CONDITION**

DTC B1003 will be set when the A/C-ECU cannot receive the signal of mode selection knob.

TECHNICAL DESCRIPTION (COMMENT)**Current trouble**

- The A/C-ECU, the A/C control panel, or connector(s) or wiring between the two may be defective.

Past trouble

- If DTC B1003 is stored as a past trouble, carry out diagnosis with particular emphasis on wiring and connector(s) between the A/C-ECU and the A/C control panel. If the connectors and wiring are normal, and obviously the ECU is the cause of the trouble, replace the ECU. If in doubt, do not replace the ECU.

TROUBLESHOOTING HINT

- Malfunction of connector.
- Malfunction of the harness.
- Malfunction of the A/C control panel.
- Malfunction of the A/C-ECU.

DIAGNOSIS

Required Special Tool:

- MB991958: Scan Tool (M.U.T.-III Sub Assembly)
 - MB991824: Vehicle Communication Interface (V.C.I.)
 - MB991827: M.U.T.-III USB Cable
 - MB991910: M.U.T.-III Main Harness A

STEP 1. Using scan tool MB991958, diagnose the CAN bus line

CAUTION


To prevent damage to scan tool MB991958, always turn the ignition switch to the "LOCK" (OFF) position before connecting or disconnecting scan tool MB991958.

- (1) Connect scan tool MB991958. Refer to "How to connect the Scan Tool (M.U.T.-III) P.55-7."
- (2) Turn the ignition switch to the "ON" position.
- (3) Diagnose the CAN bus line.
- (4) Turn the ignition switch to the "LOCK" (OFF) position.

Q: Is the CAN bus line found to be normal?

YES : Go to Step 2.

NO : Repair the CAN bus line. (Refer to GROUP 54C, Diagnosis P.54C-15).

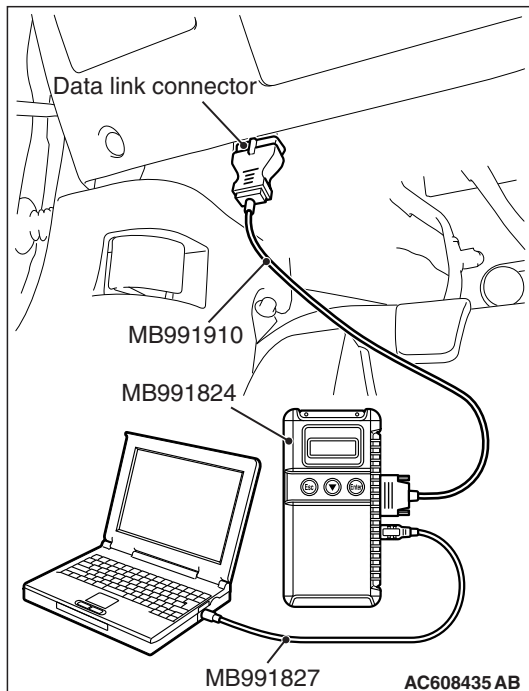

STEP 2. Recheck for diagnostic trouble code.

Recheck if the DTC is set.

- (1) Erase the DTC.
- (2) Turn the ignition switch to "ON" position.
- (3) Check if the DTC is set.

Q: Is the DTC set?

YES : Go to Step 3.

NO : It can be assumed that this malfunction is intermittent. Refer to GROUP 00, How to Use Troubleshooting/Inspection Service Points –How to Cope with Intermittent Malfunctions P.00-15.

STEP 3. Check A/C control panel connector C-123 and A/C-ECU connector C-22 for loose, corroded or damaged terminals, or terminals pushed back in the connector.

Q: Are A/C control panel connector C-123 and A/C-ECU connector C-22 in good condition?

YES : Go to Step 4.

NO : Repair or replace the connector. Refer to GROUP 00E, Harness Connector Inspection [P.00E-2](#).

STEP 4. Check the wiring harness between A/C-ECU connector C-22 (terminal 9) and A/C control panel connector C-123 (terminal 9).

- Check the A/C control panel signal line and ground line for open and short circuit.

Q: Is the wiring harness between A/C-ECU connector C-22 (terminal 9) and A/C control panel connector C-123 (terminal 9) in good condition?

YES : Go to Step 5.

NO : Repair the wiring harness.

STEP 5. Recheck for diagnostic trouble code.

Recheck if the DTC is set.

- (1) Erase the DTC.
- (2) Turn the ignition switch to "ON" position.
- (3) Check if the DTC is set.

Q: Is the DTC set?

YES : Replace the A/C control panel. Then go to Step 6.

NO : It can be assumed that this malfunction is intermittent. Refer to GROUP 00, How to Use Troubleshooting/Inspection Service Points –How to Cope with Intermittent Malfunctions [P.00-15](#).

STEP 6. Recheck for diagnostic trouble code.

Recheck if the DTC is set.

- (1) Erase the DTC.
- (2) Turn the ignition switch to "ON" position.
- (3) Check if the DTC is set.


Q: Is the DTC set?

YES : Replace the A/C-ECU.


NO : It can be assumed that this malfunction is intermittent. Refer to GROUP 00, How to Use Troubleshooting/Inspection Service Points –How to Cope with Intermittent Malfunctions [P.00-15](#).

DTC B1018: Temperature Control Dial SW Error <Vehicles without A/C>

Heater Control Panel Circuit

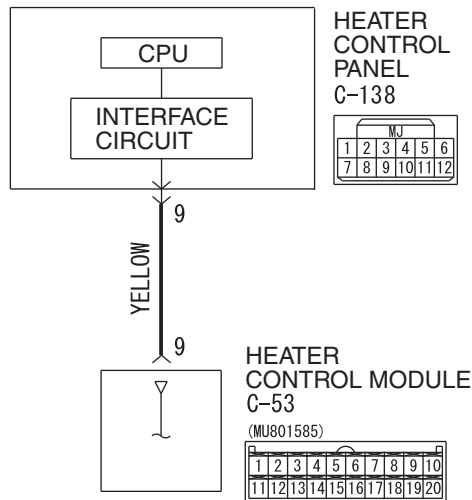

AC901566
 W8G55M001A

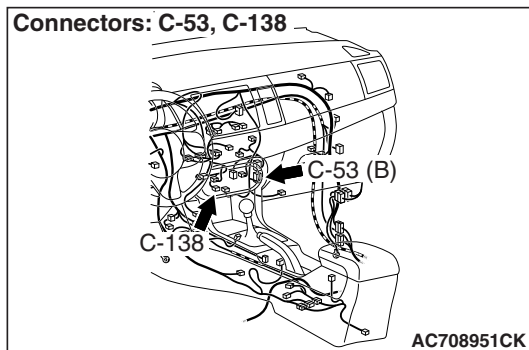

DTC SET CONDITION

DTC B1018 will be set when the heater control module cannot receive the signal of temperature adjustment knob.

TECHNICAL DESCRIPTION (COMMENT)

Current trouble

- The heater control module, the heater control panel, or connector(s) or wiring between the two may be defective.

Past trouble

- If DTC B1018 is stored as a past trouble, carry out diagnosis with particular emphasis on wiring and connector(s) between the heater control module and the heater control panel. If the connectors and wiring are normal, and obviously the ECU is the cause of the trouble, replace the ECU. If in doubt, do not replace the ECU.

TROUBLESHOOTING HINT

- Malfunction of connector.
- Malfunction of the harness.
- Malfunction of the heater control panel.
- Malfunction of the heater control module.

DIAGNOSIS**Required Special Tool:**

- MB991958: Scan Tool (M.U.T.-III Sub Assembly)
 - MB991824: Vehicle Communication Interface (V.C.I.)
 - MB991827: M.U.T.-III USB Cable
 - MB991910: M.U.T.-III Main Harness A

STEP 1. Using scan tool MB991958, diagnose the CAN bus line**⚠ CAUTION**


To prevent damage to scan tool MB991958, always turn the ignition switch to the "LOCK" (OFF) position before connecting or disconnecting scan tool MB991958.

- (1) Connect scan tool MB991958. Refer to "How to connect the Scan Tool (M.U.T.-III) P.55-7."
- (2) Turn the ignition switch to the "ON" position.
- (3) Diagnose the CAN bus line.
- (4) Turn the ignition switch to the "LOCK" (OFF) position.

Q: Is the CAN bus line found to be normal?

YES : Go to Step 2.

NO : Repair the CAN bus line. (Refer to GROUP 54C, Diagnosis P.54C-15).

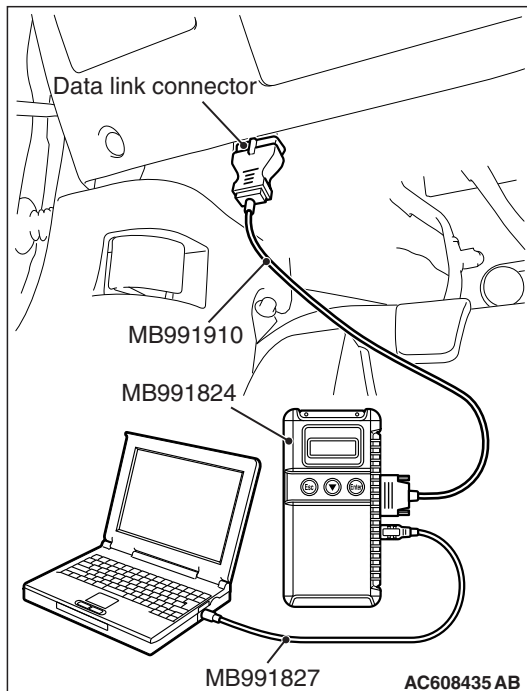**STEP 2. Recheck for diagnostic trouble code.**

Recheck if the DTC is set.

- (1) Erase the DTC.
- (2) Turn the ignition switch to "ON" position.
- (3) Check if the DTC is set.

Q: Is the DTC set?

YES : Go to Step 3.

NO : It can be assumed that this malfunction is intermittent. Refer to GROUP 00, How to Use Troubleshooting/Inspection Service Points –How to Cope with Intermittent Malfunctions P.00-15.

STEP 3. Check heater control panel connector C-138 and heater control module connector C-53 for loose, corroded or damaged terminals, or terminals pushed back in the connector.

Q: Are heater control panel connector C-138 and heater control module connector C-53 in good condition?

YES : Go to Step 4.

NO : Repair or replace the connector. Refer to GROUP 00E, Harness Connector Inspection [P.00E-2](#).

STEP 4. Check the wiring harness between heater control module connector C-53 (terminal 9) and heater control panel connector C-138 (terminal 9).

- Check the heater control panel signal line and ground line for open and short circuit.

Q: Is the wiring harness between heater control module connector C-53 (terminal 9) and heater control panel connector C-138 (terminal 9) in good condition?

YES : Go to Step 5.

NO : Repair the wiring harness.

STEP 5. Recheck for diagnostic trouble code.

Recheck if the DTC is set.

- (1) Erase the DTC.
- (2) Turn the ignition switch to "ON" position.
- (3) Check if the DTC is set.

Q: Is the DTC set?

YES : Replace the heater control panel. Then go to Step 6.

NO : It can be assumed that this malfunction is intermittent. Refer to GROUP 00, How to Use Troubleshooting/Inspection Service Points –How to Cope with Intermittent Malfunctions [P.00-15](#).

STEP 6. Recheck for diagnostic trouble code.

Recheck if the DTC is set.


- (1) Erase the DTC.
- (2) Turn the ignition switch to "ON" position.
- (3) Check if the DTC is set.

Q: Is the DTC set?


YES : Replace the heater control module.

NO : It can be assumed that this malfunction is intermittent. Refer to GROUP 00, How to Use Troubleshooting/Inspection Service Points –How to Cope with Intermittent Malfunctions [P.00-15](#).

DTC B1018: Temperature Control Dial SW Error

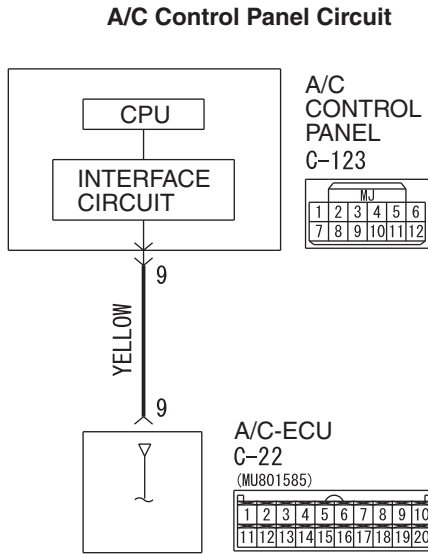

AC901388
 W8G55M001A

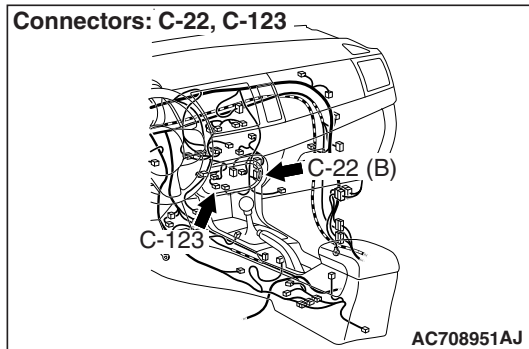

DTC SET CONDITION

DTC B1018 will be set when the A/C-ECU cannot receive the signal of temperature adjustment knob.

TECHNICAL DESCRIPTION (COMMENT)

Current trouble

- The A/C-ECU, the A/C control panel, or connector(s) or wiring between the two may be defective.

Past trouble

- If DTC B1018 is stored as a past trouble, carry out diagnosis with particular emphasis on wiring and connector(s) between the A/C-ECU and the A/C control panel. If the connectors and wiring are normal, and obviously the ECU is the cause of the trouble, replace the ECU. If in doubt, do not replace the ECU.

TROUBLESHOOTING HINT

- Malfunction of connector.
- Malfunction of the harness.
- Malfunction of the A/C control panel.
- Malfunction of the A/C-ECU.

DIAGNOSIS

Required Special Tool:

- MB991958: Scan Tool (M.U.T.-III Sub Assembly)
 - MB991824: Vehicle Communication Interface (V.C.I.)
 - MB991827: M.U.T.-III USB Cable
 - MB991910: M.U.T.-III Main Harness A

STEP 1. Using scan tool MB991958, diagnose the CAN bus line

CAUTION


To prevent damage to scan tool MB991958, always turn the ignition switch to the "LOCK" (OFF) position before connecting or disconnecting scan tool MB991958.

- (1) Connect scan tool MB991958. Refer to "How to connect the Scan Tool (M.U.T.-III) P.55-7."
- (2) Turn the ignition switch to the "ON" position.
- (3) Diagnose the CAN bus line.
- (4) Turn the ignition switch to the "LOCK" (OFF) position.

Q: Is the CAN bus line found to be normal?

YES : Go to Step 2.

NO : Repair the CAN bus line. (Refer to GROUP 54C, Diagnosis P.54C-15).

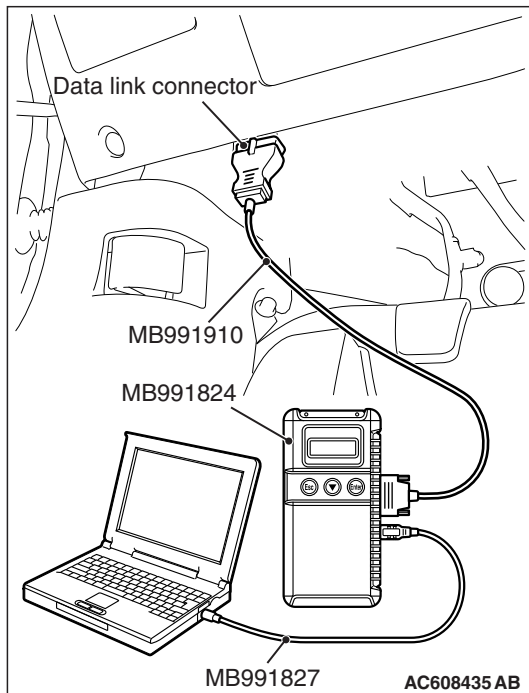

STEP 2. Recheck for diagnostic trouble code.

Recheck if the DTC is set.

- (1) Erase the DTC.
- (2) Turn the ignition switch to "ON" position.
- (3) Check if the DTC is set.

Q: Is the DTC set?

YES : Go to Step 3.

NO : It can be assumed that this malfunction is intermittent. Refer to GROUP 00, How to Use Troubleshooting/Inspection Service Points –How to Cope with Intermittent Malfunctions P.00-15.

STEP 3. Check A/C control panel connector C-123 and A/C-ECU connector C-22 for loose, corroded or damaged terminals, or terminals pushed back in the connector.

Q: Are A/C control panel connector C-123 and A/C-ECU connector C-22 in good condition?

YES : Go to Step 4.

NO : Repair or replace the connector. Refer to GROUP 00E, Harness Connector Inspection [P.00E-2](#).

STEP 4. Check the wiring harness between A/C-ECU connector C-22 (terminal 9) and A/C control panel connector C-123 (terminal 9).

- Check the A/C control panel signal line and ground line for open and short circuit.

Q: Is the wiring harness between A/C-ECU connector C-22 (terminal 9) and A/C control panel connector C-123 (terminal 9) in good condition?

YES : Go to Step 5.

NO : Repair the wiring harness.

STEP 5. Recheck for diagnostic trouble code.

Recheck if the DTC is set.

- (1) Erase the DTC.
- (2) Turn the ignition switch to "ON" position.
- (3) Check if the DTC is set.

Q: Is the DTC set?

YES : Replace the A/C control panel. Then go to Step 6.

NO : It can be assumed that this malfunction is intermittent. Refer to GROUP 00, How to Use Troubleshooting/Inspection Service Points –How to Cope with Intermittent Malfunctions [P.00-15](#).

STEP 6. Recheck for diagnostic trouble code.

Recheck if the DTC is set.

- (1) Erase the DTC.
- (2) Turn the ignition switch to "ON" position.
- (3) Check if the DTC is set.


Q: Is the DTC set?

YES : Replace the A/C-ECU.


NO : It can be assumed that this malfunction is intermittent. Refer to GROUP 00, How to Use Troubleshooting/Inspection Service Points –How to Cope with Intermittent Malfunctions [P.00-15](#).

DTC B1021: Fan Dial SW Error <Vehicles without A/C>

Heater Control Panel Circuit

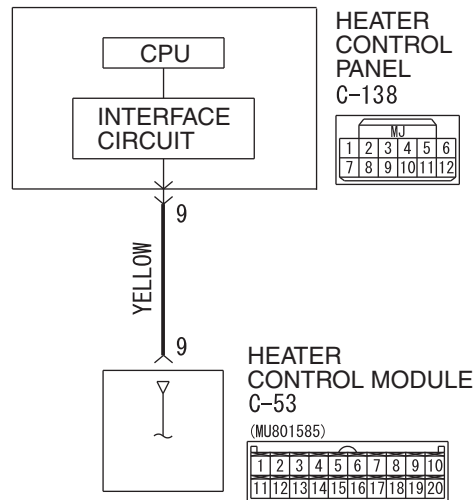

AC901566
 W8G55M001A

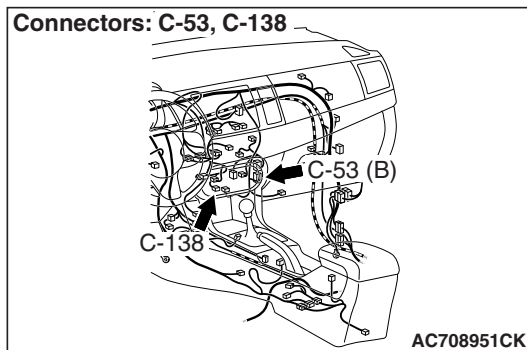

DTC SET CONDITION

DTC B1021 will be set when the heater control module cannot receive the signal of blower knob.

TECHNICAL DESCRIPTION (COMMENT)

Current trouble

- The heater control module, the heater control panel, or connector(s) or wiring between the two may be defective.

Past trouble

- If DTC B1021 is stored as a past trouble, carry out diagnosis with particular emphasis on wiring and connector(s) between the heater control module and the heater control panel. If the connectors and wiring are normal, and obviously the ECU is the cause of the trouble, replace the ECU. If in doubt, do not replace the ECU.

TROUBLESHOOTING HINT

- Malfunction of connector.
- Malfunction of the harness.
- Malfunction of the heater control panel.
- Malfunction of the heater control module.

DIAGNOSIS**Required Special Tool:**

- MB991958: Scan Tool (M.U.T.-III Sub Assembly)
 - MB991824: Vehicle Communication Interface (V.C.I.)
 - MB991827: M.U.T.-III USB Cable
 - MB991910: M.U.T.-III Main Harness A

STEP 1. Using scan tool MB991958, diagnose the CAN bus line**⚠ CAUTION**


To prevent damage to scan tool MB991958, always turn the ignition switch to the "LOCK" (OFF) position before connecting or disconnecting scan tool MB991958.

- (1) Connect scan tool MB991958. Refer to "How to connect the Scan Tool (M.U.T.-III) P.55-7."
- (2) Turn the ignition switch to the "ON" position.
- (3) Diagnose the CAN bus line.
- (4) Turn the ignition switch to the "LOCK" (OFF) position.

Q: Is the CAN bus line found to be normal?

YES : Go to Step 2.

NO : Repair the CAN bus line. (Refer to GROUP 54C, Diagnosis P.54C-15).

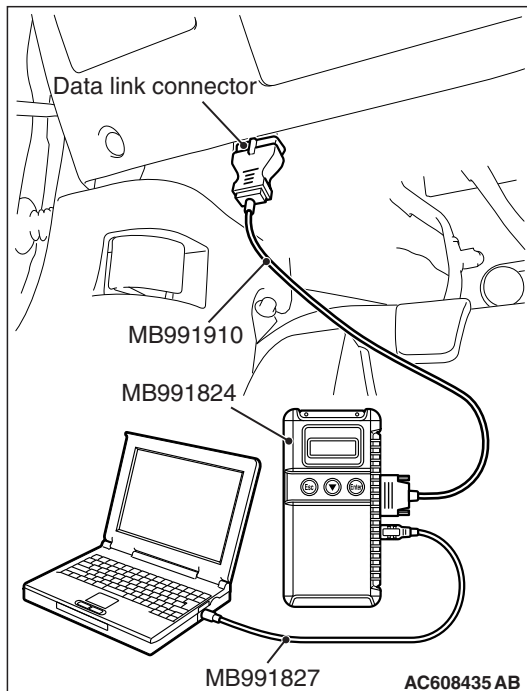**STEP 2. Recheck for diagnostic trouble code.**

Recheck if the DTC is set.

- (1) Erase the DTC.
- (2) Turn the ignition switch to "ON" position.
- (3) Check if the DTC is set.

Q: Is the DTC set?

YES : Go to Step 3.

NO : It can be assumed that this malfunction is intermittent. Refer to GROUP 00, How to Use Troubleshooting/Inspection Service Points –How to Cope with Intermittent Malfunctions P.00-15.

STEP 3. Check heater control panel connector C-138 and heater control module connector C-53 for loose, corroded or damaged terminals, or terminals pushed back in the connector.

Q: Are heater control panel connector C-138 and heater control module connector C-53 in good condition?

YES : Go to Step 4.

NO : Repair or replace the connector. Refer to GROUP 00E, Harness Connector Inspection [P.00E-2](#).

STEP 4. Check the wiring harness between heater control module connector C-53 (terminal 9) and heater control panel connector C-138 (terminal 9).

- Check the heater control panel signal line and ground line for open and short circuit.

Q: Is the wiring harness between heater control module connector C-53 (terminal 9) and heater control panel connector C-138 (terminal 9) in good condition?

YES : Go to Step 5.

NO : Repair the wiring harness.

STEP 5. Recheck for diagnostic trouble code.

Recheck if the DTC is set.

- (1) Erase the DTC.
- (2) Turn the ignition switch to "ON" position.
- (3) Check if the DTC is set.

Q: Is the DTC set?

YES : Replace the heater control panel. Then go to Step 6.

NO : It can be assumed that this malfunction is intermittent. Refer to GROUP 00, How to Use Troubleshooting/Inspection Service Points –How to Cope with Intermittent Malfunctions [P.00-15](#).

STEP 6. Recheck for diagnostic trouble code.

Recheck if the DTC is set.


- (1) Erase the DTC.
- (2) Turn the ignition switch to "ON" position.
- (3) Check if the DTC is set.

Q: Is the DTC set?


YES : Replace the heater control module.

NO : It can be assumed that this malfunction is intermittent. Refer to GROUP 00, How to Use Troubleshooting/Inspection Service Points –How to Cope with Intermittent Malfunctions [P.00-15](#).

DTC B1021: Fan Dial SW Error

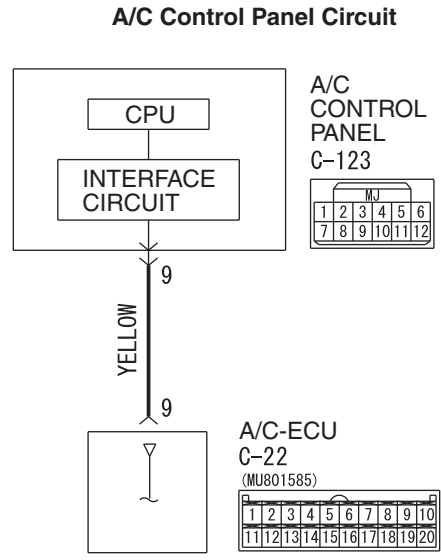

AC901388
 W8G55M001A

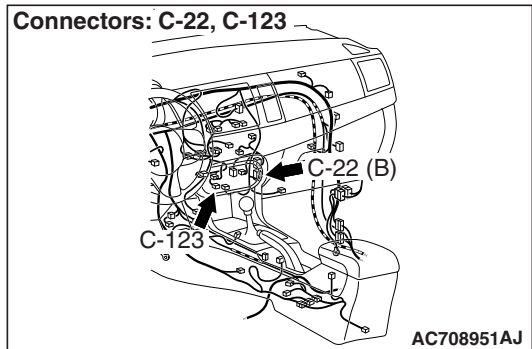

DTC SET CONDITION

DTC B1021 will be set when the A/C-ECU cannot receive the signal of blower knob.

TECHNICAL DESCRIPTION (COMMENT)

Current trouble

- The A/C-ECU, the A/C control panel, or connector(s) or wiring between the two may be defective.

Past trouble

- If DTC B1021 is stored as a past trouble, carry out diagnosis with particular emphasis on wiring and connector(s) between the A/C-ECU and the A/C control panel. If the connectors and wiring are normal, and obviously the ECU is the cause of the trouble, replace the ECU. If in doubt, do not replace the ECU.

TROUBLESHOOTING HINT

- Malfunction of connector.
- Malfunction of the harness.
- Malfunction of the A/C control panel.
- Malfunction of the A/C-ECU.

DIAGNOSIS

Required Special Tool:

- MB991958: Scan Tool (M.U.T.-III Sub Assembly)
 - MB991824: Vehicle Communication Interface (V.C.I.)
 - MB991827: M.U.T.-III USB Cable
 - MB991910: M.U.T.-III Main Harness A

STEP 1. Using scan tool MB991958, diagnose the CAN bus line

⚠ CAUTION


To prevent damage to scan tool MB991958, always turn the ignition switch to the "LOCK" (OFF) position before connecting or disconnecting scan tool MB991958.

- (1) Connect scan tool MB991958. Refer to "How to connect the Scan Tool (M.U.T.-III) P.55-7."
- (2) Turn the ignition switch to the "ON" position.
- (3) Diagnose the CAN bus line.
- (4) Turn the ignition switch to the "LOCK" (OFF) position.

Q: Is the CAN bus line found to be normal?

YES : Go to Step 2.

NO : Repair the CAN bus line. (Refer to GROUP 54C, Diagnosis P.54C-15).

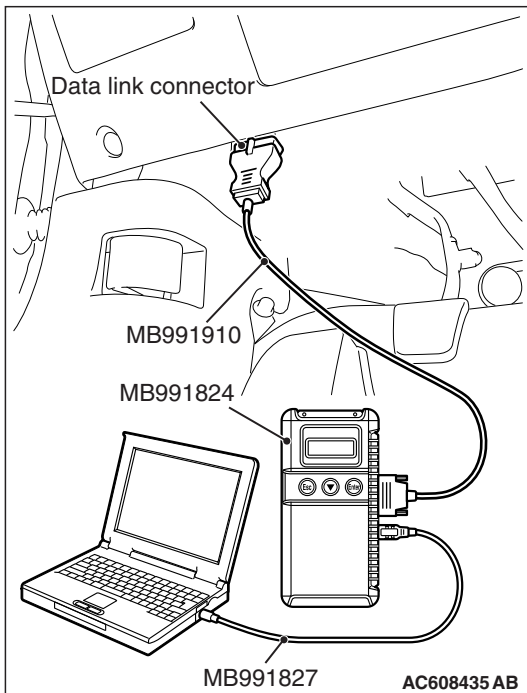

STEP 2. Recheck for diagnostic trouble code.

Recheck if the DTC is set.

- (1) Erase the DTC.
- (2) Turn the ignition switch to "ON" position.
- (3) Check if the DTC is set.

Q: Is the DTC set?

YES : Go to Step 3.

NO : It can be assumed that this malfunction is intermittent. Refer to GROUP 00, How to Use Troubleshooting/Inspection Service Points –How to Cope with Intermittent Malfunctions P.00-15.

STEP 3. Check A/C control panel connector C-123 and A/C-ECU connector C-22 for loose, corroded or damaged terminals, or terminals pushed back in the connector.

Q: Are A/C control panel connector C-123 and A/C-ECU connector C-22 in good condition?

YES : Go to Step 4.

NO : Repair or replace the connector. Refer to GROUP 00E, Harness Connector Inspection [P.00E-2](#).

STEP 4. Check the wiring harness between A/C-ECU connector C-22 (terminal 9) and A/C control panel connector C-123 (terminal 9).

- Check the A/C control panel signal line and ground line for open and short circuit.

Q: Is the wiring harness between A/C-ECU connector C-22 (terminal 9) and A/C control panel connector C-123 (terminal 9) in good condition?

YES : Go to Step 5.

NO : Repair the wiring harness.

STEP 5. Recheck for diagnostic trouble code.

Recheck if the DTC is set.

- (1) Erase the DTC.
- (2) Turn the ignition switch to "ON" position.
- (3) Check if the DTC is set.

Q: Is the DTC set?

YES : Replace the A/C control panel. Then go to Step 6.

NO : It can be assumed that this malfunction is intermittent. Refer to GROUP 00, How to Use Troubleshooting/Inspection Service Points –How to Cope with Intermittent Malfunctions [P.00-15](#).

STEP 6. Recheck for diagnostic trouble code.

Recheck if the DTC is set.

- (1) Erase the DTC.
- (2) Turn the ignition switch to "ON" position.
- (3) Check if the DTC is set.


Q: Is the DTC set?

YES : Replace the A/C-ECU.


NO : It can be assumed that this malfunction is intermittent. Refer to GROUP 00, How to Use Troubleshooting/Inspection Service Points –How to Cope with Intermittent Malfunctions [P.00-15](#).

DTC B1031, B1032: Fin Thermo Sensor System <Vehicles without A/C>

Fin Thermo Sensor Circuit

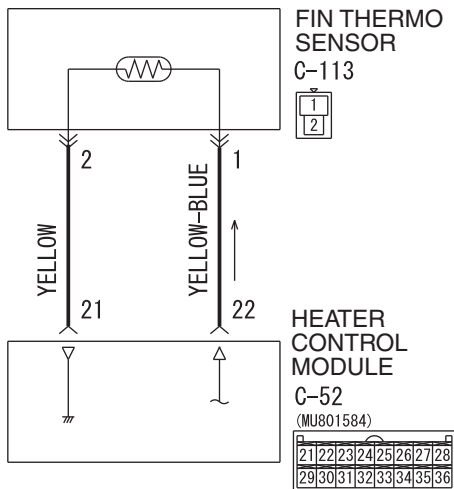

AC901567
 W8G55M003A

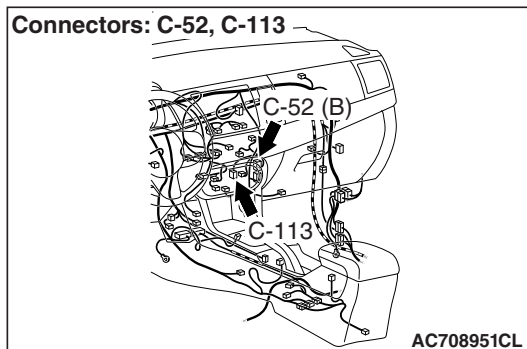

DTC SET CONDITION

- DTC B1031 is set if there is a short circuit in the fin thermo sensor input circuit.
- DTC B1032 is set if there is a defective connector connection, or if there is an open circuit in the harness.

TECHNICAL DESCRIPTION (COMMENT)

Current trouble

- The heater control module, the fin thermo sensor, or connector(s) or wiring between the two may be defective.

Past trouble

- If DTC B1031 or B1032 is stored as a past trouble, carry out diagnosis with particular emphasis on wiring and connector(s) between the heater control module and the fin thermo sensor. If the connectors and wiring are normal, and obviously the ECU is the cause of the trouble, replace the ECU. If in doubt, do not replace the ECU.

TROUBLESHOOTING HINT

- Malfunction of connector.
- Malfunction of the harness.
- Malfunction of the fin thermo sensor.
- Malfunction of the heater control module.

DIAGNOSIS**Required Special Tool:**

- MB991958: Scan Tool (M.U.T.-III Sub Assembly)
 - MB991824: Vehicle Communication Interface (V.C.I.)
 - MB991827: M.U.T.-III USB Cable
 - MB991910: M.U.T.-III Main Harness A

STEP 1. Using scan tool MB991958, diagnose the CAN bus line**⚠ CAUTION**


To prevent damage to scan tool MB991958, always turn the ignition switch to the "LOCK" (OFF) position before connecting or disconnecting scan tool MB991958.

- (1) Connect scan tool MB991958. Refer to "How to connect the Scan Tool (M.U.T.-III) P.55-7."
- (2) Turn the ignition switch to the "ON" position.
- (3) Diagnose the CAN bus line.
- (4) Turn the ignition switch to the "LOCK" (OFF) position.

Q: Is the CAN bus line found to be normal?

YES : Go to Step 2.

NO : Repair the CAN bus line. (Refer to GROUP 54C, Diagnosis P.54C-15).

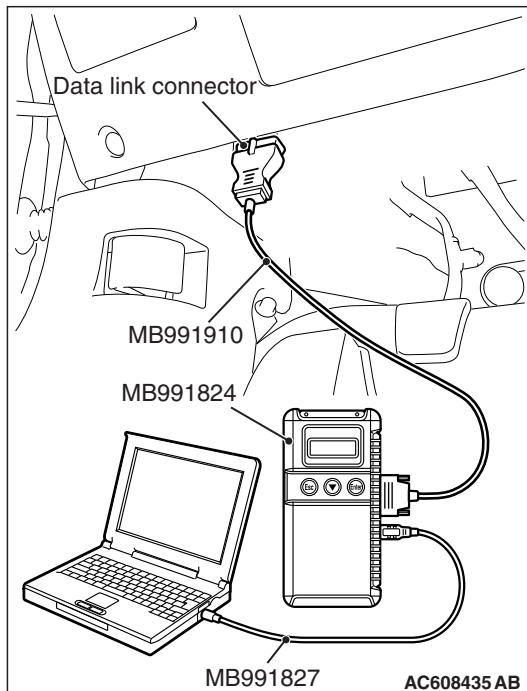**STEP 2. Recheck for diagnostic trouble code.**

Recheck if the DTC is set.

- (1) Erase the DTC.
- (2) Turn the ignition switch to "ON" position.
- (3) Check if the DTC is set.

Q: Is the DTC set?

YES : Go to Step 3.

NO : It can be assumed that this malfunction is intermittent. Refer to GROUP 00, How to Use Troubleshooting/Inspection Service Points –How to Cope with Intermittent Malfunctions P.00-15.

STEP 3. Check fin thermo sensor connector C-113 and heater control module connector C-52 for loose, corroded or damaged terminals, or terminals pushed back in the connector.

Q: Are fin thermo sensor connector C-113 and heater control module connector C-52 in good condition?

YES : Go to Step 4.

NO : Repair or replace the connector. Refer to GROUP 00E, Harness Connector Inspection [P.00E-2](#).

STEP 4. Check the wiring harness between heater control module connector C-52 (terminals 22 and 21) and fin thermo sensor connector C-113 (terminals 1 and 2).

- Check the sensor signal line and ground line for open and short circuit.

Q: Is the wiring harness between heater control module connector C-52 (terminals 22 and 21) and fin thermo sensor connector C-113 (terminals 1 and 2) in good condition?

YES : Go to Step 5.

NO : Repair the wiring harness.

STEP 5. Check the fin thermo sensor.


Measure the resistance between connector terminals 1 and 2 under at least two different temperatures. The resistance values should generally match those in the graph.

NOTE: The temperature at the check should not exceed the range in the graph.

Q: Is the fin thermo sensor in good condition?

YES : Replace the heater control module. Then go to Step 6.

NO : Replace the fin thermo sensor. Then go to Step 6.

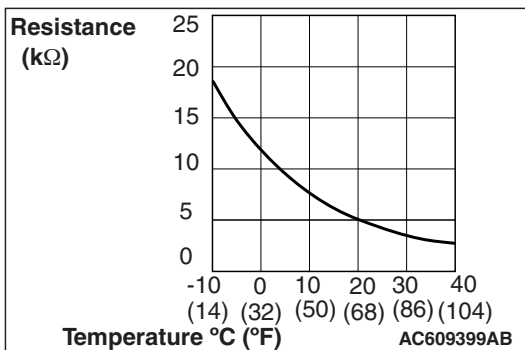

STEP 6. Recheck for diagnostic trouble code.

Check again if the DTC is set.

- (1) Connect scan tool MB991958 to the data link connector
- (2) Turn the ignition switch to the "ON" position.
- (3) Check if the DTC is set.
- (4) Turn the ignition switch to the "LOCK" (OFF) position.



Q: Is the DTC set?

YES : Return to Step 1.

NO : The procedure is complete.

DTC B1031, B1032: Fin Thermo Sensor System

Fin Thermo Sensor Circuit

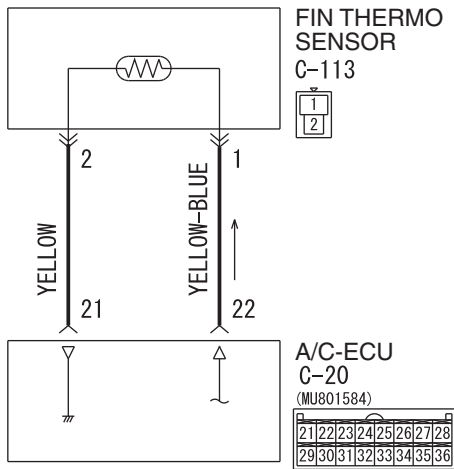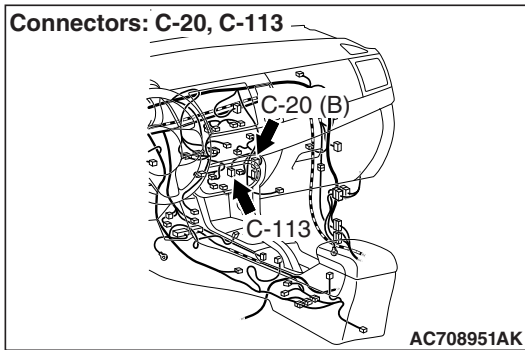AC708602
W8G55M003A

DTC SET CONDITION

- DTC B1031 is set if there is a short circuit in the fin thermo sensor input circuit.
- DTC B1032 is set if there is a defective connector connection, or if there is an open circuit in the harness.

TECHNICAL DESCRIPTION (COMMENT)

Current trouble

- The A/C-ECU, the fin thermo sensor, or connector(s) or wiring between the two may be defective.

Past trouble

- If DTC B1031 or B1032 is stored as a past trouble, carry out diagnosis with particular emphasis on wiring and connector(s) between the A/C-ECU and the fin thermo sensor. If the connectors and wiring are normal, and obviously the ECU is the cause of the trouble, replace the ECU. If in doubt, do not replace the ECU.

TROUBLESHOOTING HINT

- Malfunction of connector.
- Malfunction of the harness.
- Malfunction of the fin thermo sensor.
- Malfunction of the A/C-ECU.

DIAGNOSIS

Required Special Tool:

- MB991958: Scan Tool (M.U.T.-III Sub Assembly)
 - MB991824: Vehicle Communication Interface (V.C.I.)
 - MB991827: M.U.T.-III USB Cable
 - MB991910: M.U.T.-III Main Harness A

STEP 1. Using scan tool MB991958, diagnose the CAN bus line

⚠ CAUTION


To prevent damage to scan tool MB991958, always turn the ignition switch to the "LOCK" (OFF) position before connecting or disconnecting scan tool MB991958.

- (1) Connect scan tool MB991958. Refer to "How to connect the Scan Tool (M.U.T.-III) P.55-7."
- (2) Turn the ignition switch to the "ON" position.
- (3) Diagnose the CAN bus line.
- (4) Turn the ignition switch to the "LOCK" (OFF) position.

Q: Is the CAN bus line found to be normal?

YES : Go to Step 2.

NO : Repair the CAN bus line. (Refer to GROUP 54C, Diagnosis P.54C-15).

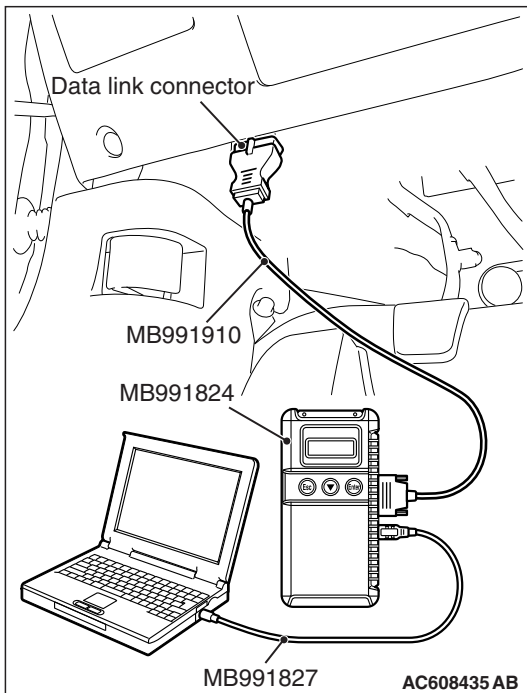

STEP 2. Recheck for diagnostic trouble code.

Recheck if the DTC is set.

- (1) Erase the DTC.
- (2) Turn the ignition switch to "ON" position.
- (3) Check if the DTC is set.

Q: Is the DTC set?

YES : Go to Step 3.

NO : It can be assumed that this malfunction is intermittent. Refer to GROUP 00, How to Use Troubleshooting/Inspection Service Points –How to Cope with Intermittent Malfunctions P.00-15.

STEP 3. Check fin thermo sensor connector C-113 and A/C-ECU connector C-20 for loose, corroded or damaged terminals, or terminals pushed back in the connector.

Q: Are fin thermo sensor connector C-113 and A/C-ECU connector C-20 in good condition?

YES : Go to Step 4.

NO : Repair or replace the connector. Refer to GROUP 00E, Harness Connector Inspection [P.00E-2](#).

STEP 4. Check the wiring harness between A/C-ECU connector C-20 (terminals 22 and 21) and fin thermo sensor connector C-113 (terminals 1 and 2).

- Check the sensor signal line and ground line for open and short circuit.

Q: Is the wiring harness between A/C-ECU connector C-20 (terminals 22 and 21) and fin thermo sensor connector C-113 (terminals 1 and 2) in good condition?

YES : Go to Step 5.

NO : Repair the wiring harness.

STEP 5. Check the fin thermo sensor.


Measure the resistance between connector terminals 1 and 2 under at least two different temperatures. The resistance values should generally match those in the graph.

NOTE: The temperature at the check should not exceed the range in the graph.

Q: Is the fin thermo sensor in good condition?

YES : Replace the A/C-ECU. Then go to Step 6.

NO : Replace the fin thermo sensor. Then go to Step 6.

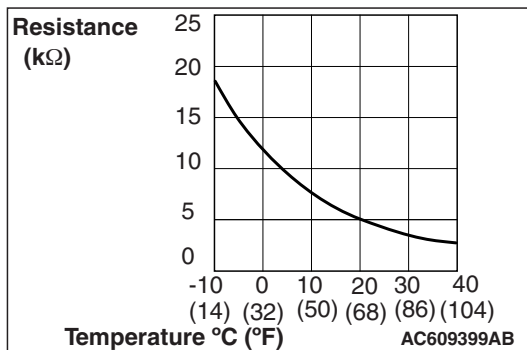

STEP 6. Recheck for diagnostic trouble code.

Check again if the DTC is set.

- (1) Connect scan tool MB991958 to the data link connector
- (2) Turn the ignition switch to the "ON" position.
- (3) Check if the DTC is set.
- (4) Turn the ignition switch to the "LOCK" (OFF) position.


Q: Is the DTC set?

YES : Return to Step 1.



NO : The procedure is complete.

DTC B1034, B1035: Ambient air temperature Sensor System

Ambient air Temperature Sensor Circuit

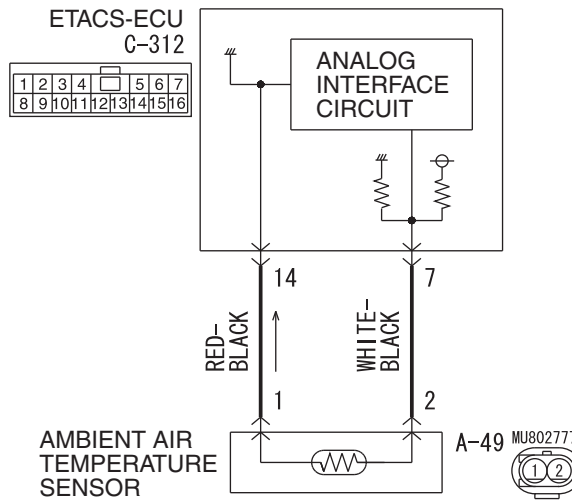

AC805057
 W8G55M004A

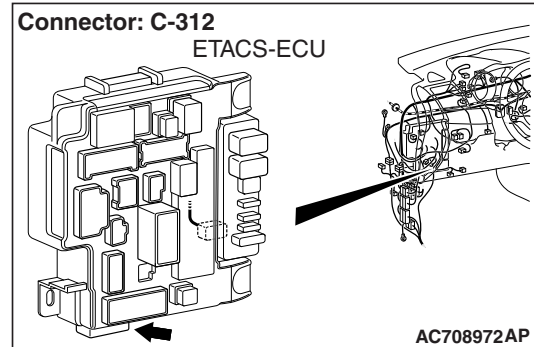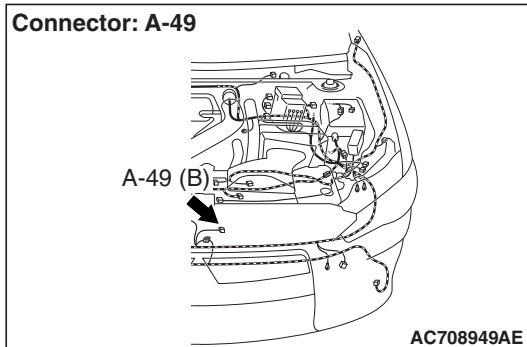

DTC SET CONDITION

- DTC B1034 is set if there is a short circuit in the ambient air temperature sensor input circuit.
- DTC B1035 is set if there is a defective connector connection, or if there is an open circuit in the harness.

TECHNICAL DESCRIPTION (COMMENT)

Current trouble

- The A/C-ECU, the ambient air temperature sensor, or connector(s) or wiring between the two may be defective.

Past trouble

- If DTC B1034 or B1035 is stored as a past trouble, carry out diagnosis with particular emphasis on wiring and connector(s) between the A/C-ECU and the ambient air temperature sensor. If the connectors and wiring are normal, and obviously the ECU is the cause of the trouble, replace the ECU. If in doubt, do not replace the ECU.

TROUBLESHOOTING HINT

- Malfunction of connector.
- Malfunction of the harness.
- Malfunction of the ambient air temperature sensor.
- Malfunction of the A/C-ECU.

DIAGNOSIS**Required Special Tool:**

- MB991958: Scan Tool (M.U.T.-III Sub Assembly)
 - MB991824: Vehicle Communication Interface (V.C.I.)
 - MB991827: M.U.T.-III USB Cable
 - MB991910: M.U.T.-III Main Harness A

STEP 1. Using scan tool MB991958, diagnose the CAN bus line**⚠ CAUTION**


To prevent damage to scan tool MB991958, always turn the ignition switch to the "LOCK" (OFF) position before connecting or disconnecting scan tool MB991958.

- (1) Connect scan tool MB991958. Refer to "How to connect the Scan Tool (M.U.T.-III) P.55-7."
- (2) Turn the ignition switch to the "ON" position.
- (3) Diagnose the CAN bus line.
- (4) Turn the ignition switch to the "LOCK" (OFF) position.

Q: Is the CAN bus line found to be normal?

YES : Go to Step 2.

NO : Repair the CAN bus line. (Refer to GROUP 54C, Diagnosis P.54C-15).

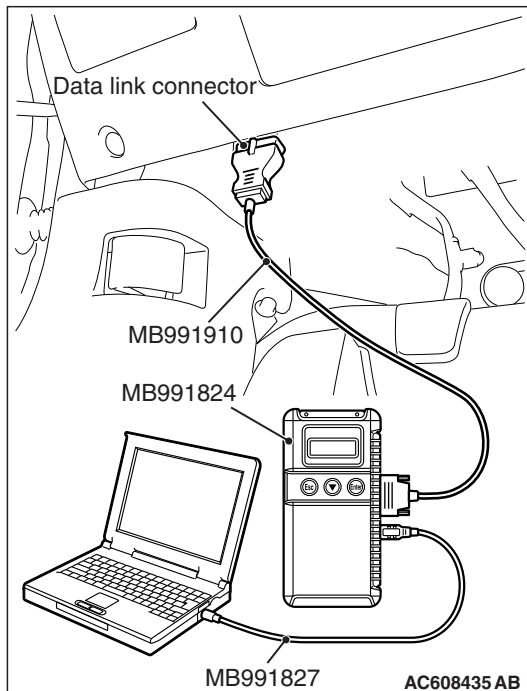**STEP 2. Recheck for diagnostic trouble code.**

Recheck if the DTC is set.

- (1) Erase the DTC.
- (2) Turn the ignition switch to "ON" position.
- (3) Check if the DTC is set.

Q: Is the DTC set?

YES : Go to Step 3.

NO : It can be assumed that this malfunction is intermittent. Refer to GROUP 00, How to Use Troubleshooting/Inspection Service Points –How to Cope with Intermittent Malfunctions P.00-15.

STEP 3. Check ambient air temperature sensor connector A-49 and ETACS-ECU connector C-312 for loose, corroded or damaged terminals, or terminals pushed back in the connector.

Q: Are ambient air temperature sensor connector A-49 and ETACS-ECU connector C-312 in good condition?

YES : Go to Step 4.

NO : Repair or replace the connector. Refer to GROUP 00E, Harness Connector Inspection [P.00E-2](#).

STEP 4. Check the wiring harness between ambient air temperature sensor connector A-49 (terminals 2 and 1) and ETACS-ECU connector C-312 (terminals 7 and 14).

- Check the sensor signal line and ground line for open and short circuit.

Q: Is the wiring harness between ambient air temperature sensor connector A-49 (terminals 2 and 1) and ETACS-ECU connector C-312 (terminals 7 and 14) in good condition?

YES : Go to Step 5.

NO : Repair the wiring harness.

STEP 5. Check the ambient air temperature sensor.


Measure the resistance between connector terminals 1 and 2 under at least two different temperatures. The resistance values should generally match those in the graph.

NOTE: The temperature at the check should not exceed the range in the graph.

Q: Is the ambient air temperature sensor in good condition?

YES : Replace the A/C-ECU. Then go to Step 6.

NO : Replace the ambient air temperature sensor. Then go to Step 6.

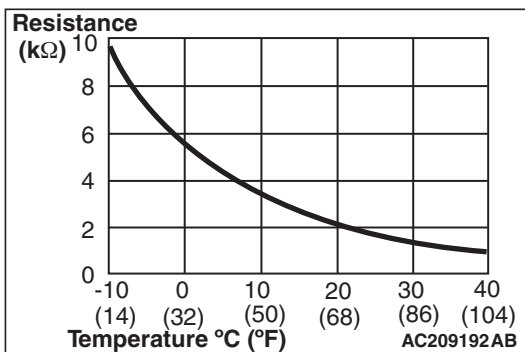

STEP 6. Recheck for diagnostic trouble code.

Check again if the DTC is set.

- (1) Connect scan tool MB991958 to the data link connector
- (2) Turn the ignition switch to the "ON" position.
- (3) Check if the DTC is set.
- (4) Turn the ignition switch to the "LOCK" (OFF) position.


Q: Is the DTC set?

YES : Return to Step 1.




NO : The procedure is complete.

DTC B1079: Refrigerant Leaks

A/C Pressure Sensor Circuit

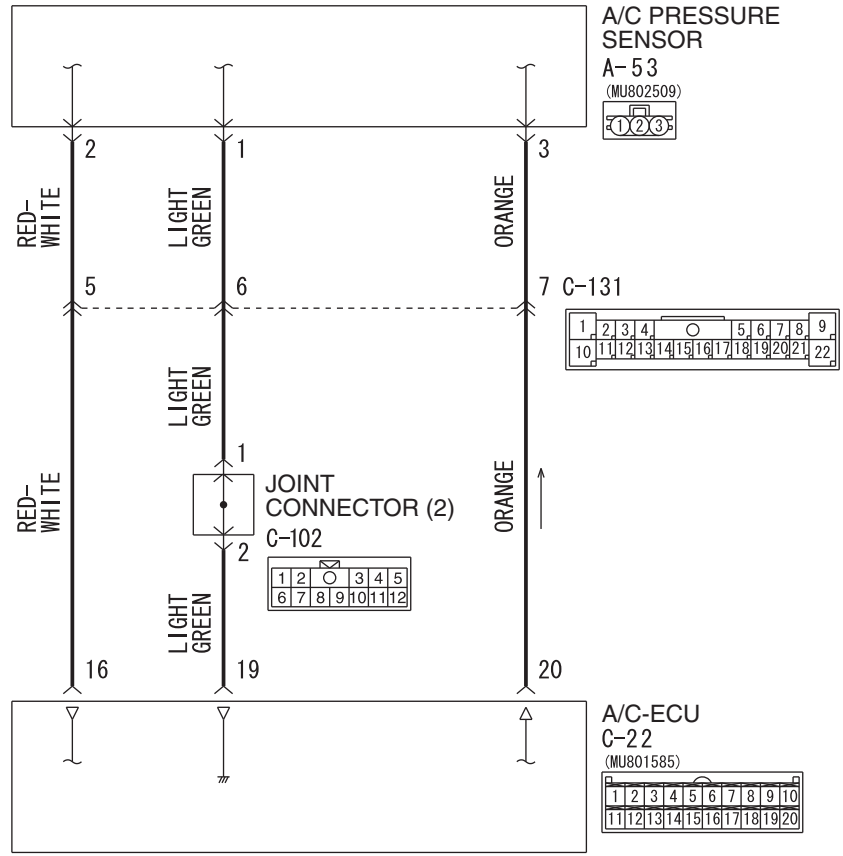

AC804914
 W8G55M002A

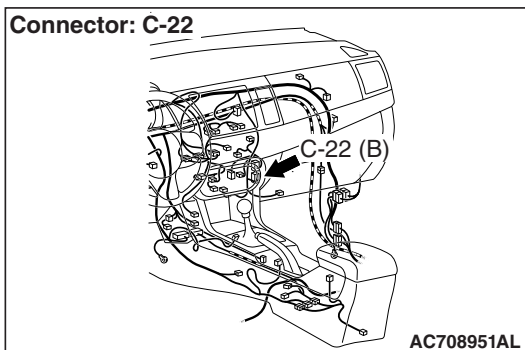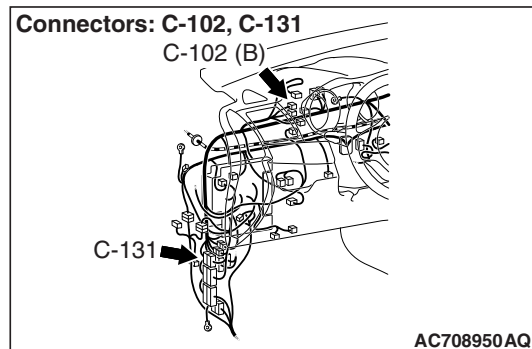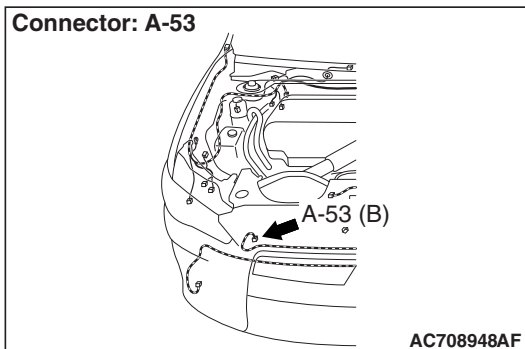

DTC SET CONDITION

DTC B1079 will be set when the A/C pressure sensor detects the refrigerant pressure of specified level or less.

NOTE: When DTC B1079 is set, the A/C indicator of A/C control panel flashes.

TECHNICAL DESCRIPTION (COMMENT)

Current trouble

- The refrigerant amount is not at the specified level, or the wiring harness or connector between the A/C-ECU and A/C pressure sensor, and the A/C-ECU itself or A/C pressure sensor itself may have failed.

Past trouble

- If DTC B1079 is stored as a past trouble, carry out diagnosis with particular emphasis on wiring and connector(s) between the A/C-ECU and the A/C pressure sensor. If the connectors and wiring are normal, and obviously the ECU is the cause of the trouble, replace the ECU. If in doubt, do not replace the ECU.


TROUBLESHOOTING HINT

- Malfunction of connector.
- Malfunction of the harness.
- Malfunction of the A/C pressure sensor.
- Malfunction of the A/C-ECU.

DIAGNOSIS

Required Special Tool:

- MB991958: Scan Tool (M.U.T.-III Sub Assembly)
 - MB991824: Vehicle Communication Interface (V.C.I.)
 - MB991827: M.U.T.-III USB Cable
 - MB991910: M.U.T.-III Main Harness A

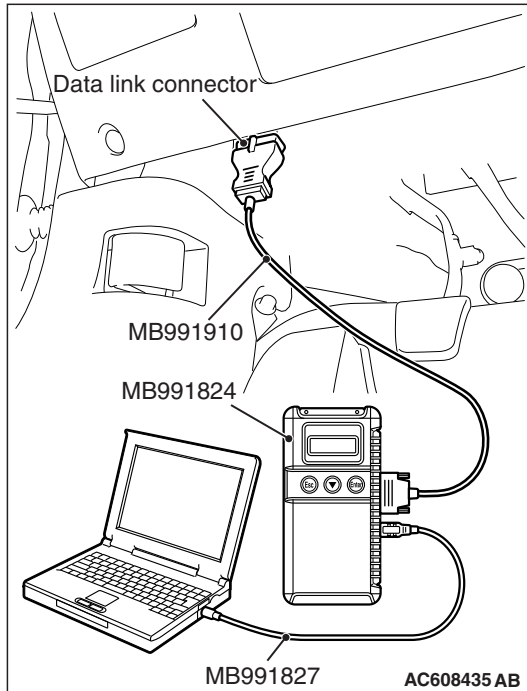

STEP 1. Using scan tool MB991958, diagnose the CAN bus line

⚠ CAUTION

To prevent damage to scan tool MB991958, always turn the ignition switch to the "LOCK" (OFF) position before connecting or disconnecting scan tool MB991958.

- (1) Connect scan tool MB991958. Refer to "How to connect the Scan Tool (M.U.T.-III) P.55-7."
- (2) Turn the ignition switch to the "ON" position.
- (3) Diagnose the CAN bus line.
- (4) Turn the ignition switch to the "LOCK" (OFF) position.

Q: Is the CAN bus line found to be normal?

YES : Go to Step 2.

NO : Repair the CAN bus line. (Refer to GROUP 54C, Diagnosis P.54C-15).

STEP 2. Recheck for diagnostic trouble code.

Recheck if the DTC is set.

- (1) Erase the DTC.
- (2) Turn the ignition switch to "ON" position.
- (3) Check if the DTC is set.

Q: Is the DTC set?

YES : Go to Step 3.

NO : It can be assumed that this malfunction is intermittent. Refer to GROUP 00, How to Use Troubleshooting/Inspection Service Points –How to Cope with Intermittent Malfunctions P.00-15.

STEP 3. Check A/C pressure sensor connector A-53 and A/C-ECU connector C-22 for loose, corroded or damaged terminals, or terminals pushed back in the connector.

Q: Are air A/C pressure sensor connector A-53 and A/C-ECU connector C-22 in good condition?

YES : Go to Step 4.

NO : Repair or replace the connector. Refer to GROUP 00E, Harness Connector Inspection P.00E-2.

STEP 4. Check the wiring harness between A/C-ECU connector C-22 (terminals 20, 16 and 19) and A/C pressure sensor connector A-53 (terminals 3, 2 and 1).

NOTE: Also check intermediate connector C-131 and joint connector C-102 for loose, corroded, or damaged terminals, or terminals pushed back in the connector. If intermediate connector C-131 and joint connector C-102 is damaged, repair or replace the connector as described in GROUP 00E, Harness Connector Inspection P.00E-2.

- Check the sensor signal line and ground line for open and short circuit.




Q: Is the wiring harness between A/C-ECU connector C-22 (terminals 20, 16 and 19) and A/C pressure sensor connector A-53 (terminals 3, 2 and 1) in good condition?

YES : Go to Step 5.

NO : Repair the wiring harness.

STEP 5. Check the A/C pressure sensor operation.

- (1) Assemble a gauge manifold on the high pressure service valve.
- (2) Disconnect the A/C pressure sensor connector and connect special tool test harness MB991658 as shown in the illustration.
- (3) Turn ON the engine and then turn ON the A/C switch.

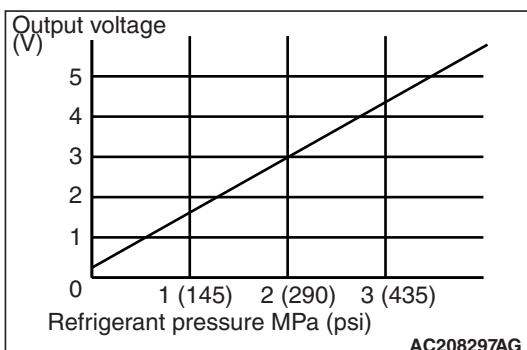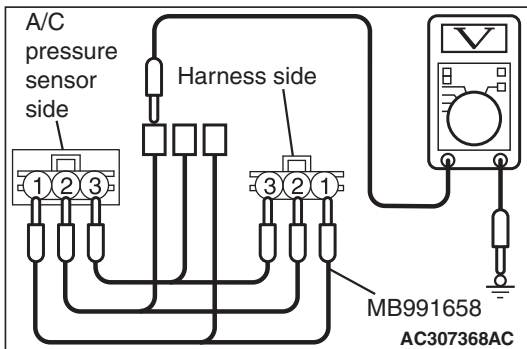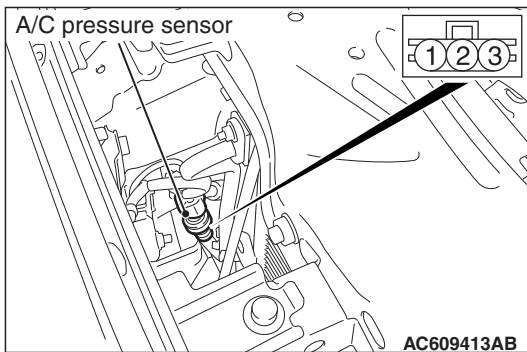

- (4) At this time, check to see that the voltage of A/C pressure sensor terminal No. 2 reflects the specifications of the figure.

NOTE: The allowance shall be defined as $\pm 5\%$.

Q: Is the A/C pressure sensor operating properly?

YES : Go to Step 6.

NO : Replace the A/C pressure sensor. Then go to Step 7.

STEP 6. Check the refrigerant level.

Use the refrigerant recovery station to remove all of the refrigerant, and then calculate the amount of the refrigerant and charge it.

Q: Is the refrigerant level correct?

YES : Go to Step 7.

NO : Correct the refrigerant level (Refer to On-vehicle Service [P.55-165](#)). Then go to Step 7.

STEP 7. Recheck for diagnostic trouble code.

Check again if the DTC is set.

(1) Connect scan tool MB991958 to the data link connector

(2) Turn the ignition switch to the "ON" position.


(3) Check if the DTC is set.

(4) Turn the ignition switch to the "LOCK" (OFF) position.


Q: Is the DTC set?

YES : Return to Step 1.

NO : The procedure is complete.

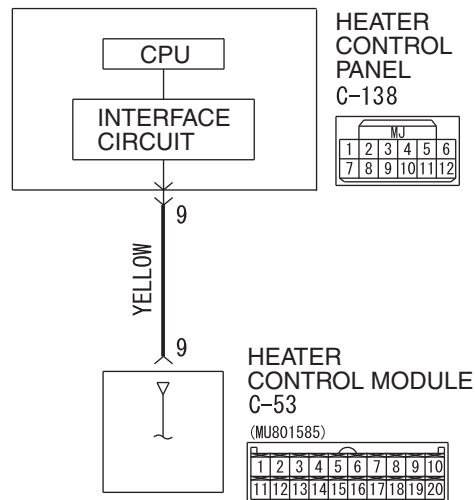DTC B2214: Control Panel Failure <Vehicles without A/C>**Heater Control Panel Circuit**

AC901566
W8G55M001A

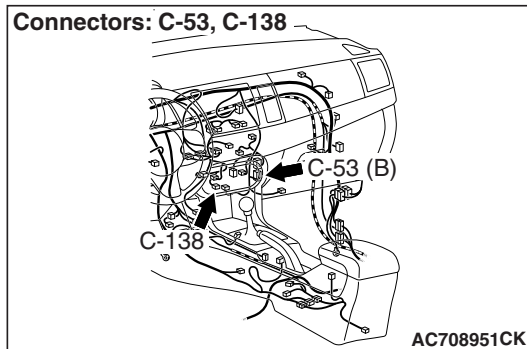

DTC SET CONDITION

DTC B2214 will be set when the heater control module detects the heater control panel abnormality.

TECHNICAL DESCRIPTION (COMMENT)

Current trouble

- The heater control module, the heater control panel, or connector(s) or wiring between the two may be defective.

Past trouble

- If DTC B2214 is stored as a past trouble, carry out diagnosis with particular emphasis on wiring and connector(s) between the heater control module and the heater control panel. If the connectors and wiring are normal, and obviously the ECU is the cause of the trouble, replace the ECU. If in doubt, do not replace the ECU.


TROUBLESHOOTING HINT

- Malfunction of connector.
- Malfunction of the harness.
- Malfunction of the heater control panel.
- Malfunction of the heater control module.

DIAGNOSIS

Required Special Tool:

- MB991958: Scan Tool (M.U.T.-III Sub Assembly)
 - MB991824: Vehicle Communication Interface (V.C.I.)
 - MB991827: M.U.T.-III USB Cable
 - MB991910: M.U.T.-III Main Harness A

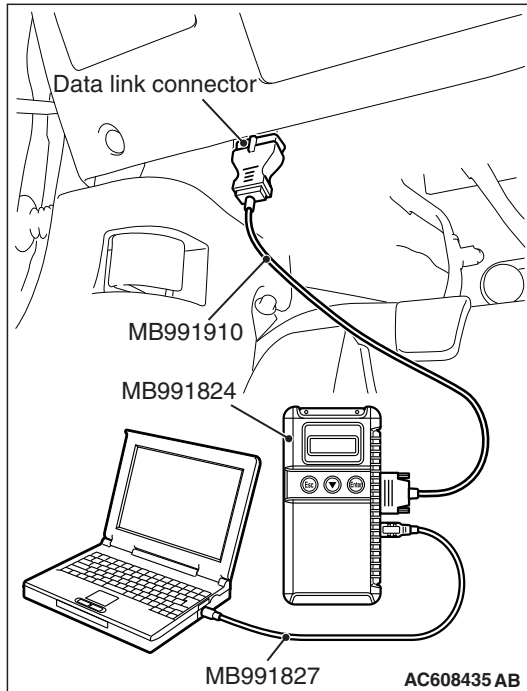

STEP 1. Using scan tool MB991958, diagnose the CAN bus line

⚠ CAUTION

To prevent damage to scan tool MB991958, always turn the ignition switch to the "LOCK" (OFF) position before connecting or disconnecting scan tool MB991958.

- (1) Connect scan tool MB991958. Refer to "How to connect the Scan Tool (M.U.T.-III) P.55-7."
- (2) Turn the ignition switch to the "ON" position.
- (3) Diagnose the CAN bus line.
- (4) Turn the ignition switch to the "LOCK" (OFF) position.

Q: Is the CAN bus line found to be normal?

YES : Go to Step 2.

NO : Repair the CAN bus line. (Refer to GROUP 54C, Diagnosis P.54C-15).

STEP 2. Recheck for diagnostic trouble code.

Recheck if the DTC is set.

- (1) Erase the DTC.
- (2) Turn the ignition switch to "ON" position.
- (3) Check if the DTC is set.

Q: Is the DTC set?

YES : Go to Step 3.

NO : It can be assumed that this malfunction is intermittent. Refer to GROUP 00, How to Use Troubleshooting/Inspection Service Points –How to Cope with Intermittent Malfunctions P.00-15.

STEP 3. Check heater control panel connector C-138 and heater control module connector C-53 for loose, corroded or damaged terminals, or terminals pushed back in the connector.

Q: Are heater control panel connector C-138 and heater control module connector C-53 in good condition?

YES : Go to Step 4.

NO : Repair or replace the connector. Refer to GROUP 00E, Harness Connector Inspection P.00E-2.

STEP 4. Check the wiring harness between heater control module connector C-53 (terminal 9) and heater control panel connector C-138 (terminal 9).

- Check the heater control panel signal line and ground line for open and short circuit.

Q: Is the wiring harness between heater control module connector C-53 (terminal 9) and heater control panel connector C-138 (terminal 9) in good condition?

YES : Go to Step 5.

NO : Repair the wiring harness.

STEP 5. Recheck for diagnostic trouble code.

Recheck if the DTC is set.

- (1) Erase the DTC.
- (2) Turn the ignition switch to "ON" position.
- (3) Check if the DTC is set.

Q: Is the DTC set?

YES : Replace the heater control panel. Then go to Step 6.

NO : It can be assumed that this malfunction is intermittent. Refer to GROUP 00, How to Use Troubleshooting/Inspection Service Points –How to Cope with Intermittent Malfunctions [P.00-15](#).

STEP 6. Recheck for diagnostic trouble code.

Recheck if the DTC is set.


- (1) Erase the DTC.
- (2) Turn the ignition switch to "ON" position.
- (3) Check if the DTC is set.

Q: Is the DTC set?


YES : Replace the heater control module.

NO : It can be assumed that this malfunction is intermittent. Refer to GROUP 00, How to Use Troubleshooting/Inspection Service Points –How to Cope with Intermittent Malfunctions [P.00-15](#).

DTC B2214: Control Panel Failure

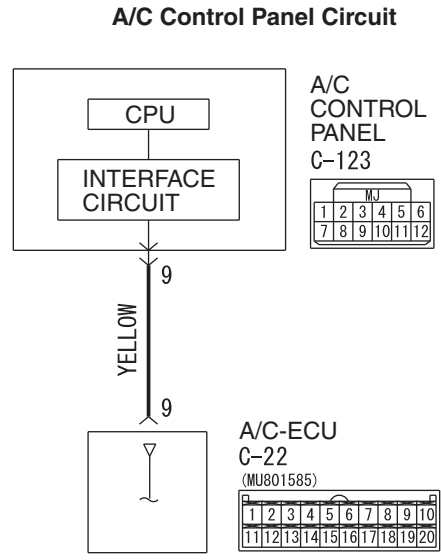

AC901388
 W8G55M001A

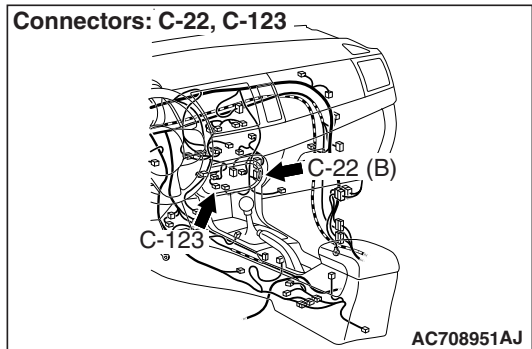

DTC SET CONDITION

DTC B2214 will be set when the A/C-ECU detects the A/C control panel abnormality.

TECHNICAL DESCRIPTION (COMMENT)

Current trouble

- The A/C-ECU, the A/C control panel, or connector(s) or wiring between the two may be defective.

Past trouble

- If DTC B2214 is stored as a past trouble, carry out diagnosis with particular emphasis on wiring and connector(s) between the A/C-ECU and the A/C control panel. If the connectors and wiring are normal, and obviously the ECU is the cause of the trouble, replace the ECU. If in doubt, do not replace the ECU.

TROUBLESHOOTING HINT

- Malfunction of connector.
- Malfunction of the harness.
- Malfunction of the A/C control panel.
- Malfunction of the A/C-ECU.

DIAGNOSIS

Required Special Tool:

- MB991958: Scan Tool (M.U.T.-III Sub Assembly)
 - MB991824: Vehicle Communication Interface (V.C.I.)
 - MB991827: M.U.T.-III USB Cable
 - MB991910: M.U.T.-III Main Harness A

STEP 1. Using scan tool MB991958, diagnose the CAN bus line

⚠ CAUTION


To prevent damage to scan tool MB991958, always turn the ignition switch to the "LOCK" (OFF) position before connecting or disconnecting scan tool MB991958.

- (1) Connect scan tool MB991958. Refer to "How to connect the Scan Tool (M.U.T.-III) P.55-7."
- (2) Turn the ignition switch to the "ON" position.
- (3) Diagnose the CAN bus line.
- (4) Turn the ignition switch to the "LOCK" (OFF) position.

Q: Is the CAN bus line found to be normal?

YES : Go to Step 2.

NO : Repair the CAN bus line. (Refer to GROUP 54C, Diagnosis P.54C-15).

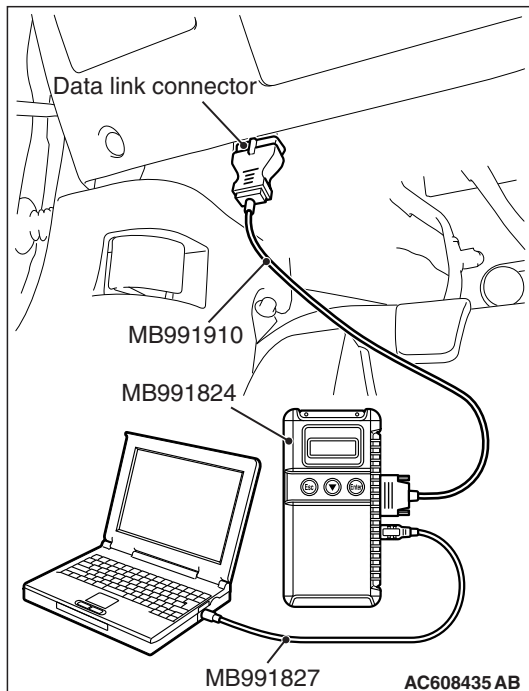

STEP 2. Recheck for diagnostic trouble code.

Recheck if the DTC is set.

- (1) Erase the DTC.
- (2) Turn the ignition switch to "ON" position.
- (3) Check if the DTC is set.

Q: Is the DTC set?

YES : Go to Step 3.

NO : It can be assumed that this malfunction is intermittent. Refer to GROUP 00, How to Use Troubleshooting/Inspection Service Points –How to Cope with Intermittent Malfunctions P.00-15.

STEP 3. Check A/C control panel connector C-123 and A/C-ECU connector C-22 for loose, corroded or damaged terminals, or terminals pushed back in the connector.

Q: Are A/C control panel connector C-123 and A/C-ECU connector C-22 in good condition?

YES : Go to Step 4.

NO : Repair or replace the connector. Refer to GROUP 00E, Harness Connector Inspection [P.00E-2](#).

STEP 4. Check the wiring harness between A/C-ECU connector C-22 (terminal 9) and A/C control panel connector C-123 (terminal 9).

- Check the A/C control panel signal line and ground line for open and short circuit.

Q: Is the wiring harness between A/C-ECU connector C-22 (terminal 9) and A/C control panel connector C-123 (terminal 9) in good condition?

YES : Go to Step 5.

NO : Repair the wiring harness.

STEP 5. Recheck for diagnostic trouble code.

Recheck if the DTC is set.

- (1) Erase the DTC.
- (2) Turn the ignition switch to "ON" position.
- (3) Check if the DTC is set.

Q: Is the DTC set?

YES : Replace the A/C control panel. Then go to Step 6.

NO : It can be assumed that this malfunction is intermittent. Refer to GROUP 00, How to Use Troubleshooting/Inspection Service Points –How to Cope with Intermittent Malfunctions [P.00-15](#).

STEP 6. Recheck for diagnostic trouble code.

Recheck if the DTC is set.

- (1) Erase the DTC.
- (2) Turn the ignition switch to "ON" position.
- (3) Check if the DTC is set.


Q: Is the DTC set?

YES : Replace the A/C-ECU.


NO : It can be assumed that this malfunction is intermittent. Refer to GROUP 00, How to Use Troubleshooting/Inspection Service Points –How to Cope with Intermittent Malfunctions [P.00-15](#).

DTC B223B: Control Panel Improperly Assembled <Vehicles without A/C>

A/C Control Panel Circuit

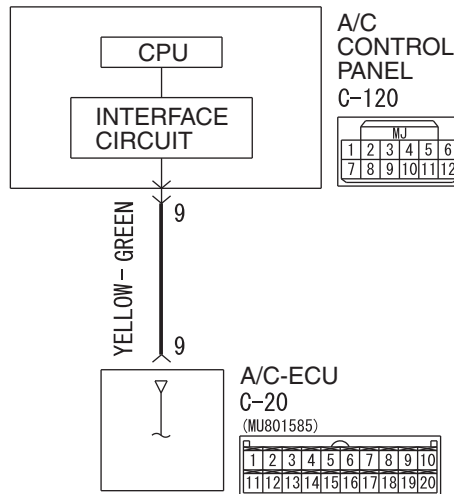

AC901527
 W8G55M001A

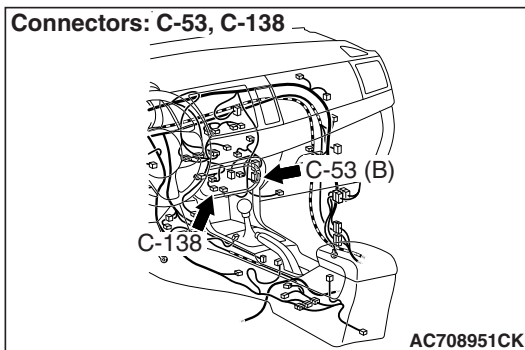

DTC SET CONDITION

DTC B223B will be set when the heater control panel sends an abnormal data, the heater control panel for RHD is improperly assembled, or the ETACS-ECU sends incorrect vehicle information (information for RHD is sent).

TECHNICAL DESCRIPTION (COMMENT)

Current trouble

- The heater control module, the heater control panel, or connector(s) or wiring between the two may be defective.

Past trouble

- If DTC B223B is stored as a past trouble, carry out diagnosis with particular emphasis on wiring and connector(s) between the heater control module and the heater control panel. If the connectors and wiring are normal, and obviously the ECU is the cause of the trouble, replace the ECU. If in doubt, do not replace the ECU.

TROUBLESHOOTING HINT

- Malfunction of connector.
- Malfunction of the harness.
- Malfunction of the heater control panel.
- Malfunction of the heater control module.

DIAGNOSIS**Required Special Tool:**

- MB991958: Scan Tool (M.U.T.-III Sub Assembly)
 - MB991824: Vehicle Communication Interface (V.C.I.)
 - MB991827: M.U.T.-III USB Cable
 - MB991910: M.U.T.-III Main Harness A

STEP 1. Using scan tool MB991958, diagnose the CAN bus line**⚠ CAUTION**


To prevent damage to scan tool MB991958, always turn the ignition switch to the "LOCK" (OFF) position before connecting or disconnecting scan tool MB991958.

- (1) Connect scan tool MB991958. Refer to "How to connect the Scan Tool (M.U.T.-III) P.55-7."
- (2) Turn the ignition switch to the "ON" position.
- (3) Diagnose the CAN bus line.
- (4) Turn the ignition switch to the "LOCK" (OFF) position.

Q: Is the CAN bus line found to be normal?

YES : Go to Step 2.

NO : Repair the CAN bus line. (Refer to GROUP 54C, Diagnosis P.54C-15).

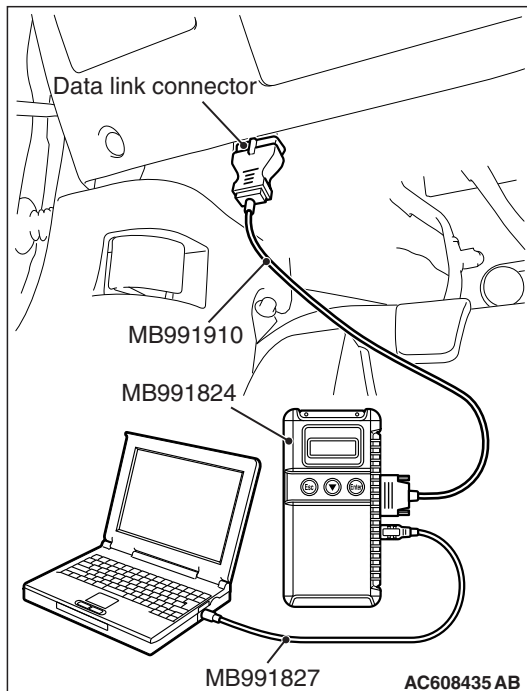**STEP 2. Recheck for diagnostic trouble code.**

Recheck if the DTC is set.

- (1) Erase the DTC.
- (2) Turn the ignition switch to "ON" position.
- (3) Check if the DTC is set.

Q: Is the DTC set?

YES : Go to Step 3.

NO : It can be assumed that this malfunction is intermittent. Refer to GROUP 00, How to Use Troubleshooting/Inspection Service Points –How to Cope with Intermittent Malfunctions P.00-15.

STEP 3. Check heater control panel connector C-138 and heater control module connector C-53 for loose, corroded or damaged terminals, or terminals pushed back in the connector.

Q: Are heater control panel connector C-138 and heater control module connector C-53 in good condition?

YES : Go to Step 4.

NO : Repair or replace the connector. Refer to GROUP 00E, Harness Connector Inspection [P.00E-2](#).

STEP 4. Check the wiring harness between heater control module connector C-53 (terminal 9) and heater control panel connector C-138 (terminal 9).

- Check the heater control panel signal line and ground line for open and short circuit.

Q: Is the wiring harness between heater control module connector C-53 (terminal 9) and heater control panel connector C-138 (terminal 9) in good condition?

YES : Go to Step 5.

NO : Repair the wiring harness.

STEP 5. Recheck for diagnostic trouble code.

Recheck if the DTC is set.

- (1) Erase the DTC.
- (2) Turn the ignition switch to "ON" position.
- (3) Check if the DTC is set.

Q: Is the DTC set?

YES : Replace the heater control panel. Then go to Step 6.

NO : It can be assumed that this malfunction is intermittent. Refer to GROUP 00, How to Use Troubleshooting/Inspection Service Points –How to Cope with Intermittent Malfunctions [P.00-15](#).

STEP 6. Recheck for diagnostic trouble code.

Recheck if the DTC is set.


- (1) Erase the DTC.
- (2) Turn the ignition switch to "ON" position.
- (3) Check if the DTC is set.

Q: Is the DTC set?


YES : Replace the heater control module.

NO : It can be assumed that this malfunction is intermittent. Refer to GROUP 00, How to Use Troubleshooting/Inspection Service Points –How to Cope with Intermittent Malfunctions [P.00-15](#).

DTC B223B: Control Panel Improperly Assembled

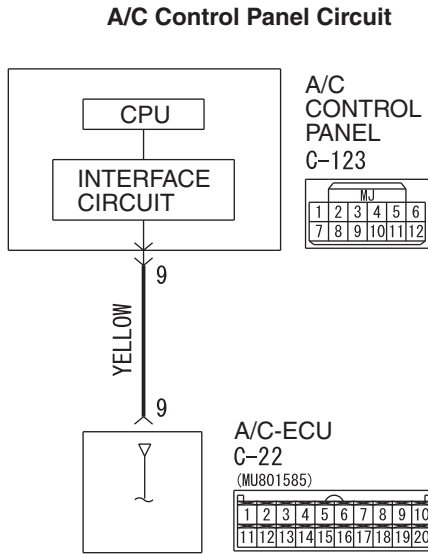

AC901388
 W8G55M001A

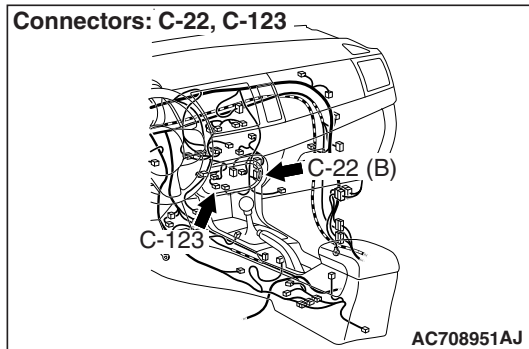

DTC SET CONDITION

DTC B223B will be set when the A/C control panel sends an abnormal data, the A/C control panel for RHD is improperly assembled, or the ETACS-ECU sends incorrect vehicle information (information for RHD is sent).

TECHNICAL DESCRIPTION (COMMENT)

Current trouble

- The A/C-ECU, the A/C control panel, or connector(s) or wiring between the two may be defective.

Past trouble

- If DTC B223B is stored as a past trouble, carry out diagnosis with particular emphasis on wiring and connector(s) between the A/C-ECU and the A/C control panel. If the connectors and wiring are normal, and obviously the ECU is the cause of the trouble, replace the ECU. If in doubt, do not replace the ECU.

TROUBLESHOOTING HINT

- Malfunction of connector.
- Malfunction of the harness.
- Malfunction of the A/C control panel.
- Malfunction of the A/C-ECU.

DIAGNOSIS

Required Special Tool:

- MB991958: Scan Tool (M.U.T.-III Sub Assembly)
 - MB991824: Vehicle Communication Interface (V.C.I.)
 - MB991827: M.U.T.-III USB Cable
 - MB991910: M.U.T.-III Main Harness A

STEP 1. Using scan tool MB991958, diagnose the CAN bus line

CAUTION


To prevent damage to scan tool MB991958, always turn the ignition switch to the "LOCK" (OFF) position before connecting or disconnecting scan tool MB991958.

- (1) Connect scan tool MB991958. Refer to "How to connect the Scan Tool (M.U.T.-III) P.55-7."
- (2) Turn the ignition switch to the "ON" position.
- (3) Diagnose the CAN bus line.
- (4) Turn the ignition switch to the "LOCK" (OFF) position.

Q: Is the CAN bus line found to be normal?

YES : Go to Step 2.

NO : Repair the CAN bus line. (Refer to GROUP 54C, Diagnosis P.54C-15).

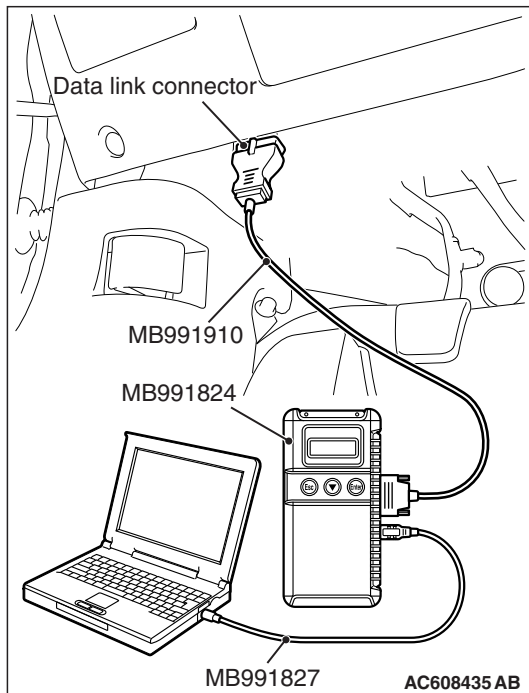

STEP 2. Recheck for diagnostic trouble code.

Recheck if the DTC is set.

- (1) Erase the DTC.
- (2) Turn the ignition switch to "ON" position.
- (3) Check if the DTC is set.

Q: Is the DTC set?

YES : Go to Step 3.

NO : It can be assumed that this malfunction is intermittent. Refer to GROUP 00, How to Use Troubleshooting/Inspection Service Points –How to Cope with Intermittent Malfunctions P.00-15.

STEP 3. Check A/C control panel connector C-123 and A/C-ECU connector C-22 for loose, corroded or damaged terminals, or terminals pushed back in the connector.

Q: Are A/C control panel connector C-123 and A/C-ECU connector C-22 in good condition?

YES : Go to Step 4.

NO : Repair or replace the connector. Refer to GROUP 00E, Harness Connector Inspection [P.00E-2](#).

STEP 4. Check the wiring harness between A/C-ECU connector C-22 (terminal 9) and A/C control panel connector C-123 (terminal 9).

- Check the AC control panel signal line and ground line for open and short circuit.

Q: Is the wiring harness between A/C-ECU connector C-22 (terminal 9) and A/C control panel connector C-123 (terminal 9) in good condition?

YES : Go to Step 5.

NO : Repair the wiring harness.

STEP 5. Recheck for diagnostic trouble code.

Recheck if the DTC is set.

- (1) Erase the DTC.
- (2) Turn the ignition switch to "ON" position.
- (3) Check if the DTC is set.

Q: Is the DTC set?

YES : Replace the A/C control panel. Then go to Step 6.

NO : It can be assumed that this malfunction is intermittent. Refer to GROUP 00, How to Use Troubleshooting/Inspection Service Points –How to Cope with Intermittent Malfunctions [P.00-15](#).

STEP 6. Recheck for diagnostic trouble code.

Recheck if the DTC is set.

- (1) Erase the DTC.
- (2) Turn the ignition switch to "ON" position.
- (3) Check if the DTC is set.

Q: Is the DTC set?

YES : Replace the A/C-ECU.

NO : It can be assumed that this malfunction is intermittent. Refer to GROUP 00, How to Use Troubleshooting/Inspection Service Points –How to Cope with Intermittent Malfunctions [P.00-15](#).

DTC U1415: Coding Not Completed

CAUTION

If DTC U1415 is set in the A/C-ECU, diagnose the CAN main bus line.

CAUTION

Whenever the ECU is replaced, ensure that the communication circuit is normal.

TROUBLE JUDGMENT

The A/C-ECU receives the vehicle information signals from the ETACS-ECU via the CAN bus lines. If incorrect global coding data is received or coding data cannot be received with the ignition switch turned ON when the coding confirmation is completed, diagnostic trouble code U1415 is stored.

TROUBLESHOOTING HINTS

- Malfunction of the ETACS-ECU
- Malfunction of the A/C-ECU
- Damaged harness wires and connectors

DIAGNOSIS

Required Special Tools:

- MB991223: Harness Set
- MB992006: Extra Fine Probe
- MB991958: Scan Tool (M.U.T.-III Sub Assembly)
 - MB991824: V.C.I.
 - MB991827: M.U.T.-III USB Cable
 - MB991910: M.U.T.-III Main Harness A

STEP 1. Using scan tool MB991958, diagnose the CAN bus line

CAUTION


To prevent damage to scan tool MB991958, always turn the ignition switch to the "LOCK" (OFF) position before connecting or disconnecting scan tool MB991958.

- (1) Connect scan tool MB991958. Refer to "How to connect the Scan Tool (M.U.T.-III) P.55-7."
- (2) Turn the ignition switch to the "ON" position.
- (3) Diagnose the CAN bus line.
- (4) Turn the ignition switch to the "LOCK" (OFF) position.

Q: Is the CAN bus line found to be normal?

YES : Go to Step 2.

NO : Repair the CAN bus line. (Refer to GROUP 54C, Diagnosis P.54C-15).

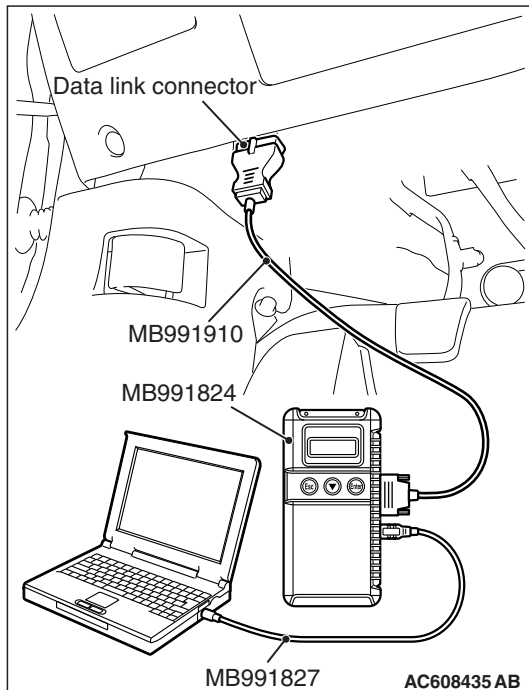

STEP 2. Using scan tool MB991958 read the ETACS-ECU diagnostic trouble code.

Check whether an ETACS DTC.

- (1) Turn the ignition switch to the "ON" position.
- (2) Check for the DTC related to the ETACS-ECU.
- (3) Turn the ignition switch to the "LOCK" (OFF) position.

Q: Is the DTC set?

YES : Diagnose the ETACS-ECU (Refer to GROUP 54A, Diagnostic Trouble Code [P.54A-646](#)).

NO : Go to Step 3.

STEP 3. Using scan tool MB991958, check for any diagnostic trouble code.

Check if a DTC, which relates to CAN communication-linked systems below, is set.

- WCM <vehicles with WCM>
B2204: Coding data unmatched
- KOS <vehicles with KOS>
B2204: Coding data unmatched

- (1) Turn the ignition switch to the "ON" position.
- (2) Check for a DTC related to the relevant system.
- (3) Turn the ignition switch to the "LOCK" (OFF) position.

Q: Is the DTC set?

YES : Go to Step 5.

NO : Go to Step 4.

STEP 4. Recheck for diagnostic trouble code.

Check again if the DTC is set.

- (1) Turn the ignition switch to the "ON" position.
- (2) Check if the DTC is set.
- (3) Turn the ignition switch to the "LOCK" (OFF) position.

Q: Is the DTC set?

YES : Replace the ETACS-ECU. On completion, check that the DTC is not reset.

NO : A poor connection, open circuit or other intermittent malfunction is present in the lines between the ETACS-ECU and the A/C-ECU (Refer to GROUP 00E, Harness Connector Inspection [P.00E-2](#)).

STEP 5. Recheck for diagnostic trouble code.

Check again if the DTC is set.

- (1) Turn the ignition switch to the "ON" position.
- (2) Check if the DTC is set.
- (3) Turn the ignition switch to the "LOCK" (OFF) position.

Q: Is the DTC set?

YES : Replace the A/C-ECU. On completion, check that the DTC is not reset.

NO : A poor connection, open circuit or other intermittent malfunction is present in the lines between the ETACS-ECU and the A/C-ECU (Refer to GROUP 00E, Harness Connector Inspection [P.00E-2](#)).

DTC U0019: Bus Off (CAN1)

⚠ CAUTION

If DTC U0019 is set in the A/C-ECU, diagnose the CAN main bus line.

⚠ CAUTION

Whenever the ECU is replaced, ensure that the communication circuit is normal.

TROUBLE JUDGMENT

DTC U0019 will be stored when the A/C-ECU ceases CAN communication (bus off) and then resumes the communication when the ignition switch is turned to the "LOCK" (OFF) position.

TECHNICAL DESCRIPTION (COMMENT)

The wiring harness wire or connectors may have loose, corroded, or damaged terminals, or terminals pushed back in the connector, or the A/C-ECU may be defective.

TROUBLESHOOTING HINTS

- Defective connector(s) or wiring harness
- Malfunction of the A/C-ECU

DIAGNOSIS

Required Special Tools:

- MB991223: Harness Set
- MB992006: Extra Fine Probe
- MB991958: Scan Tool (M.U.T.-III Sub Assembly)
 - MB991824: V.C.I.
 - MB991827: M.U.T.-III USB Cable
 - MB991910: M.U.T.-III Main Harness A

STEP 1. Using scan tool MB991958, diagnose the CAN bus line

⚠ CAUTION


To prevent damage to scan tool MB991958, always turn the ignition switch to the "LOCK" (OFF) position before connecting or disconnecting scan tool MB991958.

- (1) Connect scan tool MB991958. Refer to "How to connect the Scan Tool (M.U.T.-III) P.55-7."
- (2) Turn the ignition switch to the "ON" position.
- (3) Diagnose the CAN bus line.
- (4) Turn the ignition switch to the "LOCK" (OFF) position.

Q: Is the CAN bus line found to be normal?

YES : Go to Step 2.

NO : Repair the CAN bus line. (Refer to GROUP 54C, Diagnosis P.54C-15).

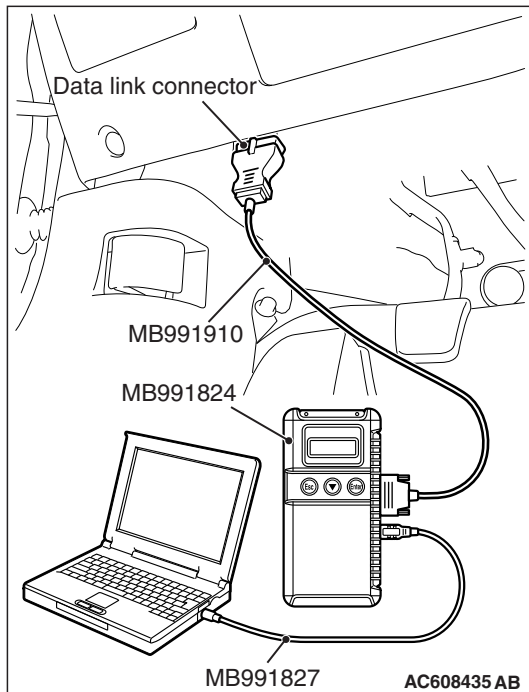

STEP 2. Recheck for diagnostic trouble code.

Check again if the DTC is set.

- (1) Connect scan tool MB991958 to the data link connector
- (2) Turn the ignition switch to the "ON" position.
- (3) Check if the DTC is set.
- (4) Turn the ignition switch to the "LOCK" (OFF) position.

Q: Is the DTC set?

YES : Replace the A/C-ECU. On completion, check that the DTC is not reset.

NO : There is an intermittent malfunction such as poor engaged connector(s) or open circuit (Refer to GROUP 00, How to Use Troubleshooting/Inspection Service Points –How to Cope with Intermittent Malfunctions [P.00-15.](#))

DTC U0141: ETACS-ECU Time-out**⚠ CAUTION**

If DTC U0141 is set in the A/C-ECU, diagnose the CAN main bus line.

⚠ CAUTION

Whenever the ECU is replaced, ensure that the communication circuit is normal.

TROUBLE JUDGMENT

The A/C-ECU receives air conditioning operation-related signals from the ETACS-ECU via the CAN bus lines. If the ECU cannot receive any of the air conditioning control-related signals from the ETACS-ECU, the diagnostic trouble code U0141 is stored.

TECHNICAL DESCRIPTION (COMMENT)**Current trouble**

- Connector(s) or wiring harness in the CAN bus lines between the ETACS-ECU and the A/C-ECU, the power supply system to the ETACS-ECU, the ETACS-ECU itself, or the A/C-ECU may be defective.

Past trouble

- If DTC U0141 is stored as a past trouble, carry out diagnosis with particular emphasis on wiring and connector(s) in the CAN bus line between the A/C-ECU and the ETACS-ECU, and the power supply system to the ETACS-ECU. If the connectors and wiring are normal, and obviously the ECU is the cause of the trouble, replace the ECU. If in doubt, do not replace the ECU.

NOTE: For a past trouble, you cannot find it by the scan tool CAN bus diagnostics even if there is a failure in CAN bus lines. In this case, refer to GROUP 00, How to Use Troubleshooting/Inspection Service Points –How to Cope with Intermittent Malfunctions [P.00-15](#)) and check the CAN bus lines. You can narrow down the possible cause of the trouble by referring to the DTC, which is set regarding the CAN communication-linked ECUs (Refer to GROUP 54C, Explanation about the scan tool CAN bus diagnostics [P.54C-15](#)).

TROUBLESHOOTING HINTS

- Malfunction of the A/C-ECU
- Malfunction of the ETACS-ECU
- Damaged harness wires and connectors

DIAGNOSIS

Required Special Tools:

- MB991223: Harness Set
- MB992006: Extra Fine Probe
- MB991958: Scan Tool (M.U.T.-III Sub Assembly)
 - MB991824: V.C.I.
 - MB991827: M.U.T.-III USB Cable
 - MB991910: M.U.T.-III Main Harness A

STEP 1. Using scan tool MB991958, diagnose the CAN bus line

CAUTION


To prevent damage to scan tool MB991958, always turn the ignition switch to the "LOCK" (OFF) position before connecting or disconnecting scan tool MB991958.

- (1) Connect scan tool MB991958. Refer to "How to connect the Scan Tool (M.U.T.-III) P.55-7."
- (2) Turn the ignition switch to the "ON" position.
- (3) Diagnose the CAN bus line.
- (4) Turn the ignition switch to the "LOCK" (OFF) position.

Q: Is the CAN bus line found to be normal?

YES : Go to Step 2.

NO : Repair the CAN bus line. (Refer to GROUP 54C, Diagnosis P.54C-15).

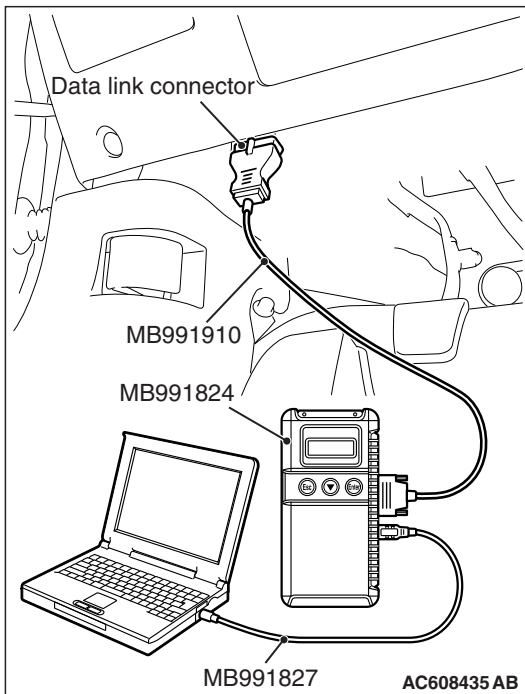

STEP 2. Using scan tool MB991958 read the ETACS-ECU diagnostic trouble code.

Check whether an ETACS-ECU DTCs are set or not.

- (1) Turn the ignition switch to the "ON" position.
- (2) Check for ETACS-ECU DTCs.
- (3) Turn the ignition switch to the "LOCK" (OFF) position.

Q: Is the DTC set?

YES : Diagnose the ETACS-ECU (Refer to GROUP 54A, Diagnostic Trouble Code P.54A-646).

NO : Go to Step 3.

STEP 3. Using scan tool MB991958, check for any diagnostic trouble code.

Check if a DTC, which relates to CAN communication-linked systems below, is set.

- Combination meter
DTC indicating a time-out error related to the engine or automatic transaxle control system
- (1) Turn the ignition switch to the "ON" position.
 - (2) Check for a DTC related to the relevant system.
 - (3) Turn the ignition switch to the "LOCK" (OFF) position.

Q: Is the DTC set?

YES : Go to Step 4.

NO : Go to Step 5.

STEP 4. Recheck for diagnostic trouble code.

Check again if the DTC is set.

- (1) Turn the ignition switch to the "ON" position.
- (2) Check if the DTC is set.
- (3) Turn the ignition switch to the "LOCK" (OFF) position.

Q: Is the DTC set?

YES : Replace the ETACS-ECU. On completion, check that the DTC is not reset.

NO : There is an intermittent malfunction such as poor engaged connector(s) or open circuit (Refer to GROUP 00, How to Use Troubleshooting/Inspection Service Points –How to Cope with Intermittent Malfunctions [P.00-15.](#))

STEP 5. Recheck for diagnostic trouble code.

Check again if the DTC is set.

- (1) Turn the ignition switch to the "ON" position.
- (2) Check if the DTC is set.
- (3) Turn the ignition switch to the "LOCK" (OFF) position.

Q: Is the DTC set?

YES : Replace the A/C-ECU. On completion, check that the DTC is not reset.

NO : There is an intermittent malfunction such as poor engaged connector(s) or open circuit (Refer to GROUP 00, How to Use Troubleshooting/Inspection Service Points –How to Cope with Intermittent Malfunctions [P.00-15.](#))

DTC U0151: SRS-ECU Time-out

⚠ CAUTION

If DTC U0151 is set in the A/C-ECU, diagnose the CAN main bus line.

⚠ CAUTION

Whenever the ECU is replaced, ensure that the communication circuit is normal.

TROUBLE JUDGMENT

The A/C-ECU receives air conditioning operation-related signals from the SRS-ECU via the CAN bus lines. If any of the air conditioning control-related signals from the SRS-ECU cannot be received, the diagnostic trouble code U0151 is stored.

TECHNICAL DESCRIPTION (COMMENT)

Current trouble

- Connector(s) or wiring harness in the CAN bus lines between the SRS-ECU and the A/C-ECU, the power supply system to the SRS-ECU, the SRS-ECU itself, or the A/C-ECU may be defective.

Past trouble

- If DTC U0151 is stored as a past trouble, carry out diagnosis with particular emphasis on wiring and connector(s) in the CAN bus line between the A/C-ECU and the SRS-ECU, and the power supply system to the SRS-ECU. If the connectors and wiring are normal, and obviously the ECU is the cause of the trouble, replace the ECU. If in doubt, do not replace the ECU.

NOTE: For a past trouble, you cannot find it by the scan tool CAN bus diagnostics even if there is a failure in CAN bus lines. In this case, refer to GROUP 00, How to Use Troubleshooting/Inspection Service Points –How to Cope with Intermittent Malfunctions P.00-15) and check the CAN bus lines. You can narrow down the possible cause of the trouble by referring to the DTC, which is set regarding the CAN communication-linked ECUs (Refer to GROUP 54C, Explanation about the scan tool CAN bus diagnostics P.54C-15).


TROUBLESHOOTING HINTS

- Malfunction of the SRS-ECU
- Malfunction of the A/C-ECU
- Damaged harness wires and connectors

DIAGNOSIS

Required Special Tools:

- MB991223: Harness Set
- MB992006: Extra Fine Probe
- MB991958: Scan Tool (M.U.T.-III Sub Assembly)
 - MB991824: V.C.I.
 - MB991827: M.U.T.-III USB Cable
 - MB991910: M.U.T.-III Main Harness A

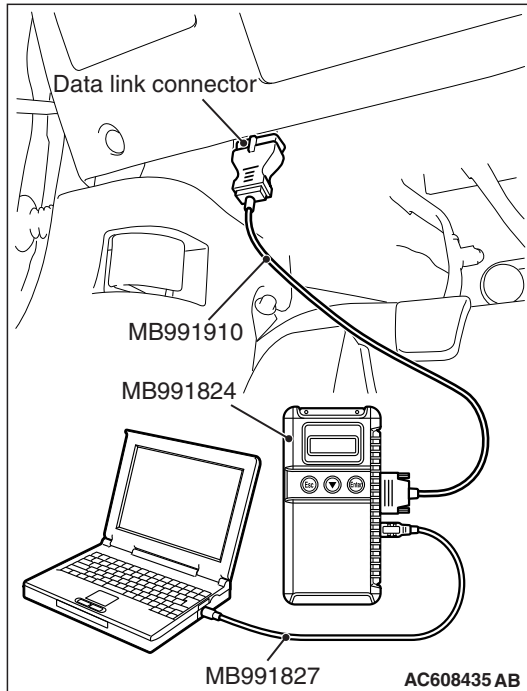

STEP 1. Using scan tool MB991958, diagnose the CAN bus line

⚠ CAUTION

To prevent damage to scan tool MB991958, always turn the ignition switch to the "LOCK" (OFF) position before connecting or disconnecting scan tool MB991958.

- (1) Connect scan tool MB991958. Refer to "How to connect the Scan Tool (M.U.T.-III) P.55-7."
- (2) Turn the ignition switch to the "ON" position.
- (3) Diagnose the CAN bus line.
- (4) Turn the ignition switch to the "LOCK" (OFF) position.

Q: Is the CAN bus line found to be normal?

YES : Go to Step 2.

NO : Repair the CAN bus line. (Refer to GROUP 54C, Diagnosis P.54C-15).

STEP 2. Using scan tool MB991958 read the SRS-ECU diagnostic trouble code.

Check whether an SRS-ECU DTCs are set or not.

- (1) Turn the ignition switch to the "ON" position.
- (2) Check for SRS-ECU DTCs.
- (3) Turn the ignition switch to the "LOCK" (OFF) position.

Q: Is the DTC set?

YES : Diagnose the SRS-ECU (Refer to GROUP 52B, Diagnostic Trouble Code P.52B-30).

NO : Go to Step 3.

STEP 3. Using scan tool MB991958, check for any diagnostic trouble code.

Check if a DTC, which relates to CAN communication-linked systems below, is set.

- ETACS-ECU
DTC indicating a time-out error related to the SRS-ECU system

- (1) Turn the ignition switch to the "ON" position.
- (2) Check for a DTC related to the relevant system.
- (3) Turn the ignition switch to the "LOCK" (OFF) position.

Q: Is the DTC set?

YES : Go to Step 4.

NO : Go to Step 5.

STEP 4. Recheck for diagnostic trouble code.

Check again if the DTC is set.

- (1) Turn the ignition switch to the "ON" position.
- (2) Check if the DTC is set.
- (3) Turn the ignition switch to the "LOCK" (OFF) position.

Q: Is the DTC set?

YES : Replace the SRS-ECU. On completion, check that the DTC is not reset.

NO : There is an intermittent malfunction such as poor engaged connector(s) or open circuit (Refer to GROUP 00, How to Use Troubleshooting/Inspection Service Points –How to Cope with Intermittent Malfunctions [P.00-15.](#))

STEP 5. Recheck for diagnostic trouble code.

Check again if the DTC is set.

- (1) Turn the ignition switch to the "ON" position.
- (2) Check if the DTC is set.
- (3) Turn the ignition switch to the "LOCK" (OFF) position.

Q: Is the DTC set?

YES : Replace the A/C-ECU. On completion, check that the DTC is not reset.

NO : There is an intermittent malfunction such as poor engaged connector(s) or open circuit (Refer to GROUP 00, How to Use Troubleshooting/Inspection Service Points –How to Cope with Intermittent Malfunctions [P.00-15.](#))

DTC U0154: Occupant classification ECU time-out

 **CAUTION**

If DTC U0154 is set in the A/C-ECU, diagnose the CAN main bus line.

 **CAUTION**

Whenever the ECU is replaced, ensure that the communication circuit is normal.

TROUBLE JUDGMENT

The A/C-ECU receives air conditioning operation-related signals from the SRS-ECU via the CAN bus lines. If any of the air conditioning control-related signals from the SRS-ECU cannot be received, the diagnostic trouble code U0154 is stored.

TECHNICAL DESCRIPTION (COMMENT)

Current trouble

- Connector(s) or wiring harness in the CAN bus lines between the SRS-ECU and the A/C-ECU, the power supply system to the SRS-ECU, the SRS-ECU itself, or the A/C-ECU may be defective.

Past trouble

- If DTC U0151 is stored as a past trouble, carry out diagnosis with particular emphasis on wiring and connector(s) in the CAN bus line between the A/C-ECU and the SRS-ECU, and the power supply system to the SRS-ECU. If the connectors and wiring are normal, and obviously the ECU is the cause of the trouble, replace the ECU. If in doubt, do not replace the ECU.

NOTE: For a past trouble, you cannot find it by the scan tool CAN bus diagnostics even if there is a failure in CAN bus lines. In this case, refer to GROUP 00, How to Use Troubleshooting/Inspection Service Points –How to Cope with Intermittent Malfunctions P.00-15) and check the CAN bus lines. You can narrow down the possible

cause of the trouble by referring to the DTC, which is set regarding the CAN communication-linked ECUs (Refer to GROUP 54C, Explanation about the scan tool CAN bus diagnostics P.54C-15).

TROUBLESHOOTING HINTS

- Malfunction of the SRS-ECU
- Malfunction of the A/C-ECU
- Damaged harness wires and connectors

DIAGNOSIS

Required Special Tools:

- MB991223: Harness Set
- MB992006: Extra Fine Probe
- MB991958: Scan Tool (M.U.T.-III Sub Assembly)
 - MB991824: V.C.I.
 - MB991827: M.U.T.-III USB Cable
 - MB991910: M.U.T.-III Main Harness A

STEP 1. Using scan tool MB991958, diagnose the CAN bus line

CAUTION


To prevent damage to scan tool MB991958, always turn the ignition switch to the "LOCK" (OFF) position before connecting or disconnecting scan tool MB991958.

- (1) Connect scan tool MB991958. Refer to "How to connect the Scan Tool (M.U.T.-III) P.55-7."
- (2) Turn the ignition switch to the "ON" position.
- (3) Diagnose the CAN bus line.
- (4) Turn the ignition switch to the "LOCK" (OFF) position.

Q: Is the CAN bus line found to be normal?

YES : Go to Step 2.

NO : Repair the CAN bus line. (Refer to GROUP 54C, Diagnosis P.54C-15).

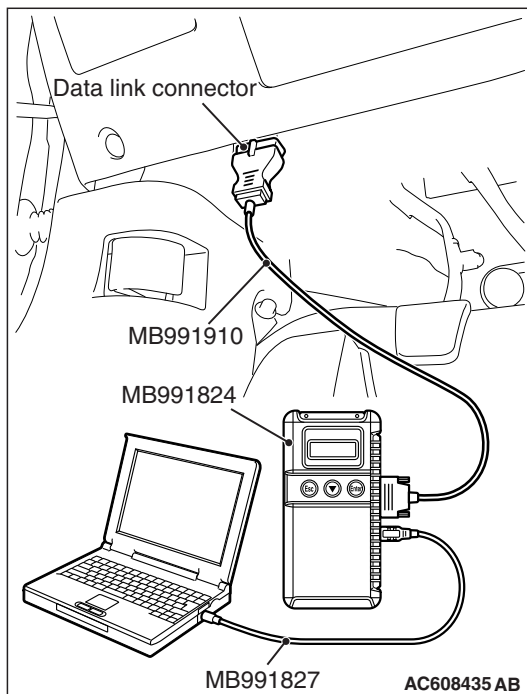

STEP 2. Using scan tool MB991958 read the SRS-ECU diagnostic trouble code.

Check whether an SRS-ECU DTCs are set or not.

- (1) Turn the ignition switch to the "ON" position.
- (2) Check for SRS-ECU DTCs.
- (3) Turn the ignition switch to the "LOCK" (OFF) position.

Q: Is the DTC set?

YES : Diagnose the SRS-ECU (Refer to GROUP 52B, Diagnostic Trouble Code [P.52B-316](#)).

NO : Go to Step 3.

STEP 3. Using scan tool MB991958, check for any diagnostic trouble code.

Check if a DTC, which relates to CAN communication-linked systems below, is set.

- ETACS-ECU
DTC indicating a time-out error related to the SRS-ECU system

- (1) Turn the ignition switch to the "ON" position.
- (2) Check for a DTC related to the relevant system.
- (3) Turn the ignition switch to the "LOCK" (OFF) position.

Q: Is the DTC set?

YES : Go to Step 4.

NO : Go to Step 5.

STEP 4. Recheck for diagnostic trouble code.

Check again if the DTC is set.

- (1) Turn the ignition switch to the "ON" position.
- (2) Check if the DTC is set.
- (3) Turn the ignition switch to the "LOCK" (OFF) position.

Q: Is the DTC set?

YES : Replace the SRS-ECU. On completion, check that the DTC is not reset.

NO : There is an intermittent malfunction such as poor engaged connector(s) or open circuit (Refer to GROUP 00, How to Use Troubleshooting/Inspection Service Points –How to Cope with Intermittent Malfunctions [P.00-15.](#))

STEP 5. Recheck for diagnostic trouble code.

Check again if the DTC is set.

- (1) Turn the ignition switch to the "ON" position.
- (2) Check if the DTC is set.
- (3) Turn the ignition switch to the "LOCK" (OFF) position.

Q: Is the DTC set?

YES : Replace the A/C-ECU. On completion, check that the DTC is not reset.

NO : There is an intermittent malfunction such as poor engaged connector(s) or open circuit (Refer to GROUP 00, How to Use Troubleshooting/Inspection Service Points –How to Cope with Intermittent Malfunctions P.00-15.)

DTC U0155: Combination meter Time-out**CAUTION**

If DTC U0155 is set in the A/C-ECU, diagnose the CAN main bus line.

CAUTION

Whenever the ECU is replaced, ensure that the communication circuit is normal.

TROUBLE JUDGMENT

The A/C-ECU receives the air conditioning control-related signals from the combination meter via the CAN bus lines. If any of the air conditioning control-related signals from the combination meter cannot be received, the diagnostic trouble code U0155 is stored.

TECHNICAL DESCRIPTION (COMMENT)**Current trouble**

- Connector(s) or wiring harness in the CAN bus lines between the combination meter and the A/C-ECU, the power supply system to the combination meter, the combination meter itself, or the A/C-ECU may be defective.

Past trouble

- If DTC U0155 is stored as a past trouble, carry out diagnosis with particular emphasis on wiring and connector(s) in the CAN bus line between the A/C-ECU and the combination meter, and the power supply system to the combination meter. If the connectors and wiring are normal, and obviously the ECU is the cause of the trouble, replace the ECU. If in doubt, do not replace the ECU.


NOTE: For a past trouble, you cannot find it by the scan tool CAN bus diagnostics even if there is a failure in CAN bus lines. In this case, refer to GROUP 00, How to Use Troubleshooting/Inspection Service Points –How to Cope with Intermittent Malfunctions P.00-15) and check the CAN bus lines. You can narrow down the possible cause of the trouble by referring to the DTC, which is set regarding the CAN communication-linked ECUs (Refer to GROUP 54C, Explanation about the scan tool CAN bus diagnostics P.54C-9).

TROUBLESHOOTING HINTS

- Malfunction of the combination meter
- Malfunction of the A/C-ECU
- Damaged harness wires and connectors

DIAGNOSIS**Required Special Tools:**

- MB991223: Harness Set
- MB992006: Extra Fine Probe
- MB991958: Scan Tool (M.U.T.-III Sub Assembly)
 - MB991824: V.C.I.
 - MB991827: M.U.T.-III USB Cable
 - MB991910: M.U.T.-III Main Harness A

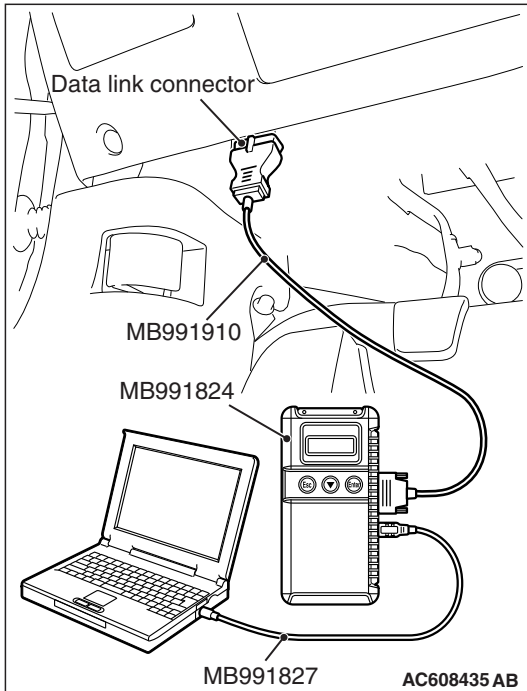

STEP 1. Using scan tool MB991958, diagnose the CAN bus line

⚠ CAUTION

To prevent damage to scan tool MB991958, always turn the ignition switch to the "LOCK" (OFF) position before connecting or disconnecting scan tool MB991958.

- (1) Connect scan tool MB991958. Refer to "How to connect the Scan Tool (M.U.T.-III) P.55-7."
- (2) Turn the ignition switch to the "ON" position.
- (3) Diagnose the CAN bus line.
- (4) Turn the ignition switch to the "LOCK" (OFF) position.

Q: Is the CAN bus line found to be normal?

YES : Go to Step 2.

NO : Repair the CAN bus line (Refer to GROUP 54C, Diagnosis P.54C-15).

STEP 2. Using scan tool MB991958 read the combination meter diagnostic trouble code.

Check whether a combination meter DTCs are set or not.

- (1) Turn the ignition switch to the "ON" position.
- (2) Check for combination meter DTCs.
- (3) Turn the ignition switch to the "LOCK" (OFF) position.

Q: Is the DTC set?

YES : Diagnose the combination meter (Refer to GROUP 54A, Diagnostic Trouble Code P.54A-32).

NO : Go to Step 3.

STEP 3. Using scan tool MB991958, check for any diagnostic trouble code.

Check if a DTC, which relates to CAN communication-linked systems below, is set.

- ETACS-ECU
DTC indicating a time-out error related to the combination meter system

- (1) Turn the ignition switch to the "ON" position.
- (2) Check for a DTC related to the relevant system.
- (3) Turn the ignition switch to the "LOCK" (OFF) position.

Q: Is the DTC set?

YES : Go to Step 4.

NO : Go to Step 5.

STEP 4. Recheck for diagnostic trouble code.

Check again if the DTC is set.

- (1) Turn the ignition switch to the "ON" position.
- (2) Check if the DTC is set.
- (3) Turn the ignition switch to the "LOCK" (OFF) position.

Q: Is the DTC set?

YES : Replace the combination meter. On completion, check that the DTC is not reset.

NO : There is an intermittent malfunction such as poor engaged connector(s) or open circuit (Refer to GROUP 00, How to Use Troubleshooting/Inspection Service Points –How to Cope with Intermittent Malfunctions [P.00-15.](#))

STEP 5. Recheck for diagnostic trouble code.

Check again if the DTC is set.

- (1) Turn the ignition switch to the "ON" position.
- (2) Check if the DTC is set.
- (3) Turn the ignition switch to the "LOCK" (OFF) position.

Q: Is the DTC set?

YES : Replace the A/C-ECU. On completion, check that the DTC is not reset.

NO : There is an intermittent malfunction such as poor engaged connector(s) or open circuit (Refer to GROUP 00, How to Use Troubleshooting/Inspection Service Points –How to Cope with Intermittent Malfunctions [P.00-15.](#))

DTC U0168: WCM Time-out**⚠ CAUTION**

If DTC U0168 is set in the A/C-ECU, diagnose the CAN main bus line.

⚠ CAUTION

Whenever the ECU is replaced, ensure that the communication circuit is normal.

TROUBLE JUDGMENT

The A/C-ECU receives the air conditioning control-related signals from the WCM-ECU via the CAN bus lines. If any of the air conditioning control-related signals from the WCM-ECU cannot be received, diagnostic trouble code U0168 is stored.

TECHNICAL DESCRIPTION (COMMENT)**Current trouble**

- Connector(s) or wiring harness in the CAN bus lines between the WCM-ECU and the A/C-ECU, the power supply system to the WCM-ECU, the WCM-ECU itself, or the A/C-ECU may be defective.

Past trouble

- If DTC U0168 is stored as a past trouble, carry out diagnosis with particular emphasis on wiring and connector(s) in the CAN bus line between the A/C-ECU and the WCM-ECU, and the power supply system to the WCM-ECU. If the connectors and wiring are normal, and obviously the ECU is the cause of the trouble, replace the ECU. If in doubt, do not replace the ECU.

NOTE: For a past trouble, you cannot find it by the scan tool CAN bus diagnostics even if there is a failure in CAN bus lines. In this case, refer to GROUP 00, How to Use Troubleshooting/Inspection Service Points –How to Cope with Intermittent Malfunctions P.00-15) and check the CAN bus lines. You can narrow down the possible

cause of the trouble by referring to the DTC, which is set regarding the CAN communication-linked ECUs (Refer to GROUP 54C, Explanation about the scan tool CAN bus diagnostics P.54C-9).

TROUBLESHOOTING HINTS

- Malfunction of the WCM-ECU
- Malfunction of the A/C-ECU
- Damaged harness wires and connectors

DIAGNOSIS

Required Special Tools:

- MB991223: Harness Set
- MB992006: Extra Fine Probe
- MB991958: Scan Tool (M.U.T.-III Sub Assembly)
 - MB991824: V.C.I.
 - MB991827: M.U.T.-III USB Cable
 - MB991910: M.U.T.-III Main Harness A

STEP 1. Using scan tool MB991958, diagnose the CAN bus line

CAUTION


To prevent damage to scan tool MB991958, always turn the ignition switch to the "LOCK" (OFF) position before connecting or disconnecting scan tool MB991958.

- (1) Connect scan tool MB991958. Refer to "How to connect the Scan Tool (M.U.T.-III) P.55-7."
- (2) Turn the ignition switch to the "ON" position.
- (3) Diagnose the CAN bus line.
- (4) Turn the ignition switch to the "LOCK" (OFF) position.

Q: Is the CAN bus line found to be normal?

YES : Go to Step 2.

NO : Repair the CAN bus line (Refer to GROUP 54C, Diagnosis P.54C-15).

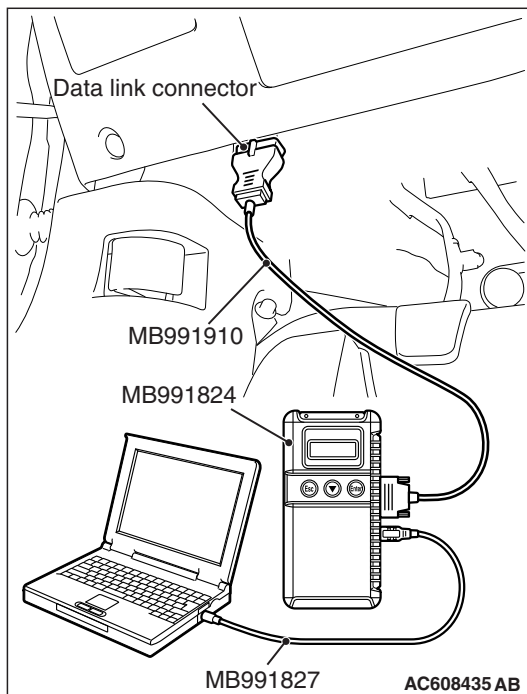

STEP 2. Using scan tool MB991958 read the WCM-ECU diagnostic trouble code.

Check whether an WCM-ECU DTCs are set or not.

- (1) Turn the ignition switch to the "ON" position.
- (2) Check for WCM-ECU DTCs.
- (3) Turn the ignition switch to the "LOCK" (OFF) position.

Q: Is the DTC set?

YES : Go to Step 3.

NO : Diagnose the WCM-ECU (Refer to GROUP 42C, Diagnostic Trouble Code [P.42C-14](#)).

STEP 3. Using scan tool MB991958, check for any diagnostic trouble code.

Check if a DTC, which relates to CAN communication-linked systems below, is set.

- ETACS-ECU
DTC indicating a time-out error related to the WCM-ECU system

- (1) Turn the ignition switch to the "ON" position.
- (2) Check for a DTC related to the relevant system.
- (3) Turn the ignition switch to the "LOCK" (OFF) position.

Q: Is the DTC set?

YES : Go to Step 4.

NO : Go to Step 5.

STEP 4. Recheck for diagnostic trouble code.

Check again if the DTC is set.

- (1) Turn the ignition switch to the "ON" position.
- (2) Check if the DTC is set.
- (3) Turn the ignition switch to the "LOCK" (OFF) position.

Q: Is the DTC set?

YES : Replace the WCM-ECU. On completion, check that the DTC is not reset.

NO : There is an intermittent malfunction such as poor engaged connector(s) or open circuit (Refer to GROUP 00, How to Use Troubleshooting/Inspection Service Points –How to Cope with Intermittent Malfunctions [P.00-15](#).)

STEP 5. Recheck for diagnostic trouble code.

Check again if the DTC is set.

- (1) Turn the ignition switch to the "ON" position.
- (2) Check if the DTC is set.
- (3) Turn the ignition switch to the "LOCK" (OFF) position.

Q: Is the DTC set?

YES : Replace the A/C-ECU. On completion, check that the DTC is not reset.

NO : There is an intermittent malfunction such as poor engaged connector(s) or open circuit (Refer to GROUP 00, How to Use Troubleshooting/Inspection Service Points –How to Cope with Intermittent Malfunctions P.00-15.)

DTC U0184: Audio Time-out

CAUTION

If DTC U0184 is set in the A/C-ECU, diagnose the CAN main bus line.

CAUTION

Whenever the ECU is replaced, ensure that the communication circuit is normal.

TROUBLE JUDGMENT

The A/C-ECU receives air conditioning operation-related signals from the audio via the CAN bus lines. If any of the air conditioning control-related signals from the audio cannot be received, the diagnostic trouble code U0184 is stored.

TECHNICAL DESCRIPTION (COMMENT)

Current trouble

- Connector(s) or wiring harness in the CAN bus lines between the Audio and the A/C-ECU, the power supply system to the Audio, the Audio itself, or the A/C-ECU may be defective.

Past trouble

- If DTC U0184 is stored as a past trouble, carry out diagnosis with particular emphasis on wiring and connector(s) in the CAN bus line between the A/C-ECU and the Audio, and the power supply system to the Audio. If the connectors and wiring are normal, and obviously the ECU is the cause of the trouble, replace the ECU. If in doubt, do not replace the ECU.

NOTE: For a past trouble, you cannot find it by the scan tool CAN bus diagnostics even if there is a failure in CAN bus lines. In this case, refer to GROUP 00, How to Use Troubleshooting/Inspection Service Points –How to Cope with Intermittent Malfunctions P.00-15) and check the CAN bus lines. You can narrow down the possible cause of the trouble by referring to the DTC, which is set regarding the CAN communication-linked ECUs (Refer to GROUP 54C, Explanation about the scan tool CAN bus diagnostics P.54C-9).


TROUBLESHOOTING HINTS

- Malfunction of the Audio
- Malfunction of the A/C-ECU
- Damaged harness wires and connectors

DIAGNOSIS

Required Special Tools:

- MB991223: Harness Set
- MB992006: Extra Fine Probe
- MB991958: Scan Tool (M.U.T.-III Sub Assembly)
 - MB991824: V.C.I.
 - MB991827: M.U.T.-III USB Cable
 - MB991910: M.U.T.-III Main Harness A

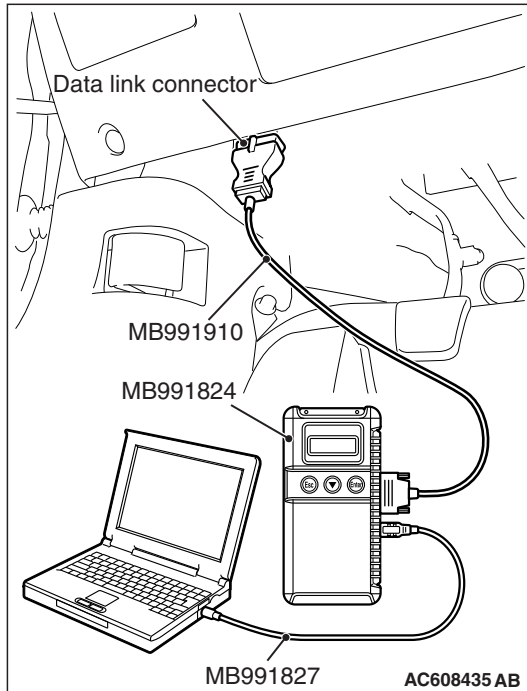

STEP 1. Using scan tool MB991958, diagnose the CAN bus line

⚠ CAUTION

To prevent damage to scan tool MB991958, always turn the ignition switch to the "LOCK" (OFF) position before connecting or disconnecting scan tool MB991958.

- (1) Connect scan tool MB991958. Refer to "How to connect the Scan Tool (M.U.T.-III) P.55-7."
- (2) Turn the ignition switch to the "ON" position.
- (3) Diagnose the CAN bus line.
- (4) Turn the ignition switch to the "LOCK" (OFF) position.

Q: Is the CAN bus line found to be normal?

YES : Go to Step 2.

NO : Repair the CAN bus line (Refer to GROUP 54C, Diagnosis P.54C-15).

STEP 2. Using scan tool MB991958 read the Audio diagnostic trouble code.

Check whether an audio DTCs are set or not.

- (1) Turn the ignition switch to the "ON" position.
- (2) Check for Audio DTCs.
- (3) Turn the ignition switch to the "LOCK" (OFF) position.

Q: Is the DTC set?

YES : Diagnose the Audio (Refer to GROUP 54A, Diagnostic Trouble Code P.54A-322).

NO : Go to Step 3.

STEP 3. Using scan tool MB991958, check for any diagnostic trouble code.

Check if a DTC, which relates to CAN communication-linked systems below, is set.

- ETACS-ECU

DTC indicating a time-out error related to the Audio system

- (1) Turn the ignition switch to the "ON" position.
- (2) Check for a DTC related to the relevant system.
- (3) Turn the ignition switch to the "LOCK" (OFF) position.

Q: Is the DTC set?

YES : Go to Step 4.

NO : Go to Step 5.

STEP 4. Recheck for diagnostic trouble code.

Check again if the DTC is set.

- (1) Turn the ignition switch to the "ON" position.
- (2) Check if the DTC is set.
- (3) Turn the ignition switch to the "LOCK" (OFF) position.

Q: Is the DTC set?

YES : Replace the Audio. On completion, check that the DTC is not reset.

NO : There is an intermittent malfunction such as poor engaged connector(s) or open circuit (Refer to GROUP 00, How to Use Troubleshooting/Inspection Service Points –How to Cope with Intermittent Malfunctions [P.00-15.](#))

STEP 5. Recheck for diagnostic trouble code.

Check again if the DTC is set.

- (1) Turn the ignition switch to the "ON" position.
- (2) Check if the DTC is set.
- (3) Turn the ignition switch to the "LOCK" (OFF) position.

Q: Is the DTC set?

YES : Replace the A/C-ECU. On completion, check that the DTC is not reset.

NO : There is an intermittent malfunction such as poor engaged connector(s) or open circuit (Refer to GROUP 00, How to Use Troubleshooting/Inspection Service Points –How to Cope with Intermittent Malfunctions [P.00-15.](#))

DTC U0195: Satellite radio tuner timeout

 **CAUTION**

If DTC U0195 is set in the A/C-ECU, diagnose the CAN main bus line.

 **CAUTION**

Whenever the ECU is replaced, ensure that the communication circuit is normal.

TROUBLE JUDGMENT

The A/C-ECU receives air conditioning operation-related signals from the satellite radio via the CAN bus lines. If any of the air conditioning control-related signals from the satellite radio cannot be received, the diagnostic trouble code U0195 is stored.

TECHNICAL DESCRIPTION (COMMENT)

Current trouble

- Connector(s) or wiring harness in the CAN bus lines between the Satellite Radio and the A/C-ECU, the power supply system to the Satellite Radio, the Satellite Radio itself, or the A/C-ECU may be defective.

Past trouble

- If DTC U0195 is stored as a past trouble, carry out diagnosis with particular emphasis on wiring and connector(s) in the CAN bus line between the A/C-ECU and the Satellite Radio, and the power supply system to the Satellite Radio. If the connectors and wiring are normal, and obviously the ECU is the cause of the trouble, replace the ECU. If in doubt, do not replace the ECU.

NOTE: For a past trouble, you cannot find it by the scan tool CAN bus diagnostics even if there is a failure in CAN bus lines. In this case, refer to GROUP 00, How to Use Troubleshooting/Inspection Service Points –How to Cope with Intermittent Malfunctions P.00-15) and check the CAN bus lines. You can narrow down the possible

cause of the trouble by referring to the DTC, which is set regarding the CAN communication-linked ECUs (Refer to GROUP 54C, Explanation about the scan tool CAN bus diagnostics P.54C-9).

TROUBLESHOOTING HINTS

- Malfunction of the Satellite Radio
- Malfunction of the A/C-ECU
- Damaged harness wires and connectors

DIAGNOSIS

Required Special Tools:

- MB991223: Harness Set
- MB992006: Extra Fine Probe
- MB991958: Scan Tool (M.U.T.-III Sub Assembly)
 - MB991824: V.C.I.
 - MB991827: M.U.T.-III USB Cable
 - MB991910: M.U.T.-III Main Harness A

STEP 1. Using scan tool MB991958, diagnose the CAN bus line

⚠ CAUTION


To prevent damage to scan tool MB991958, always turn the ignition switch to the "LOCK" (OFF) position before connecting or disconnecting scan tool MB991958.

- (1) Connect scan tool MB991958. Refer to "How to connect the Scan Tool (M.U.T.-III) P.55-7."
- (2) Turn the ignition switch to the "ON" position.
- (3) Diagnose the CAN bus line.
- (4) Turn the ignition switch to the "LOCK" (OFF) position.

Q: Is the CAN bus line found to be normal?

YES : Go to Step 2.

NO : Repair the CAN bus line (Refer to GROUP 54C, Diagnosis P.54C-15).

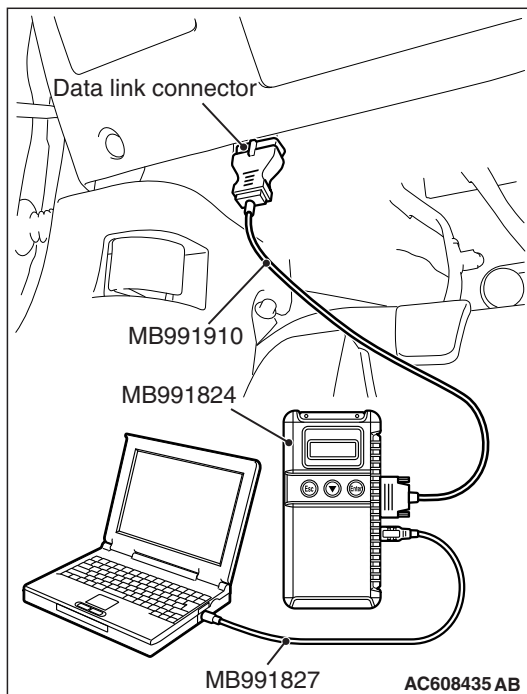

STEP 2. Using scan tool MB991958 read the Satellite Radio diagnostic trouble code.

Check whether an satellite radio DTCs are set or not.

- (1) Turn the ignition switch to the "ON" position.
- (2) Check for Satellite Radio DTCs.
- (3) Turn the ignition switch to the "LOCK" (OFF) position.

Q: Is the DTC set?

YES : Diagnose the Satellite Radio (Refer to GROUP 54A, Diagnostic Trouble Code).

NO : Go to Step 3.

STEP 3. Using scan tool MB991958, check for any diagnostic trouble code.

Check if a DTC, which relates to CAN communication-linked systems below, is set.

- ETACS-ECU
DTC indicating a time-out error related to the Satellite Radio system

- (1) Turn the ignition switch to the "ON" position.
- (2) Check for a DTC related to the relevant system.
- (3) Turn the ignition switch to the "LOCK" (OFF) position.

Q: Is the DTC set?

YES : Go to Step 4.

NO : Go to Step 5.

STEP 4. Recheck for diagnostic trouble code.

Check again if the DTC is set.

- (1) Turn the ignition switch to the "ON" position.
- (2) Check if the DTC is set.
- (3) Turn the ignition switch to the "LOCK" (OFF) position.

Q: Is the DTC set?

YES : Replace the Satellite Radio. On completion, check that the DTC is not reset.

NO : There is an intermittent malfunction such as poor engaged connector(s) or open circuit (Refer to GROUP 00, How to Use Troubleshooting/Inspection Service Points –How to Cope with Intermittent Malfunctions [P.00-15.](#))

STEP 5. Recheck for diagnostic trouble code.

Check again if the DTC is set.

- (1) Turn the ignition switch to the "ON" position.
- (2) Check if the DTC is set.
- (3) Turn the ignition switch to the "LOCK" (OFF) position.

Q: Is the DTC set?

YES : Replace the A/C-ECU. On completion, check that the DTC is not reset.

NO : There is an intermittent malfunction such as poor engaged connector(s) or open circuit (Refer to GROUP 00, How to Use Troubleshooting/Inspection Service Points –How to Cope with Intermittent Malfunctions P.00-15.)

DTC U0197: Hands Free Module Time-out**⚠ CAUTION**

If DTC U0197 is set in the A/C-ECU, diagnose the CAN main bus line.

⚠ CAUTION

Whenever the ECU is replaced, ensure that the communication circuit is normal.

TROUBLE JUDGMENT

The A/C-ECU receives the air conditioning control-related signals from the hands-free module via the CAN bus lines. If any of the air conditioning control-related signals from the hands free module cannot be received, the diagnostic trouble code U0197 is stored.

TECHNICAL DESCRIPTION (COMMENT)**Current trouble**

- Connector(s) or wiring harness in the CAN bus lines between the hands free module and the A/C-ECU, the power supply system to the hands free module, the hands free module itself, or the A/C-ECU may be defective.

Past trouble

- If DTC U0151 is stored as a past trouble, carry out diagnosis with particular emphasis on wiring and connector(s) in the CAN bus line between the A/C-ECU and the hands free module, and the power supply system to the hands free module. If the connectors and wiring are normal, and obviously the ECU is the cause of the trouble, replace the ECU. If in doubt, do not replace the ECU.

NOTE: For a past trouble, you cannot find it by the scan tool CAN bus diagnostics even if there is a failure in CAN bus lines. In this case, refer to GROUP 00, How to Use Troubleshooting/Inspection Service Points –How to Cope with Intermittent Malfunctions P.00-15) and check the CAN bus lines. You can narrow down the possible cause of the trouble by referring to the DTC, which is set regarding the CAN communication-linked ECUs (Refer to GROUP 54C, Explanation about the scan tool CAN bus diagnostics P.54C-9).

TROUBLESHOOTING HINTS

- Malfunction of the hands free module
- Malfunction of the A/C-ECU
- Damaged harness wires and connectors

DIAGNOSIS

Required Special Tools:

- MB991223: Harness Set
- MB992006: Extra Fine Probe
- MB991958: Scan Tool (M.U.T.-III Sub Assembly)
 - MB991824: V.C.I.
 - MB991827: M.U.T.-III USB Cable
 - MB991910: M.U.T.-III Main Harness A

STEP 1. Using scan tool MB991958, diagnose the CAN bus line

CAUTION


To prevent damage to scan tool MB991958, always turn the ignition switch to the "LOCK" (OFF) position before connecting or disconnecting scan tool MB991958.

- (1) Connect scan tool MB991958. Refer to "How to connect the Scan Tool (M.U.T.-III) P.55-7."
- (2) Turn the ignition switch to the "ON" position.
- (3) Diagnose the CAN bus line.
- (4) Turn the ignition switch to the "LOCK" (OFF) position.

Q: Is the CAN bus line found to be normal?

YES : Go to Step 2.

NO : Repair the CAN bus line. (Refer to GROUP 54C, Diagnosis P.54C-15).

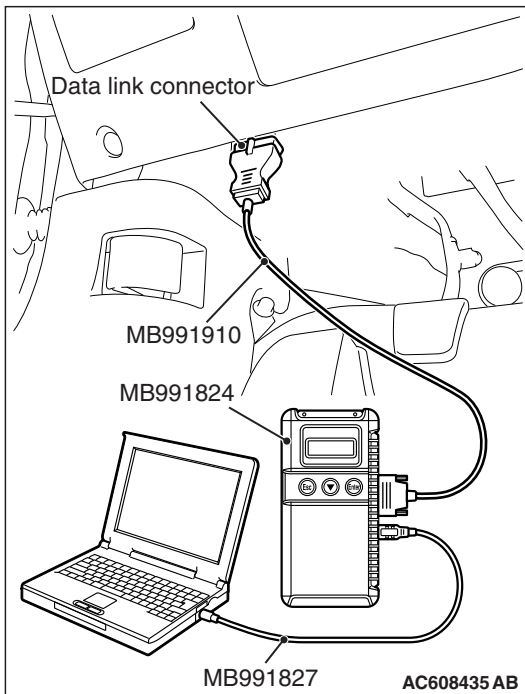

STEP 2. Using scan tool MB991958 read the hands free module diagnostic trouble code.

Check whether an hands free module DTCs are set or not.

- (1) Turn the ignition switch to the "ON" position.
- (2) Check for hands free module DTCs.
- (3) Turn the ignition switch to the "LOCK" (OFF) position.

Q: Is the DTC set?

YES : Diagnose the hands free module (Refer to GROUP 54A, Diagnostic Trouble Code).

NO : Go to Step 3.

STEP 3. Using scan tool MB991958, check for any diagnostic trouble code.

Check if a DTC, which relates to CAN communication-linked systems below, is set.

- ETACS-ECU
DTC indicating a time-out error related to the hands free module system

- (1) Turn the ignition switch to the "ON" position.
- (2) Check for a DTC related to the relevant system.
- (3) Turn the ignition switch to the "LOCK" (OFF) position.

Q: Is the DTC set?

YES : Go to Step 4.

NO : Go to Step 5.

STEP 4. Recheck for diagnostic trouble code.

Check again if the DTC is set.

- (1) Turn the ignition switch to the "ON" position.
- (2) Check if the DTC is set.
- (3) Turn the ignition switch to the "LOCK" (OFF) position.

Q: Is the DTC set?

YES : Replace the SRS-ECU. On completion, check that the DTC is not reset.

NO : There is an intermittent malfunction such as poor engaged connector(s) or open circuit (Refer to GROUP 00, How to Use Troubleshooting/Inspection Service Points –How to Cope with Intermittent Malfunctions [P.00-15.](#))

STEP 5. Recheck for diagnostic trouble code.

Check again if the DTC is set.

- (1) Turn the ignition switch to the "ON" position.
- (2) Check if the DTC is set.
- (3) Turn the ignition switch to the "LOCK" (OFF) position.

Q: Is the DTC set?

YES : Replace the A/C-ECU. On completion, check that the DTC is not reset.

NO : There is an intermittent malfunction such as poor engaged connector(s) or open circuit (Refer to GROUP 00, How to Use Troubleshooting/Inspection Service Points –How to Cope with Intermittent Malfunctions [P.00-15.](#))

DTC U0245: Audio visual navigation unit CAN time-out

⚠ CAUTION

If DTC U0245 is set in the A/C-ECU, diagnose the CAN main bus line.

⚠ CAUTION

Whenever the ECU is replaced, ensure that the communication circuit is normal.

TROUBLE JUDGMENT

The A/C-ECU receives the air conditioning control-related signals from the hands-free module via the CAN bus lines. If any of the air conditioning control-related signals from the audio visual navigation unit cannot be received, the diagnostic trouble code U0245 is stored.

TECHNICAL DESCRIPTION (COMMENT)

Current trouble

- Connector(s) or wiring harness in the CAN bus lines between the audio visual navigation unit and the A/C-ECU, the power supply system to the audio visual navigation unit, the audio visual navigation unit itself, or the A/C-ECU may be defective.

Past trouble

- If DTC U0245 is stored as a past trouble, carry out diagnosis with particular emphasis on wiring and connector(s) in the CAN bus line between the A/C-ECU and the audio visual navigation unit, and the power supply system to the audio visual navigation unit. If the connectors and wiring are normal, and obviously the ECU is the cause of the trouble, replace the ECU. If in doubt, do not replace the ECU.

NOTE: For a past trouble, you cannot find it by the scan tool CAN bus diagnostics even if there is a failure in CAN bus lines. In this case, refer to GROUP 00, How to Use Troubleshooting/Inspection Service Points –How to Cope with Intermittent Malfunctions P.00-15) and check the CAN bus lines. You can narrow down the possible cause of the trouble by referring to the DTC, which is set regarding the CAN communication-linked ECUs (Refer to GROUP 54C, Explanation about the scan tool CAN bus diagnostics P.54C-9).


TROUBLESHOOTING HINTS

- Malfunction of the audio visual navigation unit
- Malfunction of the A/C-ECU
- Damaged harness wires and connectors

DIAGNOSIS

Required Special Tools:

- MB991223: Harness Set
- MB992006: Extra Fine Probe
- MB991958: Scan Tool (M.U.T.-III Sub Assembly)
 - MB991824: V.C.I.
 - MB991827: M.U.T.-III USB Cable
 - MB991910: M.U.T.-III Main Harness A

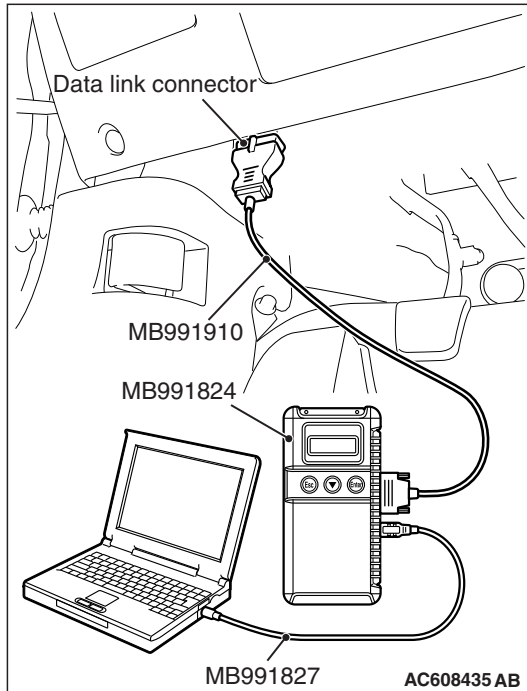

STEP 1. Using scan tool MB991958, diagnose the CAN bus line

⚠ CAUTION

To prevent damage to scan tool MB991958, always turn the ignition switch to the "LOCK" (OFF) position before connecting or disconnecting scan tool MB991958.

- (1) Connect scan tool MB991958. Refer to "How to connect the Scan Tool (M.U.T.-III) P.55-7."
- (2) Turn the ignition switch to the "ON" position.
- (3) Diagnose the CAN bus line.
- (4) Turn the ignition switch to the "LOCK" (OFF) position.

Q: Is the CAN bus line found to be normal?

YES : Go to Step 2.

NO : Repair the CAN bus line. (Refer to GROUP 54C, Diagnosis P.54C-15).

STEP 2. Using scan tool MB991958 read the audio visual navigation unit diagnostic trouble code.

Check whether an audio visual navigation unit DTCs are set or not.

- (1) Turn the ignition switch to the "ON" position.
- (2) Check for audio visual navigation unit DTCs.
- (3) Turn the ignition switch to the "LOCK" (OFF) position.

Q: Is the DTC set?

YES : Diagnose the audio visual navigation unit (Refer to GROUP 54A, Diagnostic Trouble Code).

NO : Go to Step 3.

STEP 3. Using scan tool MB991958, check for any diagnostic trouble code.

Check if a DTC, which relates to CAN communication-linked systems below, is set.

- ETACS-ECU
DTC indicating a time-out error related to the audio visual navigation unit system

- (1) Turn the ignition switch to the "ON" position.
- (2) Check for a DTC related to the relevant system.
- (3) Turn the ignition switch to the "LOCK" (OFF) position.

Q: Is the DTC set?

YES : Go to Step 4.

NO : Go to Step 5.

STEP 4. Recheck for diagnostic trouble code.

Check again if the DTC is set.

- (1) Turn the ignition switch to the "ON" position.
- (2) Check if the DTC is set.
- (3) Turn the ignition switch to the "LOCK" (OFF) position.

Q: Is the DTC set?

YES : Replace the audio visual navigation unit. On completion, check that the DTC is not reset.

NO : There is an intermittent malfunction such as poor engaged connector(s) or open circuit (Refer to GROUP 00, How to Use Troubleshooting/Inspection Service Points –How to Cope with Intermittent Malfunctions [P.00-15.](#))

STEP 5. Recheck for diagnostic trouble code.

Check again if the DTC is set.

- (1) Turn the ignition switch to the "ON" position.
- (2) Check if the DTC is set.
- (3) Turn the ignition switch to the "LOCK" (OFF) position.

Q: Is the DTC set?

YES : Replace the A/C-ECU. On completion, check that the DTC is not reset.

NO : There is an intermittent malfunction such as poor engaged connector(s) or open circuit (Refer to GROUP 00, How to Use Troubleshooting/Inspection Service Points –How to Cope with Intermittent Malfunctions [P.00-15.](#))

SYMPTOM CHART <Vehicles without A/C>

M1552009900774

⚠ CAUTION


During diagnosis, a DTC code associated with other system may be set when the ignition switch is turned on with connector(s) disconnected. On completion, confirm all systems for DTC code(s). If DTC code(s) are set, erase them all.

Symptom	Inspection procedure	Reference page
Malfunction of the A/C power supply system. <Vehicles without A/C>	1	P.55-97
Blower fan and motor do not turn. <Vehicles without A/C>	2	P.55-101
Blower air amount cannot be changed. <Vehicles without A/C>	3	P.55-106
Outside/inside air changeover is not possible. <Vehicles without A/C>	4	P.55-109
A/C outlet air temperature does not increase. <Vehicles without A/C>	5	P.55-112
Air outlet vent cannot be changed. <Vehicles without A/C>	6	P.55-114
Blower motor power supply system. <Vehicles without A/C>	7	P.55-117



SYMPTOM PROCEDURES <VEHICLES WITHOUT A/C>

INSPECTION PROCEDURE 1: Malfunction of the heater control unit Power Supply System. <Vehicles without A/C>

Heater Control Unit Power Supply Circuit

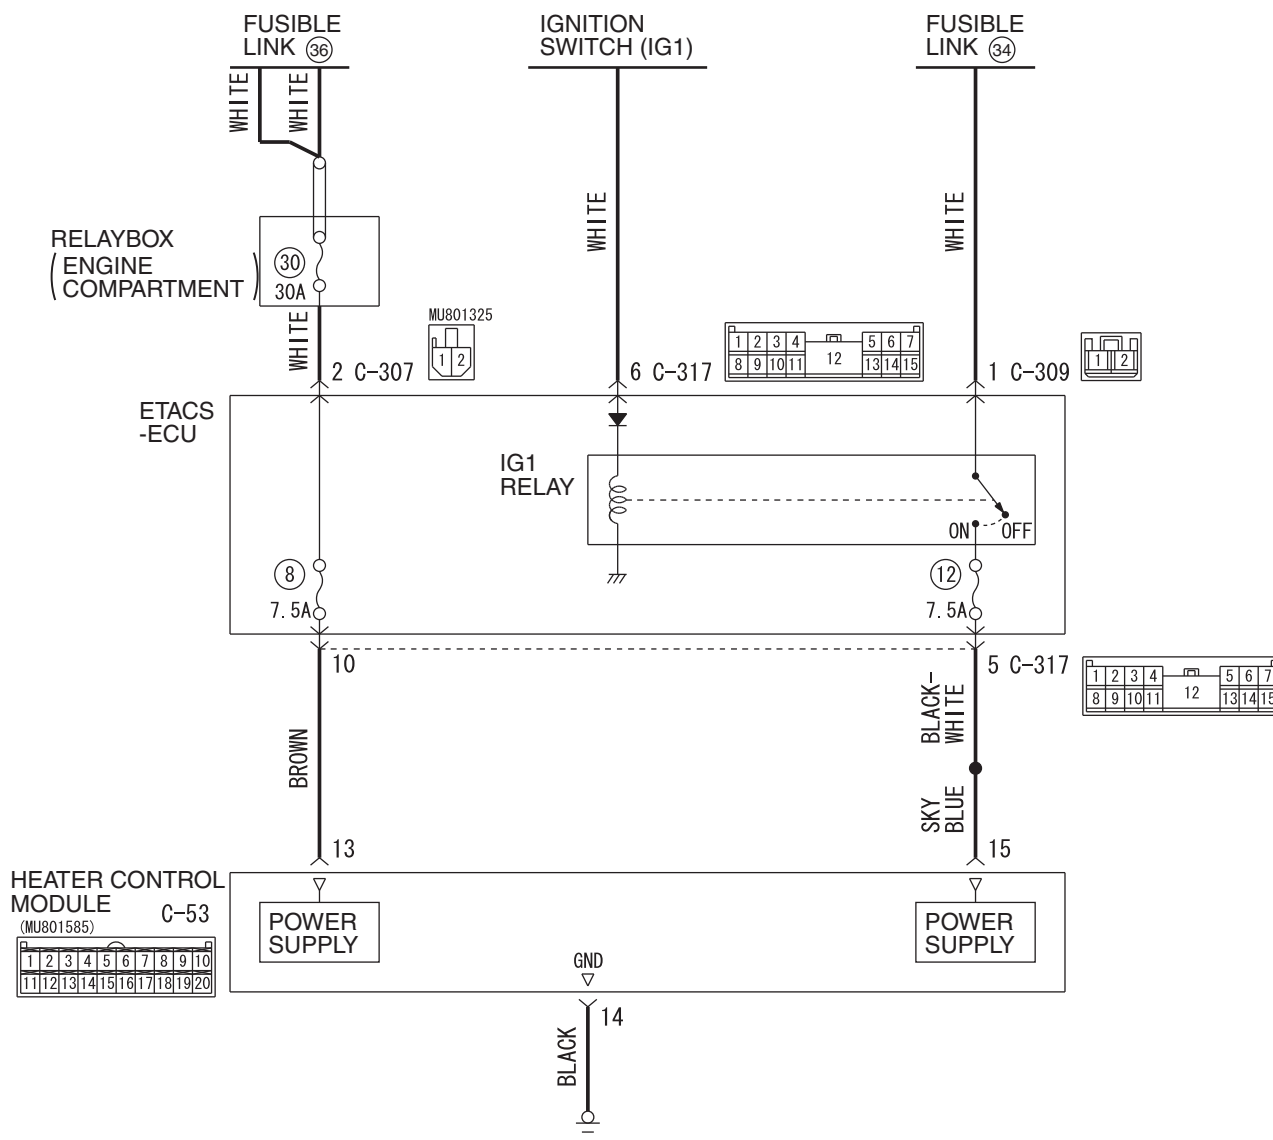

AC901575
 W8G55M011A

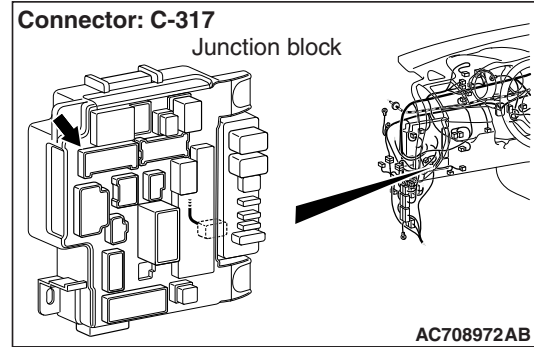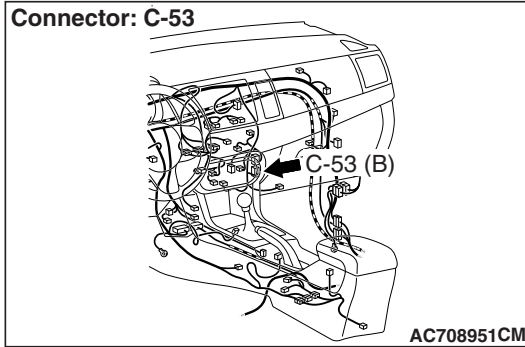

TECHNICAL DESCRIPTION (COMMENT)

The heater control module power system may be defective if the air conditioning, defogger, and outside/inside air selection damper motor all do not operate normally.

TROUBLESHOOTING HINTS

- Malfunction of the heater control module
- Damaged harness wires or connectors

DIAGNOSIS

Required Special Tool:

- MB991223: Test Harness Set

STEP 1. Check heater control module connector C-53 for loose, corroded or damaged terminals, or terminals pushed back in the connector.

Q: Is heater control module connector C-53 in good condition?

YES : Go to Step 2.

NO : Repair or replace the connector. Refer to GROUP 00E, Harness Connector Inspection [P.00E-2](#). Check that the A/C works normally.


STEP 2. Measure the voltage at heater control module connector C-53.

- (1) Disconnect heater control module connector C-53 and measure the voltage at the harness side.
- (2) Turn the ignition switch to the "ON" position.
- (3) Measure the voltage between terminal 15 and ground.
 - The measured value should be approximately 12 volts (battery positive voltage).

Q: Is the measured voltage approximately 12 volts?

YES : Go to Step 5.

NO : Go to Step 3.

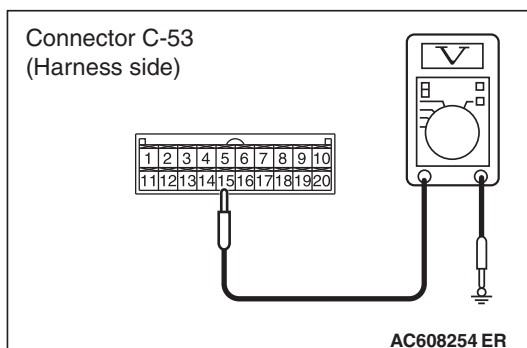

STEP 3. Check ETACS-ECU connector C-317 for loose, corroded or damaged terminals, or terminals pushed back in the connector.

Q: Is ETACS-ECU connector C-317 in good condition?

YES : Go to Step 4.

NO : Repair or replace the connector. Refer to GROUP 00E, Harness Connector Inspection [P.00E-2](#). Check that the A/C works normally.

STEP 4. Check the wiring harness between heater control module connector C-53 (terminal 15) and ETACS-ECU connector C-317 (terminal 5).

- Check the heater control module power supply line for open circuit.

Q: Is the wiring harness between heater control module connector C-53 (terminal 15) and ETACS-ECU connector C-317 (terminal 5) in good condition?

YES : It can be assumed that this malfunction is intermittent. Refer to GROUP 00, How to Use Troubleshooting/Inspection Service Points –How to Cope with Intermittent Malfunctions [P.00-15](#).

NO : Repair the wiring harness. Check that the A/C works normally.


STEP 5. Measure the voltage at heater control module connector C-53.

- (1) Disconnect heater control module connector C-53 and measure the voltage at the harness side.
- (2) Measure the voltage between terminal 13 and ground.
 - The measured value should be approximately 12 volts (battery positive voltage).

Q: Is the measured voltage approximately 12 V?

YES : Go to Step 7.

NO : Go to Step 6.

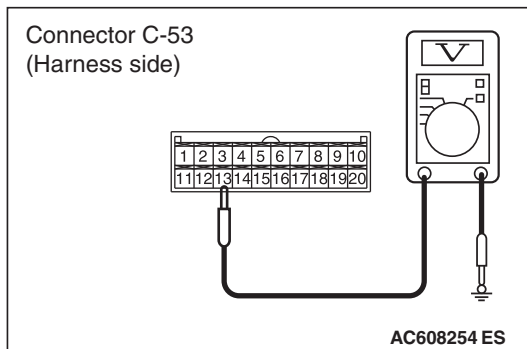

STEP 6. Check the wiring harness between heater control module connector C-53 (terminal 13) and the fusible link (36).

NOTE: Also check ETACS-ECU connectors C-307 and C-317 for loose, corroded, or damaged terminals, or terminals pushed back in the connector. If ETACS-ECU connectors C-307 and C-317 is damaged, repair or replace the connector as described in GROUP 00E, Harness Connector Inspection P.00E-2.

- Check the heater control module power supply line for open circuit.

Q: Is the wiring harness between heater control module connector C-53 (terminal 13) and the fusible link (36) in good condition?

YES : It can be assumed that this malfunction is intermittent. Refer to GROUP 00, How to Use Troubleshooting/Inspection Service Points –How to Cope with Intermittent Malfunctions P.00-15.

NO : Repair the wiring harness. Check that the A/C works normally.


STEP 7. Measure the resistance at heater control module connector C-53.

- (1) Disconnect heater control module connector C-53, and measure at the wiring harness side.
- (2) Measure the resistance between terminal 14 and ground.
 - The measured value should be 2 ohms or less.

Q: Does the measured resistance value correspond with this range?

YES : Replace the heater control module, and check that the A/C works normally.

NO : Go to Step 8.

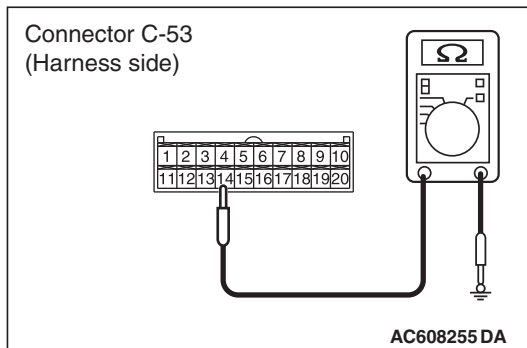

STEP 8. Check the wiring harness between heater control module connector C-53 (terminal 14) and the ground.

- Check the heater control module ground line for open circuit.


Q: Is the wiring harness between heater control module connector C-53 (terminal 14) and ground in good condition?

YES : It can be assumed that this malfunction is intermittent. Refer to GROUP 00, How to Use Troubleshooting/Inspection Service Points –How to Cope with Intermittent Malfunctions P.00-15.


NO : Repair the wiring harness. Check that the A/C works normally.

INSPECTION PROCEDURE 2: Blower fan and motor do not turn. <Vehicles without A/C>

Blower Motor Circuit

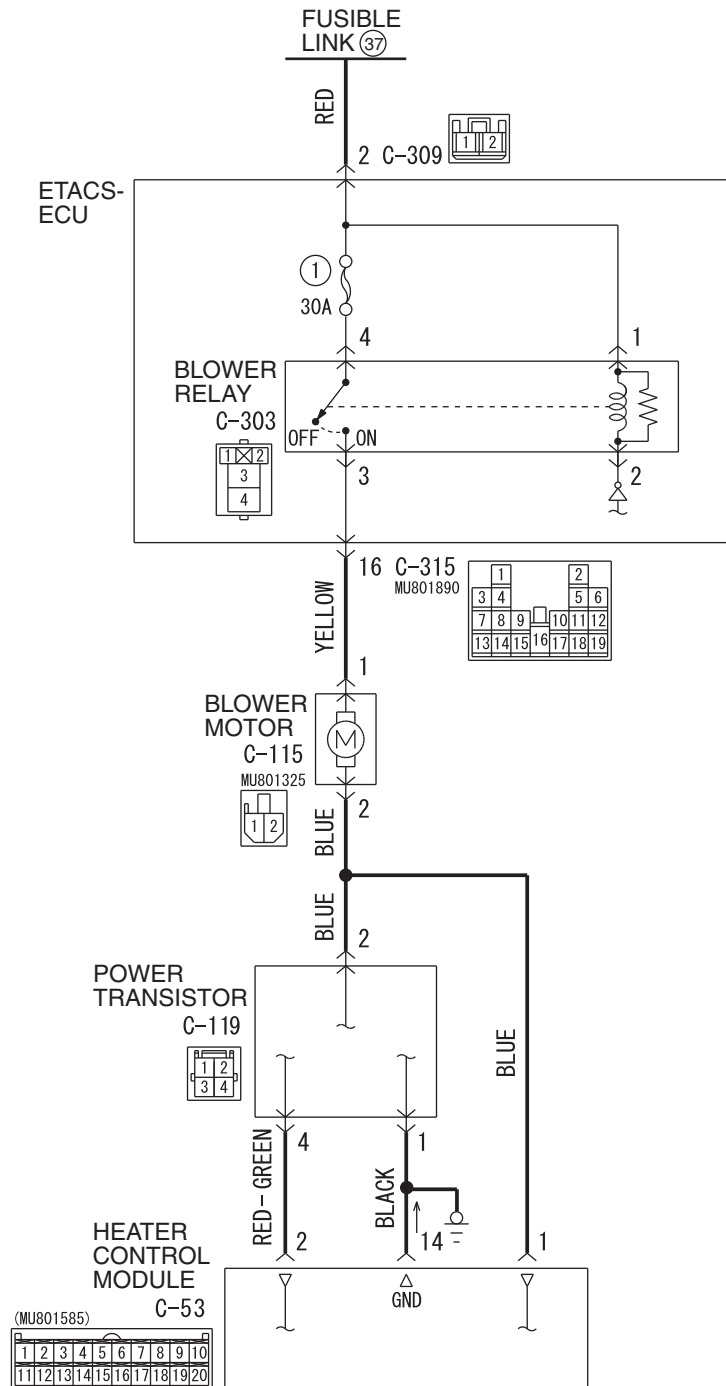

AC901584
 W8G55M010A

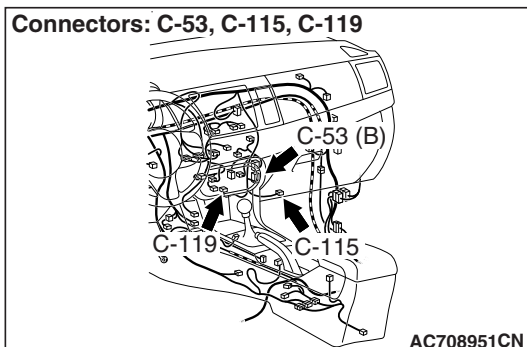

CIRCUIT OPERATION

If the blower motor does not operate, the blower relay system is suspected.

TROUBLESHOOTING HINTS

- Malfunction of the power transistor
- Malfunction of the blower motor
- Malfunction of the heater control module
- Damaged harness wires or connectors

DIAGNOSIS

Required Special Tools:


- MB991223: Harness Set
- MB992006: Extra Fine Probe

STEP 1. Check blower motor connector C-115 for loose, corroded or damaged terminals, or terminals pushed back in the connector.

Q: Is blower motor connector C-115 in good condition?

YES : Go to Step 2.

NO : Repair or replace the connector. Refer to GROUP 00E, Harness Connector Inspection [P.00E-2](#). The blower motor should operate normally.

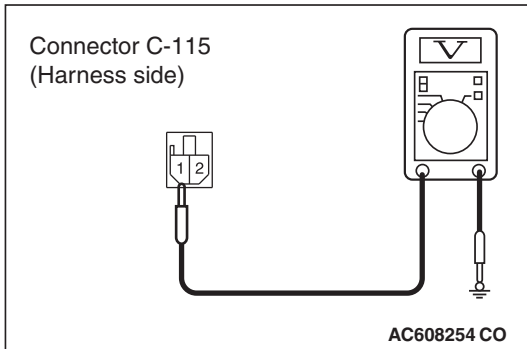

STEP 2. Measure the voltage at blower motor connector C-115.

- (1) Disconnect blower motor connector C-115, and measure the voltage at the wiring harness side.
- (2) Turn the ignition switch to the "ON" position.
- (3) Turn the blower switch to the "Maximum air volume" position.
- (4) Measure the voltage between terminal 1 and ground.
 - The measured value should be approximately 12 volts (battery positive voltage).

Q: Is the measured voltage approximately 12 volts?

YES : Go to Step 3.


NO : Refer to Inspection procedure 9, "Blower motor power supply system [P.55-117](#)."

STEP 3. Check blower motor connector C-115 for loose, corroded or damaged terminals, or terminals pushed back in the connector.

Q: Is blower motor connector C-115 in good condition?

YES : Go to Step 4.

NO : Repair or replace the connector. Refer to GROUP 00E, Harness Connector Inspection [P.00E-2](#). The blower motor should operate normally.

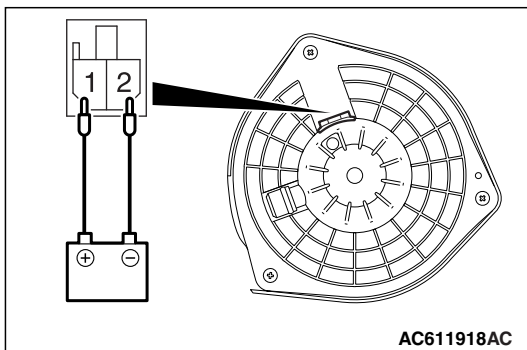

STEP 4. Check the blower fan and motor operation.

Check that the motor turns when applying battery power between the connector terminals. Also check to see that there is no abnormal sound emitted from the motor at this time.

Q: Is there any abnormal noise?

YES : Go to Step 5.

NO : Replace the blower relay. The blower motor should operate normally.

STEP 5. Check heater control module connector C-53 for loose, corroded or damaged terminals, or terminals pushed back in the connector.

Q: Is heater control module connector C-53 in good condition?

YES : Go to Step 6.

NO : Repair or replace the connector. Refer to GROUP 00E, Harness Connector Inspection [P.00E-2](#). The blower motor should operate normally.

STEP 6. Check the wiring harness between heater control module connector C-53 (terminal 1) and blower motor connector C-115 (terminal 2).

- Check the heater control module signal line for open and short circuit.

Q: Is the wiring harness between heater control module connector C-53 (terminal 1) and blower motor connector C-115 (terminal 2) in good condition?

YES : Go to Step 7.

NO : Repair the wiring harness. The blower motor should operate normally.

STEP 7. Check power transistor connector C-119 for loose, corroded or damaged terminals, or terminals pushed back in the connector.

Q: Is power transistor connector C-119 in good condition?

YES : Go to Step 8.

NO : Repair or replace the connector. Refer to GROUP 00E, Harness Connector Inspection [P.00E-2](#). The blower motor should operate normally.

STEP 8. Measure the resistance at power transistor connector C-119.


- (1) Disconnect power transistor connector C-119, and measure the resistance at the wiring harness side.
- (2) Measure the resistance value between terminal 1 and ground.

OK: The measured value should be 2 ohms or less

Q: Does the measured resistance value correspond with this range?

YES : Go to Step 10.

NO : Go to Step 9.

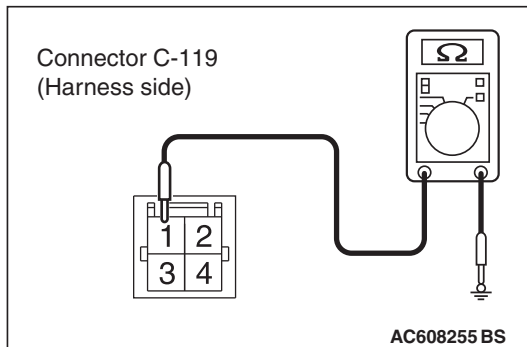

STEP 9. Check the wiring harness between power transistor connector C-119 (terminal 1) and ground.

- Check the power transistor ground line for open circuit.

Q: Is the wiring harness between power transistor connector C-119 (terminal 1) and ground in good condition?

YES : It can be assumed that this malfunction is intermittent. Refer to GROUP 00, How to Use Troubleshooting/Inspection Service Points –How to Cope with Intermittent Malfunctions [P.00-15](#).

NO : Repair the wiring harness. The blower motor should operate normally.

STEP 10. Check the wiring harness between heater control module connector C-53 (terminals 1 and 2) and power transistor connector C-119 (terminals 2 and 4).

- Check the heater control module signal line for open and short circuit.

Q: Is the wiring harness between heater control module connector C-53 (terminals 1 and 2) and power transistor connector C-119 (terminals 2 and 4) in good condition?

YES : Go to Step 11.

NO : Repair the wiring harness. The blower motor should operate normally.

STEP 11. Replace the power transistor and check the trouble symptom again

Check the trouble symptom again.


Q: Is the check result satisfactory?

YES : The procedure is complete.


NO : Replace the heater control module.

INSPECTION PROCEDURE 3: Blower air amount cannot be changed. <Vehicles without A/C>

Blower Motor Circuit

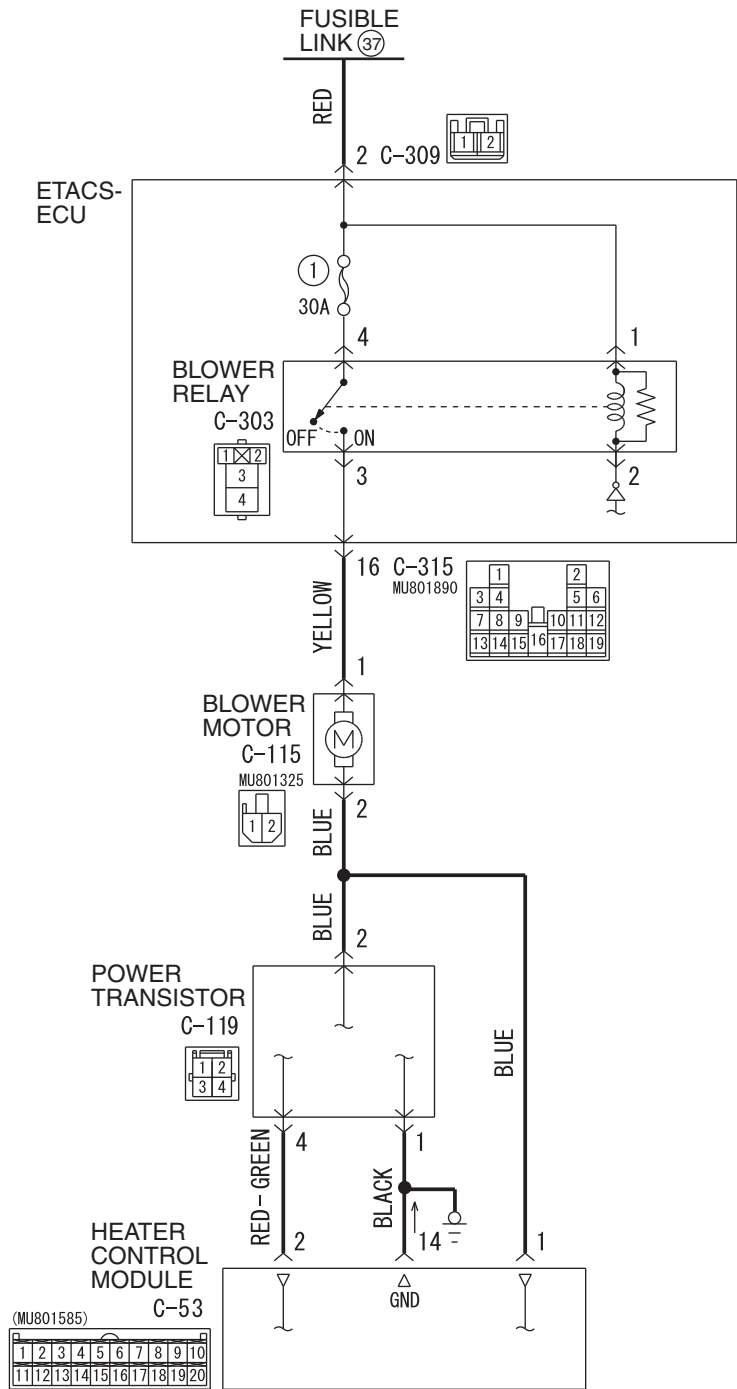

AC901584
 W8G55M010A

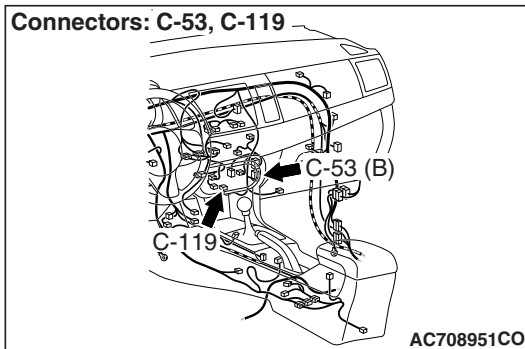

CIRCUIT OPERATION

If the blower motor speed cannot be changed, the power transistor circuit is suspected.

TROUBLESHOOTING HINTS

- Malfunction of the power transistor
- Malfunction of the heater control module
- Damaged harness wires or connectors

DIAGNOSIS

Required Special Tools:

- MB991223: Harness Set
- MB992006: Extra Fine Probe

STEP 1. Check power transistor connector C-119 for loose, corroded or damaged terminals, or terminals pushed back in the connector.

Q: Is power transistor connector C-119 in good condition?

YES : Go to Step 2.

NO : Repair or replace the connector. Refer to GROUP 00E, Harness Connector Inspection [P.00E-2](#). The blower motor should operate normally.

STEP 2. Measure the resistance at power transistor connector C-119.


- (1) Disconnect power transistor connector C-119, and measure the resistance at the wiring harness side.
- (2) Measure the resistance value between terminal 1 and ground.

OK: The measured value should be 2 ohms or less

Q: Does the measured resistance value correspond with this range?

YES : Go to Step 4.

NO : Go to Step 3.

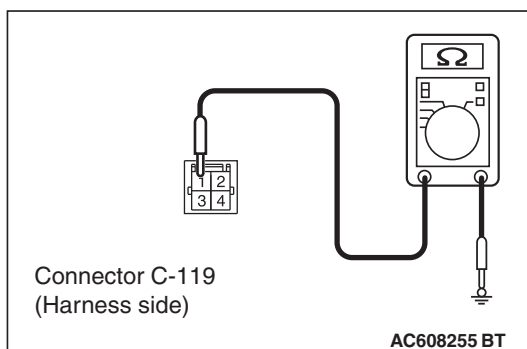

STEP 3. Check the wiring harness between power transistor connector C-119 (terminal 1) and ground.

- Check the power transistor ground line for open circuit.

Q: Is the wiring harness between power transistor connector C-119 (terminal 1) and ground in good condition?

YES : It can be assumed that this malfunction is intermittent. Refer to GROUP 00, How to Use Troubleshooting/Inspection Service Points –How to Cope with Intermittent Malfunctions [P.00-15](#).

NO : Repair the wiring harness. The blower motor should operate normally.

STEP 4. Check heater control module connector C-53 for loose, corroded or damaged terminals, or terminals pushed back in the connector.**Q: Is heater control module connector C-53 in good condition?**

YES : Go to Step 5.

NO : Repair or replace the connector. Refer to GROUP 00E, Harness Connector Inspection [P.00E-2](#). The blower motor should operate normally.

STEP 5. Check the wiring harness between heater control module connector C-53 (terminals 1 and 2) and power transistor connector C-119 (terminals 2 and 4).

- Check the heater control module signal line for open and short circuit.

Q: Is the wiring harness between heater control module connector C-53 (terminals 1 and 2) and power transistor connector C-119 (terminals 2 and 4) in good condition?

YES : Go to Step 6.

NO : Repair the wiring harness. The blower motor should operate normally.

STEP 6. Replace the power transistor and check the trouble symptom again

Check the trouble symptom again.


Q: Is the check result satisfactory?

YES : The procedure is complete.


NO : Replace the heater control module.

INSPECTION PROCEDURE 4: Outside/inside air changeover is not possible <Vehicles without A/C>

Outside/Inside Damper Control Motor Circuit

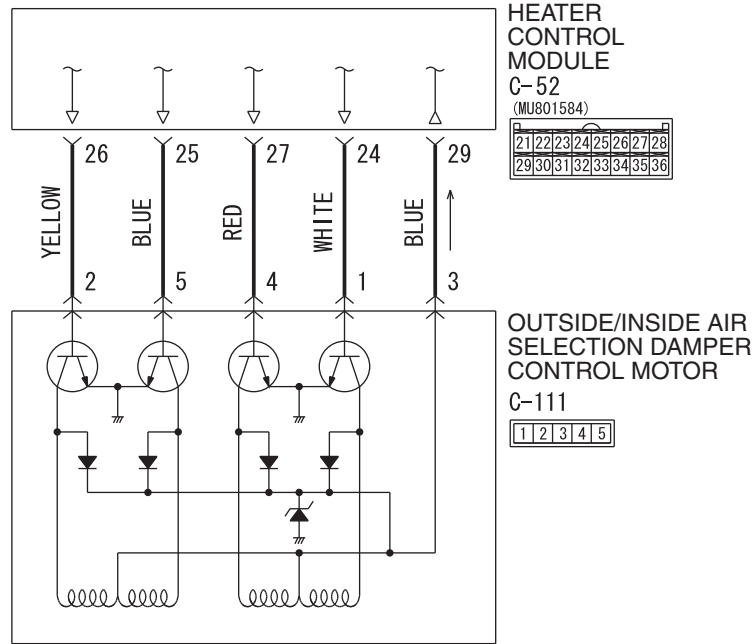

AC901585
 W8G55M007A

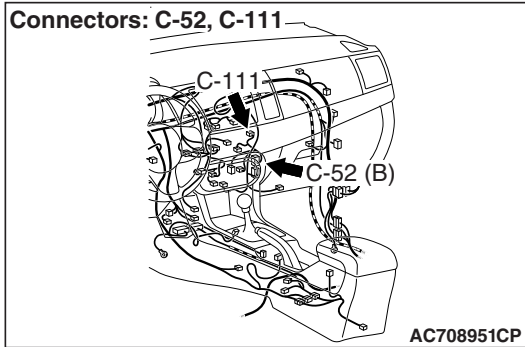

CIRCUIT OPERATION

If the outside/inside air selection damper control motor does not operate normally, the outside/inside air selection damper control motor system may be defective.

TROUBLESHOOTING HINTS

- Malfunction of the outside/inside air selection damper control motor
- Malfunction of the heater control module
- Damaged harness wires or connectors

DIAGNOSIS**Required Special Tools:**

- MB991223: Harness Set
- MB992006: Extra Fine Probe
- MB991958: Scan Tool (M.U.T.-III Sub Assembly)
 - MB991824: V.C.I.
 - MB991827: M.U.T.-III USB Cable
 - MB991910: M.U.T.-III Main Harness A

STEP 1. Using scan tool MB991958, check for diagnostic trouble code.**⚠ CAUTION**

To prevent damage to scan tool MB991958, always turn the ignition switch to the "LOCK" (OFF) position before connecting or disconnecting scan tool MB991958.


Check if an heater control module DTC is set.

- (1) Connect scan tool MB991958. Refer to "How to connect the Scan Tool (M.U.T.-III) P.55-7."
- (2) Turn the ignition switch to the "ON" position.
- (3) Check if the DTC is set.
- (4) Turn the ignition switch to the "LOCK" (OFF) position.

Q: Is the DTC set?

YES : Refer to DIAGNOSTIC TROUBLE CODE CHART P.55-10.

NO : Go to Step 2.

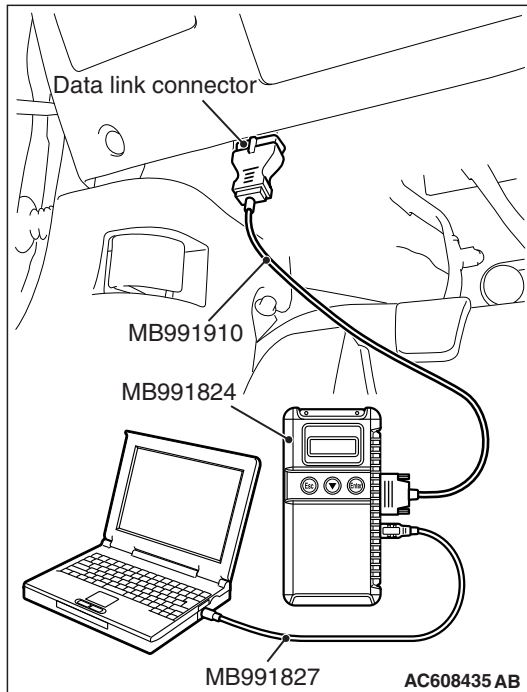**STEP 2. Check outside/inside air selection damper control motor connector C-111 and heater control module connector C-52 for loose, corroded or damaged terminals, or terminals pushed back in the connector.****Q: Are outside/inside air selection damper control motor connector C-111 and heater control module connector C-52 in good condition?**

YES : Go to Step 3.

NO : Repair or replace the connector. Refer to GROUP 00E, Harness Connector Inspection P.00E-2. Check that the A/C works normally.

STEP 3. Check the wiring harness between heater control module connector C-52 (terminal 26, 25, 27, 24 and 29) and outside/inside air selection damper control motor connector C-111 (terminals 2, 5, 4, 1 and 3).

- Check the heater control module signal line for open and short circuit.

Q: Are the wiring harness between heater control module connector C-52 (terminal 26, 25, 27, 24 and 29) and outside/inside air selection damper control motor connector C-111 (terminals 2, 5, 4, 1 and 3) in good condition?

YES : Go to Step 4.

NO : Repair the wiring harness. Check that the A/C works normally.

STEP 4. Replace the outside/inside air selection damper control motor and check the trouble symptom again
Check the trouble symptom again.


Q: Is the check result satisfactory?

YES : The procedure is complete.


NO : Replace the heater control module.

INSPECTION PROCEDURE 5: A/C outlet air temperature does not increase <Vehicles without A/C>

Air Mixing Damper Control Motor Circuit

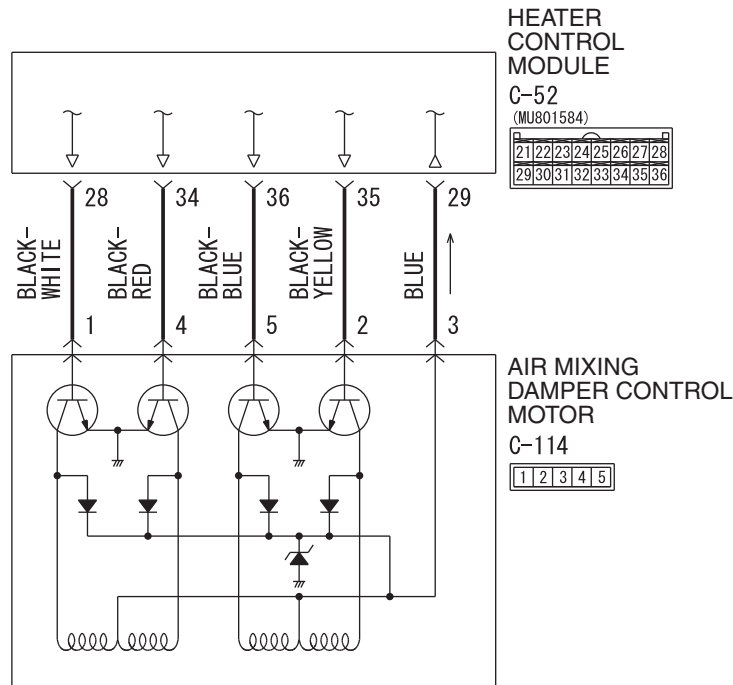

AC901599
 W8G55M008A

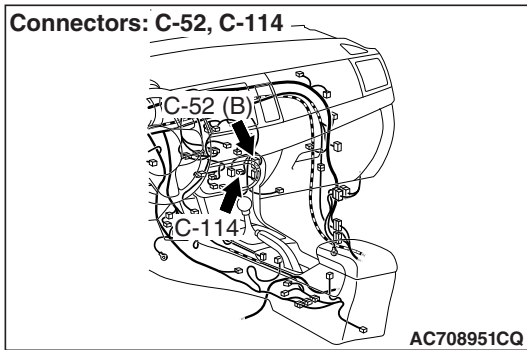

CIRCUIT OPERATION

If the air outlet temperature cannot be adjusted, the air mixing damper control motor circuit may be failed.

TROUBLESHOOTING HINTS

- Malfunction of the air mixing damper control motor
- Malfunction of the heater control module
- Damaged harness wires or connectors

DIAGNOSIS

Required Special Tools:

- MB991223: Harness Set
- MB992006: Extra Fine Probe
- MB991958: Scan Tool (M.U.T.-III Sub Assembly)
 - MB991824: V.C.I.
 - MB991827: M.U.T.-III USB Cable
 - MB991910: M.U.T.-III Main Harness A

STEP 1. Using scan tool MB991958, check for diagnostic trouble code.

Check if an heater control module DTC is set.


- (1) Connect scan tool MB991958 to the data link connector.
- (2) Turn the ignition switch to the "ON" position.
- (3) Check if the DTC is set.
- (4) Turn the ignition switch to the "LOCK" (OFF) position.

Q: Is the DTC set?

YES : Refer to DIAGNOSTIC TROUBLE CODE CHART

[P.55-96.](#)

NO : Go to Step 2.

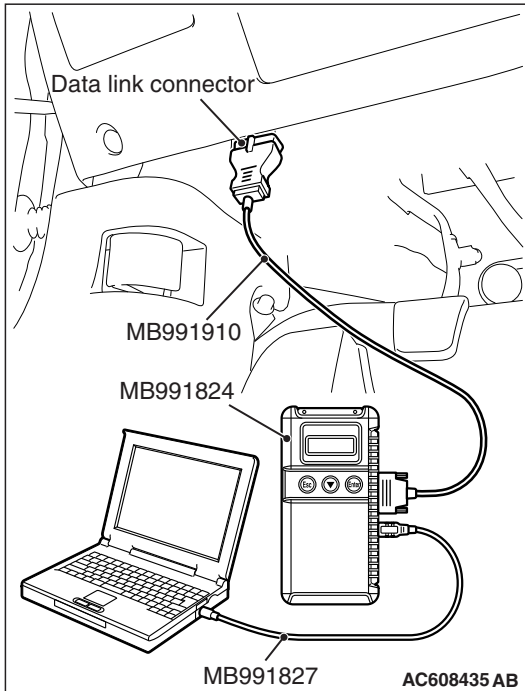

STEP 2. Check air mixing damper control motor connector C-114 and heater control module connector C-52 for loose, corroded or damaged terminals, or terminals pushed back in the connector.

Q: Are air mixing damper control motor connector C-114 and heater control module connector C-52 in good condition?

YES : Go to Step 3.

NO : Repair or replace the connector. Refer to GROUP 00E, Harness Connector Inspection [P.00E-2](#). Check that the A/C works normally.

STEP 3. Check the wiring harness between heater control module connector C-52 (terminal 29, 35, 36, 34 and 28) and air mixing damper control motor connector C-114 (terminals 3, 2, 5, 4 and 1).

- Check the heater control module signal line for open and short circuit.

Q: Are the wiring harness between heater control module connector C-52 (terminal 29, 35, 36, 34 and 28) and air mixing damper control motor connector C-114 (terminals 3, 2, 5, 4 and 1) in good condition?

YES : Go to Step 4.

NO : Repair the wiring harness. Check that the A/C works normally.

STEP 4. Replace the air mixing damper control motor and check the trouble symptom again

Check the trouble symptom again.


Q: Is the check result satisfactory?


YES : The procedure is complete.

NO : Replace the heater control module.

INSPECTION PROCEDURE 6: Air outlet vent cannot be changed. <Vehicles without A/C>

Mode Selection Damper Control Motor Circuit

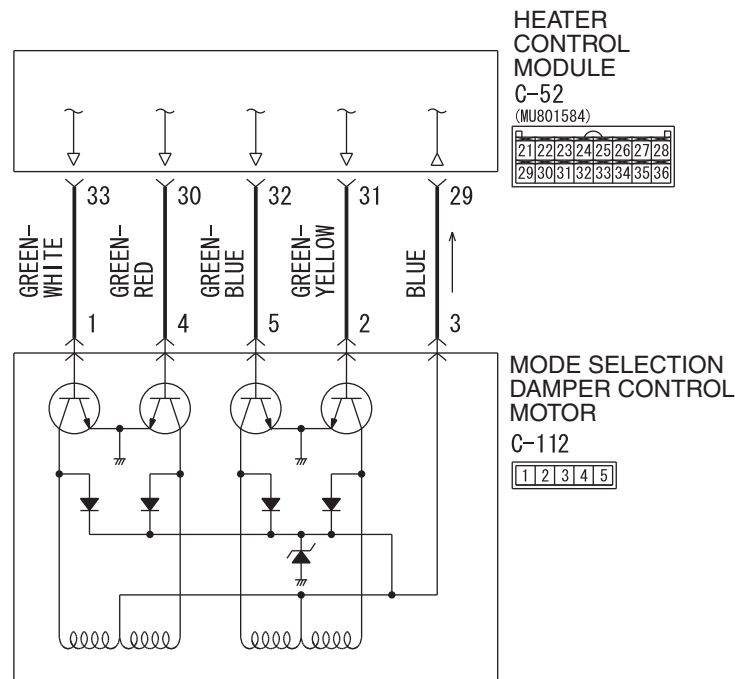

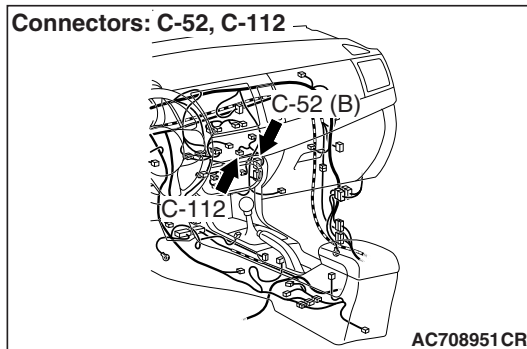

CIRCUIT OPERATION

If the air outlet cannot be switched, the mode selection damper control motor circuit may be failed.

TROUBLESHOOTING HINTS

- Malfunction of the mode selection damper control motor
- Malfunction of the heater control module
- Damaged harness wires or connectors

DIAGNOSIS

Required Special Tools:

- MB991223: Harness Set
- MB992006: Extra Fine Probe
- MB991958: Scan Tool (M.U.T.-III Sub Assembly)
 - MB991824: V.C.I.
 - MB991827: M.U.T.-III USB Cable
 - MB991910: M.U.T.-III Main Harness A

STEP 1. Using scan tool MB991958, check for diagnostic trouble code.


Check if an heater control module DTC is set.

- (1) Connect scan tool MB991958 to the data link connector.
- (2) Turn the ignition switch to the "ON" position.
- (3) Check if the DTC is set.
- (4) Turn the ignition switch to the "LOCK" (OFF) position.

Q: Is the DTC set?

YES : Refer to DIAGNOSTIC TROUBLE CODE CHART
[P.55-10.](#)

NO : Go to Step 2.

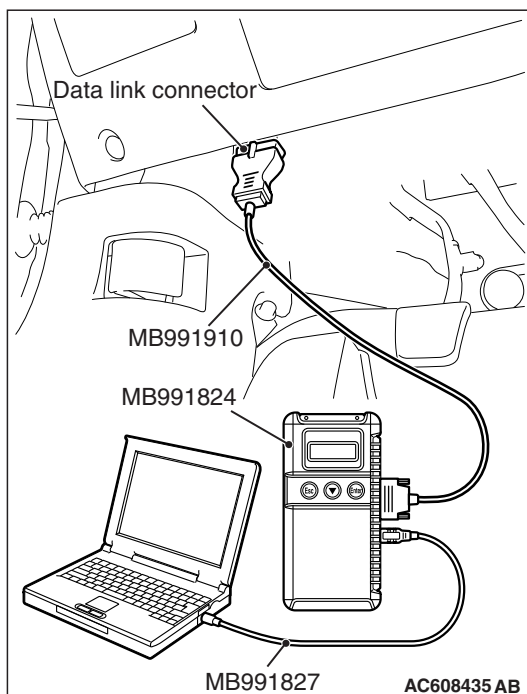

STEP 2. Check mode selection damper control motor connector C-112 and heater control module connector C-52 for loose, corroded or damaged terminals, or terminals pushed back in the connector.

Q: Are mode selection damper control motor connector C-112 and heater control module connector C-52 in good condition?

YES : Go to Step 3.

NO : Repair or replace the connector. Refer to GROUP 00E, Harness Connector Inspection [P.00E-2](#). Check that the A/C works normally.

STEP 3. Check the wiring harness between heater control module connector C-52 (terminal 29, 31, 32, 30 and 33) and mode selection damper control motor connector C-112 (terminals 3, 2, 5, 4 and 1).

- Check the heater control module signal line for open and short circuit.

Q: Are the wiring harness between heater control module connector C-52 (terminal 29, 31, 32, 30 and 33) and mode selection damper control motor connector C-112 (terminals 3, 2, 5, 4 and 1) in good condition?

YES : Go to Step 4.

NO : Repair the wiring harness. Check that the A/C works normally.

STEP 4. Replace the mode selection damper control motor and check the trouble symptom again
Check the trouble symptom again.


Q: Is the check result satisfactory?

YES : The procedure is complete.



NO : Replace the heater control module.

INSPECTION PROCEDURE 7: Blower motor power supply system. <Vehicles without A/C>

Blower Motor Circuit

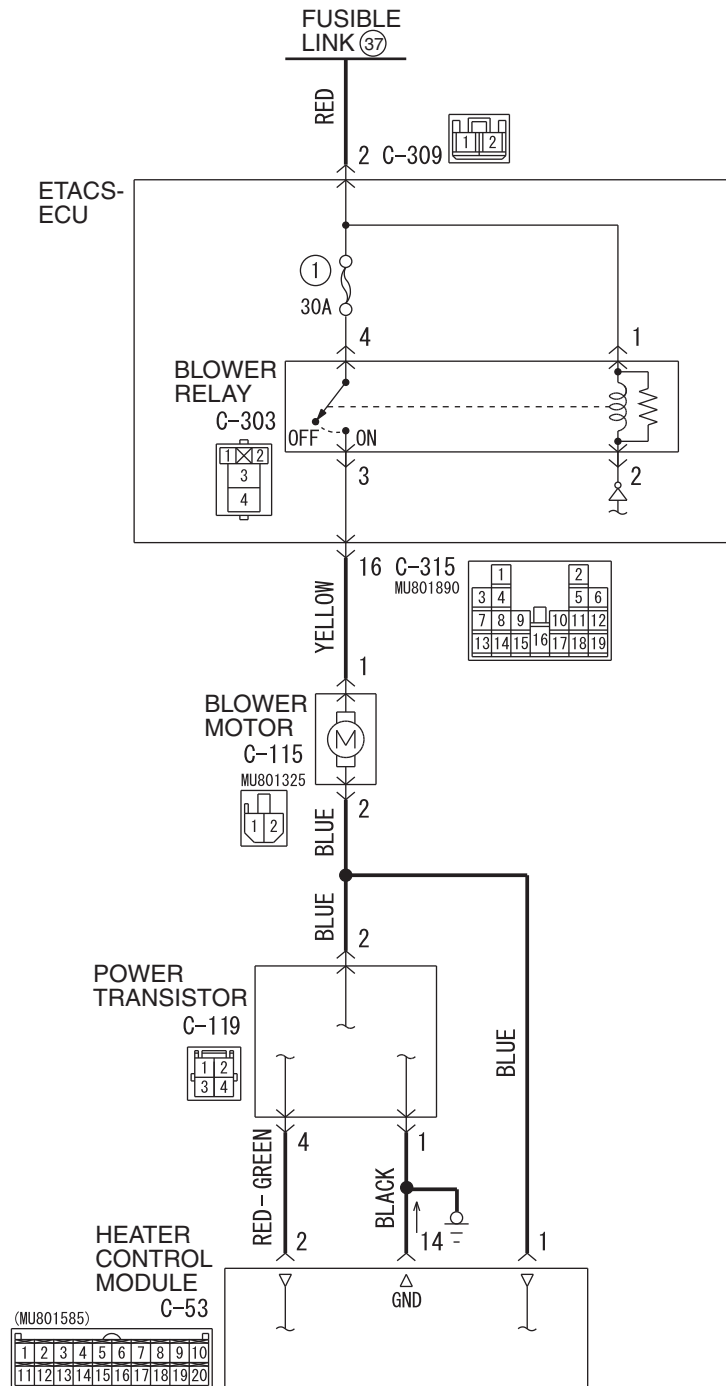

AC901604
 W8G55M010A

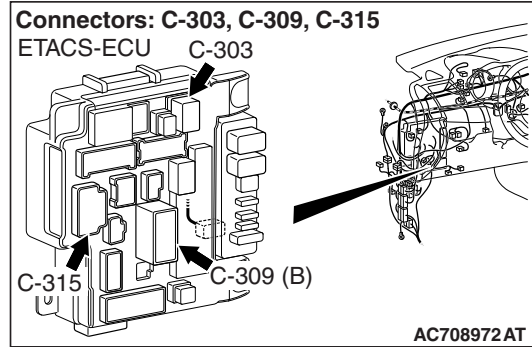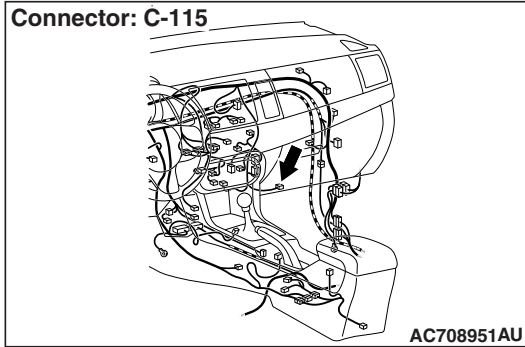

TECHNICAL DESCRIPTION (COMMENT)

If the voltage is not supplied to the blower motor, the blower relay system may be failed.

TROUBLESHOOTING HINTS

- Malfunction of the ETACS-ECU
- Malfunction of the blower relay
- Damaged harness wires or connectors

DIAGNOSIS

Required Special Tools:

- MB991223: Harness Set
- MB992006: Extra Fine Probe

STEP 1. Check blower relay connector C-303 for loose, corroded or damaged terminals, or terminals pushed back in the connector.

Q: Is blower relay connector C-303 in good condition?


YES : Go to Step 2.

NO : Repair or replace the connector. Refer to GROUP 00E, Harness Connector Inspection [P.00E-2](#).

STEP 2. Check the blower relay continuity.

Follow the table below to check the blower relay for continuity.

Battery voltage	Tester connection	Specified condition
Not applied	3 -4	Open circuit
<ul style="list-style-type: none"> Connect terminal 1 to the positive battery terminal Connect terminal 2 to the negative battery terminal 	3 -4	Less than 2 ohms

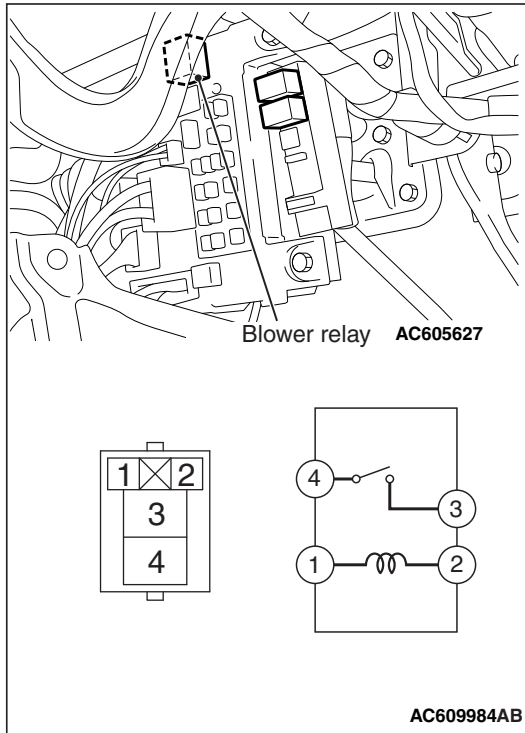


Q: Is the blower relay in good condition?

YES : Go to Step 3.

NO : Replace the rear window defogger relay.

STEP 3. Measure the voltage at blower relay connector C-303.

- Disconnect blower relay connector C-303, and measure the voltage at the junction block side.
 - The measured value should be approximately 12 volts (battery positive voltage).
- Measure the voltage between terminals 1 and ground.
 - The measured value should be approximately 12 volts (battery positive voltage).

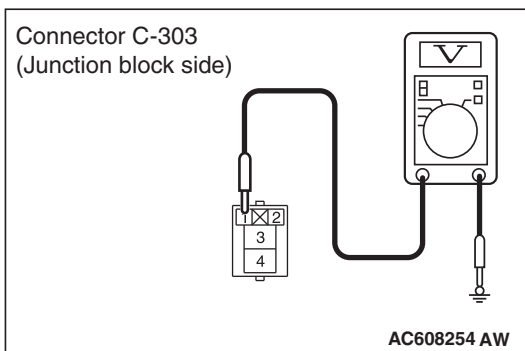


- Measure the voltage between terminals 4 and ground.
 - The measured value should be approximately 12 volts (battery positive voltage).

Q: Is the measured voltage approximately 12 volts?

YES : Go to Step 5.

NO : Go to Step 4.

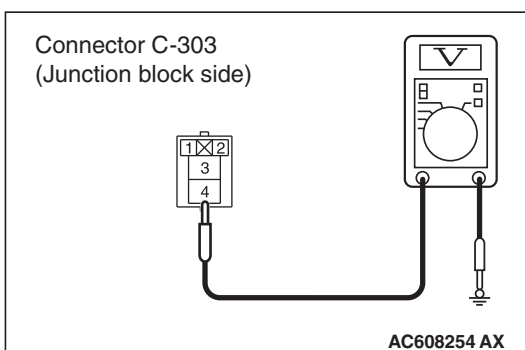

STEP 4. Check the wiring harness between blower relay connector C-303 (terminals 1 and 4) and the fusible link (37).

NOTE: Also check ETACS-ECU connector C-309 for loose, corroded, or damaged terminals, or terminals pushed back in the connector. If ETACS-ECU connector C-309 is damaged, repair or replace the connector as described in GROUP 00E, Harness Connector Inspection P.00E-2.

- Check the blower relay power supply line for open circuit.

Q: Is the wiring harness between blower relay connector C-303 (terminals 1 and 4) and the fusible link (37) in good condition?

YES : It can be assumed that this malfunction is intermittent. Refer to GROUP 00, How to Use Troubleshooting/Inspection Service Points –How to Cope with Intermittent Malfunctions P.00-15.

NO : Repair or replace the wiring harness. Refer to GROUP 00E, Harness Connector Inspection P.00E-2.

STEP 5. Check blower relay connector C-115 for loose, corroded or damaged terminals, or terminals pushed back in the connector.

Q: Is blower relay connector C-115 in good condition?

YES : Go to Step 6.

NO : Repair or replace the connector. Refer to GROUP 00E, Harness Connector Inspection P.00E-2.

STEP 6. Check the wiring harness between blower relay connector C-303 (terminal 3) and blower motor connector C-115 (terminal 1).

NOTE: Also check ETACS-ECU connector C-315 for loose, corroded, or damaged terminals, or terminals pushed back in the connector. If ETACS-ECU connector C-315 is damaged, repair or replace the connector as described in GROUP 00E, Harness Connector Inspection P.00E-2.

- Check the blower motor power supply line for open circuit.

Q: Is the wiring harness between blower relay connector C-303 (terminal 3) and blower motor connector C-115 (terminal 1) in good condition?

YES : It can be assumed that this malfunction is intermittent. Refer to GROUP 00, How to Use Troubleshooting/Inspection Service Points –How to Cope with Intermittent Malfunctions P.00-15.

NO : Repair or replace the wiring harness. Refer to GROUP 00E, Harness Connector Inspection P.00E-2.

SYMPTOM CHART

⚠ CAUTION

During diagnosis, a DTC code associated with other system may be set when the ignition switch is turned on with connector(s) disconnected. On completion, confirm all systems for DTC code(s). If DTC code(s) are set, erase them all.

Symptom	Inspection procedure	Reference page
When the A/C is operation, temperature inside the passenger compartment does not decrease (Cool air is not emitted).	1	P.55-121
Malfunction of the A/C-ECU power supply system.	2	P.55-124
The compressor does not work.	3	P.55-128
Blower fan and motor do not turn.	4	P.55-135
Blower air amount cannot be changed.	5	P.55-140
Outside/inside air changeover is not possible.	6	P.55-143
A/C outlet air temperature does not increase.	7	P.55-146
Air outlet vent cannot be changed.	8	P.55-148
Blower motor power supply system.	9	P.55-151

SYMPTOM PROCEDURES

INSPECTION PROCEDURE 1: When the A/C is Operation, Temperature Inside the Passenger Compartment does not Decrease (Cool Air is not Emitted).

TECHNICAL DESCRIPTION (COMMENT)

The blower system or the compressor system may be defective if there is no cool air coming from the vents.

TROUBLESHOOTING HINTS

- Malfunction of blower motor
- Malfunction of A/C-ECU
- Malfunction of A/C compressor

DIAGNOSIS

STEP 1. Using scan tool MB991958, read the diagnostic trouble code.

⚠ CAUTION

To prevent damage to scan tool MB991958, always turn the ignition switch to the "LOCK" (OFF) position before connecting or disconnecting scan tool MB991958.


Check if an A/C-ECU DTC is set.

- (1) Connect scan tool MB991958. Refer to "How to connect the Scan Tool (M.U.T.-III) P.55-7."
- (2) Turn the ignition switch to the "ON" position.
- (3) Check if the DTC is set.
- (4) Turn the ignition switch to the "LOCK" (OFF) position.

Q: Is the DTC set?

YES : Refer to Diagnostic Trouble Code Chart P.55-10.

NO : Go to Step 2.

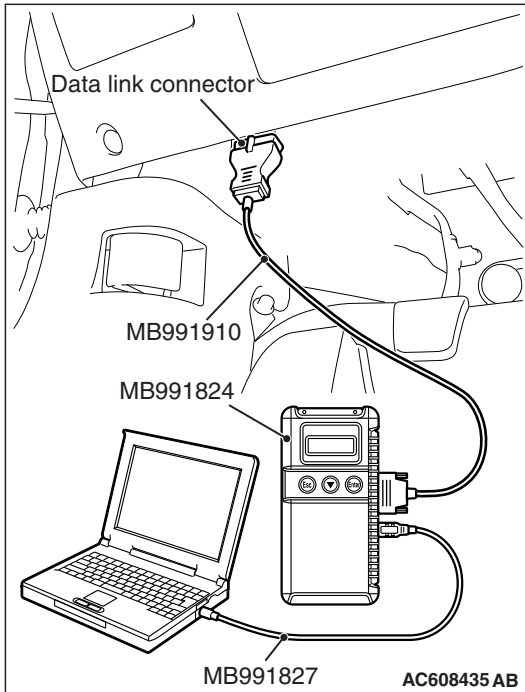

STEP 2. Check that the blower motor operation when the blower knob is moved to the "Maximum air volume" position.

- (1) Turn the ignition switch to the "ON" position.
- (2) Turn the blower knob to the "Maximum air volume" position

Q: Does the blower motor operate when the blower knob is moved to the "Maximum air volume" position?

YES : Go to Step 3.

NO : Refer to Inspection procedure 4 "Blower fan and motor do not turn P.55-101."

STEP 3. Check the rear window defogger and outside/inside air selection damper control motor operation.

- (1) Turn the ignition switch to the "ON" position.
- (2) Check the engine running.
- (3) Check the operations of rear window defogger and outside/inside air selection damper control motor.


Q: Do the rear window defogger and outside/inside air selection damper control motor work normally?

YES : Refer to Inspection procedure 3 "The A/C compressor does not Work [P.55-128](#)."



NO : Refer to Inspection procedure 2, "Malfunction of the A/C-ECU power supply system [P.55-124](#)."

INSPECTION PROCEDURE 2: Malfunction of the A/C-ECU Power Supply System.

A/C-ECU Power Supply Circuit

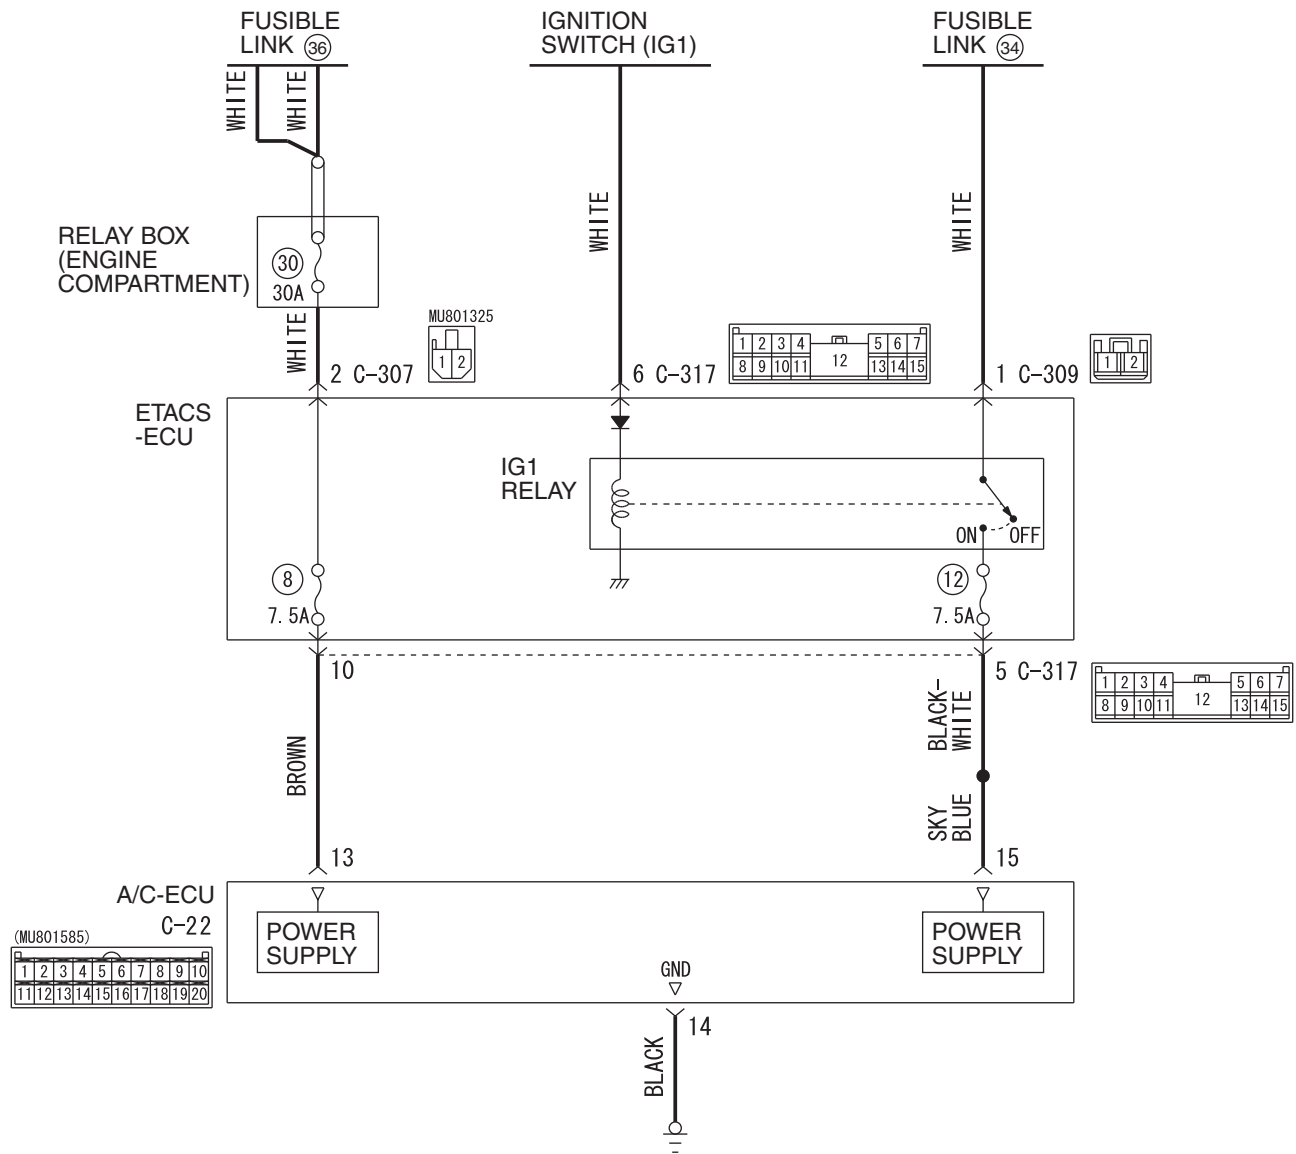

AC708617
 W8G55M011A

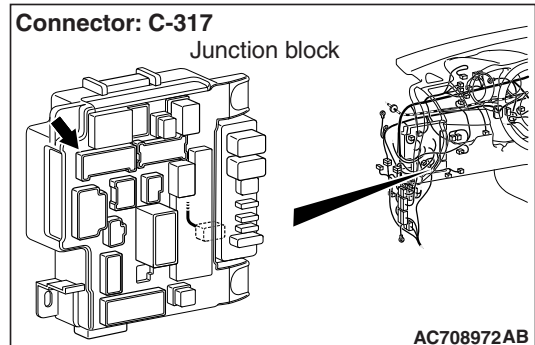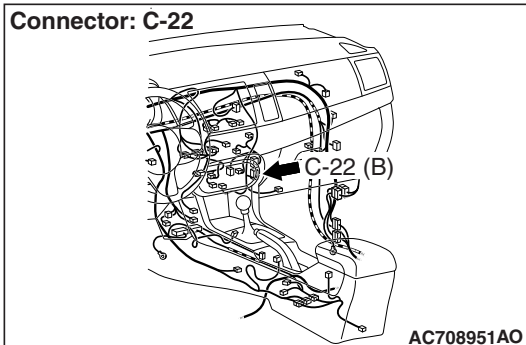

TECHNICAL DESCRIPTION (COMMENT)

The A/C-ECU power system may be defective if the air conditioning, defogger, and outside/inside air selection damper motor all do not operate normally.

TROUBLESHOOTING HINTS

- Malfunction of the A/C-ECU
- Damaged harness wires or connectors

DIAGNOSIS

Required Special Tool:

- MB991223: Test Harness Set

STEP 1. Check A/C-ECU connector C-22 for loose, corroded or damaged terminals, or terminals pushed back in the connector.

Q: Is A/C-ECU connector C-22 in good condition?

YES : Go to Step 2.

NO : Repair or replace the connector. Refer to GROUP 00E, Harness Connector Inspection P.00E-2. Check that the A/C works normally.


STEP 2. Measure the voltage at A/C-ECU connector C-22.

- (1) Disconnect A/C-ECU connector C-22 and measure the voltage at the harness side.
- (2) Turn the ignition switch to the "ON" position.
- (3) Measure the voltage between terminal 15 and ground.
 - The measured value should be approximately 12 volts (battery positive voltage).

Q: Is the measured voltage approximately 12 volts?

YES : Go to Step 5.

NO : Go to Step 3.

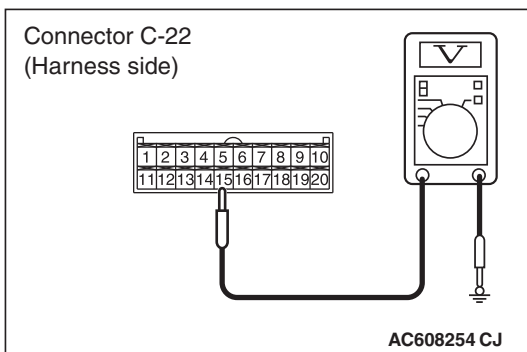

STEP 3. Check ETACS-ECU connector C-317 for loose, corroded or damaged terminals, or terminals pushed back in the connector.

Q: Is ETACS-ECU connector C-317 in good condition?

YES : Go to Step 4.

NO : Repair or replace the connector. Refer to GROUP 00E, Harness Connector Inspection P.00E-2. Check that the A/C works normally.

STEP 4. Check the wiring harness between A/C-ECU connector C-22 (terminal 15) and ETACS-ECU connector C-317 (terminal 5).

- Check the A/C-ECU power supply line for open circuit.

Q: Is the wiring harness between A/C-ECU connector C-22 (terminal 15) and ETACS-ECU connector C-317 (terminal 5) in good condition?

YES : It can be assumed that this malfunction is intermittent. Refer to GROUP 00, How to Use Troubleshooting/Inspection Service Points –How to Cope with Intermittent Malfunctions [P.00-15](#).

NO : Repair the wiring harness. Check that the A/C works normally.


STEP 5. Measure the voltage at A/C-ECU connector C-22.

- (1) Disconnect A/C-ECU connector C-22 and measure the voltage at the harness side.
- (2) Measure the voltage between terminal 13 and ground.
 - The measured value should be approximately 12 volts (battery positive voltage).

Q: Is the measured voltage approximately 12 V?

YES : Go to Step 7.

NO : Go to Step 6.

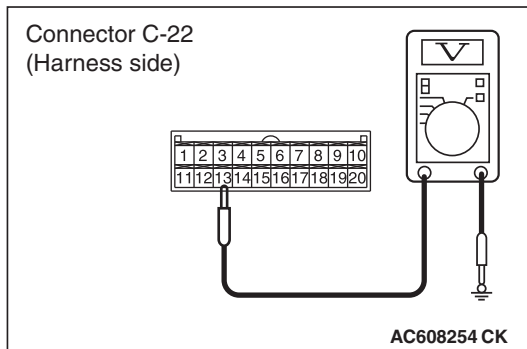

STEP 6. Check the wiring harness between A/C-ECU connector C-22 (terminal 13) and the fusible link (36).


NOTE: Also check ETACS-ECU connectors C-307 and C-317 for loose, corroded, or damaged terminals, or terminals pushed back in the connector. If ETACS-ECU connectors C-307 and C-317 is damaged, repair or replace the connector as described in GROUP 00E, Harness Connector Inspection [P.00E-2](#).

- Check the A/C-ECU power supply line for open circuit.

Q: Is the wiring harness between A/C-ECU connector C-22 (terminal 13) and the FUSIBLE LINK (36) in good condition?

YES : It can be assumed that this malfunction is intermittent. Refer to GROUP 00, How to Use Troubleshooting/Inspection Service Points –How to Cope with Intermittent Malfunctions [P.00-15](#).

NO : Repair the wiring harness. Check that the A/C works normally.

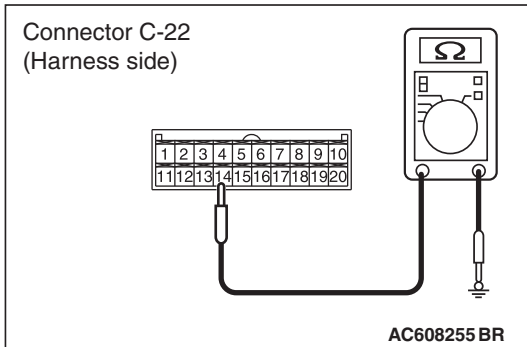

STEP 7. Measure the resistance at A/C-ECU connector C-22.

- (1) Disconnect A/C-ECU connector C-22, and measure at the wiring harness side.
- (2) Measure the resistance between terminal 14 and ground.
 - The measured value should be 2 ohms or less.

Q: Does the measured resistance value correspond with this range?

YES : Replace the A/C-ECU, and check that the A/C works normally.

NO : Go to Step 8.

STEP 8. Check the wiring harness between A/C-ECU connector C-22 (terminal 14) and the ground.

- Check the A/C-ECU ground line for open circuit.

Q: Is the wiring harness between A/C-ECU connector C-22 (terminal 14) and ground in good condition?


YES : It can be assumed that this malfunction is intermittent. Refer to GROUP 00, How to Use

Troubleshooting/Inspection Service Points –How to Cope with Intermittent Malfunctions [P.00-15](#).




NO : Repair the wiring harness. Check that the A/C works normally.

INSPECTION PROCEDURE 3: The Compressor does not Work.

A/C Compressor Assembly Circuit

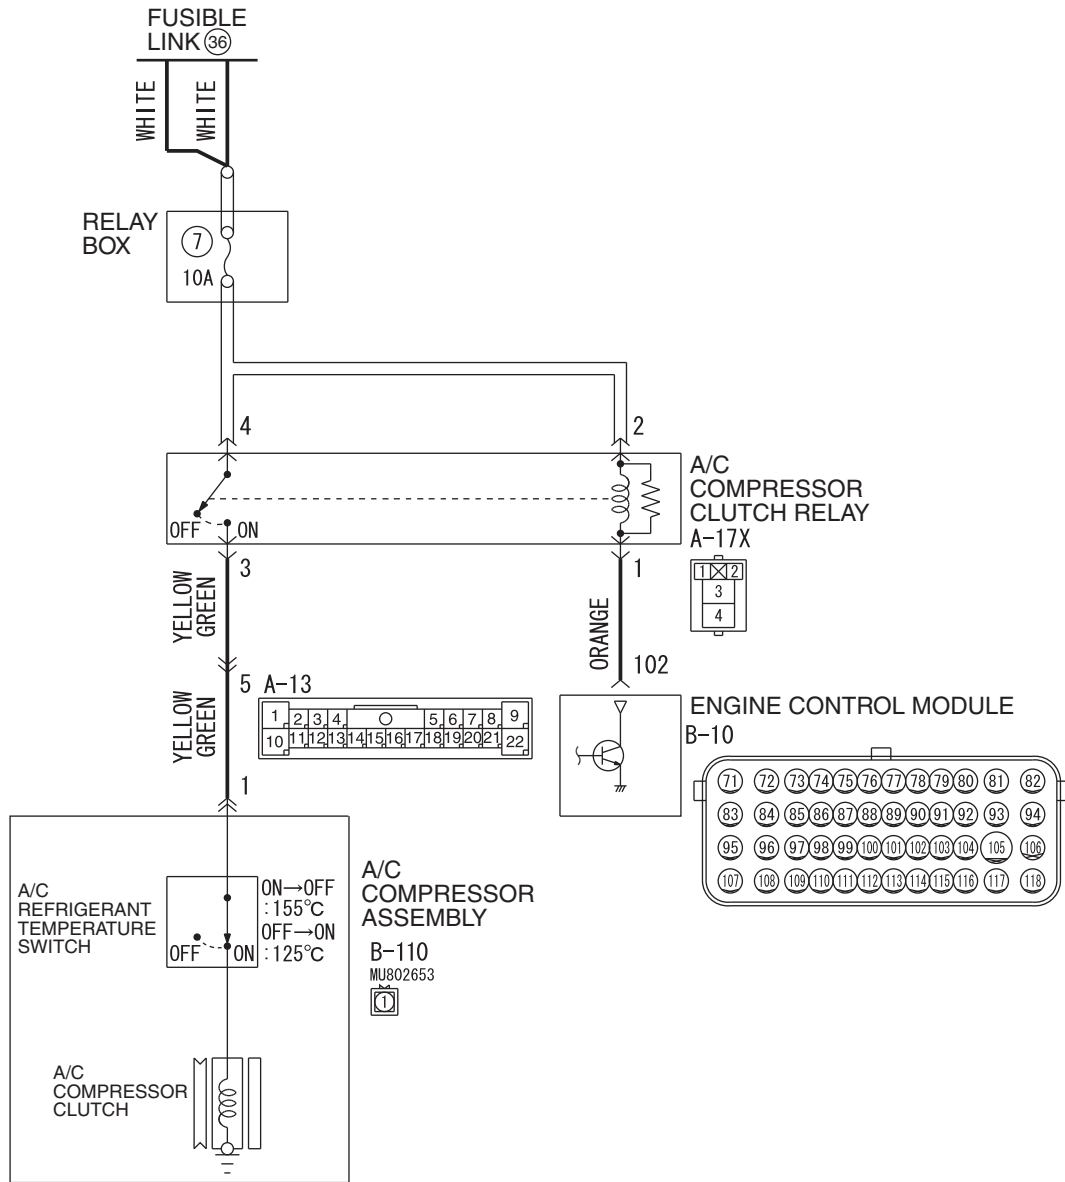

AC708618
 W8G55M009A

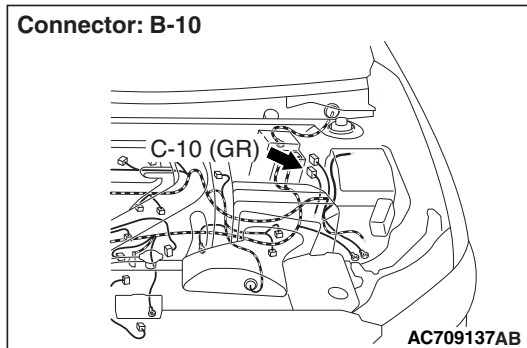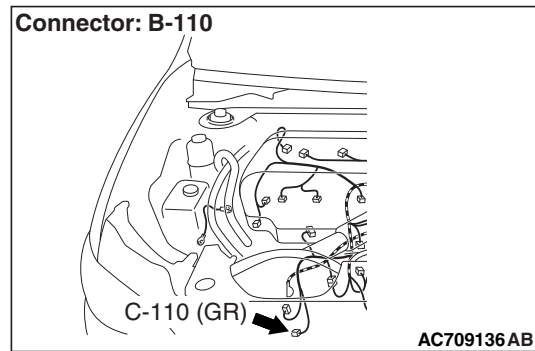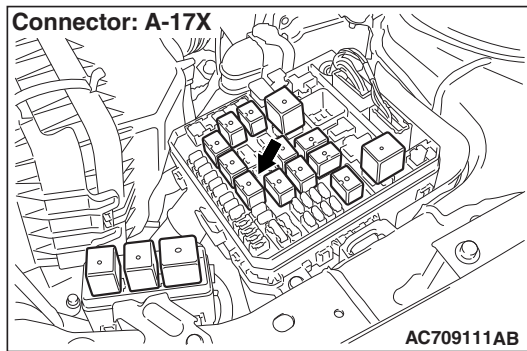

FUNCTION

Compressor that recovers the refrigerant, which evaporated in the evaporator and became a high-temperature and high-pressure gas, and turns it into liquid again.


PROBABLE CAUSES

- Insufficient refrigerant
- Malfunction of connector.
- Malfunction of the harness (A/C compressor circuit is open/shorted to ground)
- Malfunction of the A/C pressure sensor.
- Malfunction of the A/C compressor.
- Malfunction of the A/C compressor clutch relay.
- Malfunction of the A/C-ECU.

DIAGNOSIS

Required Special Tools:

- MB991223: Harness Set
- MB992006: Extra Fine Probe
- MB991658: Test Harness Set
- MB991958: Scan Tool (M.U.T.-III Sub Assembly)
 - MB991824: V.C.I.
 - MB991827: M.U.T.-III USB Cable
 - MB991910: M.U.T.-III Main Harness A

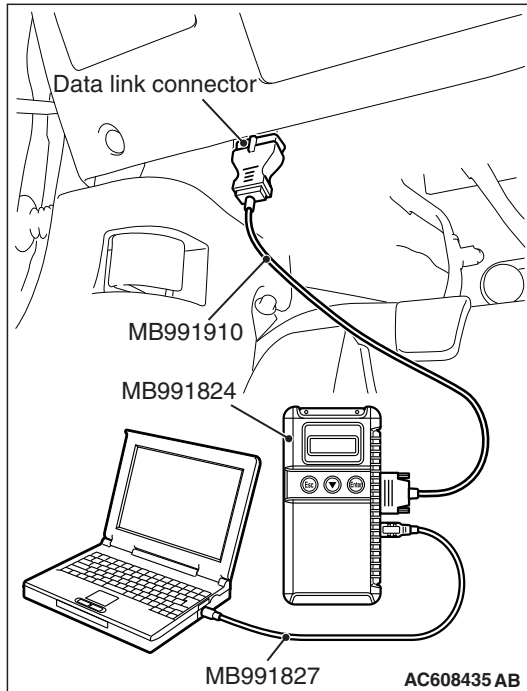

STEP 1. Using scan tool MB991958, diagnose the CAN bus line.

⚠ CAUTION

To prevent damage to scan tool MB991958, always turn the ignition switch to the "LOCK" (OFF) position before connecting or disconnecting scan tool MB991958.

- (1) Connect scan tool MB991958. Refer to "How to connect the Scan Tool (M.U.T.-III) P.55-7."
- (2) Turn the ignition switch to the "ON" position.
- (3) Diagnose the CAN bus line.
- (4) Turn the ignition switch to the "LOCK" (OFF) position.

Q: Is the CAN bus line found to be normal?

YES : Go to Step 2.

NO : Repair the CAN bus lines (Refer to GROUP 54C, precautions on how to repair the CAN bus lines P.54C-15).

STEP 2. Using scan tool MB991958, read the diagnostic trouble code.

Check if an A/C-ECU DTC is set.

- (1) Connect scan tool MB991958 to the data link connector.
- (2) Turn the ignition switch to the "ON" position.
- (3) Check if the DTC is set.
- (4) Turn the ignition switch to the "LOCK" (OFF) position.

Q: Is the DTC set?

YES : Refer to Diagnostic Trouble Code Chart P.55-10.


NO : Go to Step 3.

STEP 3. Check A/C compressor assembly connector B-110 for loose, corroded or damaged terminals, or terminals pushed back in the connector.

Q: Is A/C compressor assembly connector B-110 in good condition?

YES : Go to Step 4.

NO : Repair or replace the connector. Refer to GROUP 00E, Harness Connector Inspection P.00E-2.

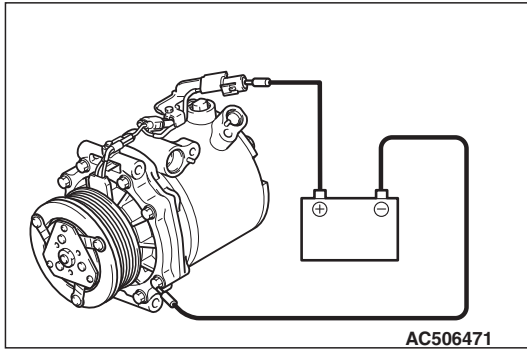

STEP 4. Check the A/C compressor clutch operation.

Connect the compressor connector terminal to the battery positive (+) terminal and ground the battery's negative (-) terminal to the compressor unit. At that time, the A/C compressor clutch should make a definite operating sound.

Q: Can the sound (click) of the A/C compressor clutch operation be heard?

YES : Go to Step 5.

NO : Replace the compressor magnet clutch.

STEP 5. Check A/C compressor clutch relay connector A-17X for loose, corroded or damaged terminals, or terminals pushed back in the connector.


Q: Is A/C compressor clutch relay connector A-17X in good condition?

YES : Go to Step 6.

NO : Repair or replace the connector. Refer to GROUP 00E, Harness Connector Inspection [P.00E-2](#).

STEP 6. Check the A/C compressor clutch relay continuity.

Follow the table below to check the A/C compressor clutch relay for continuity.

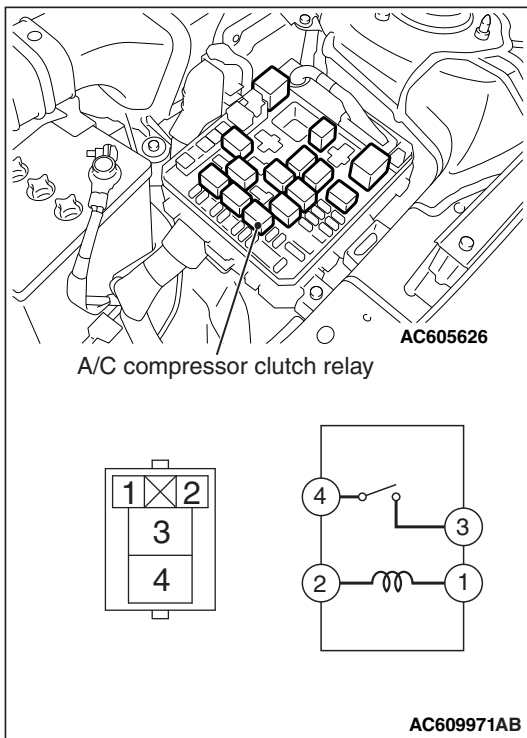

Battery voltage	Tester connection	Specified condition
Not applied	3 -4	Open circuit
<ul style="list-style-type: none"> Connect terminal 2 to the positive battery terminal Connect terminal 1 to the negative battery terminal 	3 -4	Less than 2 ohms

Q: Is the A/C compressor clutch relay in good condition?

YES : Go to Step 7.

NO : Replace the A/C compressor clutch relay.

STEP 7. Check engine control module connector B-10 for loose, corroded or damaged terminals, or terminals pushed back in the connector.

Q: Is engine control module connector B-10 in good condition?

YES : Go to Step 8.

NO : Repair or replace the connector. Refer to GROUP 00E, Harness Connector Inspection [P.00E-2](#).


STEP 8. Measure the voltage at A/C compressor assembly connector B-10.

- (1) Disconnect A/C compressor assembly connector B-10 and measure the voltage at the wiring harness side.
- (2) Disconnect engine control module connector B-10 and ground harness side terminal No.102.
- (3) Turn the ignition switch to the "ON" position.
- (4) A/C compressor assembly connector B-110 terminal 1 and ground.
 - The measured value should be approximately 12 volts (battery positive voltage).

Q: Is the measured voltage approximately 12 volts?

YES : Go to Step 13.

NO : Go to Step 9.

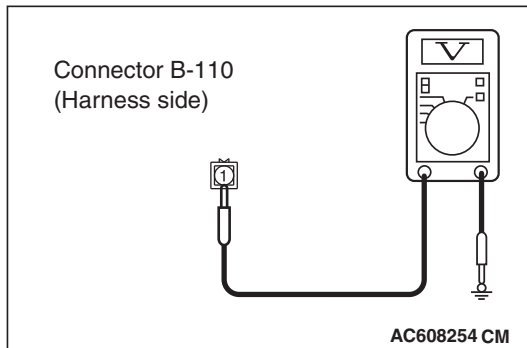


STEP 9. Measure the voltage at A/C compressor clutch relay connector A-17X.

- (1) Disconnect A/C compressor connector A-17X and measure the voltage at the relay box side.
- (2) Turn the ignition switch to the "ON" position.
- (3) Measure the voltage between terminal 4 and ground.
 - The measured value should be approximately 12 volts (battery positive voltage).
- (4) Measure the voltage between terminal 2 and ground.
 - The measured value should be approximately 12 volts (battery positive voltage).

Q: Is the measured voltage approximately 12 volts?

YES : Go to Step 11.

NO : Go to Step 10.

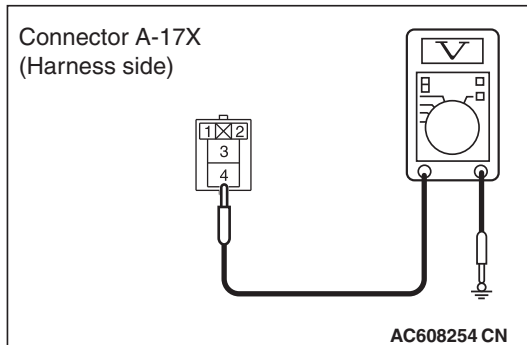

STEP 10. Check the wiring harness between A/C compressor clutch relay connector A-17X (terminals 2 and 4) and the fusible link (36).

- Check the A/C compressor clutch relay power supply line for open circuit.

Q: Is the wiring harness between A/C compressor clutch relay connector A-17X (terminals 2 and 4) and the fusible link (36) in good condition?

YES : It can be assumed that this malfunction is intermittent.
Refer to GROUP 00, How to Use
Troubleshooting/Inspection Service Points –How to Cope with Intermittent Malfunctions [P.00-15](#).

NO : Repair the wiring harness. Check that the A/C works normally.

STEP 11. Check the wiring harness between A/C compressor clutch relay connector A-17X (terminal 3) and A/C compressor assembly connector B-110 (terminal 1).

- Check the A/C compressor assembly power supply line for open circuit.

Q: Is the wiring harness between A/C compressor clutch relay connector A-17X (terminal 3) and A/C compressor assembly connector B-110 (terminal 1) in good condition?

YES : Go to Step 12.

NO : Repair the wiring harness. Check that the A/C works normally.



STEP 12. Check the wiring harness between engine control module connector B-10 (terminal 102) and A/C compressor clutch relay connector A-17X (terminal 1).

- Check the powertrain control module signal line for open and short circuit.

Q: Is the wiring harness between engine control module connector B-10 (terminal 102) and A/C compressor clutch relay connector A-17X (terminal 1) in good condition?

YES : It can be assumed that this malfunction is intermittent.
Refer to GROUP 00, How to Use
Troubleshooting/Inspection Service Points –How to Cope with Intermittent Malfunctions [P.00-15](#).

NO : Repair the wiring harness. Check that the A/C works normally.

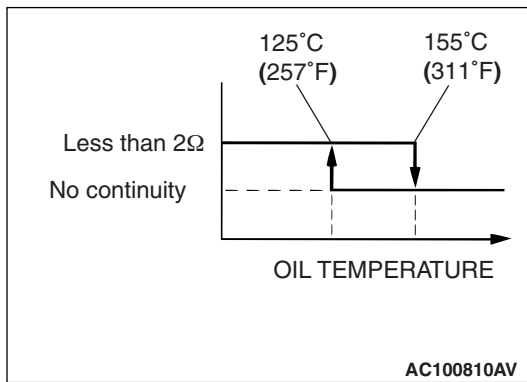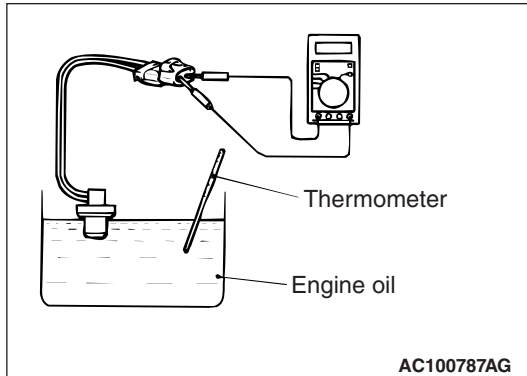**STEP 13. Check the refrigerant temperature switch.****⚠ CAUTION****Do not heat more than necessary.**

- (1) Dip the metal part of the cooling temperature switch into engine oil and increase the oil temperature using a gas burner or similar.

- (2) When the oil temperature reaches the standard value, check that resistance is supplied between the terminals.

Standard value:


Item	Temperature
Less than 2 ohms	Slightly below 125° C (257° F)
No continuity	155° C (311° F) or more

NOTE: When the oil temperature is 155° C (311° F) or more and there is no continuity, the resistance will not be 2Ω or lower until the oil temperature reduces to 125° C (257° F) or less.


Q: Is the refrigerant temperature switch operating properly?**YES :** Go to Step 14.**NO :** Replace the refrigerant temperature switch. Check that the A/C works normally.**STEP 14. Replace the A/C-ECU.****Q: Does the A/C operate normally?****YES :** No action is necessary and testing is complete.**NO :** Replace the engine control module. Check that the A/C works normally.

INSPECTION PROCEDURE 4: Blower Fan and Motor do not Turn.

Blower Motor Circuit

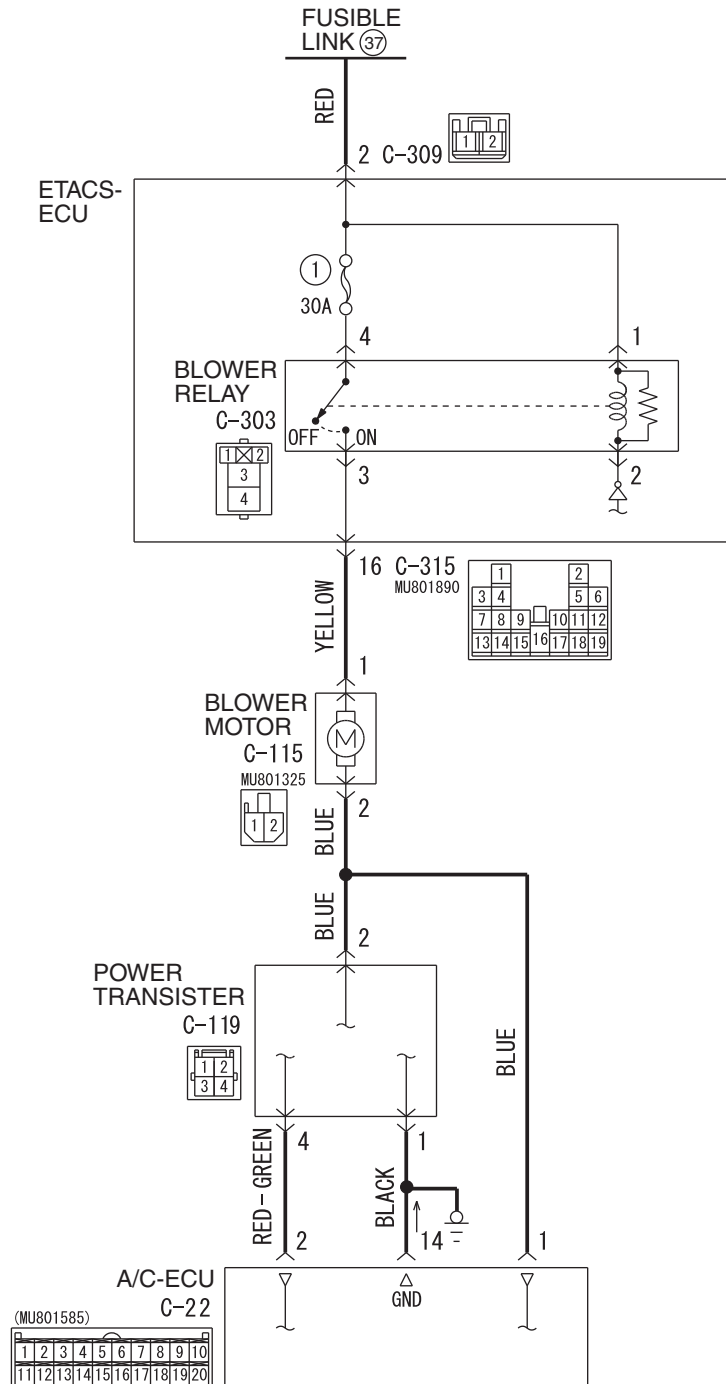

AC708621
 W8G55M010A

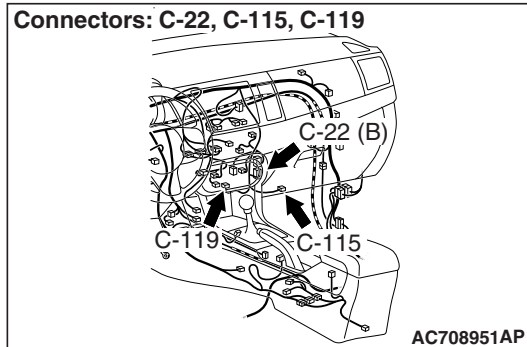

CIRCUIT OPERATION

If the blower motor does not operate, the blower relay system is suspected.

TROUBLESHOOTING HINTS

- Malfunction of the power transistor
- Malfunction of the blower motor
- Malfunction of the A/C-ECU
- Damaged harness wires or connectors

DIAGNOSIS

Required Special Tools:


- MB991223: Harness Set
- MB992006: Extra Fine Probe

STEP 1. Check blower motor connector C-115 for loose, corroded or damaged terminals, or terminals pushed back in the connector.

Q: Is blower motor connector C-115 in good condition?

YES : Go to Step 2.

NO : Repair or replace the connector. Refer to GROUP 00E, Harness Connector Inspection [P.00E-2](#). The blower motor should operate normally.

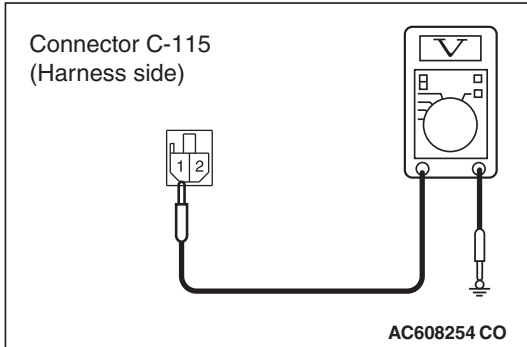

STEP 2. Measure the voltage at blower motor connector C-115.

- (1) Disconnect blower motor connector C-115, and measure the voltage at the wiring harness side.
- (2) Turn the ignition switch to the "ON" position.
- (3) Turn the blower switch to the "Maximum air volume" position.
- (4) Measure the voltage between terminal 1 and ground.
 - The measured value should be approximately 12 volts (battery positive voltage).

Q: Is the measured voltage approximately 12 volts?

YES : Go to Step 3.


NO : Refer to Inspection procedure 9, "Blower motor power supply system [P.55-151](#)."

STEP 3. Check blower motor connector C-115 for loose, corroded or damaged terminals, or terminals pushed back in the connector.

Q: Is blower motor connector C-115 in good condition?

YES : Go to Step 4.

NO : Repair or replace the connector. Refer to GROUP 00E, Harness Connector Inspection [P.00E-2](#). The blower motor should operate normally.

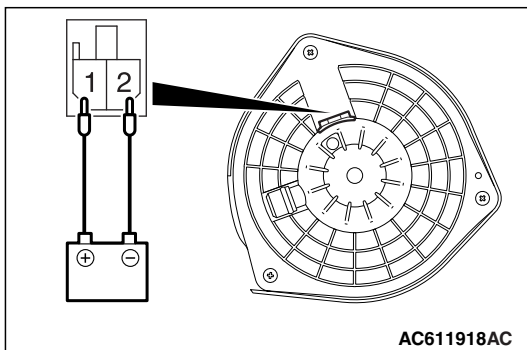

STEP 4. Check the blower fan and motor operation.

Check that the motor turns when applying battery power between the connector terminals. Also check to see that there is no abnormal sound emitted from the motor at this time..

Q: Is there any abnormal noise?

YES : Go to Step 5.

NO : Replace the blower relay. The blower motor should operate normally.

STEP 5. Check A/C-ECU connector C-22 for loose, corroded or damaged terminals, or terminals pushed back in the connector.

Q: Is A/C-ECU connector C-22 in good condition?

YES : Go to Step 6.

NO : Repair or replace the connector. Refer to GROUP 00E, Harness Connector Inspection [P.00E-2](#). The blower motor should operate normally.

STEP 6. Check the wiring harness between A/C-ECU connector C-22 (terminal 1) and blower motor connector C-115 (terminal 2).

- Check the A/C-ECU signal line for open and short circuit.

Q: Is the wiring harness between A/C-ECU connector C-22 (terminal 1) and blower motor connector C-115 (terminal 2) in good condition?

YES : Go to Step 7.

NO : Repair the wiring harness. The blower motor should operate normally.

STEP 7. Check power transistor connector C-119 for loose, corroded or damaged terminals, or terminals pushed back in the connector.

Q: Is power transistor connector C-119 in good condition?

YES : Go to Step 8.

NO : Repair or replace the connector. Refer to GROUP 00E, Harness Connector Inspection P.00E-2. The blower motor should operate normally.

STEP 8. Measure the resistance at power transistor connector C-119.


- (1) Disconnect power transistor connector C-119, and measure the resistance at the wiring harness side.
- (2) Measure the resistance value between terminal 1 and ground.

OK: The measured value should be 2 ohms or less

Q: Does the measured resistance value correspond with this range?

YES : Go to Step 10.

NO : Go to Step 9.

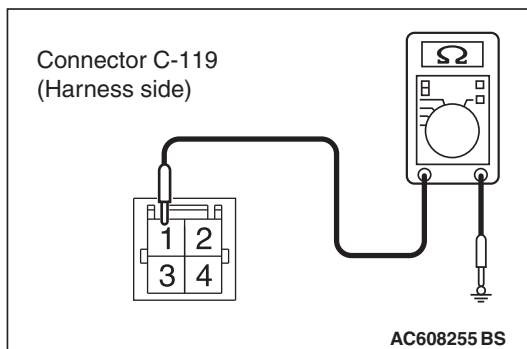

STEP 9. Check the wiring harness between power transistor connector C-119 (terminal 1) and ground.

- Check the power transistor ground line for open circuit.

Q: Is the wiring harness between power transistor connector C-119 (terminal 1) and ground in good condition?

YES : It can be assumed that this malfunction is intermittent. Refer to GROUP 00, How to Use Troubleshooting/Inspection Service Points –How to Cope with Intermittent Malfunctions P.00-15.

NO : Repair the wiring harness. The blower motor should operate normally.

STEP 10. Check the wiring harness between A/C-ECU connector C-22 (terminals 1 and 2) and power transistor connector C-119 (terminals 2 and 4).

- Check the A/C-ECU signal line for open and short circuit.

Q: Is the wiring harness between A/C-ECU connector C-22 (terminals 1 and 2) and power transistor connector C-119 (terminals 2 and 4) in good condition?

YES : Go to Step 11.

NO : Repair the wiring harness. The blower motor should operate normally.

STEP 11. Replace the power transistor and check the trouble symptom again

Check the trouble symptom again.


Q: Is the check result satisfactory?

YES : The procedure is complete.


NO : Replace the A/C-ECU.

INSPECTION PROCEDURE 5: Blower Air Amount cannot be Changed.

Blower Motor Circuit

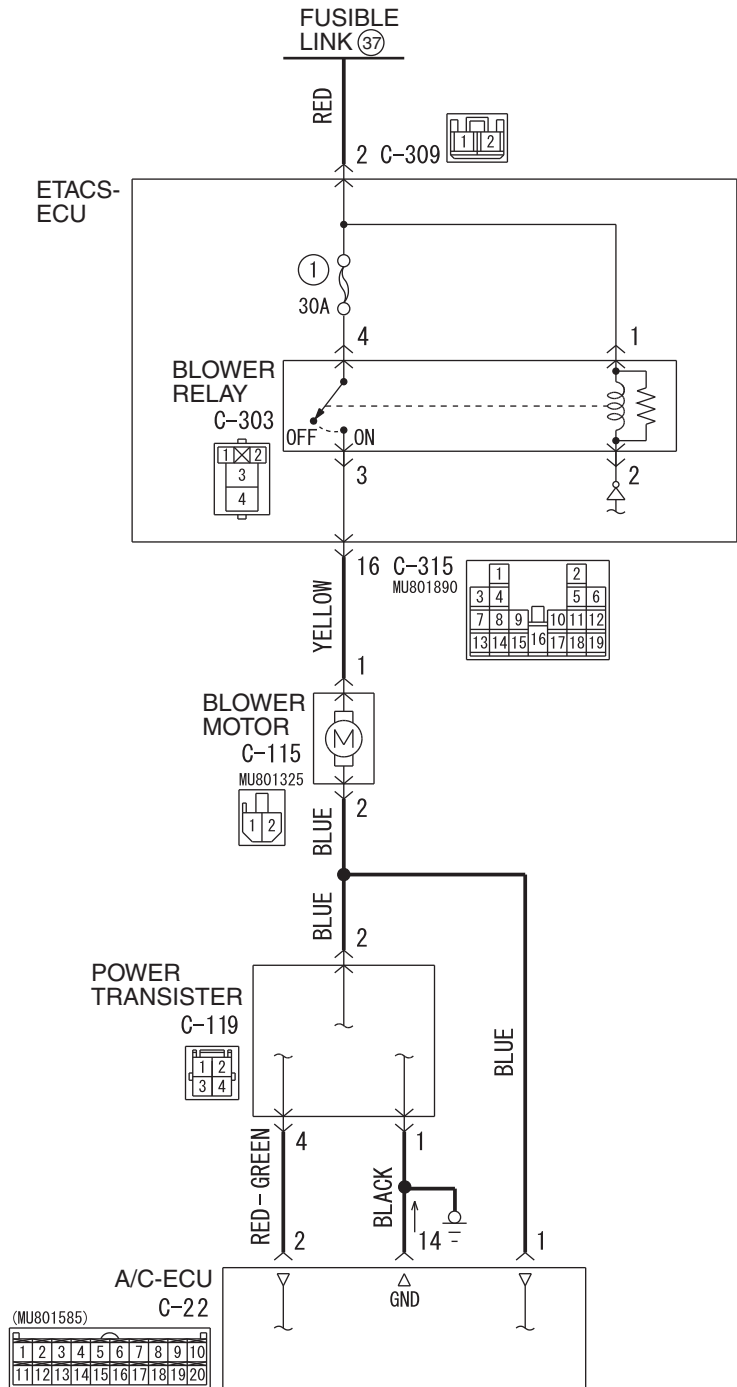

AC708621
 W8G55M010A

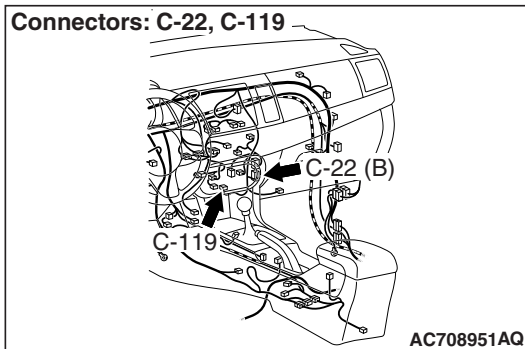

CIRCUIT OPERATION

If the blower motor speed cannot be changed, the power transistor circuit is suspected.

TROUBLESHOOTING HINTS

- Malfunction of the power transistor
- Malfunction of the A/C-ECU
- Damaged harness wires or connectors

DIAGNOSIS

Required Special Tools:

- MB991223: Harness Set
- MB992006: Extra Fine Probe

STEP 1. Check power transistor connector C-119 for loose, corroded or damaged terminals, or terminals pushed back in the connector.

Q: Is power transistor connector C-119 in good condition?

YES : Go to Step 2.

NO : Repair or replace the connector. Refer to GROUP 00E, Harness Connector Inspection [P.00E-2](#). The blower motor should operate normally.

STEP 2. Measure the resistance at power transistor connector C-119.


- (1) Disconnect power transistor connector C-119, and measure the resistance at the wiring harness side.
- (2) Measure the resistance value between terminal 1 and ground.

OK: The measured value should be 2 ohms or less

Q: Does the measured resistance value correspond with this range?

YES : Go to Step 4.

NO : Go to Step 3.

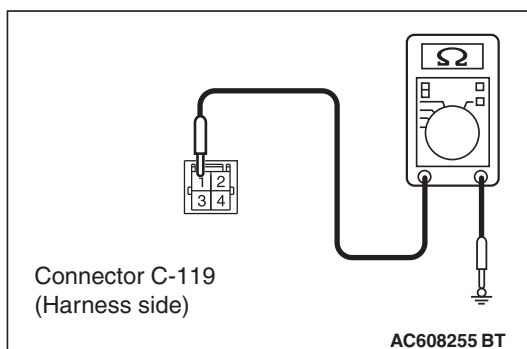

STEP 3. Check the wiring harness between power transistor connector C-119 (terminal 1) and ground.

- Check the power transistor ground line for open circuit.

Q: Is the wiring harness between power transistor connector C-119 (terminal 1) and ground in good condition?

YES : It can be assumed that this malfunction is intermittent. Refer to GROUP 00, How to Use Troubleshooting/Inspection Service Points –How to Cope with Intermittent Malfunctions [P.00-15](#).

NO : Repair the wiring harness. The blower motor should operate normally.

STEP 4. Check A/C-ECU connector C-22 for loose, corroded or damaged terminals, or terminals pushed back in the connector.**Q: Is A/C-ECU connector C-22 in good condition?**

YES : Go to Step 5.

NO : Repair or replace the connector. Refer to GROUP 00E, Harness Connector Inspection [P.00E-2](#).The blower motor should operate normally.

STEP 5. Check the wiring harness between A/C-ECU connector C-22 (terminals 1 and 2) and power transistor connector C-119 (terminals 2 and 4).

- Check the A/C-ECU signal line for open and short circuit.

Q: Is the wiring harness between A/C-ECU connector C-22 (terminals 1 and 2) and power transistor connector C-119 (terminals 2 and 4) in good condition?

YES : Go to Step 6.

NO : Repair the wiring harness. The blower motor should operate normally.

STEP 6. Replace the power transistor and check the trouble symptom again

Check the trouble symptom again.


Q: Is the check result satisfactory?

YES : The procedure is complete.


NO : Replace the A/C-ECU.

INSPECTION PROCEDURE 6: Outside/Inside Air Changeover is not possible.

Outside/Inside Damper Control Motor Circuit

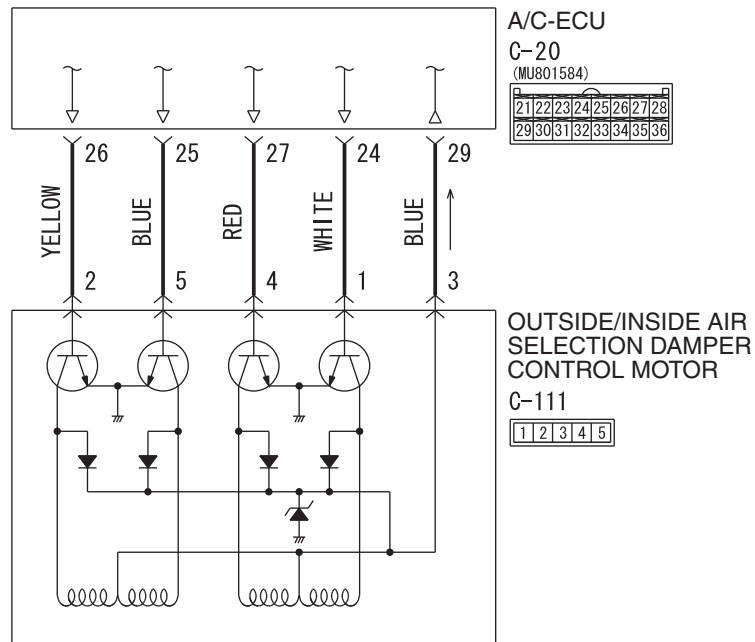

AC708622
 W8G55M007A

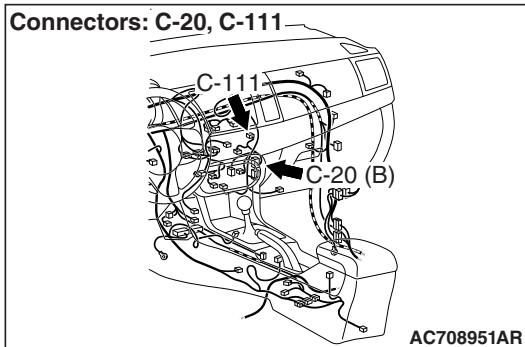

CIRCUIT OPERATION

If the outside/inside air selection damper control motor does not operate normally, the outside/inside air selection damper control motor system may be defective.

TROUBLESHOOTING HINTS

- Malfunction of the outside/inside air selection damper control motor
- Malfunction of the A/C-ECU
- Damaged harness wires or connectors

DIAGNOSIS**Required Special Tools:**

- MB991223: Harness Set
- MB992006: Extra Fine Probe
- MB991958: Scan Tool (M.U.T.-III Sub Assembly)
 - MB991824: V.C.I.
 - MB991827: M.U.T.-III USB Cable
 - MB991910: M.U.T.-III Main Harness A

STEP 1. Using scan tool MB991958, check for diagnostic trouble code.**⚠ CAUTION**

To prevent damage to scan tool MB991958, always turn the ignition switch to the "LOCK" (OFF) position before connecting or disconnecting scan tool MB991958.


Check if an A/C-ECU DTC is set.

- (1) Connect scan tool MB991958. Refer to "How to connect the Scan Tool (M.U.T.-III) P.55-7."
- (2) Turn the ignition switch to the "ON" position.
- (3) Check if the DTC is set.
- (4) Turn the ignition switch to the "LOCK" (OFF) position.

Q: Is the DTC set?

YES : Refer to DIAGNOSTIC TROUBLE CODE CHART P.55-10.

NO : Go to Step 2.

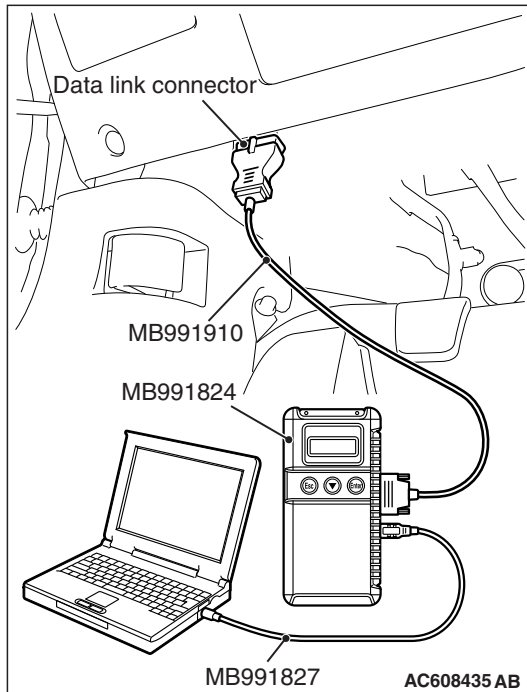**STEP 2. Check outside/inside air selection damper control motor connector C-111 and A/C-ECU connector C-20 for loose, corroded or damaged terminals, or terminals pushed back in the connector.****Q: Are outside/inside air selection damper control motor connector C-111 and A/C-ECU connector C-20 in good condition?**

YES : Go to Step 3.

NO : Repair or replace the connector. Refer to GROUP 00E, Harness Connector Inspection P.00E-2. Check that the A/C works normally.

STEP 3. Check the wiring harness between A/C-ECU connector C-20 (terminal 26, 25, 27, 24 and 29) and outside/inside air selection damper control motor connector C-111 (terminals 2, 5, 4, 1 and 3).

- Check the A/C-ECU signal line for open and short circuit.

Q: Are the wiring harness between A/C-ECU connector C-20 (terminal 26, 25, 27, 24 and 29) and outside/inside air selection damper control motor connector C-111 (terminals 2, 5, 4, 1 and 3) in good condition?

YES : Go to Step 4.

NO : Repair the wiring harness. Check that the A/C works normally.

STEP 4. Replace the outside/inside air selection damper control motor and check the trouble symptom again
Check the trouble symptom again.


Q: Is the check result satisfactory?

YES : The procedure is complete.


NO : Replace the A/C-ECU.

INSPECTION PROCEDURE 7: A/C Outlet Air Temperature does not Increase

Air Mixing Damper Control Motor Circuit

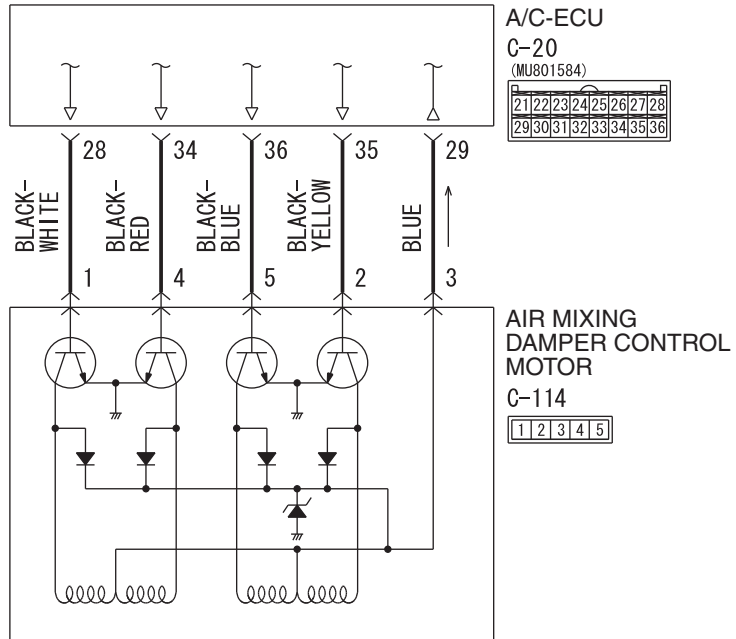

AC708623
 W8G55M008A

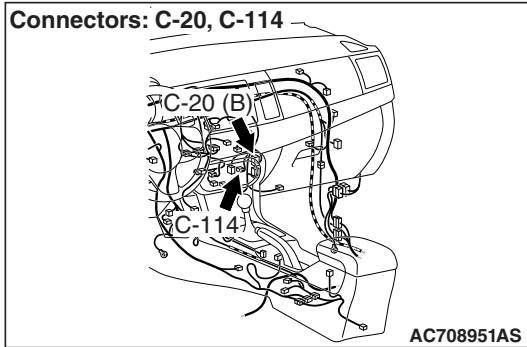

CIRCUIT OPERATION

If the air outlet temperature cannot be adjusted, the air mixing damper control motor circuit may be failed.

TROUBLESHOOTING HINTS

- Malfunction of the air mixing damper control motor
- Malfunction of the A/C-ECU
- Damaged harness wires or connectors

DIAGNOSIS

Required Special Tools:

- MB991223: Harness Set
- MB992006: Extra Fine Probe
- MB991958: Scan Tool (M.U.T.-III Sub Assembly)
 - MB991824: V.C.I.
 - MB991827: M.U.T.-III USB Cable
 - MB991910: M.U.T.-III Main Harness A

STEP 1. Using scan tool MB991958, check for diagnostic trouble code.

Check if an A/C-ECU DTC is set.


- (1) Connect scan tool MB991958 to the data link connector.
- (2) Turn the ignition switch to the "ON" position.
- (3) Check if the DTC is set.
- (4) Turn the ignition switch to the "LOCK" (OFF) position.

Q: Is the DTC set?

YES : Refer to DIAGNOSTIC TROUBLE CODE CHART

[P.55-121](#).

NO : Go to Step 2.

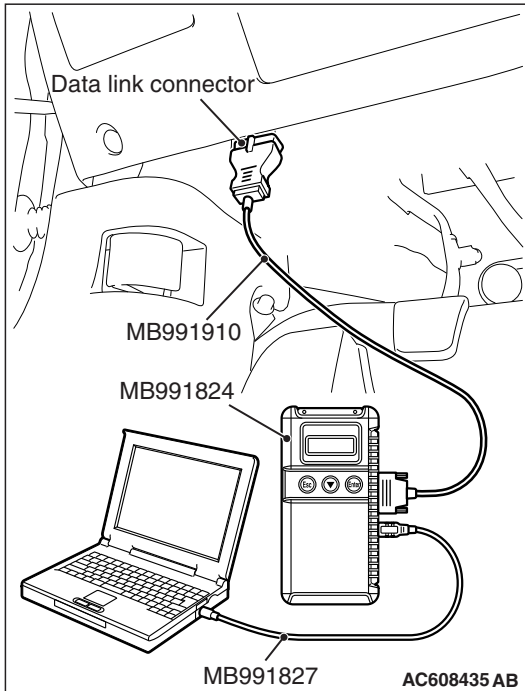

STEP 2. Check air mixing damper control motor connector C-114 and A/C-ECU connector C-20 for loose, corroded or damaged terminals, or terminals pushed back in the connector.

Q: Are air mixing damper control motor connector C-114 and A/C-ECU connector C-20 in good condition?

YES : Go to Step 3.

NO : Repair or replace the connector. Refer to GROUP 00E, Harness Connector Inspection [P.00E-2](#). Check that the A/C works normally.

STEP 3. Check the wiring harness between A/C-ECU connector C-20 (terminal 29, 35, 36, 34 and 28) and air mixing damper control motor connector C-114 (terminals 3, 2, 5, 4 and 1).

- Check the A/C-ECU signal line for open and short circuit.

Q: Are the wiring harness between A/C-ECU connector C-20 (terminal 29, 35, 36, 34 and 28) and air mixing damper control motor connector C-114 (terminals 3, 2, 5, 4 and 1) in good condition?

YES : Go to Step 4.

NO : Repair the wiring harness. Check that the A/C works normally.

STEP 4. Replace the air mixing damper control motor and check the trouble symptom again

Check the trouble symptom again.


Q: Is the check result satisfactory?


YES : The procedure is complete.

NO : Replace the A/C-ECU.

INSPECTION PROCEDURE 8: Air Outlet Vent cannot be Changed.

Mode Selection Damper Control Motor Circuit

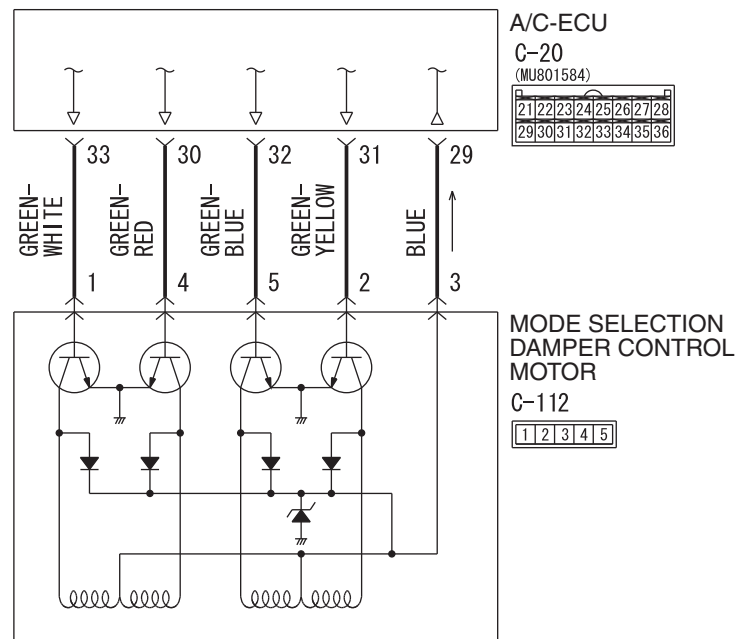

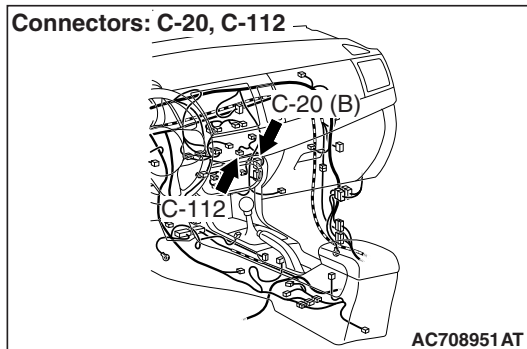

CIRCUIT OPERATION

If the air outlet cannot be switched, the mode selection damper control motor circuit may be failed.

TROUBLESHOOTING HINTS

- Malfunction of the mode selection damper control motor
- Malfunction of the A/C-ECU
- Damaged harness wires or connectors

DIAGNOSIS

Required Special Tools:

- MB991223: Harness Set
- MB992006: Extra Fine Probe
- MB991958: Scan Tool (M.U.T.-III Sub Assembly)
 - MB991824: V.C.I.
 - MB991827: M.U.T.-III USB Cable
 - MB991910: M.U.T.-III Main Harness A

STEP 1. Using scan tool MB991958, check for diagnostic trouble code.


Check if an A/C-ECU DTC is set.

- (1) Connect scan tool MB991958 to the data link connector.
- (2) Turn the ignition switch to the "ON" position.
- (3) Check if the DTC is set.
- (4) Turn the ignition switch to the "LOCK" (OFF) position.

Q: Is the DTC set?

YES : Refer to DIAGNOSTIC TROUBLE CODE CHART
[P.55-10.](#)

NO : Go to Step 2.

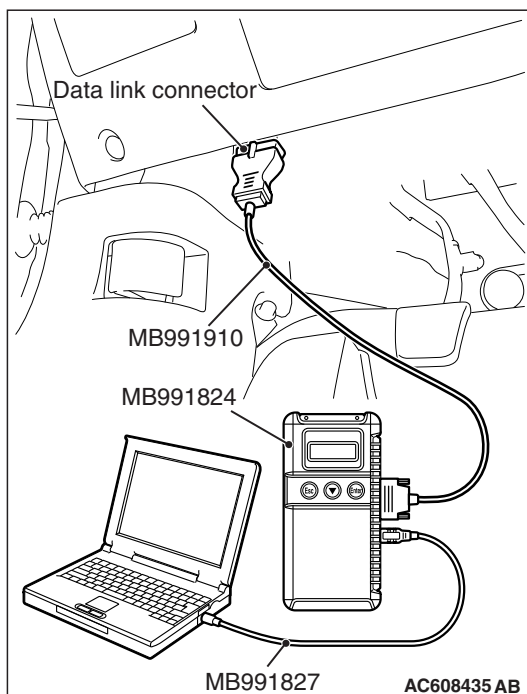

STEP 2. Check mode selection damper control motor connector C-112 and A/C-ECU connector C-20 for loose, corroded or damaged terminals, or terminals pushed back in the connector.

Q: Are mode selection damper control motor connector C-112 and A/C-ECU connector C-20 in good condition?

YES : Go to Step 3.

NO : Repair or replace the connector. Refer to GROUP 00E, Harness Connector Inspection [P.00E-2](#). Check that the A/C works normally.

STEP 3. Check the wiring harness between A/C-ECU connector C-20 (terminal 29, 31, 32, 30 and 33) and mode selection damper control motor connector C-112 (terminals 3, 2, 5, 4 and 1).

- Check the AC-ECU signal line for open and short circuit.

Q: Are the wiring harness between A/C-ECU connector C-20 (terminal 29, 31, 32, 30 and 33) and mode selection damper control motor connector C-112 (terminals 3, 2, 5, 4 and 1) in good condition?

YES : Go to Step 4.

NO : Repair the wiring harness. Check that the A/C works normally.

STEP 4. Replace the mode selection damper control motor and check the trouble symptom again

Check the trouble symptom again.


Q: Is the check result satisfactory?

YES : The procedure is complete.



NO : Replace the A/C-ECU.

INSPECTION PROCEDURE 9: Blower Motor power supply system.

Blower Motor Circuit

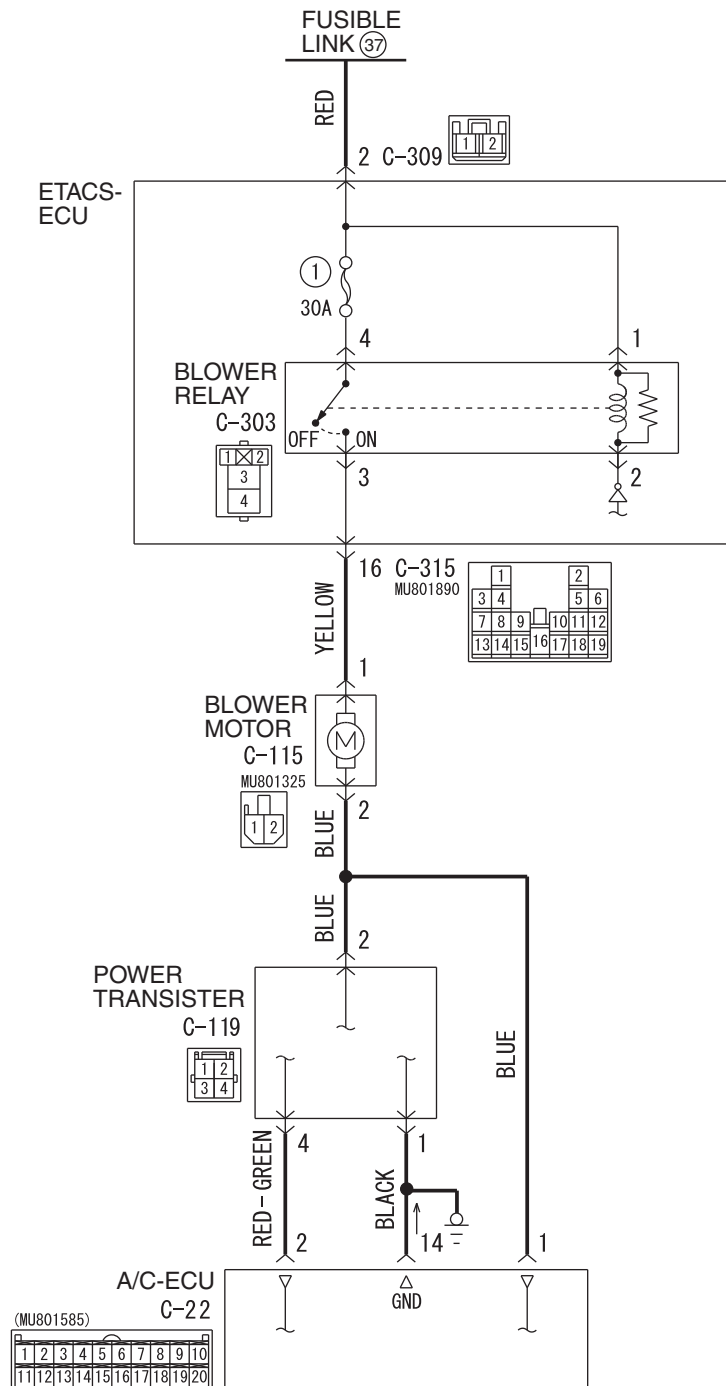

AC708621
 W8G55M010A

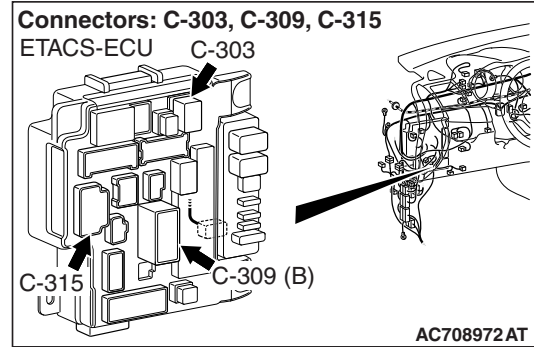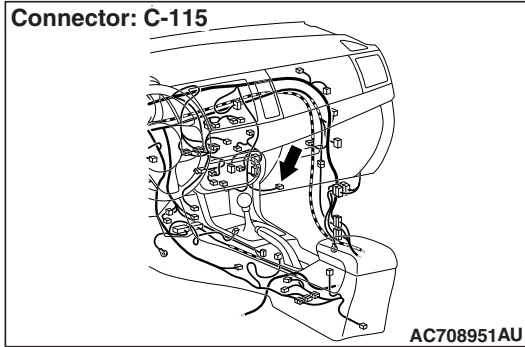

TECHNICAL DESCRIPTION (COMMENT)

If the voltage is not supplied to the blower motor, the blower relay system may be failed.

TROUBLESHOOTING HINTS

- Malfunction of the ETACS-ECU
- Malfunction of the blower relay
- Damaged harness wires or connectors

DIAGNOSIS

Required Special Tools:

- MB991223: Harness Set
- MB992006: Extra Fine Probe

STEP 1. Check blower relay connector C-303 for loose, corroded or damaged terminals, or terminals pushed back in the connector.

Q: Is blower relay connector C-303 in good condition?


YES : Go to Step 2.

NO : Repair or replace the connector. Refer to GROUP 00E, Harness Connector Inspection [P.00E-2](#).

STEP 2. Check the blower relay continuity.

Follow the table below to check the blower relay for continuity.

Battery voltage	Tester connection	Specified condition
Not applied	3 -4	Open circuit
<ul style="list-style-type: none"> Connect terminal 1 to the positive battery terminal Connect terminal 2 to the negative battery terminal 	3 -4	Less than 2 ohms

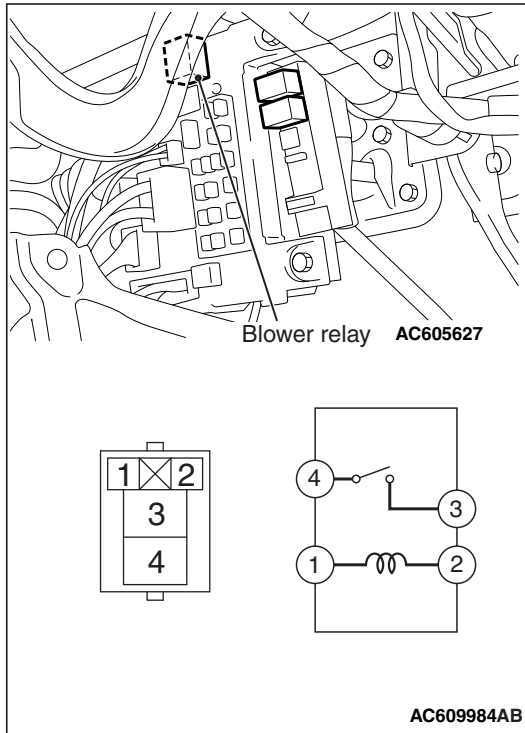


Q: Is the blower relay in good condition?

YES : Go to Step 3.

NO : Replace the rear window defogger relay.

STEP 3. Measure the voltage at blower relay connector C-303.

- Disconnect blower relay connector C-303, and measure the voltage at the junction block side.
 - Measure the voltage between terminals 1 and ground.
 - The measured value should be approximately 12 volts (battery positive voltage).

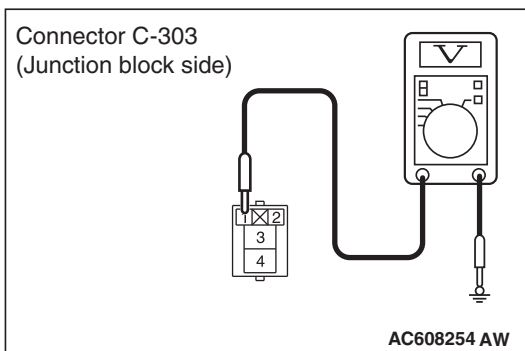


- Measure the voltage between terminals 4 and ground.
 - The measured value should be approximately 12 volts (battery positive voltage).

Q: Is the measured voltage approximately 12 volts?

YES : Go to Step 5.

NO : Go to Step 4.

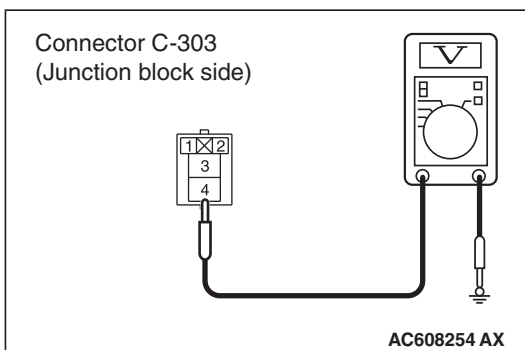

STEP 4. Check the wiring harness between blower relay connector C-303 (terminals 1 and 4) and the fusible link (37).

NOTE: Also check ETACS-ECU connector C-309 for loose, corroded, or damaged terminals, or terminals pushed back in the connector. If ETACS-ECU connector C-309 is damaged, repair or replace the connector as described in GROUP 00E, Harness Connector Inspection P.00E-2.

- Check the blower relay power supply line for open circuit.

Q: Is the wiring harness between blower relay connector C-303 (terminals 1 and 4) and the fusible link (37) in good condition?

YES : It can be assumed that this malfunction is intermittent. Refer to GROUP 00, How to Use Troubleshooting/Inspection Service Points –How to Cope with Intermittent Malfunctions P.00-15.

NO : Repair or replace the wiring harness. Refer to GROUP 00E, Harness Connector Inspection P.00E-2.

STEP 5. Check blower relay connector C-115 for loose, corroded or damaged terminals, or terminals pushed back in the connector.

Q: Is blower relay connector C-115 in good condition?

YES : Go to Step 6.

NO : Repair or replace the connector. Refer to GROUP 00E, Harness Connector Inspection P.00E-2.

STEP 6. Check the wiring harness between blower relay connector C-303 (terminal 3) and blower motor connector C-115 (terminal 1).

NOTE: Also check ETACS-ECU connector C-315 for loose, corroded, or damaged terminals, or terminals pushed back in the connector. If ETACS-ECU connector C-315 is damaged, repair or replace the connector as described in GROUP 00E, Harness Connector Inspection P.00E-2.

- Check the blower motor power supply line for open circuit.

Q: Is the wiring harness between blower relay connector C-303 (terminal 3) and blower motor connector C-115 (terminal 1) in good condition?

YES : It can be assumed that this malfunction is intermittent. Refer to GROUP 00, How to Use Troubleshooting/Inspection Service Points –How to Cope with Intermittent Malfunctions P.00-15.

NO : Repair or replace the wiring harness. Refer to GROUP 00E, Harness Connector Inspection P.00E-2.

DATA LIST REFERENCE TABLE

M1554005100846

Scan tool display	Item No.	Inspection status	The display content under normal condition
Engine speed	17	–	Displays correct engine speed.
Ambient temperature sensor	19	–	Ambient temperature is the same as scan tool displayed temperature
Air thermo sensor	20	–	Evaporator outlet temperature is the same as scan tool displayed temperature.
Interior temperature sensor	21	–	Interior temperature is the same as scan tool displayed temperature
Temperature setting	23		Displays air conditioning set temperature.
ETC sensor	24	–	Engine coolant temperature is the same as scan tool displayed temperature.
Vehicle speed	26	–	Displays vehicle speed.
A/C Compressor drive request	27	Compressor ON	ON
		Compressor OFF	OFF
Air conditioning switch	28	Air conditioning switch ON	ON
		Air conditioning switch OFF	OFF
Refrigerant leak	29	–	Normal
Idle up request	34	–	Displays idle-up request signal.
Rear heater SW light*	35	–	–
PTC heater 1*	36	–	–
PTC heater 2*	37	–	–
PTC heater 3*	38	–	–
In/out select damp poten (target)	45	–	Displays outside/inside air selection damper target position.
In/out select damp potentiometer	46	–	Displays outside/inside air selection damper position.
Air outlet c/o potentiometer	55	–	Displays air outlet changeover damper position.
Air outlet c/o potentio. (Target)	56	–	Displays air outlet changeover damper target position.

Scan tool display	Item No.	Inspection status	The display content under normal condition
Low pressure judgment	57	–	Normal
Rear defogger switch	60	Rear window defogger switch ON	ON
		Rear window defogger switch OFF	OFF
Pressure sensor	61	–	Displays refrigerant pressure.
Air mix potentiometer	63	–	Displays the air mix damper position.
Photo sensor	67	–	Displays sunload.
Front blower fan	68	–	Displays blower motor condition.
Front blower fan (Target)	69	–	Displays blower motor target value.
Refrigerant pressure	73	–	Displays refrigerant pressure status.
Condenser fan	74	–	Displays condenser fan running condition.
Temp. set dial position	76	–	Displays the set temperature output value on the control panel.
A/C Panel type	77	–	Dial/Auto/RHD
Fan set dial position	78	–	Displays the air volume output value on the control panel.
Air outlet c/o set dial position	79	–	Displays output value to the air outlet changeover dial on the control panel.
Fan set dial operation flag	80	–	ON when the air volume adjusting dial is operated
A/C SW operation flag	81	–	ON when the air conditioning switch is operated
Temp. set dial operation flag	82	–	ON when the air conditioning switch is operated
Defogger flag	83	–	ON when the air outlet changeover dial is set to the DEF position.
In/out air c/o SW operation flag	84	–	ON when the inside air/outside air changeover switch is operated

Scan tool display	Item No.	Inspection status	The display content under normal condition
Rear defogger SW operation flag	87	–	ON when the rear window switch is operated
Rear defogger SW light	88	–	Displays rear window switch indicator status.
A/C SW light	89	–	Displays air conditioning switch indicator status.
In/out air c/o SW light	90	–	Displays the status of the inside air/outside air changeover switch indicator.
A/C Compressor drive flag	91	–	ON when the compressor is activated.
Wiper operation flag	92	–	ON when the wiper is operated.
Ignition position information	93	–	Ignition switch position status
Power source voltage	94	–	Displays power supply voltage.
IOD fuse equipment flag	95	–	IOD fuse status
A/T lock up open request	96	–	Displays A/T lock open request signal.
System operation time	100	–	–
Compressor use times	101	–	–
Rear defogger use times	102	–	–
In/out air c/o poten drive time	103	–	–
Air outlet c/o poten drive time	104	–	–
Air mix potentiometer drive time	105	–	–
Hot state time (Interior TEMP.)	106	–	–
Cold state time (Interior TEMP.)	107	–	–
Hot state time (Ambient TEMP.)	108	–	–
Cold state time (Ambient TEMP.)	109	–	–
Maximum ambient temperature	110	–	–
Minimum ambient temperature	111	–	–
Maximum Engine coolant TEMP.	112	–	–
Engine high speed time	113	–	–

Scan tool display	Item No.	Inspection status	The display content under normal condition
Maximum Engine speed	114	-	-
High pressure drive time	115	-	-
High pressure cut times	116	-	-
Maximum pressure (kPa)	117	-	-
A/C use rate	118	-	-
Compressor operation rate	119	-	-
Eco operation rate	120	-	-
Recirc use rate	121	-	-
A/C operation times	122	-	-
In/out air c/o operation times	123	-	-
Mode dial operation times	124	-	-
Blower fan dial operation times	125	-	-
TEMP. set dial operation times	126	-	-
FACE mode use rate	127	-	-
B/L mode use rate	128	-	-
FOOT mode use rate	129	-	-
D/F mode use rate	130	-	-
DEF mode use rate	131	-	-
Fan OFF use rate	132	-	-
Fan 1-2step use rate	133	-	-
Fan 3-4step use rate	134	-	-
Fan 5-6step use rate	135	-	-
Fan 7-8step use rate	136	-	-
Temp 1-7 step use rate	137	-	-
Temp 8-10step use rate	138	-	-
Temp 11-13 step use rate	139	-	-
Temp 17-19step use rate	140	-	-
Temp 20-22step use rate	141	-	-
Temp 23-29step use rate	142	-	-
PTC heater1 use times	143	-	-
PTC heater2 use times	144	-	-
PTC heater3 use times	145	-	-
Fan LO driving time	146	-	-
Fan M1 driving time	147	-	-
Fan M2 driving time	148	-	-

Scan tool display	Item No.	Inspection status	The display content under normal condition
Fan HI driving time	149	-	-
Rear PTC heater counter	150	-	-

*NOTE: * shows that it is displayed but not used.*

ACTUATOR TEST

M1554005201062

Item No.	Check item	Driven content
2	idle up request ^{*1}	Idle-up request signal
5	In/out select damper	The moving position of outside/inside air selection damper motor
6	Air mix damper motor	The moving position of air mix damper motor
7	Front blower fan	The amount of blower motor rotation
8	Air outlet c/o damper	Air outlet changeover damper motor moving position
10	Condenser fan ^{*1}	The amount of condenser fan rotation
11	Air conditioning switch ^{*1}	A/C switch selection position
12	Rear defogger switch ^{*1}	Rear window defogger switch selection position
13	A/T lock up open request ^{*2}	A/T lock open request signal

NOTE:


- ^{*1}: When the engine is not running these function do not work.

- ^{*2} shows that it is displayed but not used.


CHECK AT A/C-ECU TERMINAL

M1552010302329

C-22

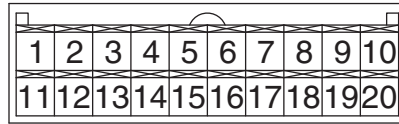

C-20

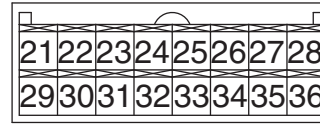




AC210339AG


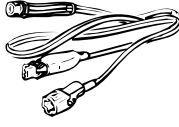
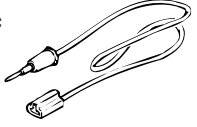

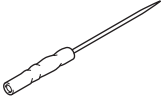
Terminal No.	Check item	Check condition	Normal condition
1	Power transistor (DRAIN)	Air volume control dial: Maximum air volume	0 to 2 V
2	Power transistor (GATE)	Air volume control dial: Maximum air volume	Battery positive voltage
3 –8	–	–	–
9	A/C control panel (input)	–	–
10	A/C control panel (input)	–	–
11, 12	–	–	–
13	Battery power supply	Always	Battery positive voltage
14	Ground	Always	1 V or less
15	IG1 power supply	Ignition switch: IG1	Battery positive voltage
16	A/C pressure sensor input	Refer to P.55-164 .	Refer to P.55-164 .
17	Interior temperature sensor	Sensor probe temperature: 25° C (77° F) (4.0 kΩ)	2.1 to 2.7 V
18	–	–	–
19	Sensor ground	Always	1 V or less
20	A/C pressure sensor power supply	Ignition switch: IG2	5 V
21	Air thermo sensor ground	Always	1 V or less
22	Air thermo sensor	Sensor probe temperature: 25° C (77° F) (4.0 kΩ)	2.1 to 2.7 V
23	–	–	–
24	Motor for air outside/inside air circulation switching damper	–	–
25	Motor for air outside/inside air circulation switching damper	–	–
26	Motor for air outside/inside air circulation switching damper	–	–
27	Motor for air outside/inside air circulation switching damper	–	–








Terminal No.	Check item	Check condition	Normal condition
28	Air mix damper motor	-	-
29	Motor power supply	-	-
30	Air outlet changeover damper motor	-	-
31	Air outlet changeover damper motor	-	-
32	Air outlet changeover damper motor	-	-
33	Air outlet changeover damper motor	-	-
34	Air mix damper motor	-	-
35	Air mix damper motor	-	-
36	Air mix damper motor	-	-

SPECIAL TOOLS

M1552000600806

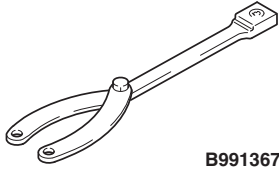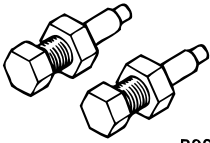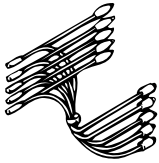Tool	Tool number and name	Supersession	Application
 B991367	MB991367 Special spanner	MB991367-01	Armature mounting nut of compressor removal and installation
 B991386	MB991386 Pin	MIT217213	Armature mounting nut of compressor removal and installation
 MB991658	MB991658 Test harness set	Tool not available	Inspection of throttle position sensor

Tool	Tool number and name	Supersession	Application
<p>a</p>  <p>b</p>  <p>c</p>  <p>d</p> 	<p>MB991223</p> <p>a. MB991219</p> <p>b. MB991220</p> <p>c. MB991221</p> <p>d. MB991222</p>	<p>Harness set</p> <p>a. Check harness</p> <p>b. LED harness</p> <p>c. LED harness adapter</p> <p>d. Probe</p>	<p>Continuity check and voltage measurement at harness wire or connector</p> <p>a. For checking connector pin contact pressure</p> <p>b. For checking power supply circuit</p> <p>c. For checking power supply circuit</p> <p>d. For connecting a locally sourced tester</p>
 <p>MB992006</p>	<p>MB992006</p> <p>Extra fine probe</p>	<p>General service tool</p>	<p>Making voltage and resistance measurement during troubleshooting</p>

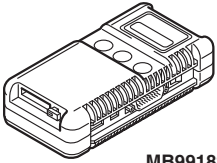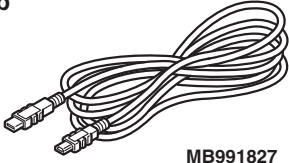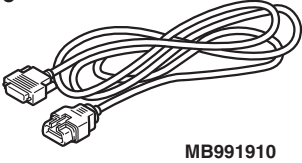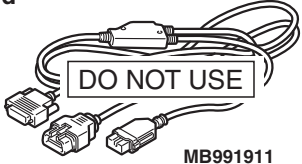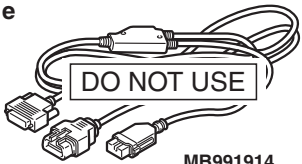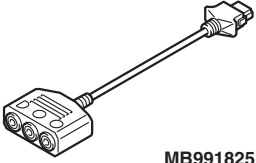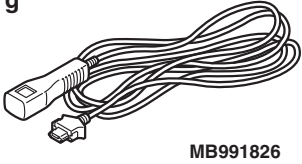Tool	Tool number and name	Supersession	Application
<p>a</p>  <p>MB991824</p> <p>b</p>  <p>MB991827</p> <p>c</p>  <p>MB991910</p> <p>d</p>  <p>MB991911</p> <p>e</p>  <p>MB991914</p> <p>f</p>  <p>MB991825</p> <p>g</p>  <p>MB991826 MB991958</p>	<p>MB991958</p> <p>a. MB991824</p> <p>b. MB991827</p> <p>c. MB991910</p> <p>d. MB991911</p> <p>e. MB991914</p> <p>f. MB991825</p> <p>g. MB991826</p> <p>M.U.T.-III sub-assembly</p> <p>a. Vehicle communication interface (V.C.I.)</p> <p>b. M.U.T.-III USB cable</p> <p>c. M.U.T.-III main harness A (Vehicles with CAN communication system)</p> <p>d. M.U.T.-III main harness B (Vehicles without CAN communication system)</p> <p>e. M.U.T.-III main harness C (for Chrysler only)</p> <p>f. M.U.T.-III measurement adapter</p> <p>g. M.U.T.-III trigger harness</p>	<p>MB991824-KIT</p> <p><i>NOTE: G: MB991826 M.U.T.-III Trigger Harness is not necessary when pushing V.C.I. ENTER key.</i></p>	<p>⚠ CAUTION</p> <p>M.U.T.-III main harness A (MB991910) should be used. M.U.T.-III main harness B and C should not be used for this vehicle.</p> <p>DTC, data list and actuator test check.</p>

ON-VEHICLE SERVICE**REFRIGERANT LEVEL TEST**


M1552008400594

Use the refrigerant recovery station to remove all of the refrigerant, and then calculate the amount of the refrigerant and charge it.

A/C COMPRESSOR CLUTCH TEST



M1552019900128


1. Disconnect the A/C compressor clutch connector to the A/C compressor clutch.
2. Connect positive battery voltage directly to the connector for the A/C compressor clutch.
3. Supply a ground to the A/C compressor assembly.
4. If the A/C compressor clutch is normal, there will be a "click." If the pulley and armature do not make contact ("no click"), there is a malfunction.

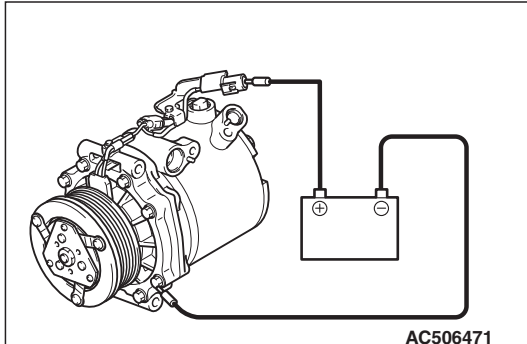**SIMPLE INSPECTION OF THE A/C PRESSURE SENSOR**

M1552014700464

1. Assemble a gauge manifold on the high pressure service valve.
2. Disconnect the A/C pressure sensor connector and connect special tool test harness MB991658 as shown in the illustration.
3. Turn ON the engine and then turn ON the air conditioner switch.

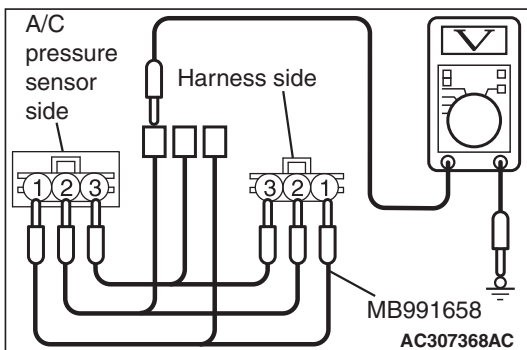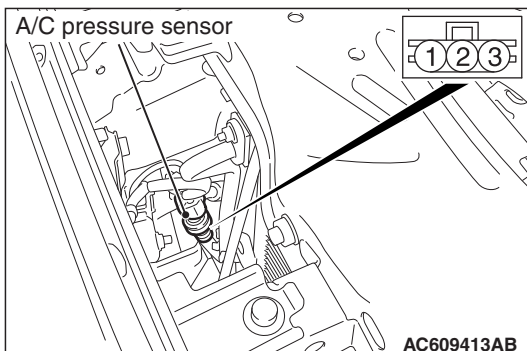

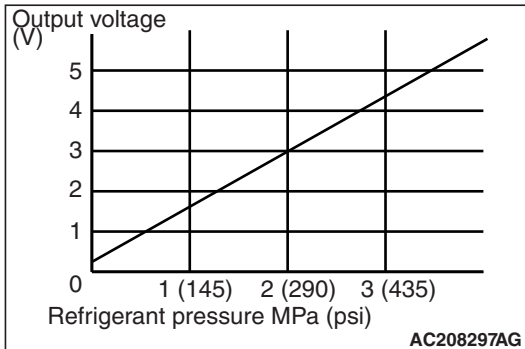

- At this time, check to see that the voltage of A/C pressure sensor terminal No. 2 reflects the specifications of the figure.

NOTE: The allowance shall be defined as $\pm 5\%$.

COMPRESSOR DRIVE BELT ADJUSTMENT

M1552001001082

Refer to GROUP 11A, On-vehicle Service –Drive Belt tension check and adjustment [P.11A-7](#).

CHARGING

M1552001200663

Use the refrigerant recovery station to charge the refrigerant.

METHOD BY USING REFRIGERANT RECOVERY AND RECYCLING UNIT

Using the refrigerant recovery and recycling unit, refill the refrigerant.

NOTE: Refer to the Refrigerant Recovery and Recycling Unit's Instruction Manual for operation of the unit.

DISCHARGING SYSTEM

Use the refrigerant recovery unit to discharge refrigerant gas from the system.

NOTE: Refer to the Refrigerant Recovery and Recycling Unit's Instruction Manual for operation of the unit.

REFILLING OF OIL IN THE A/C SYSTEM

Too little oil will provide inadequate compressor lubrication and cause a compressor failure. Too much oil will increase discharge air temperature.

When a compressor is installed at the factory, it contains 140 cm³ (4.7 fl.oz) of refrigerant oil. While the A/C system is in operation, the oil is carried through the entire system by the refrigerant. Some of this oil will be trapped and retained in various parts of the system.

When the following system components are changed, it is necessary to add oil to the system to replace the oil being removed with the component.

Compressor oil: SUN PAG 56

Quantity:

Evaporator: 60 cm³ (2.0 fl.oz)

Condenser: 15 cm³ (0.5 fl.oz)

Suction hose: 10 cm³ (0.3 fl.oz)

PERFORMANCE TEST

The vehicles to be tested should be parked out of direct sunlight.

1. Close the high and low-pressure valve of the gauge manifold.
2. Connect the charging hose (blue) to the low-pressure valve and connect the charging hose (red) to the high-pressure valve of the gauge manifold.
3. Install the quick joint (for low-pressure) to the charging hose (blue), and connect the quick joint (for high-pressure) to the charging hose (red).

CAUTION



- To connect the quick joint, press section A firmly against the service valve until a click is heard.
 - When connecting, run your hand along the hose while pressing to ensure that there are no bends in the hose.
4. Connect the quick joint (for low-pressure) to the low-pressure service valve and connect the quick joint (for high-pressure) to the high-pressure service valve.

NOTE: The high-pressure service valve is on the A/C pipe and the low-pressure service valve is on the suction hose.

5. Start the engine.
6. Set the A/C controls as follows:
 - A/C switch: A/C -ON position
 - Mode selection: FACE position
 - Temperature control: MAXIMUM COOLING position
 - Air selection: RECIRCULATION position
 - Blower switch: Maximum air volume
7. Set the engine speed to the idle speed.
8. Engine should be warmed up with hood, doors and windows opened.
9. Insert a thermometer in the center air outlet and operate the engine for 20 minutes.

NOTE: If the A/C clutch cycles, take the reading before the clutch disengages.

10. Note the discharge air temperature.

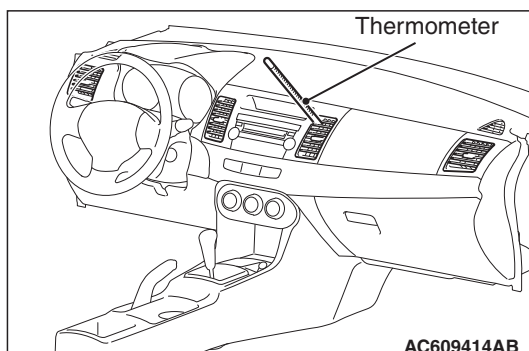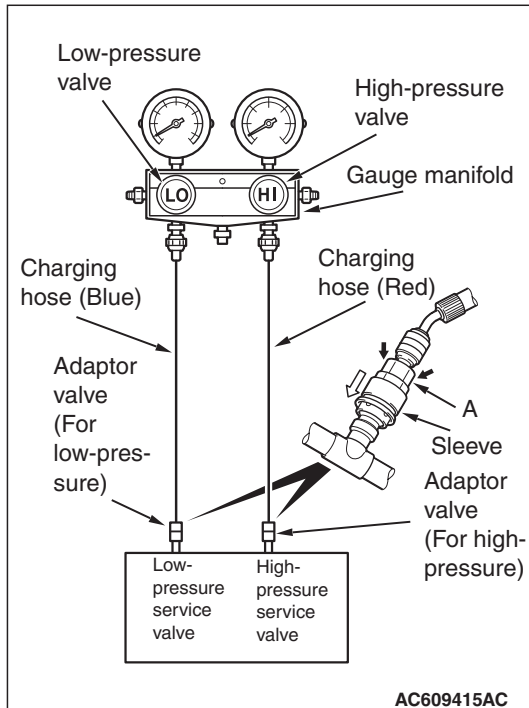

PERFORMANCE TEMPERATURE CHART

Garage ambient air temperature °C (°F)	20 (68)	25 (77)	30 (86)	35 (95)	40 (104)	45 (113)	50 (122)
Discharge air temperature °C (°F)	4.7 (40) – 17 (63)	10 (50) –23 (73)	15 (59) –28 (82)	20 (68) –33 (91)	26 (79) –38 (100)	31 (88) –44 (111)	36 (97) –49 (120)
Compressor high pressure kPa (psi)	934 (136) – 1700 (247)	1068 (155) –1850 (268)	1201 (174) –2000 (290)	1335 (193) –2150 (312)	1468 (213) –2300 (334)	1602 (232) –2450 (355)	1735 (252) –2600 (377)
Compressor low pressure kPa (psi)	170 (24.7) – 359 (52.1)	215 (31.2) – 406 (58.9)	260 (37.7) – 452 (65.6)	305 (44.2) – 499 (72.4)	350 (50.8) – 545 (79.1)	395 (57.3) – 592 (85.9)	440 (63.8) – 638 (92.6)

REFRIGERANT LEAK REPAIR PROCEDURE

M1552001500448

LOST CHARGE

If the system has lost all charge due to a leak:

1. Evacuate the system. (Refer to P.55-165).
2. Charge the system with approximately 0.453 kg (1 pound) of refrigerant.
3. Check for leaks.
4. Discharge the system.
5. Repair leaks.

⚠ CAUTION

Replacement filter-drier units must be sealed while in storage. The drier used in these units will saturate water quickly upon exposure to the atmosphere. When installing a drier, have all tools and supplies ready for quick assembly to avoid keeping the system open any longer than necessary.

6. Replace receiver drier.
7. Evacuate and charge system.

LOW CHARGE

If the system has not lost all of its refrigerant charge; locate and repair all leaks. If it is necessary to increase the system pressure to find the leak (because of an especially low charge) add refrigerant. If it is possible to repair the leak without discharging the refrigerant system, use the procedure for correcting low refrigerant level.

HANDLING TUBING AND FITTINGS

Kinks in the refrigerant tubing or sharp bends in the refrigerant hose lines will greatly reduce the capacity of the entire system. High pressures are produced in the system when it is operating. Extreme care must be exercised to make sure that all connections are pressure tight. Dirt and moisture can enter the system when it is opened for repair or replacement of lines or components. The following precautions must be observed. The system must be completely discharged before opening any fitting of connection in the refrigeration system. Open fittings with caution even after the system has been discharged. If any pressure is noticed as a fitting is loosened, allow trapped pressure to bleed off very slowly. Never attempt to rebend formed lines to fit. Use the correct line for the installation you are servicing. A good rule for the flexible hose lines is keep the radius of all bends at least 10 times the diameter of the hose.

Sharper bends will reduce the flow of refrigerant. The flexible hose lines should be routed so that they are at least 80 mm (3.1 inches) from the exhaust manifold. It is good practice to inspect all flexible hose lines at least once a year to make sure they are in good condition and properly routed. On standard plumbing fittings with O-rings, these O-rings are not reusable.

COMPRESSOR NOISE CHECK

M1552008700487

You must first know the conditions when the noise occurs. These conditions are: weather, vehicle speed, in gear or neutral, engine temperature or any other special conditions.

Noises that develop during A/C operation can often be misleading. For example: what sounds like a failed front bearing or connecting rod, may be caused by loose bolts, nuts, mounting brackets, or a loose clutch assembly. Verify accessory drive belt tension (power steering or generator).

Improper accessory drive belt tension can cause a misleading noise when the compressor is engaged and little or no noise when the compressor is disengaged.

Drive belts are speed-sensitive. That is, at different engine speeds, and depending upon belt tension, belts can develop unusual noises that are often mistaken for mechanical problems within the compressor.


ADJUSTMENT

1. Select a quiet area for testing. Duplicate conditions as much as possible. Switch the compressor on and off several times to clearly identify compressor noise. To duplicate high ambient conditions (high head pressure), restrict air flow through the condenser. Install a manifold gauge set to make sure discharge pressure doesn't exceed 2,070 kPa (300.2 psi).
2. Tighten all compressor mounting bolts, clutch mounting bolt, and compressor drive belt. Check to assure clutch coil is tight (no rotation or wobble).
3. Check refrigerant hoses for rubbing or interference that can cause unusual noises.
4. Check refrigerant charge (Refer to P.55-165).
5. Recheck compressor noise as in Step 1.
6. If noise still exists, loosen compressor mounting bolts and retighten. Repeat Step 1.
7. If noise continues, replace compressor and repeat from Step 1.

POWER RELAY CHECK


M1552008801249

A/C COMPRESSOR CLUTCH RELAY CONTINUITY CHECK

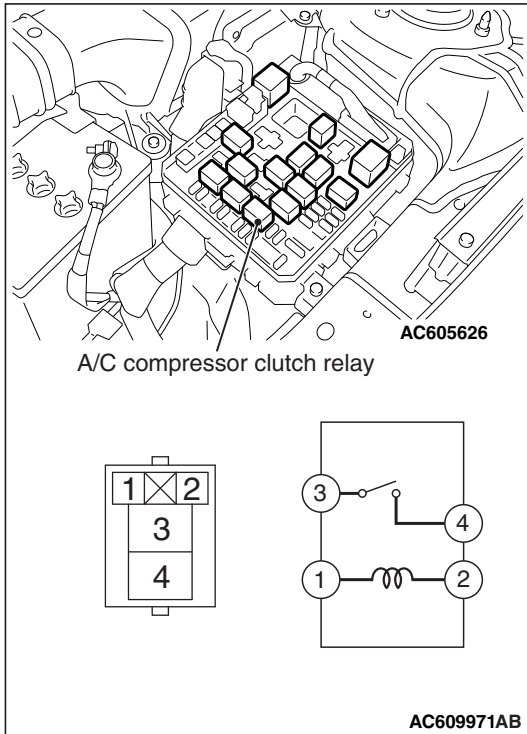

Battery voltage	Tester connection	Specified condition
Not applied	3 -4	Open circuit
<ul style="list-style-type: none"> • Connect terminal 2 to the positive battery terminal • Connect terminal 1 to the negative battery terminal 	3 -4	Less than 2 ohms

BLOWER RELAY CONTINUITY CHECK

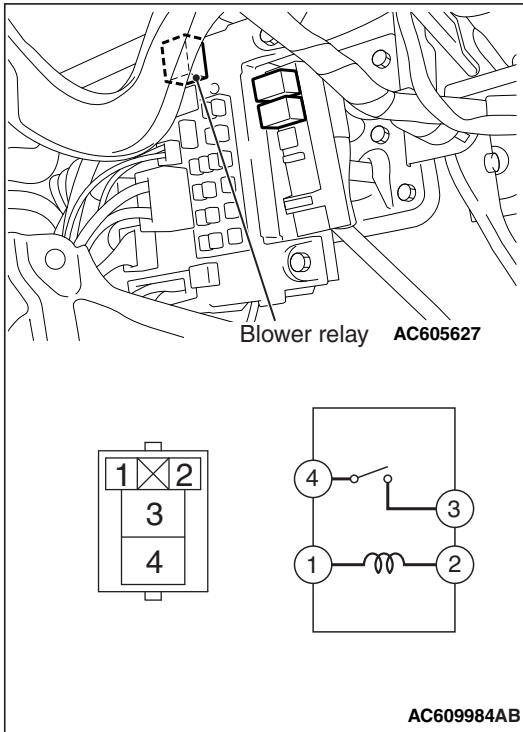

Battery voltage	Tester connection	Specified condition
Not applied	3 –4	Open circuit
<ul style="list-style-type: none"> Connect terminal 1 to the positive battery terminal Connect terminal 2 to the negative battery terminal 	3 –4	Less than 2 ohms

IDLE-UP OPERATION CHECK

M1552001601761

Before inspection and adjustment, set vehicle in the following condition:

- Engine coolant temperature: 80 –90 °C (176.0 –194.0 °F)
- Lights, electric cooling fan and accessories: OFF
- Transaxle: Neutral ("N" or "P" position)
- Steering wheel: Straightforward

1. Check whether or not the idle speed is the standard value. Refer to GROUP 11A, On-vehicle Service –Idle Speed Check [P.11A-12](#).

Standard value: 700 ± 100 r/min


2. Turn on the air conditioning switch and the blower speed selection dial. Engine idling speed should be within the standard value:

Standard value: 800 ± 100 r/min

NOTE: It is not necessary to make an adjustment, because the idling speed is automatically adjusted by the ISC system. If, however, a deviation from the standard value occurs for some reason, check the ISC system (Refer to GROUP 11A, On-vehicle Service –Idle Speed Check [P.11A-12](#))

REPLACE THE CLEAN AIR FILTER

M1552020100289

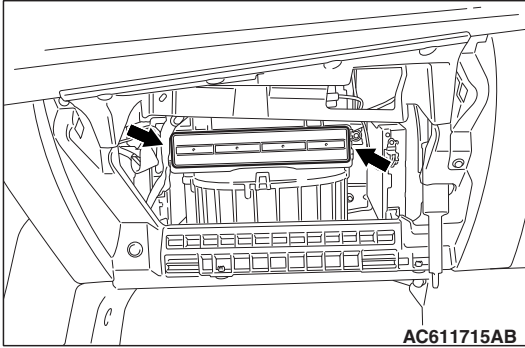

1. Remove the glove box (Refer to GROUP 52A –glove box, [P.52A-7](#)).
2. Loosen the two lugs as shown to replace the clean air filter.
3. Install the glove box.


HEATER CONTROL UNIT

REMOVAL AND INSTALLATION

M1554014700772

Pre-removal and Post-installation Operation

- Side cover, Instrument panel garnish, Upper panel Removal and Installation (Refer to GROUP 52A, Instrument Panel [P.52A-3](#)).
- Floor console Removal and Installation (Refer to GROUP 52A, Floor console [P.52A-10](#)).

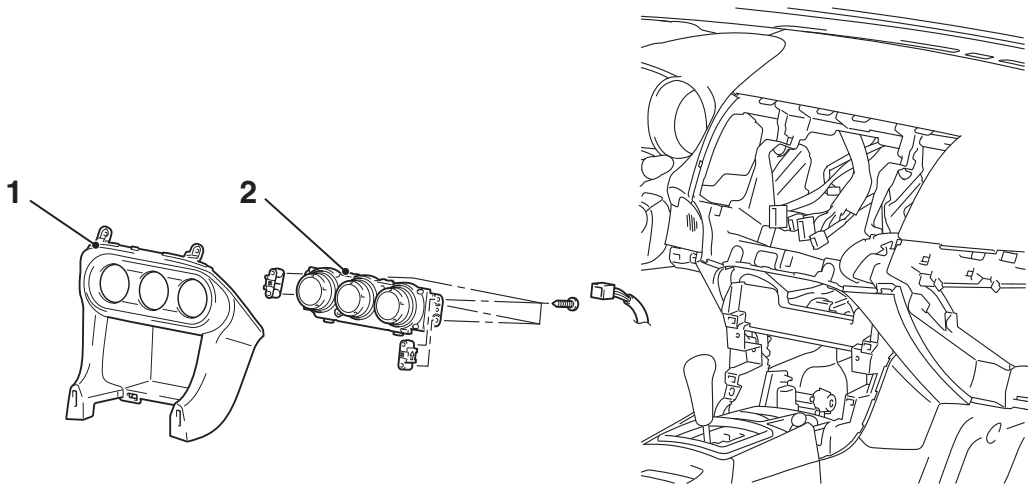

AC608191AB

Removal steps

1. Instrument panel center lower
(Refer to GROUP 52A, Instrument panel center panel [P.52A-8](#))
2. Heater control panel <Vehicles without A/C> or A/C control panel

HEATER UNIT AND BLOWER ASSEMBLY

REMOVAL AND INSTALLATION



M1552020800716

⚠ WARNING

- Before removing the steering wheel assembly and driver's air bag module/knee air bag module, always refer to GROUP 52B – Service Precautions P.52B-24 and Air bag Module and Clock Spring P.52B-413 or Knee Air bag Module P.52B-425.)

Pre-removal and Post-installation Operation

- Refrigerant draining and Refilling (Refer to Charging and Discharging P.55-165).
- Engine coolant Draining and Refilling (Refer to GROUP 00, Engine coolant P.00-72).
- Steering Column Shaft Assembly Removal and Installation (Refer to GROUP 37, Steering Shaft P.37-33).
- Instrument Panel Removal and Installation (Refer to GROUP 52A, Instrument Panel P.52A-3).
- Floor console Removal and Installation (Refer to GROUP 52A, Floor console P.52A-10).

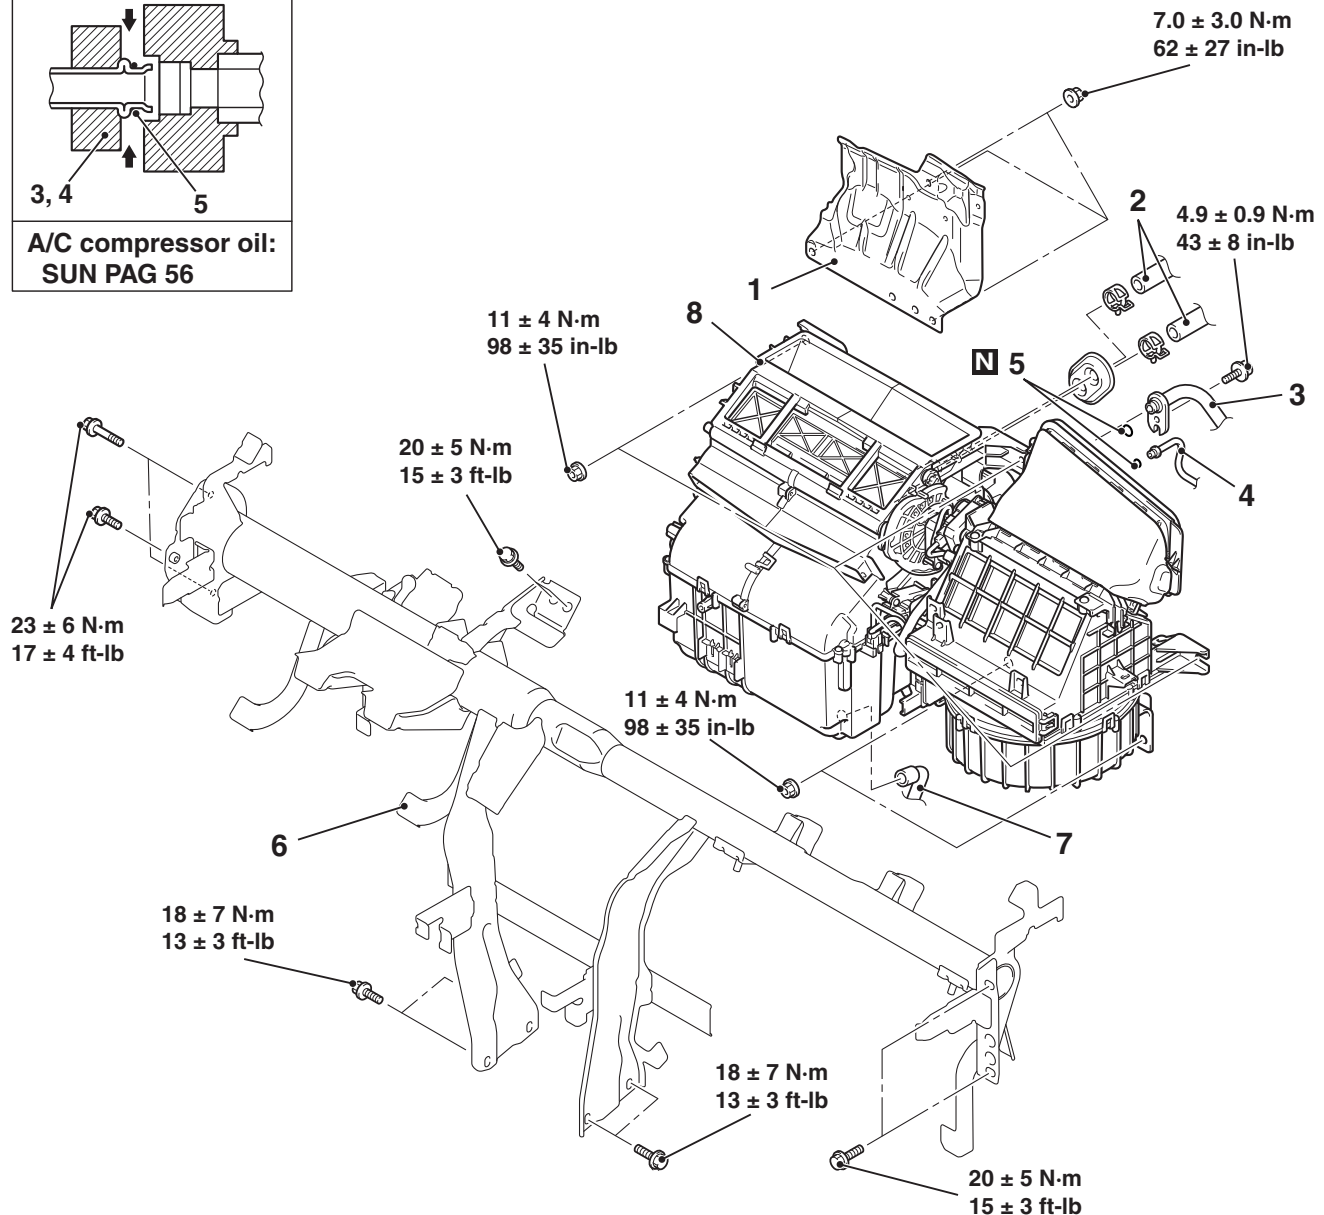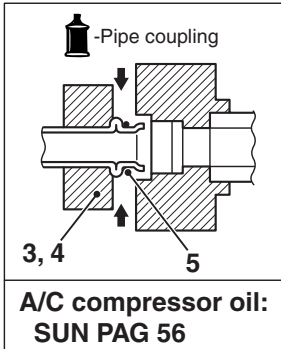

AC608202AD

- <<A>>
<<A>>
- Removal steps**
1. Dash panel heat protector
 2. Heater hose connection
 3. Flexible suction hose connection
 4. Liquid pipe B connection

- <>
- Removal steps (Continued)**
5. O-ring
 6. Front deck crossmember
 7. Drain hose
 8. Heater unit

REMOVAL SERVICE POINTS

<<A>> SUCTION PIPE AND LIQUID PIPE DISCONNECTION



CAUTION

As the compressor oil and receiver are highly moisture absorbent, use a non-porous material to plug the hose and nipples.

To prevent the entry of dust or other foreign bodies, plug the dismantled hose and the nipples of the expansion valves.

<> HEATER UNIT AND DECK CROSSMEMBER ASSEMBLY REMOVAL

Disconnect the following connectors to gain access to the front deck crossmember.

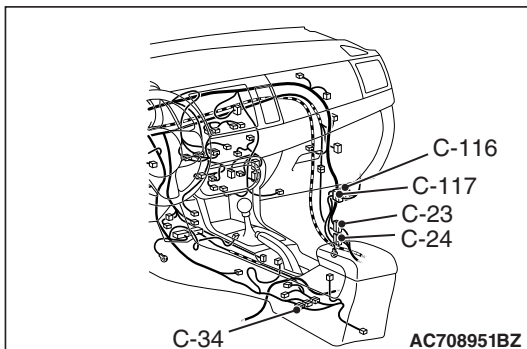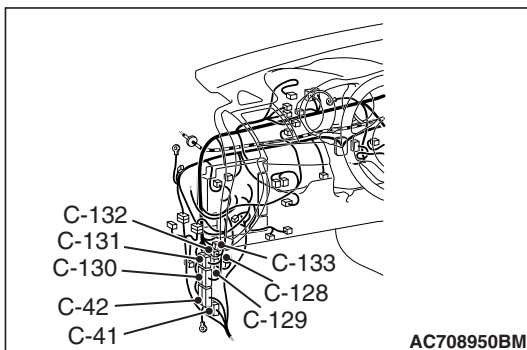


Connector number	Connector name
C-23	Instrument panel wiring harness and floor wiring harness combination
C-24	Instrument panel wiring harness and floor wiring harness combination
C-33	Instrument panel wiring harness and console wiring harness combination
C-41	Instrument panel wiring harness and floor wiring harness combination
C-42	Instrument panel wiring harness and floor wiring harness combination
C-116	Instrument panel wiring harness and front door wiring harness (RH) combination
C-117	Instrument panel wiring harness and front door wiring harness (RH) combination
C-128	Instrument panel wiring harness and front door wiring harness (LH) combination
C-129	Instrument panel wiring harness and front door wiring harness (LH) combination
C-130	Instrument panel wiring harness and front wiring harness combination

Connector number	Connector name
C-131	Instrument panel wiring harness and front wiring harness combination
C-132	Instrument panel wiring harness and front wiring harness combination
C-133	Instrument panel wiring harness and roof wiring harness combination

DISASSEMBLY AND REASSEMBLY

M1552020900638

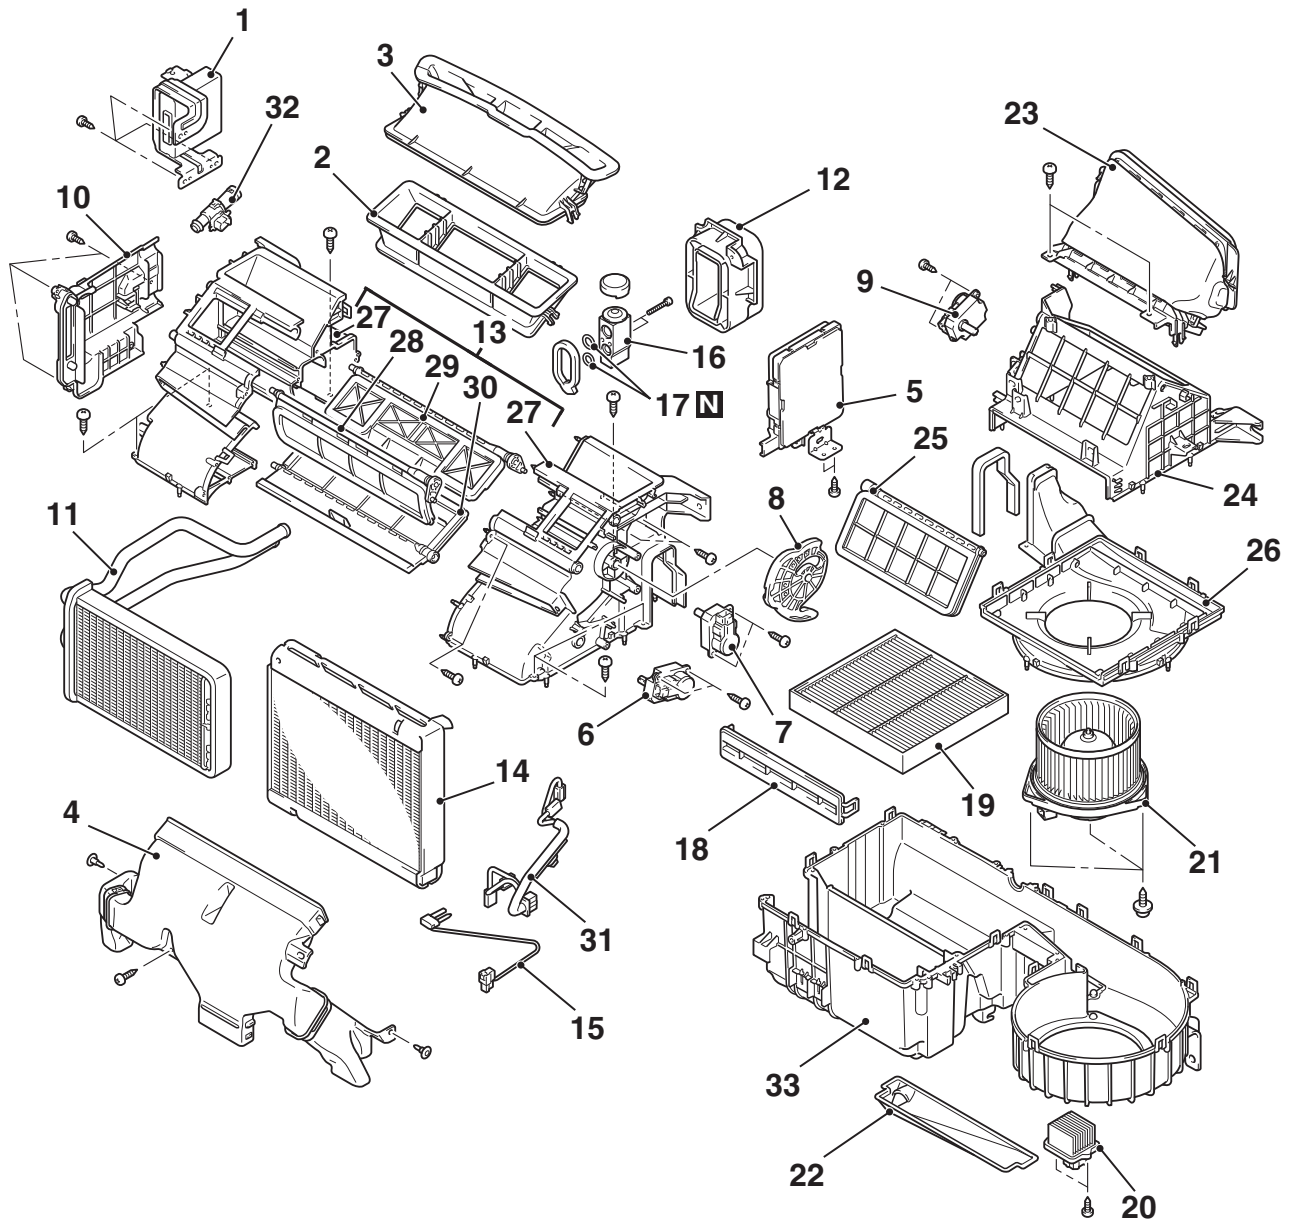

AC608203AB

Disassembly steps

1. KOS-ECU
2. Rear center duct

Disassembly steps (Continued)

3. Front center duct
4. Foot duct

Disassembly steps (Continued)

5. Heater control module <Vehicles without A/C> or A/C-ECU
6. Air mixing damper control motor
7. Mode selection damper control motor
8. Mode lever
9. Outside/Inside air selection damper control motor
10. Heater core cover
11. Heater core
12. Expansion valve cover
13. Upper case assembly
14. Evaporator
15. Fin thermo sensor
16. Expansion valve
17. O-ring

Disassembly steps (Continued)

18. Clean air filter cover
19. Clean air filter
20. Power transistor
21. Blower motor
22. Insulator
23. Air intake duct
24. Blower case upper
25. Outside/inside air selection damper
26. Blower case lower
27. Upper case
28. Mode selection damper (FOOT)
29. Mode selection damper (DEF)
30. Air mixing damper
31. Wiring harness
32. Aspirator
33. Lower case


INSPECTION

M1554011900409

FIN THERMO SENSOR CHECK

Measure the resistance between the sensor terminals under at least two temperatures. The resistance values should meet the values shown.


NOTE: The temperature should be within the shown range.

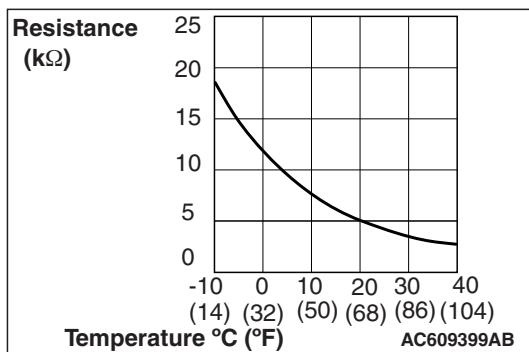

MOTORS AND TRANSISTOR

REMOVAL AND INSTALLATION

M1551006900095

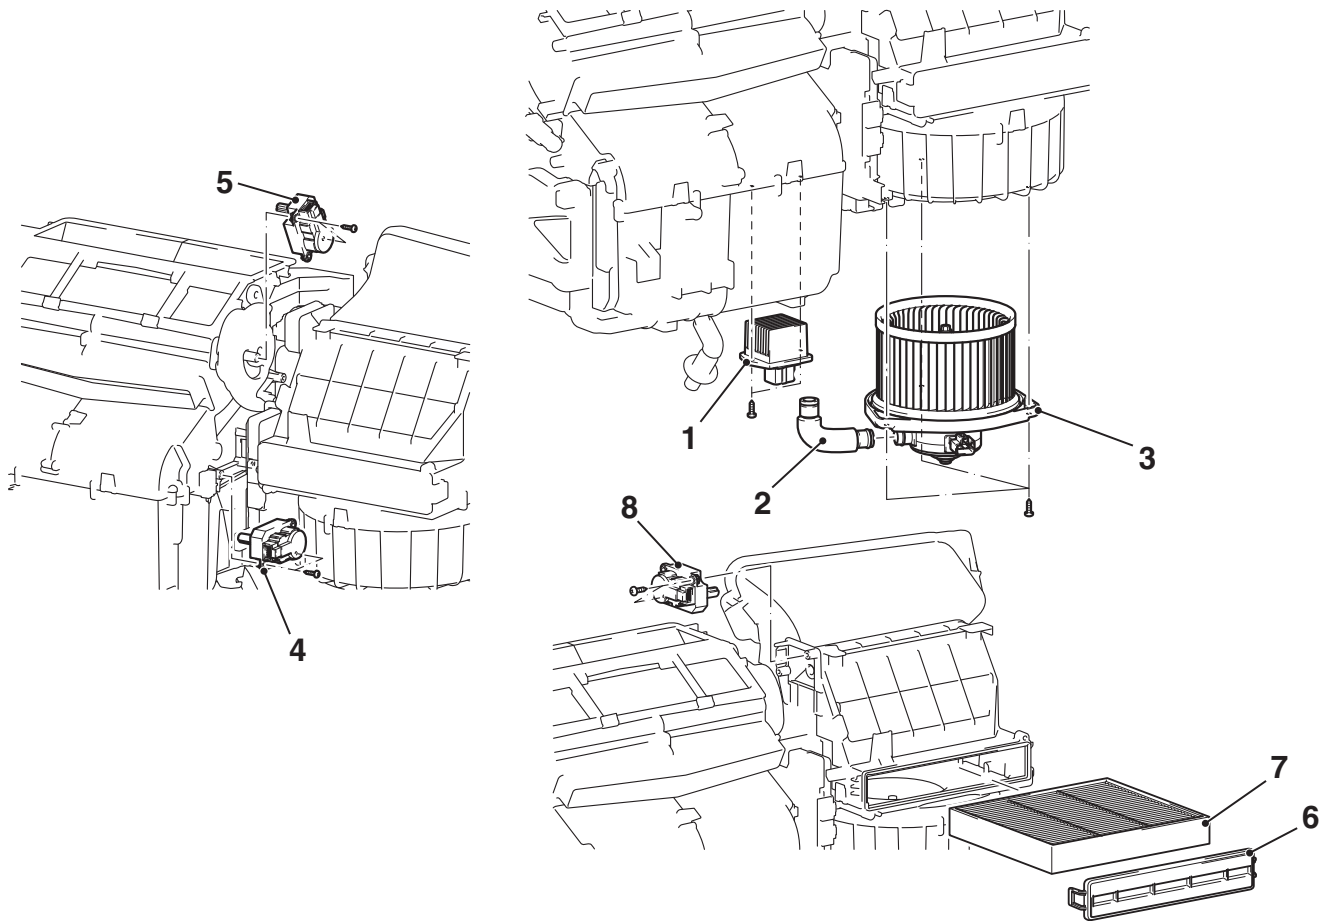

AC708788AC

Power transistor removal steps

- Bottom cover (passenger side)
(Refer to GROUP 52A –Glove box
[P.52A-7](#)).

1. Power transistor

Blower motor removal steps

- Bottom cover (passenger side)
(Refer to GROUP 52A –Glove box
[P.52A-7](#)).

2. Hose
3. Blower motor

<<A>>

<<A>>

<<A>> >>A<<


Air mixing damper control motor, mode selection damper control motor and outside/inside air selection damper control motor removal steps

- Rear heater duct A (Refer to
[P.55-189](#)).
 - A/C-ECU (Refer to [P.55-180](#)).
4. Air mixing damper control motor
 5. Mode selection damper control motor
 6. Clean air filter cover
 7. Clean air filter
 8. Outside/inside air selection damper control motor

REMOVAL SERVICE POINT

<<A>> AIR MIXING DAMPER CONTROL MOTOR, OUTSIDE/INSIDE AIR SELECTION DAMPER MOTOR, MODE SELECTION DAMPER CONTROL MOTOR REMOVAL

NOTE: A normal plate-type ratchet driver is recommended.

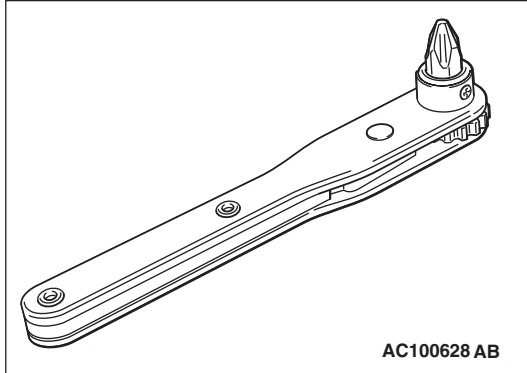

INSTALLATION SERVICE POINT

>>A<< OUTSIDE/INSIDE AIR SELECTION DAMPER MOTOR INSTALLATION


From the hole where the clean air filter and blower motor are removed, support the outside/inside air selection damper from beneath, and then perform the alignment.

INSPECTION

M1551006300758


BLOWER MOTOR CHECK

Check that the motor turns when applying battery power between the connector terminals. Also check to see that there is no abnormal sound emitted from the motor at this time.

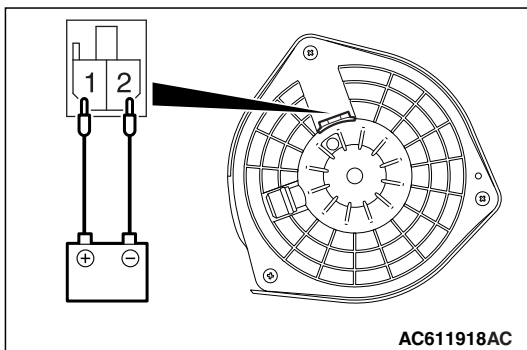

AMBIENT AIR TEMPERATURE SENSOR**REMOVAL AND INSTALLATION**

M1554017500108

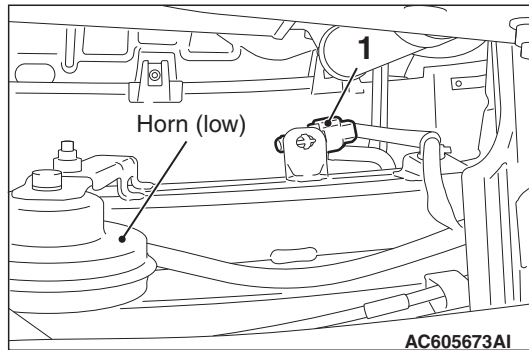**Removal step**

- Headlight support panel cover (Refer to GROUP 51, Front bumper assembly P.51-3).
1. Ambient air temperature sensor

INSPECTION


M1551006300769

AMBIENT AIR TEMPERATURE SENSOR CHECK**⚠ CAUTION**

The ambient air temperature sensor should be checked without removing it. If the sensor is removed, it is no longer serviceable.

Measure the resistance between the sensor terminals under at least two temperatures. The resistance values should meet the values shown.



NOTE: The temperature should be within the shown range.

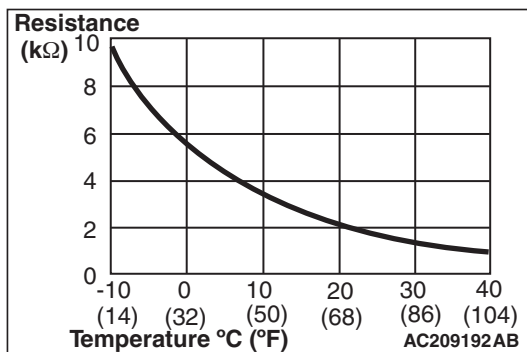

INTERIOR TEMPERATURE SENSOR

REMOVAL AND INSTALLATION

M1554026400381

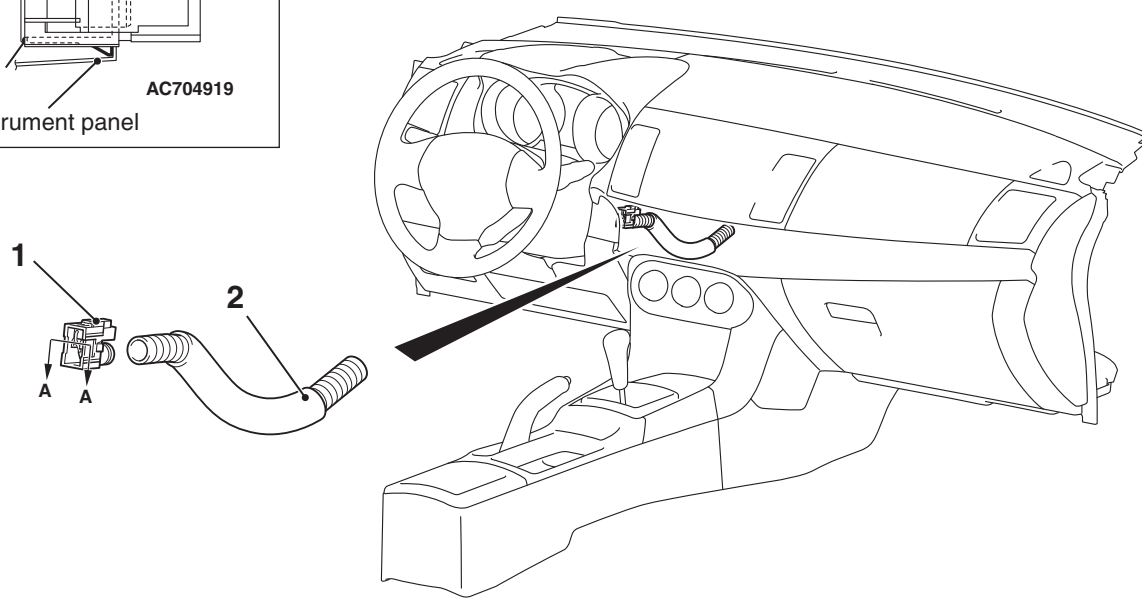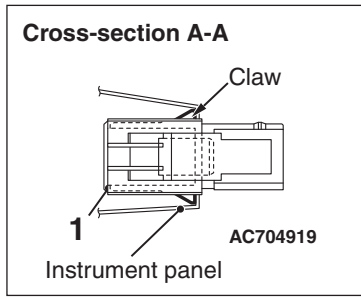

AC709099AC

Interior temperature sensor removal steps

- Lower panel (Refer to GROUP 52A, Instrument panel [P.52A-3](#)).

Interior temperature sensor removal steps (Continued)

1. Interior temperature sensor
2. Aspirator hose


INSPECTION

M1552014303852

INTERIOR TEMPERATURE SENSOR CHECK

When the resistance between the sensor terminals is measured under two or more temperature conditions, the resistance should approximately satisfy the illustrated values.

NOTE: The temperature conditions when checking should not exceed the range shown in the diagram.

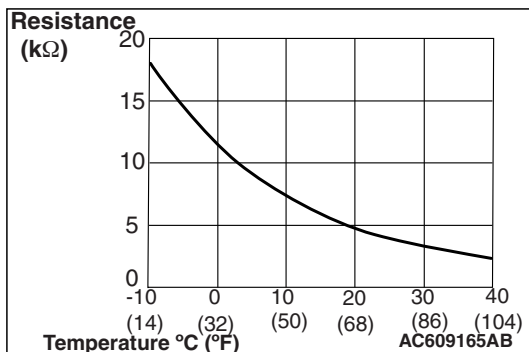


A/C-ECU

REMOVAL AND INSTALLATION

M1554016600469

Pre-removal and Post-installation Operation

- Glove Box and Bottom Cover Assembly (passenger's side) Removal and Installation (Refer to GROUP 52A – Instrument Panel [P.52A-3](#)).
- Foot duct Removal and Installation (Refer to [P.55-189](#)).

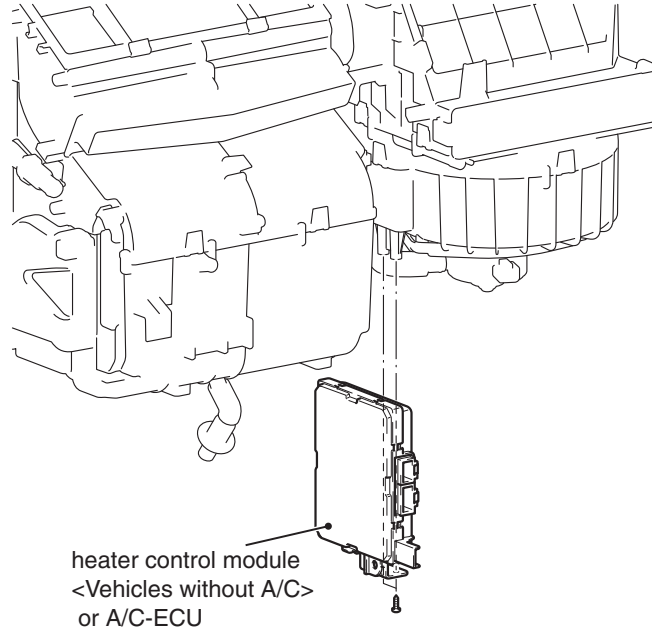

AC708793AG

COMPRESSOR ASSEMBLY AND TENSION PULLEY

REMOVAL AND INSTALLATION



M1552004100706

Pre-removal Operation

- Refrigerant Discharging (Refer to P.55-165).
- Engine room under cover front A (Refer to GROUP 51, under cover P.51-15).
- Front Under Cover RH (Refer to GROUP 51, Under cover P.51-15).

Post-installation Operation

- Drive Belt Tension Adjustment (Refer to GROUP 11A, On vehicle service –Drive Belt P.11A-7).
- Refrigerant Charging (Refer to P.55-165).
- Engine room under cover front A (Refer to GROUP 51, under cover P.51-15).
- Front Under Cover RH (Refer to GROUP 51, Under cover P.51-15).

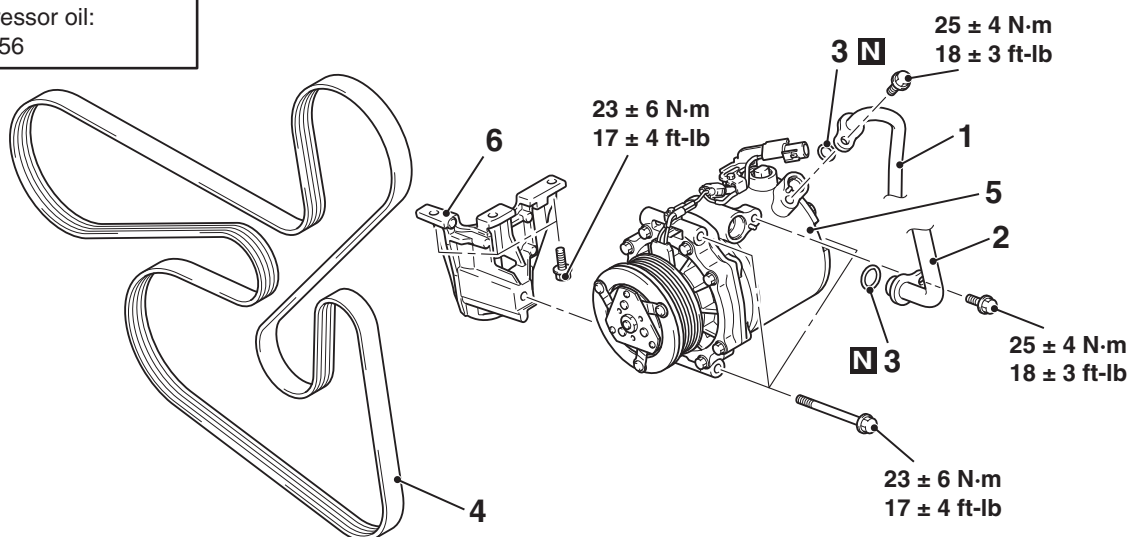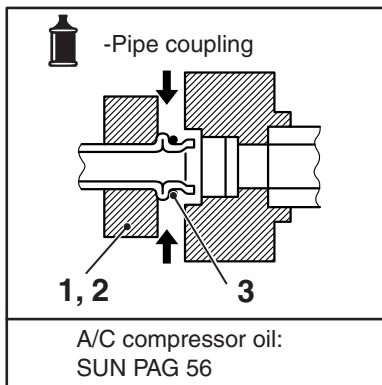

AC608280

<<A>>
<<A>>

Removal steps

1. Flexible discharge hose connection
2. Flexible suction hose connection
3. O-ring
4. Drive belt

<> >>A<<

Removal steps (Continued)

5. A/C compressor and clutch assembly
6. A/C compressor bracket

REMOVAL SERVICE POINTS**<<A>> FLEXIBLE DISCHARGE HOSE AND FLEXIBLE SUCTION HOSE DISCONNECTION****⚠ CAUTION**

As the compressor oil and receiver are highly moisture absorbent, use a non-porous material to plug the hose and nipples.

To prevent the entry of dust or other foreign bodies, plug the dismantled hoses and compressor nipples.

<> A/C COMPRESSOR AND CLUTCH ASSEMBLY REMOVAL

Take care not to spill any compressor oil when removing the compressor.

INSTALLATION SERVICE POINT**>>A<< A/C COMPRESSOR AND CLUTCH ASSEMBLY INSTALLATION**

If a new compressor is installed, first adjust the amount of oil according to the procedures described below, and then install the compressor.

1. Measure the amount [$X \text{ cm}^3$ ($X \text{ fl.oz}$)] of oil within the removed compressor.
2. Drain (from the new compressor) the amount of oil calculated according to the following formula, and then install the new compressor.

New compressor oil amount = 80 cm^3 (2.7 fl.oz)


$$80 \text{ cm}^3 - X \text{ cm}^3 = Y \text{ cm}^3 \quad (2.7 \text{ fl.oz.} - X \text{ fl.oz.} = Y \text{ fl.oz.})$$

NOTE: $Y \text{ cm}^3$ ($Y \text{ fl.oz}$) indicates the amount of oil in the refrigerant line, the condenser, the evaporator, etc.

NOTE: When replacing the following parts at the same times as the compressor, subtract the rated oil amount of each part from $Y \text{ cm}^3$ ($Y \text{ fl.oz}$) and discharge from the new compressor.

3. Tighten A/C compressor and clutch assembly mounting bolts to the specified torque in the order of number shown in the figure.

Tightening torque: $23 \pm 6 \text{ N} \cdot \text{m}$

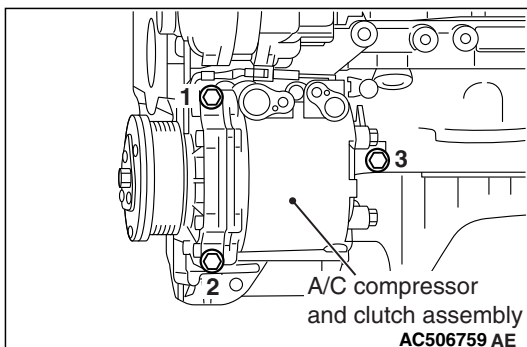


INSPECTION

M1552014303711

COMPRESSOR A/C COMPRESSOR CLUTCH
 OPERATION CHECK


Connect the compressor connector terminal to the battery positive (+) terminal and ground the battery's negative (-) terminal to the compressor unit. At that time, the A/C compressor clutch should make a definite operating sound.

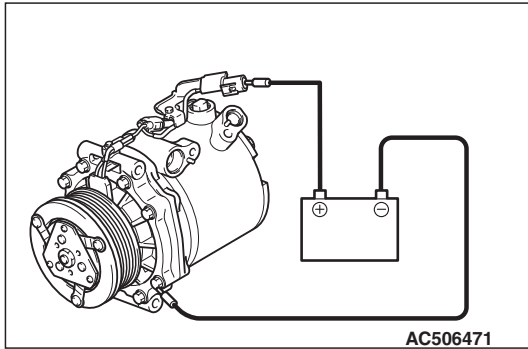

AC506471

DISASSEMBLY AND ASSEMBLY

M1552004602291

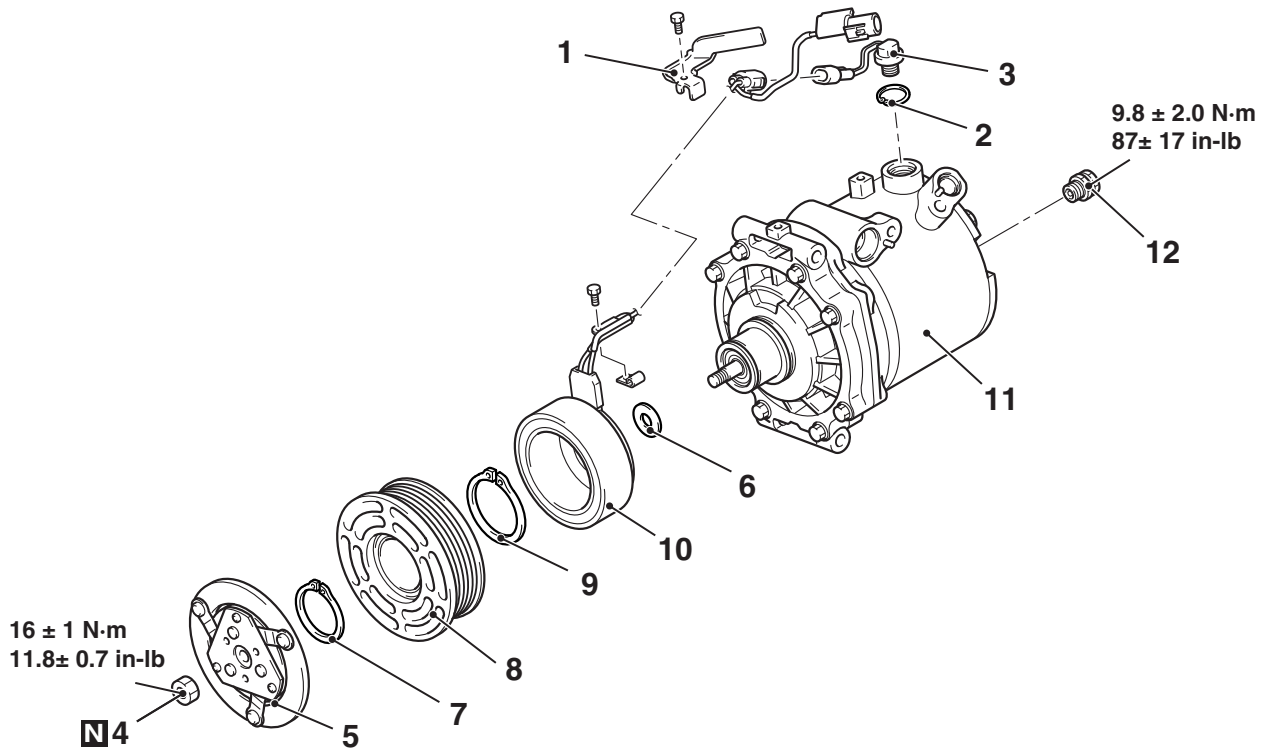

AC807970AF

Refrigerant temperature switch
 disassembly steps

1. Bracket
2. Snap ring
3. Refrigerant temperature switch

A/C compressor clutch
 disassembly


- >>E<< • Air gap adjustment
- <<A>> >>D<< 4. Self-locking nut
- 5. Armature
- 6. Shim
- >>C<< 7. Snap ring

A/C compressor clutch
 disassembly (Continued)

- 8. Rotor
- 9. Snap ring
- >>B<< 10. Field core
- 11. A/C compressor
- >>A<< 12. A/C compressor high pressure relief valve.

Required Special Tools:

- MB991367: Special Spanner
- MB991386: Pin

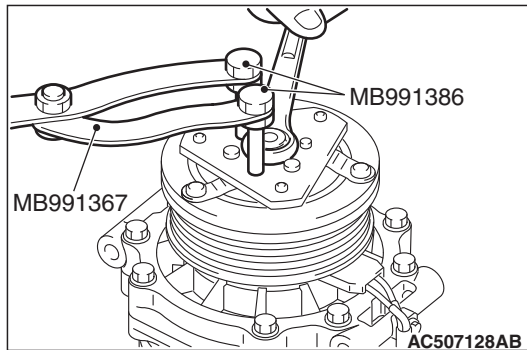
DISASSEMBLY SERVICE POINT**<<A>> SELF-LOCKING NUT REMOVAL****ASSEMBLY SERVICE POINTS****>>A<< A/C COMPRESSOR HIGH PRESSURE RELIEF VALVE INSTALLATION****⚠ CAUTION**

Be careful not to damage the O-ring when installing the high-pressure relief valve. Apply the specified refrigerating machine oil the high-pressure relief valve mounting hole before installation


Check that O-ring is installed to the high-pressure relief and use the adjust torque wrench to install the high-pressure relief valve to the main body of the compressor.

>>B<< FIELD CORE ATTACHMENT

Line up the pin hole on the compressor unit with the field core projection and attach.

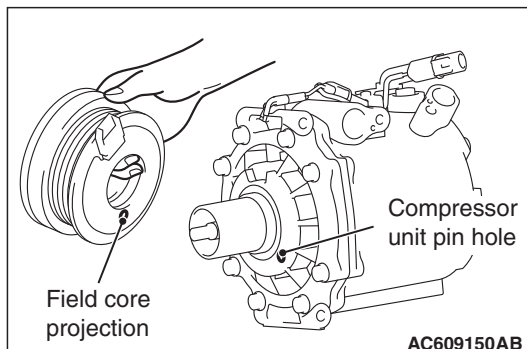**>>C<< SNAP RING INSTALLATION**

Using snap ring pliers, fit the snap ring so that the snap ring's tapered part is on the outside.

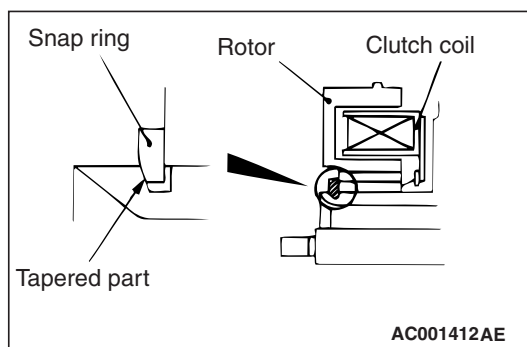

>>D<< SELF-LOCKING NUT INSTALLATION

Using a special tool, as when removing the nut, secure the armature and tighten the self-locking nut.


>>E<< AIR GAP ADJUSTMENT

Check whether or not the air gap of the clutch is within the standard value.

Standard value:

0.3 –0.5 mm (0.012 –0.020 inch)

NOTE: If there is a deviation of the air gap from the standard value, make the necessary adjustment by adjusting the number of shims.

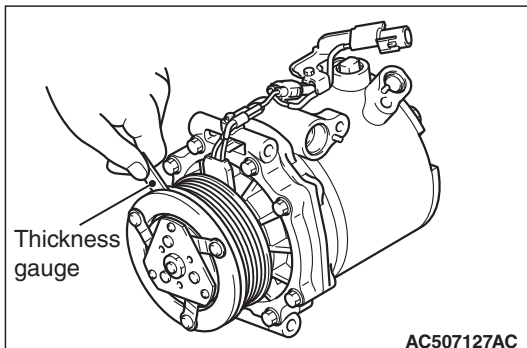

INSPECTION


M1552014304792

COOLING TEMPERATURE SWITCH

⚠ CAUTION

Do not heat more than necessary.

1. Dip the metal part of the cooling temperature switch into engine oil and increase the oil temperature using a gas burner or similar.

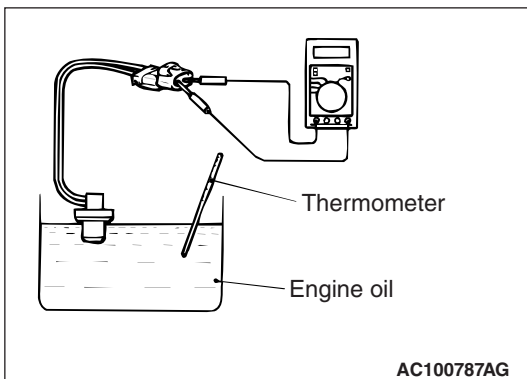


2. When the oil temperature reaches the standard value, check that resistance is supplied between the terminals.

Standard value:

Item	Temperature
Less than 2 ohms	Slightly below 125° C (257° F)
No continuity	155° C (311° F) or more

NOTE: When the oil temperature is 155° C (311° F) or more and there is no continuity, the resistance will not be 2Ω or lower until the oil temperature reduces to 125° C (257° F) or less.

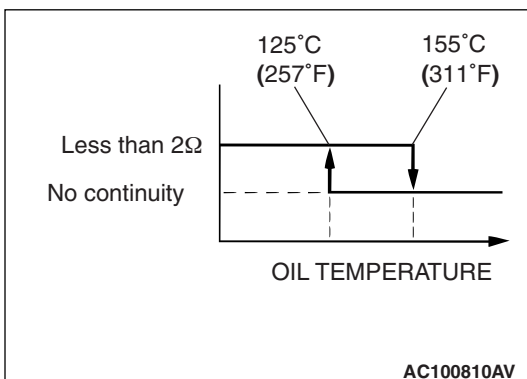



CONDENSER ASSEMBLY

REMOVAL AND INSTALLATION

M1552015401339

Pre-removal and Post-installation Operation

- Refrigerant Draining and Refilling (Refer to P.55-165).
- Headlight support upper panel Removal and Installation (Refer to GROUP 42A, Loose panel P.42A-198).

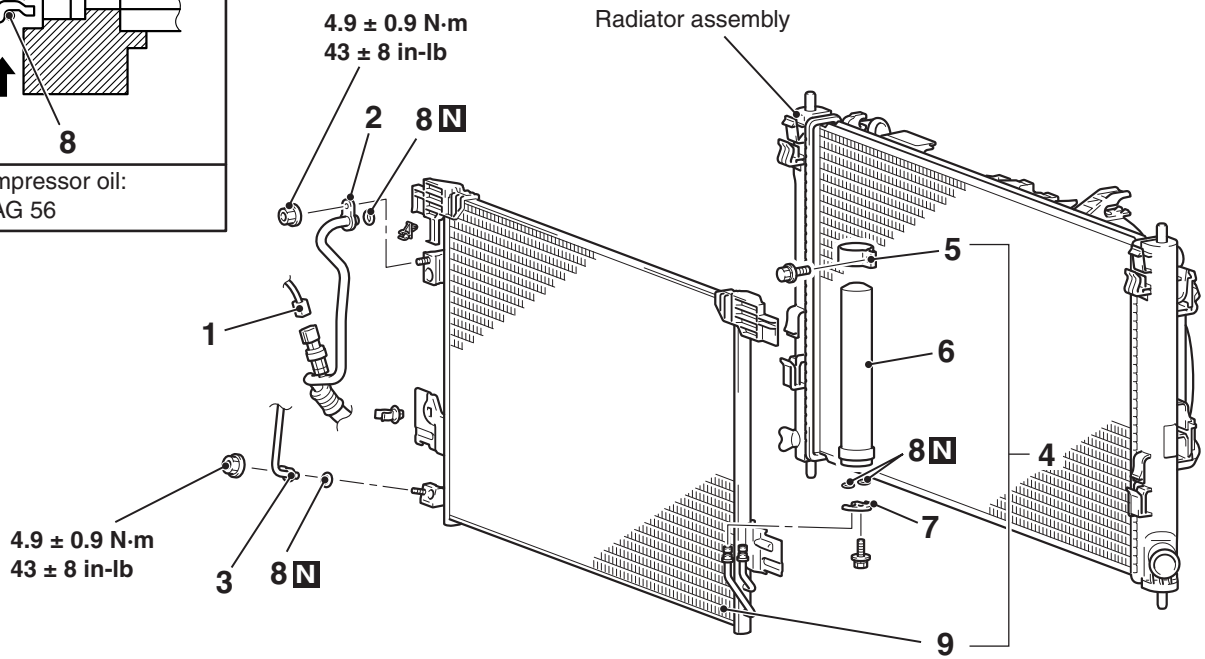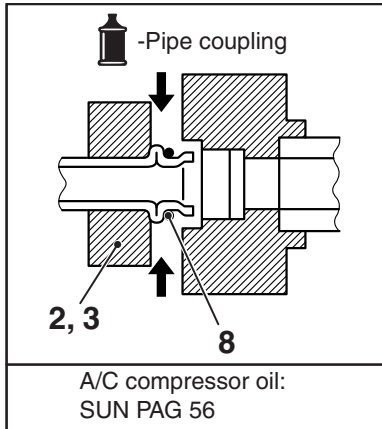

AC901550AB

Removal steps

1. A/C pressure sensor connector connection
2. Flexible discharge hose connection
3. Liquid pipe A connection
4. Condenser assembly

Removal steps (Continued)

5. Clamp
6. Receiver
7. Joint
8. O-ring
9. Condenser

<<A>>
<<A>>

REMOVAL SERVICE POINT

<<A>> FLEXIBLE DISCHARGE HOSE AND LIQUID PIPE A DISCONNECTION

⚠ CAUTION

As the compressor oil and receiver are highly moisture absorbent, use a non-porous material to plug the hose and nipples.

To prevent the entry of dust or other foreign bodies, plug the dismantled hose and condenser assembly nipples.


REFRIGERANT LINE

REMOVAL AND INSTALLATION

M1552006402516

Pre-removal and Post-installation Operation

Refrigerant Draining and Refilling (Refer to Charging and Discharging P.55-165).

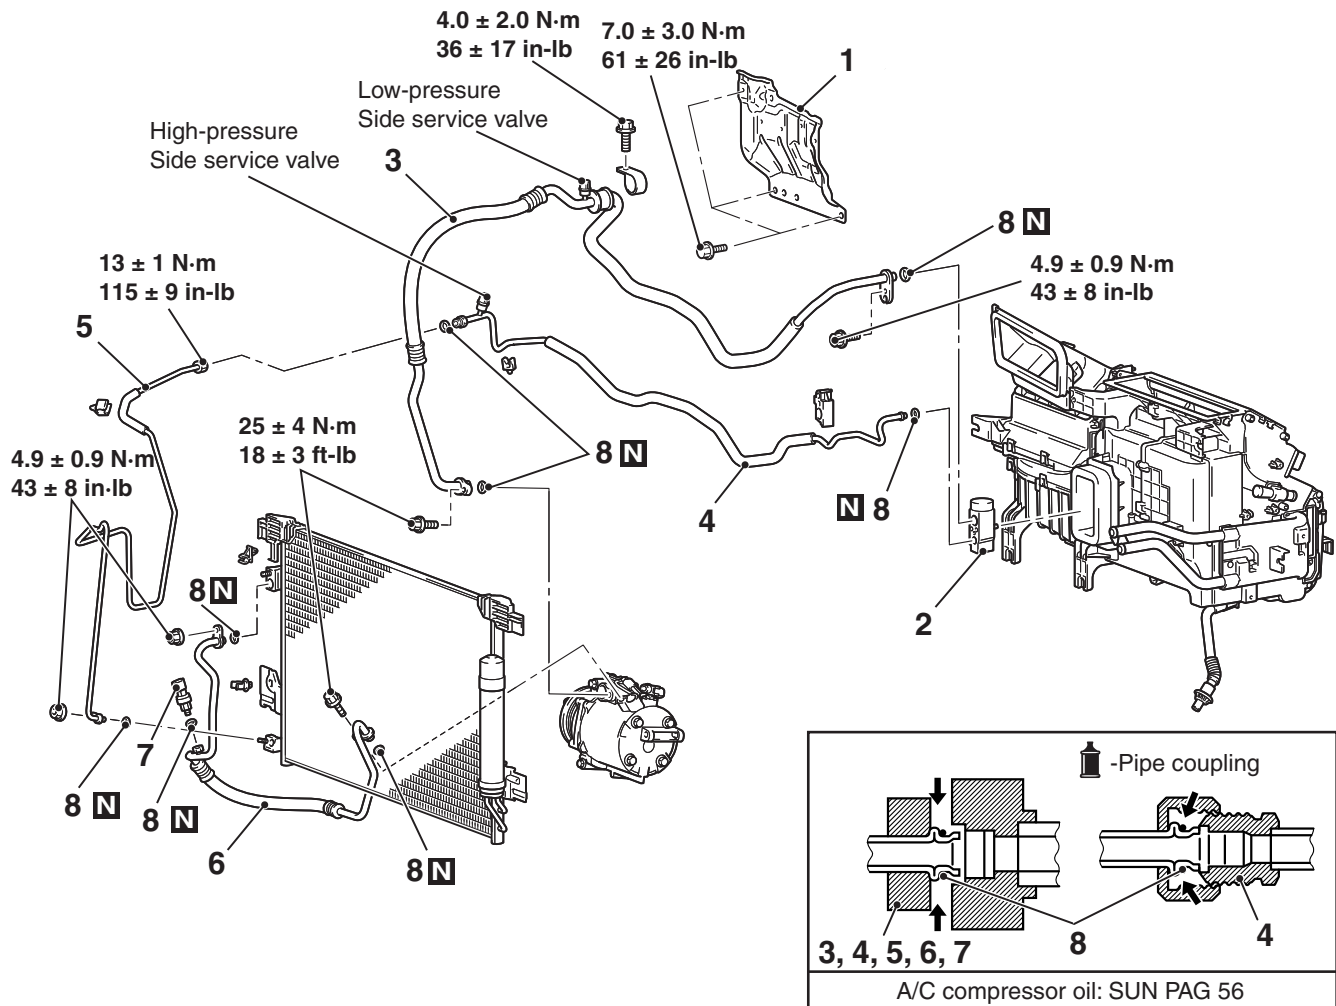

AC901539AC

- <<A>> **Expansion valve removal steps**
1. Dash panel heat protector
 - Flexible suction hose and Liquid pipe B connection
- <<A>> **Liquid pipe B removal steps**
1. Dash panel heat protector
 - Radiator condenser tank (Refer to GROUP 14 –Radiator P.14-32)
 - Oil reservoir (Refer to GROUP 37 – Power steering hose P.37-47)

- <<A>> **Liquid pipe A removal steps**
1. Dash panel heat protector
 - Radiator condenser tank (Refer to GROUP 14 –Radiator P.14-32)
 - Headlight support upper panel (Refer to GROUP 42A –Loose panel P.42A-198)
- <<A>> **Flexible suction hose removal steps**
1. Dash panel heat protector
 3. Flexible suction hose
 8. O-ring
- <<A>> **Liquid pipe B removal steps**
4. Liquid pipe B
 8. O-ring

Flexible discharge hose and A/C pressure sensor removal steps

- Headlight support panel cover
(Refer to GROUP 51 –Front bumper and radiator grille [P.51-3](#))
- Charge air cooler Intake pipe B
(Refer to GROUP 15 –Charge air cooler [P.15-12](#))
- Engine room under cover front A
(Refer to GROUP 51 –under cover [P.51-15](#))

<<A>>

6. Flexible discharge hose

<<A>>

7. A/C pressure sensor

8. O-ring

REMOVAL SERVICE POINT**<<A>> HOSE/PIPE DISCONNECTION**** CAUTION**

As the compressor oil and receiver are highly moisture absorbent, use a non-porous material to plug the hose and nipples.

To prevent the entry of other foreign bodies, plug the condenser, compressor, and expansion valve nipples.


DUCTS

REMOVAL AND INSTALLATION

M1553001001256

⚠ WARNING

For removal and installation of the passenger's side air bag module, always observe the service procedures described in GROUP 52B, Air Bag Module and Clock Spring [P.52B-413](#).

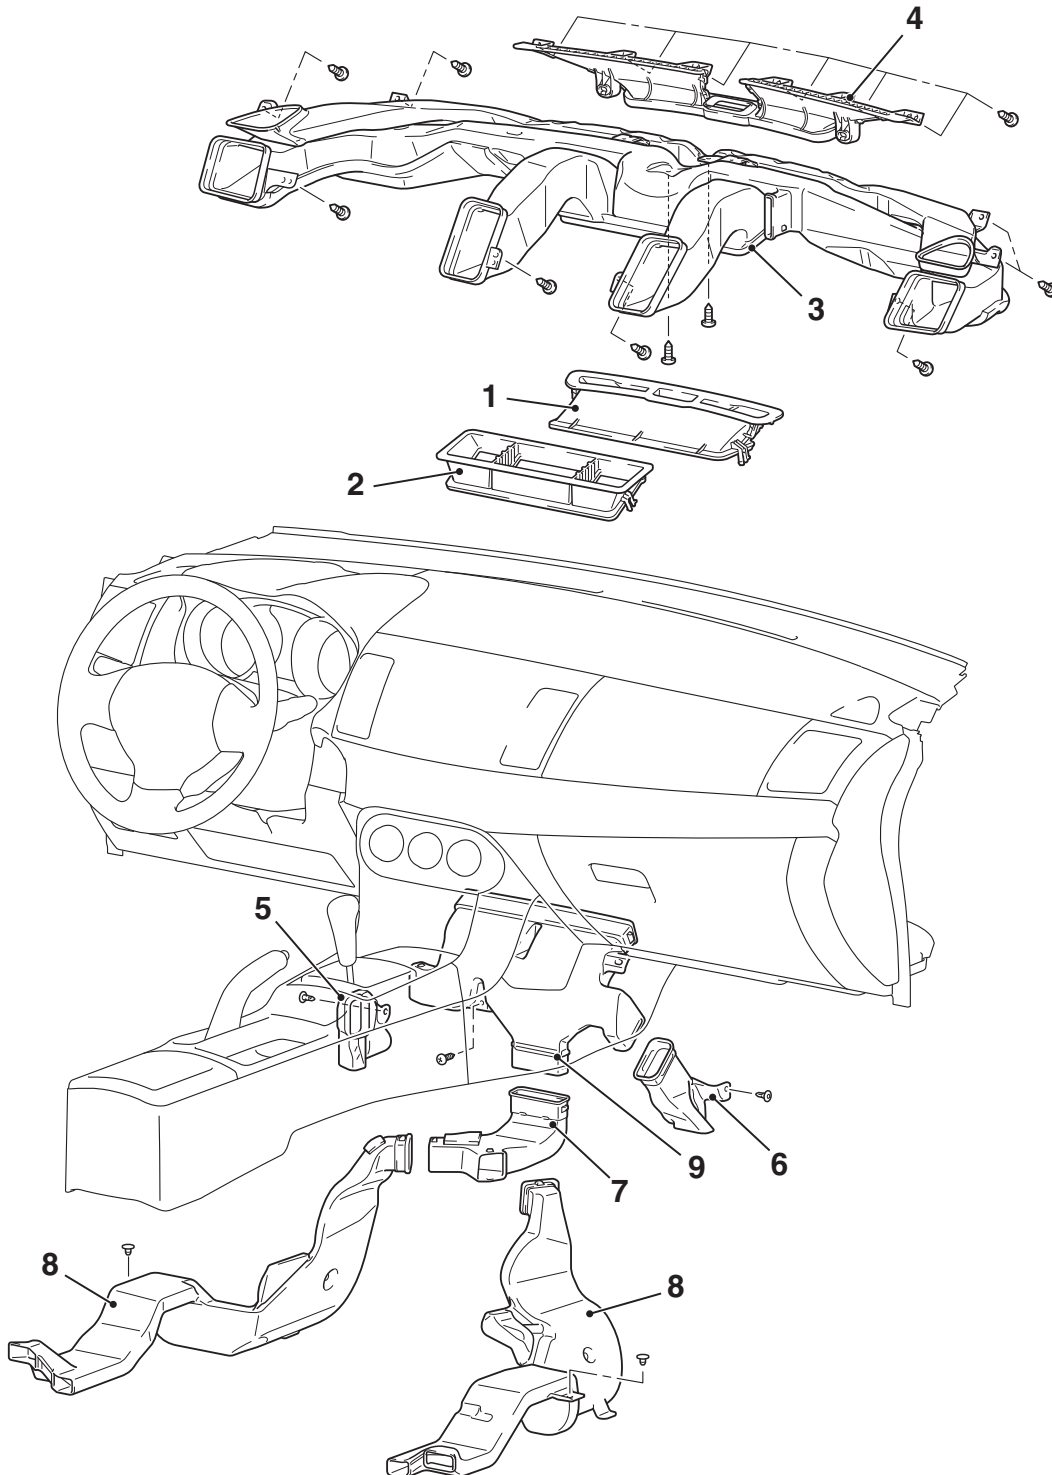

AC709091AB

Defroster nozzle and distribution duct removal steps

- Instrument panel (Refer to GROUP 52A P.52A-3).
- 1. Front center duct
- 2. Rear center duct
- 3. Ventilator air distribution duct & Side defroster duct
- 4. Defroster nozzle

Foot duct and rear heater duct removal steps


- Instrument panel cover lower <MR> (Refer to GROUP 52A, Instrument panel lower panel P.52A-9).
- 5. Foot duct (driver's side)
- Glove box (Refer to GROUP 52A, Glove box P.52A-7).
- 6. Foot duct (passenger's side)

Foot duct and rear heater duct removal steps

- Floor console assembly (Refer to GROUP 52A, Floor console assembly P.52A-10).
- Instrument panel under cover (Refer to GROUP 52A, Instrument center panel P.52A-8).
- 7. Rear heater duct A
- Front seat assembly (Refer to GROUP 52A, Front seat assembly P.52A-21).
- Glove box (Refer to GROUP 52A, Glove box P.52A-7).
- Front scuff plate, cowl side trim (Refer to GROUP 52A, Trims P.52A-12).
- Floor carpet peeling
- 8. Rear heater duct B
- Accelerator stopper (Refer to GROUP 17, Accelerator cable and pedal P.17-8).
- 9. Foot duct

REMOVAL AND INSTALLATION VENTILATORS

M1553001600675

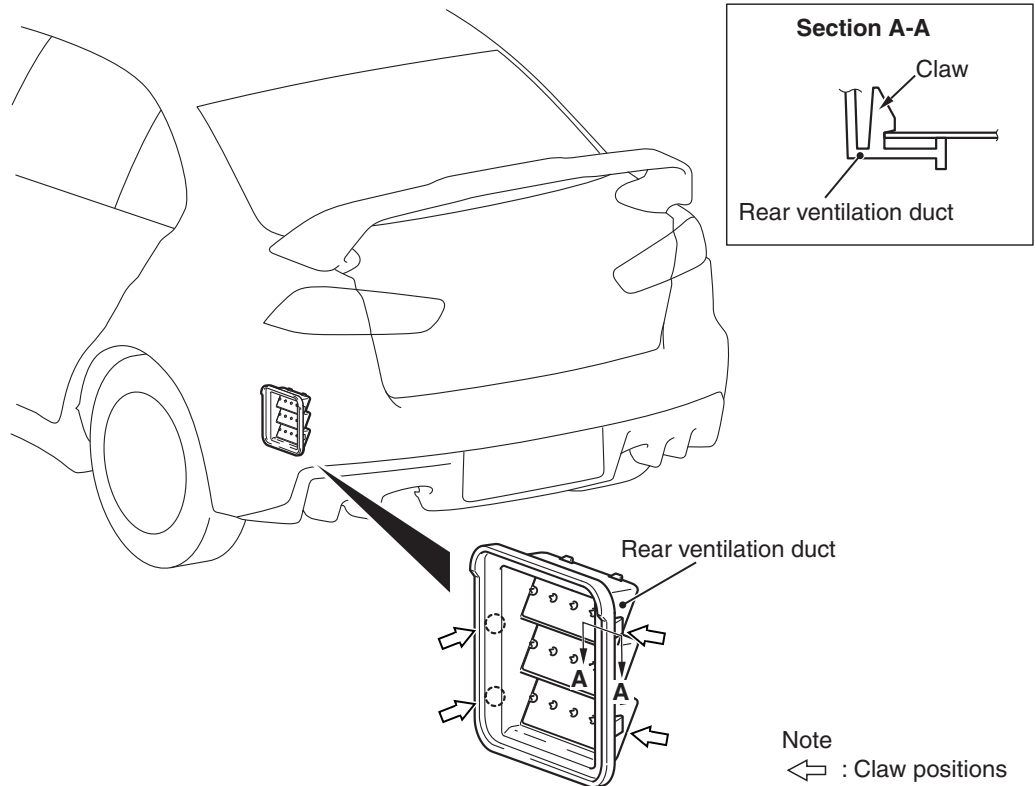

Note
 ⇐ : Claw positions

AC705024AD

Removal steps

- Rear bumper assembly (Refer to GROUP 51, P.51-6).
- 1. Rear ventilation duct