GROUP 4

CORROSION PROTECTION

CONTENTS

BODY SEALING LOCATIONS	4-2	UNDERCOAT APPLICATION	
		LOCATIONS	4-6


BODY SEALING LOCATIONS

M4040001001551

If the sealant application is directly visible on the outer plate and requires appearance quality of the application in areas such as the drip rail, pillar, clinch and so on, then apply the sealant so that it is flat, or wipe off any excess mounding after the application. Be careful not to obstruct the water draining hole.


NOTE: The bold dotted line indicates the application area on the underside.

FLOOR

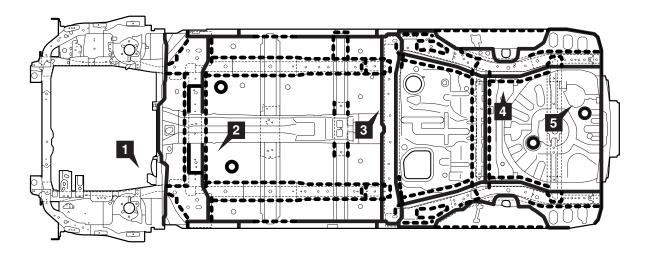



AB900236AB


UPPER BODY

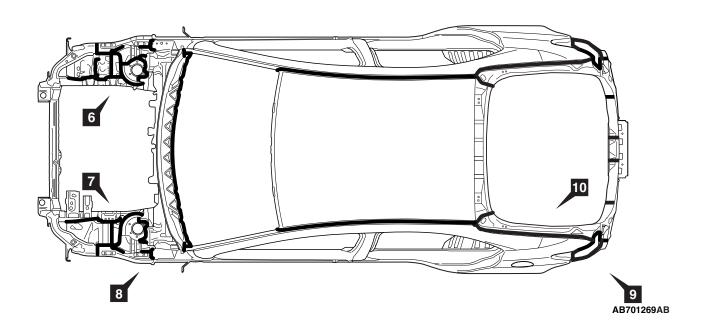



SIDE BODY

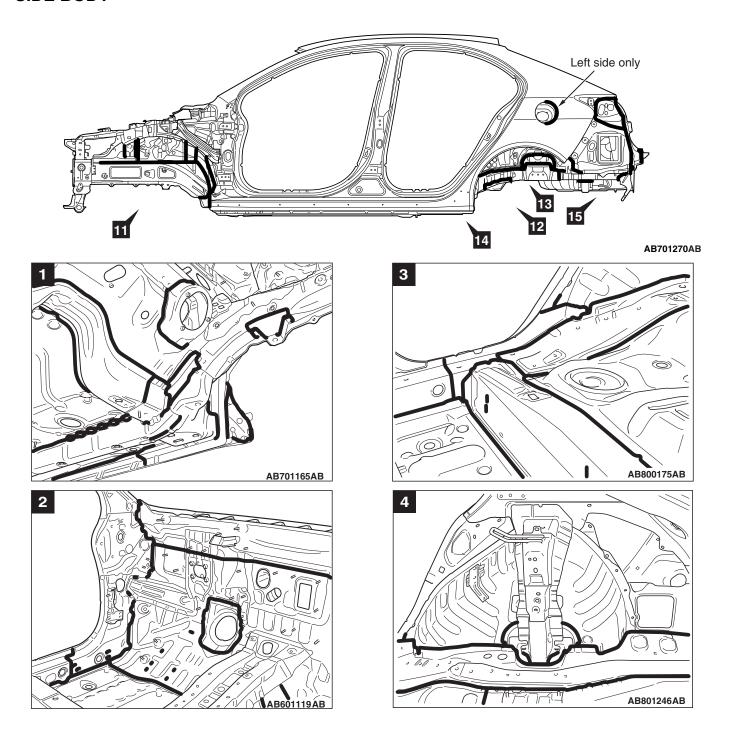


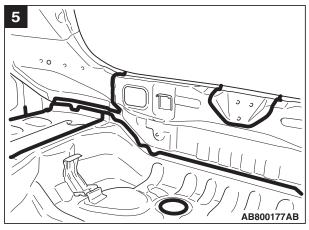


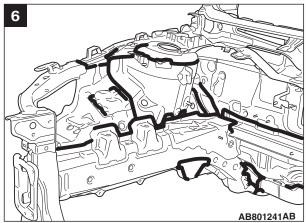


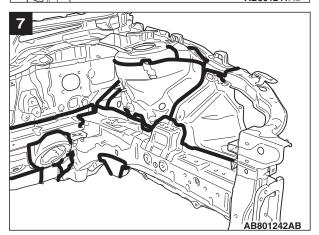


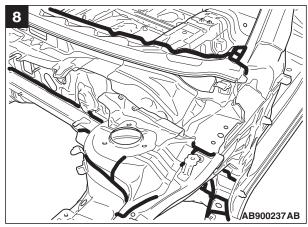


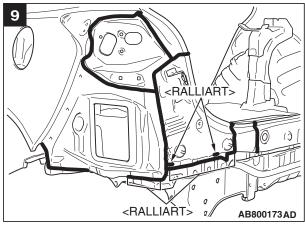


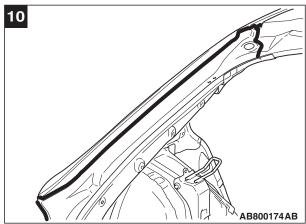


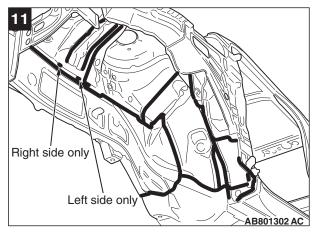


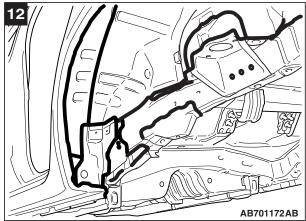


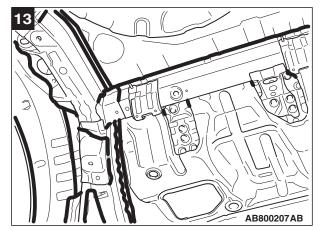


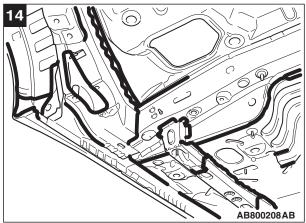


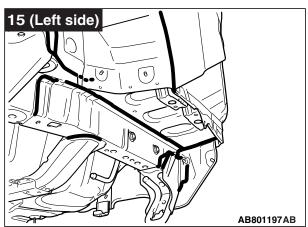


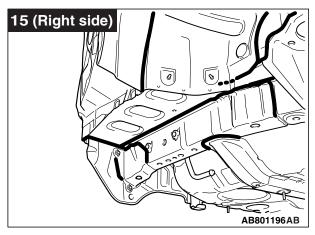


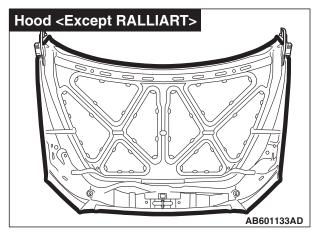


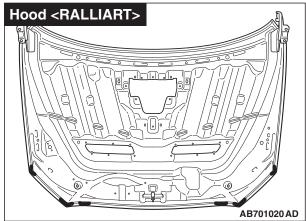

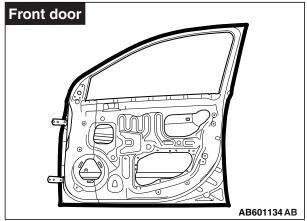

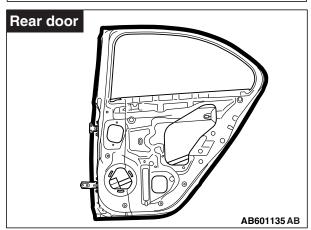

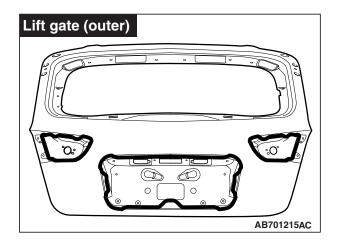


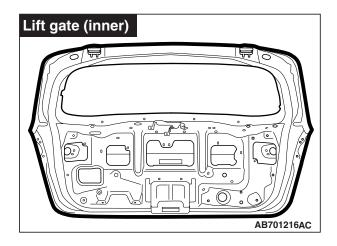

UNDERCOAT APPLICATION LOCATIONS

M4040003001115

- The under parts of the body is undercoated for anti-corrosive, anti-rust, anti-chipping, and anti-vibration performance.
- After correcting the body, restore as shown in the instructions of the figure, if necessary.
- Tape the areas marked with an asterisks to protect those areas from getting any undercoating on those areas.

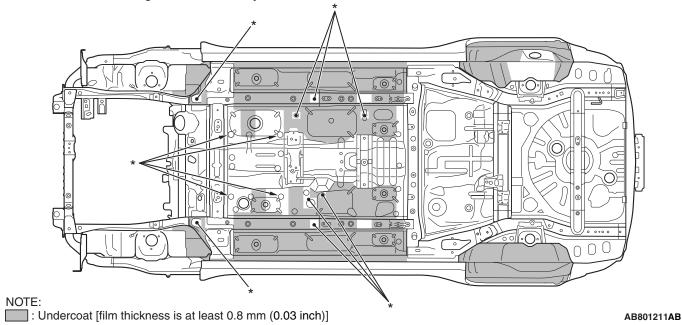

TSB Revision