

GROUP 27A**REAR AXLE <FWD>****CONTENTS**

GENERAL INFORMATION	27A-2	SPECIAL TOOLS	27A-4
SPECIFICATIONS	27A-2	ON-VEHICLE SERVICE	27A-5
SERVICE SPECIFICATIONS	27A-2	WHEEL BEARING END PLAY CHECK ...	27A-5
REAR AXLE DIAGNOSIS	27A-3	REAR HUB ROTARY-SLIDING	
INTRODUCTION TO REAR AXLE		RESISTANCE CHECK	27A-5
DIAGNOSIS	27A-3	HUB BOLT REPLACEMENT.....	27A-6
REAR AXLE DIAGNOSTIC		REAR AXLE HUB ASSEMBLY	27A-7
TROUBLESHOOTING STRATEGY	27A-3	REMOVAL AND INSTALLATION	27A-7
SYMPTOM CHART.....	27A-3	INSPECTION.....	27A-8
SYMPTOM PROCEDURES	27A-3		


GENERAL INFORMATION

M1271000101040

The rear axle has the following features:

- The wheel bearing is a unit ball bearing (double-row angular contact ball bearing) which incorporates the oil seals and is highly resistant to a thrust load.
- The number of parts has been reduced by integrating the magnetic encoder for ABS wheel speed detection into the wheel bearing.

CONSTRUCTION DIAGRAM

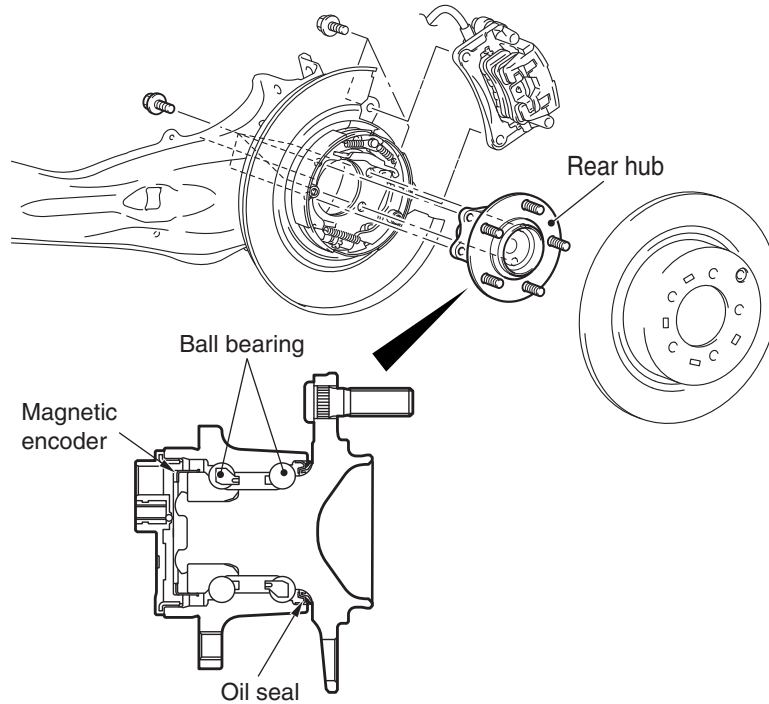

AC803340AD

SPECIFICATIONS

SERVICE SPECIFICATIONS

M1271000300847

Item	Limit
Wheel bearing end play mm (in)	0.05 (0.002)
Rear hub rotary-sliding resistance N (lb)	19.2 (4.32)

REAR AXLE DIAGNOSIS

INTRODUCTION TO REAR AXLE DIAGNOSIS

M1271004100179

Noise from the rear axle may be caused by defects in the components.

REAR AXLE DIAGNOSTIC TROUBLESHOOTING STRATEGY

M1271004200176

Use these steps to plan your diagnostic strategy. If you follow them carefully, you will be sure that you have exhausted most of the possible ways to find a rear axle fault.

1. Gather information from the customer.

2. Verify that the condition described by the customer exists.
3. Find the malfunction by following the Symptom Chart.
4. Verify malfunction is eliminated.

SYMPTOM CHART

M1271004300333

Symptom	Inspection procedure	Reference page
Abnormal noise	1	P.27A-3

SYMPTOM PROCEDURES

INSPECTION PROCEDURE 1: Abnormal Noise

DIAGNOSIS

STEP 1. Check the rear hub assembly installation bolts for looseness.

Q: Are the rear hub assembly installation bolts loosened?

YES : Tighten the rear hub assembly installation bolts to the specified torque $95 \pm 14 \text{ N} \cdot \text{m}$ ($70 \pm 10 \text{ ft} \cdot \text{lb}$). Then go to Step 3.

NO : Go to Step 2.

STEP 2. Check the wheel bearing end play.

(1) Remove the caliper assembly, and suspend the caliper assembly with a wire and remove the brake disk (Refer to P.27A-7).


(2) Check the bearing's end play. Place a dial gauge against the hub surface, then move the hub in the axial direction and check whether or not there is end play.


Limit: 0.05 mm (0.002 inch)

Q: Is the wheel bearing end play within the limit?

YES : Go to Step 3.

NO : Replace the rear hub assembly, then go to Step 4.

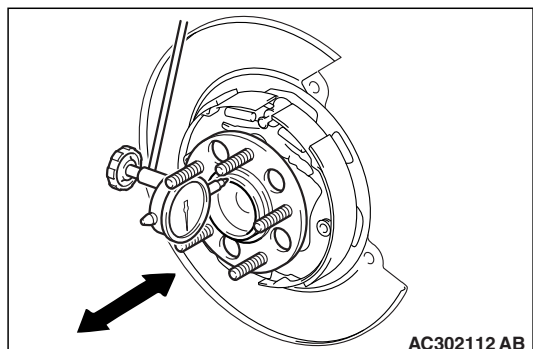

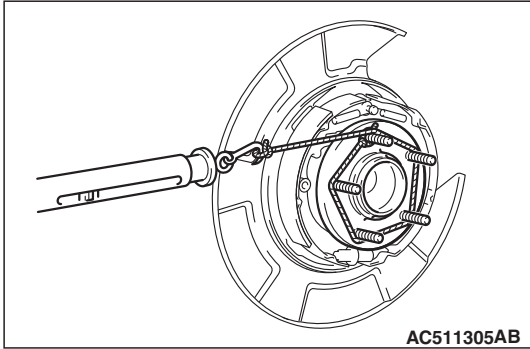

STEP 3. Check the rear hub rotary-sliding resistance.

- (1) Turn the hub a few times to seat the bearing.
- (2) Wind a rope around the hub bolt and turn the hub by pulling at a 90 degree angle with a spring balance. Measure to determine whether or not the rotary-sliding resistance of the rear hub is at the limit value.

Limit: 19.2 N (4.32 lb)

Q: Is the rear hub rotary-sliding resistance within the limit?

YES : Go to Step 4.

NO : Replace the rear hub assembly if an adjustment cannot be made to within the limit. Then go to Step 4 .

STEP 4. Retest the systems.



Q: Are abnormal noises generated?

YES : Return to Step 1.

NO : The procedure is complete.

SPECIAL TOOLS

M1271000600804

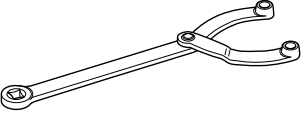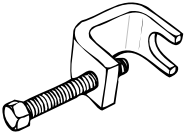Tool	Tool number and name	Supersession	Application
 <p>B990767</p>	<p>MB990767 Front hub and flange yoke holder</p>	<p>MB990767-01</p>	<p>Hub fixing</p>
 <p>MB991618</p>	<p>MB991618 Hub bolt remover</p>	<p>General service tool</p>	<p>Hub bolt removal</p>

ON-VEHICLE SERVICE


WHEEL BEARING END PLAY CHECK

M1271000901080

1. Remove the caliper assembly, and suspend the caliper assembly with a wire and remove the brake disk (Refer to [P.27A-7](#)).
2. Check the bearing's end play. Place a dial gauge against the hub surface; then move the hub in the axial direction and check whether or not there is end play.

Limit: 0.05 mm (0.002 inch)

3. Replace the rear hub assembly if an adjustment cannot be made to within the limit.
4. After checking, install the brake disk and the caliper assembly, and tighten the caliper mounting bolt to the specified torque (Refer to [P.27A-7](#)).

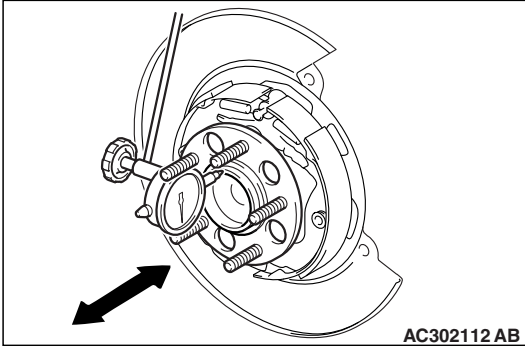


REAR HUB ROTARY-SLIDING RESISTANCE CHECK

M1271001100608

1. Remove the caliper assembly, and suspend the caliper assembly with a wire and remove the brake disk (Refer to [P.27A-7](#)).
2. Turn the hub a few times to seat the bearing.
3. Wind a rope around the hub bolt and turn the hub by pulling at a 90 degree angle with a spring balance. Measure to determine whether or not the rotary-sliding resistance of the rear hub is at the limit value.

Limit: 19.2 N (4.32 lb)

4. Replace the rear hub assembly if the rotary-sliding resistance cannot be made to within the limit.
5. After having finished the inspection, install the brake disk, caliper assembly and tighten the caliper assembly mounting bolts to the specified torque (Refer to [P.27A-7](#)).

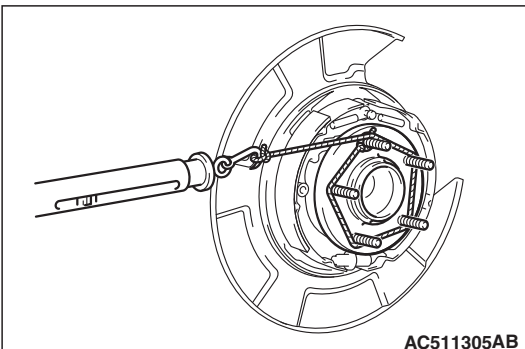



HUB BOLT REPLACEMENT

M1271001000753

Required Special Tools:

- MB990767: Front Hub and Flange Yoke Holder
- MB991618: Hub Bolt Remover

1. Remove the brake drum. <Vehicles with drum brake>
2. Remove the caliper assembly, and suspend the caliper assembly with a wire and remove the brake disk (Refer to [P.27A-7](#)).
3. Use special tool MB991618 to remove the hub bolts.

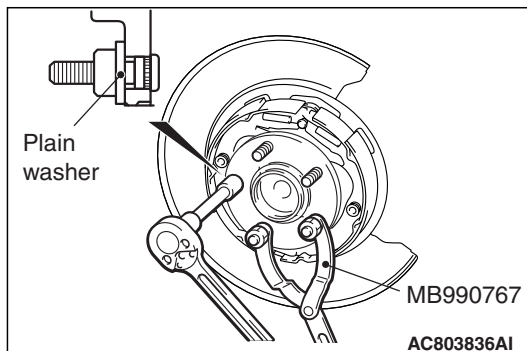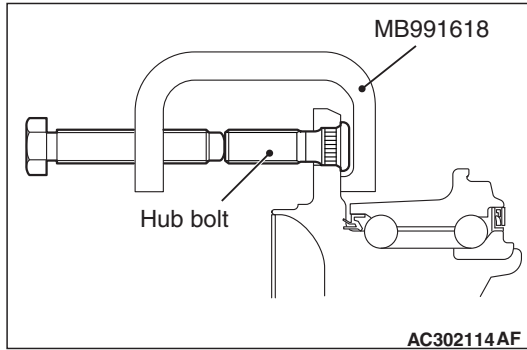

4. Install the plain washer to the new hub bolt, and install the bolt with a nut while holding the hub with special tool MB990767.
5. Install the brake disk, caliper assembly and tighten the caliper assembly mounting bolts to the specified torque (Refer to [P.27A-7](#)).


REAR AXLE HUB ASSEMBLY

REMOVAL AND INSTALLATION

M1271002001384

CAUTION

- Do not disassemble the rear wheel hub assembly.
- The magnetic encoder collects metallic particles easily, because it is magnetized. Make sure that the magnetic encoder should not collect metallic particles. Check that there is not any trouble prior to reassembling it.
- When the rear wheel hub assembly is removed/installed, make sure that the magnetic encoder (integrated with inner oil seal) does not contact with surrounding parts to avoid damage.
- When removing and installing the rear wheel speed sensor, make sure that its pole piece at the end does not contact with surrounding parts to avoid damage.
- The part indicated with * is the bolt with friction coefficient stabilizer. In removal, replace it with a new one.

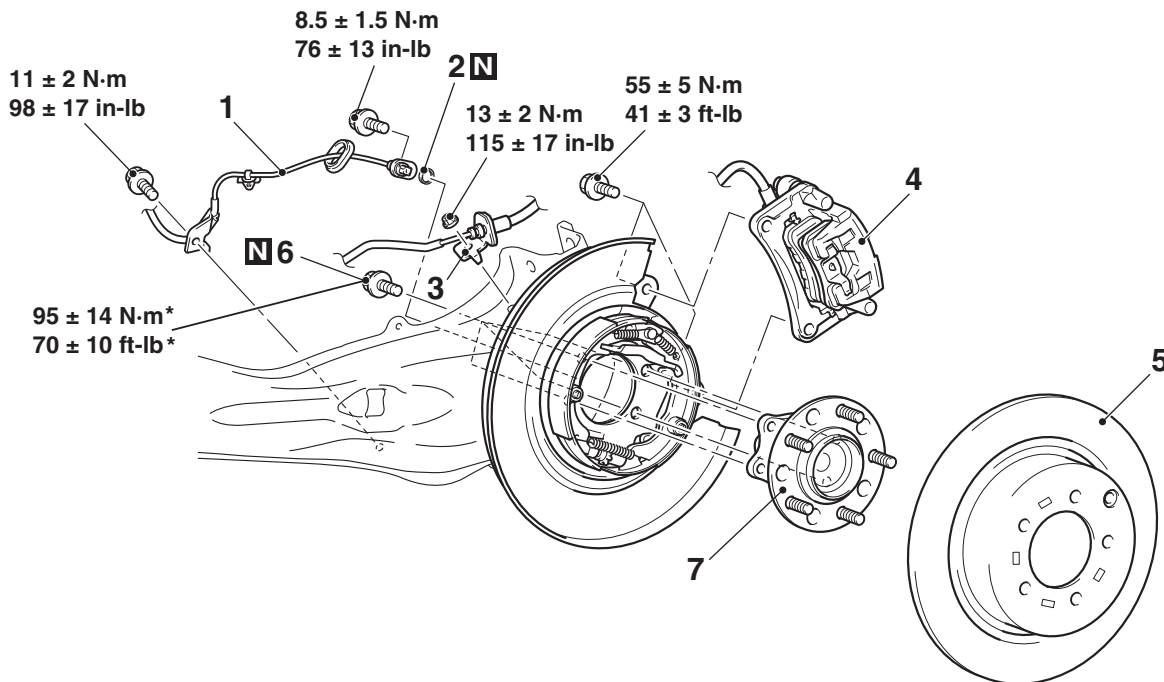

AC807063AC

Removal steps

1. Rear wheel speed sensor (Refer to <<A>> GROUP 35C, Wheel Speed Sensor P.35C-313.)
2. O ring
3. Brake hose bracket

Removal steps (Continued)

4. Caliper assembly
5. Rear brake disk
6. Rear wheel hub assembly mounting bolt
7. Rear wheel hub assembly

REMOVAL SERVICE POINT**<<A>> CALIPER ASSEMBLY REMOVAL**

1. Remove the caliper assembly with brake hose.
2. Secure the removed caliper assembly with a wire or other similar material at a position where it will not interfere with the removal and installation of the rear wheel hub assembly.

INSPECTION

M1271002100344

- Check the oil seal of the rear hub wheel bearing for crack or damage.
- Check the rear hub wheel bearing for wear or damage.