

GROUP 22C

TWIN CLUTCH -SPORTRONIC SHIFT TRANSMISSION (TC-SST)

CONTENTS

GENERAL INFORMATION	22C-3	DATA LIST REFERENCE TABLE	22C-356
SERVICE SPECIFICATIONS	22C-3	SPECIAL FUNCTION	22C-362
LUBRICANTS	22C-4	TC-SST-ECU TERMINAL VOLTAGE REFERENCE CHART	22C-363
SPECIAL TOOLS	22C-5	DIAGNOSIS <SHIFT LEVER>	22C-364
DIAGNOSIS <TC-SST>	22C-7	DIAGNOSIS FUNCTION	22C-364
INTRODUCTION	22C-7	DIAGNOSTIC TROUBLE CODE CHART ..	22C-366
TROUBLESHOOTING STRATEGY	22C-7	SYMPTOM CHART	22C-366
TC-SST TEACH-IN	22C-8	DIAGNOSTIC TROUBLE CODE PROCEDURES	22C-367
DIAGNOSIS FUNCTION	22C-11	SYMPTOM PROCEDURES	22C-373
DIAGNOSTIC TROUBLE CODE CHART ..	22C-16	DATA LIST REFERENCE TABLE	22C-387
SYMPTOM CHART	22C-21	SPECIAL FUNCTION (ACTUATOR TEST REFERENCE TABLE)	22C-389
DIAGNOSTIC TROUBLE CODE PROCEDURES	22C-22	SHIFT LEVER -ECU TERMINAL VOLTAGE REFERENCE CHART	22C-390
SYMPTOM PROCEDURES	22C-332		

Continued on next page

DIAGNOSIS <ACTIVE CENTER**DIFFERENTIAL (ACD)> 22C-394**

TROUBLESHOOTING STRATEGY	22C-394
DIAGNOSIS FUNCTION	22C-394
DIAGNOSTIC TROUBLE CODE CHART	22C-397
SYMPTOM CHART	22C-399
DIAGNOSTIC TROUBLE CODE PROCEDURES	22C-400
SYMPTOM PROCEDURES	22C-467
DATA LIST REFERENCE TABLE	22C-473
SPECIAL FUNCTION REFERENCE TABLE	22C-476
AWD-ECU TERMINAL VOLTAGE REFERENCE CHART FOR ACD	22C-477

ON-VEHICLE SERVICE 22C-478

TRANSMISSION FLUID LEAKAGE CHECK	22C-478
TRANSMISSION FLUID LEVEL CHECK	22C-478
TRANSMISSION FLUID CHANGE	22C-479
TRANSFER OIL CHECK	22C-480
TRANSFER OIL CHANGE	22C-480
SHIFT LEVER OPERATION CHECK	22C-481
KEY INTERLOCK MECHANISM CHECK	22C-482
SHIFT LOCK MECHANISM CHECK	22C-483
ACD CONTROL FLUID CHECK	22C-483
ACD BLEEDING	22C-484
ACD OPERATION CHECK	22C-485
HYDRAULIC PRESSURE CHECK	22C-486

TWIN CLUTCH SST CONTROL**MODE SWITCH 22C-487**

REMOVAL AND INSTALLATION	22C-487
INSPECTION	22C-488
TWIN CLUTCH SST CONTROL MODE SWITCH CHECK	22C-488

TRANSMISSION CONTROL 22C-488

REMOVAL AND INSTALLATION	22C-488
------------------------------------	---------

KEY INTERLOCK AND SHIFT LOCK**MECHANISMS 22C-493**

REMOVAL AND INSTALLATION	22C-493
------------------------------------	---------

TRANSFER ASSEMBLY 22C-495

REMOVAL AND INSTALLATION	22C-495
------------------------------------	---------

TRANSAXLE ASSEMBLY 22C-497

REMOVAL AND INSTALLATION	22C-497
------------------------------------	---------

OIL PAN 22C-503

REMOVAL AND INSTALLATION	22C-503
------------------------------------	---------

MECHATRONIC ASSEMBLY, MANUAL**CONTROL LEVER 22C-505**

REMOVAL AND INSTALLATION	22C-505
------------------------------------	---------

TRANSAXLE CASE OIL SEAL 22C-509

REMOVAL AND INSTALLATION	22C-509
------------------------------------	---------

OIL COOLER 22C-513

REMOVAL AND INSTALLATION	22C-513
------------------------------------	---------

OIL FILTER 22C-515

REMOVAL AND INSTALLATION	22C-515
------------------------------------	---------

PADDLE SHIFT ASSEMBLY 22C-517

REMOVAL AND INSTALLATION	22C-517
INSPECTION	22C-517
PADDLE SHIFT SWITCH CHECK	22C-517

AWC-ECU 22C-518

REMOVAL AND INSTALLATION	22C-518
------------------------------------	---------

SENSOR, SWITCH AND RELAY 22C-519

REMOVAL AND INSTALLATION	22C-519
INSPECTION	22C-520
ELECTRIC PUMP RELAY CHECK	22C-520
AWC SWITCH CHECK	22C-520

HYDRAULIC UNIT 22C-521

REMOVAL AND INSTALLATION	22C-521
------------------------------------	---------

GENERAL INFORMATION

M1225000100099

Item		Specification
Transmission model		W6DGA
Transmission type		6-speed forward, 1-speed reverse constant mesh
Clutch		Wet multiplate clutch x 2
Gear ratio	1st	3.655
	2nd	2.368
	3rd	1.754
	4th	1.322
	5th	0.983
	6th	0.731
	Reverse	4.011
Final gear ratio		4.062
Helical gear LSD (front differential)		Present
Transfer	Reduction ratio	0.302
	Differential gear unit	Hydraulic pressure multiplate clutch (ACD)

SERVICE SPECIFICATIONS

M1225027800057

Item	Standard value
ACD proportioning valve resistance Ω	3.7 \pm 0.3
Hydraulic pressure of hydraulic unit (during forced activation) MPa (psi)	0.9 – 1.1 (130 - 159 psi)









LUBRICANTS








M1225000200234




Item		Brand	Capacity
Transmission fluid dm ³ (qt)		DiaQueen SSTF-I	7.6 (8.0) [Including 0.5 (0.53) in oil cooler]
Transfer oil dm ³ (qt)		DiaQueen LSD gear oil	0.8 (0.85)
ACD control fluid dm ³ (qt)		DIAMOND ATF SP III	0.9 (0.95)
Front propeller shaft	Sleeve yoke section	DiaQueen LSD gear oil	Adequate amount
Transaxle assembly	Spline sections of front driveshaft assembly (LH) and output shaft	Molykote BR2-Plus	
	Spline sections of transfer assembly and transaxle assembly		
	O-ring		
	Spline sections of input shaft and flywheel		

SPECIAL TOOLS

M1225000300093

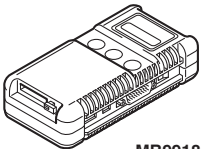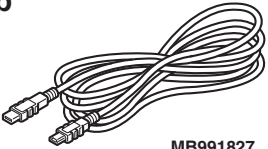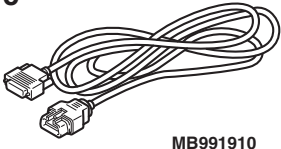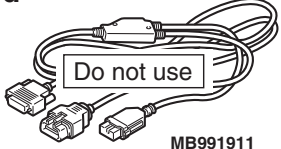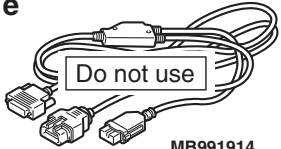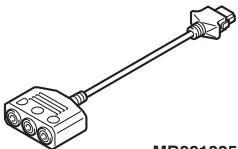Tool	Tool number and name	Supersession	Application
<p>a</p>  <p>MB991824</p> <p>b</p>  <p>MB991827</p> <p>c</p>  <p>MB991910</p> <p>d</p>  <p>MB991911</p> <p>e</p>  <p>MB991914</p> <p>f</p>  <p>MB991825</p> <p>g</p>  <p>MB991826 MB991958</p>	<p>MB991958 a: MB991824 b: MB991827 c: MB991910 d: MB991911 e: MB991914 f: MB991825 g: MB991826</p> <p>M.U.T.-III sub assembly</p> <p>a: Vehicle communication interface (V.C.I.)</p> <p>b: M.U.T.-III USB cable</p> <p>c: M.U.T.-III main harness A (Vehicles with CAN communication system)</p> <p>d: M.U.T.-III main harness B (Vehicles without CAN communication system)</p> <p>e: M.U.T.-III main harness C (for Chrysler models only)</p> <p>f: M.U.T.-III measurement adapter</p> <p>g: M.U.T.-III trigger harness</p>	<p>MB991824-KIT</p> <p><i>NOTE: G: MB991826 M.U.T.-III trigger harness is not necessary when pushing V.C.I. ENTER key.</i></p>	<p>⚠ CAUTION</p> <p>For vehicles with CAN communication, use M.U.T.-III main harness A to send simulated vehicle speed. If you connect M.U.T.-III main harness B instead, the CAN communication does not function correctly.</p> <p>Checking diagnostic trouble codes</p>
 <p>MB992006</p>	<p>MB992006 Extra fine probe</p>	<p>–</p>	<p>Making voltage and resistance measurement during troubleshooting</p>

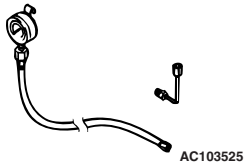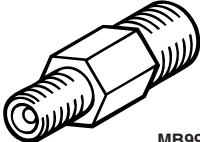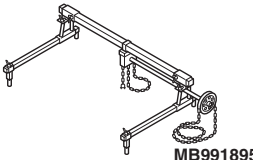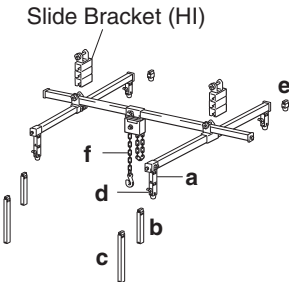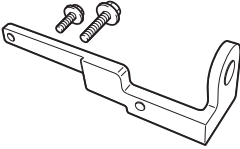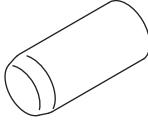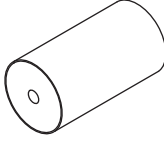Tool	Tool number and name	Supersession	Application
 <p>AC103525</p>	MD998330 (Includes MD998331) Oil pressure gauge (3.0 MPa, 427 psi)	MD998330-01	Measurement of hydraulic pressure
 <p>MB991705</p>	MB991705	Adapter	
 <p>MB991895</p>	MB991895 Engine hanger	Tool not available	When the engine hanger is used: Supporting the engine assembly during removal and installation of the transaxle assembly
 <p>Slide Bracket (HI)</p> <p>B991928</p>	MB991928 Engine hanger a: MB991929 Joint (50) × 2 b: MB991930 Joint (90) × 2 c: MB991931 Joint (140) × 2 d: MB991932 Foot (standard) × 4 e: MB991933 Foot (short) × 2 f: MB991934 Chain and hook assembly	Tool not available	
 <p>B992201</p>	MB992201 Engine hanger plate	-	
	MB992311 Oil seal guide	-	Installation of transaxle case (LH) oil seal
	MB992310 Oil seal installer	-	Installation of transaxle case (LH) oil seal

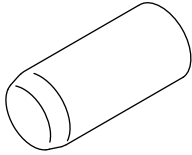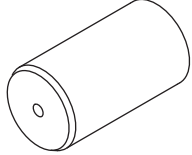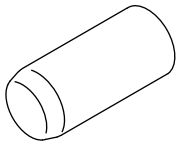Tool	Tool number and name	Supersession	Application
	MB992313 Oil seal guide	–	Installation of transaxle case (RH) oil seal
	MB992312 Oil seal installer	–	Installation of transaxle case (RH) oil seal
	MB992314 V ring guide	–	Installation of V ring

DIAGNOSIS <TC-SST>

INTRODUCTION

The TC-SST system can exhibit any of the following symptoms: noise or vibration is generated or fluid leaks.

The causes of these symptoms could come from: incorrect mounting, the fluid level may be low, or a component of the TC-SST may be faulty.

M1225024900055

TROUBLESHOOTING STRATEGY

Use these steps to plan your diagnostic strategy. If you follow them carefully, you will find most TC-SST malfunctions.

1. Gather as much information as possible about the complaint from the customer.
2. Verify that the condition described by the customer exists.
3. Check the vehicle for any TC-SST Diagnostic Trouble Codes (DTCs).
4. If you cannot verify the condition and there are no DTCs, the malfunction is intermittent. For information on how to cope with intermittent malfunctions, refer to GROUP 00, How to Use Troubleshooting/Inspection Service Points –How to Cope with Intermittent Malfunction [P.00-13](#).


5. If you can verify the condition but there are no DTCs, or the system cannot communicate with scan tool, refer to the Symptom Chart [P.22C-21](#).
6. If there is a DTC, record the number of the code, then erase the code from memory using scan tool.
7. Reconfirm the symptom.
8. If a DTC is set again, go to the Inspection Chart for Diagnostic Trouble Codes.
9. If a DTC is not set again, the malfunction is intermittent. For information on how to cope with intermittent malfunctions, refer to GROUP 00, How to Use Troubleshooting/Inspection Service Points –How to Cope with Intermittent Malfunction [P.00-13](#).
10. Verify malfunction is eliminated. After repairs are completed, the complaint conditions to confirm the malfunction has been eliminated.

M1225007900159

PRECAUTIONS FOR DIAGNOSIS


With the TC-SST assembly, the IG shutoff delay system is adopted to improve the engine starting performance.

When the ignition switch is turned OFF, the IG shutoff delay system release the gear engagement in preparation for the next engine starting. This is a system to delay the engine stop for approximately 1 second, and the delay is not a malfunction.

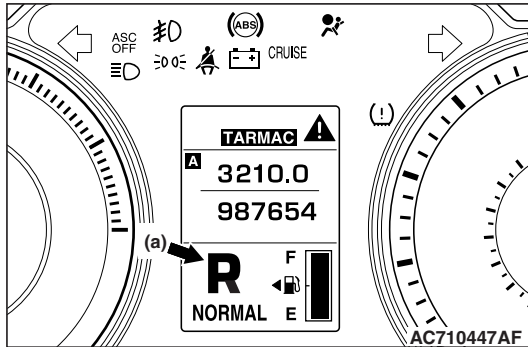

If the gear is not in the reverse position, the R range indicator of the multi information display (a) and the R range indicator of the floor console panel (b) flash. This is a warning to the driver, and is not a malfunction.

In this case, return the shift lever to the N range, and move it to the R range again. If the flashing of each R range indicator changes to normal illumination, it indicates that the gear is in reverse position.

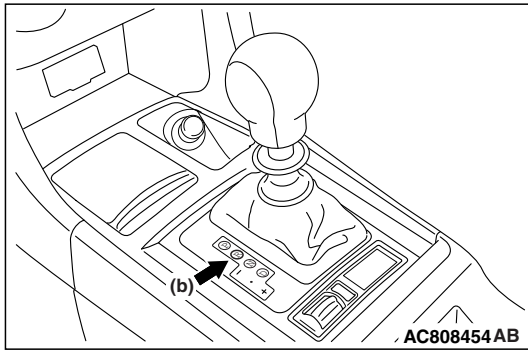

TC-SST TEACH-IN

M1225029400088

CAUTION

- Check the Diag. Version before Teach-in. If the Diag. Version is 0000, reprogram the ECU. (The software with Diag. Version 0000 does not have Teach-in function.)
- When the mechatronic assembly is replaced, reprogram the ECU and carry out the following Teach-In.
- When the clutch assembly is replaced, the following Teach-In must be carried out.

TEACH-IN ITEM

1. Teach-In operation type

There are two types of Teach-In operation and the type to be implemented varies depending on the replacement part.

Type	Teach-In	Mechatronic assembly replacement	Clutch assembly replacement
A	Teach-In for Shift fork	Implemented	Not implemented
B	Teach-In for Clutch	Implemented	Implemented

NOTE: When replacing the mechatronic assembly, execute in A →B order.

2. Scan tool item execution

To complete each Teach-In operation, multiple items must be executed using scan tool MB991958, and those items shall be executed in a designated order.

2-1. SCAN TOOL ITEM LIST

Item No.	Scan tool Item Name
1	Plausibility check
2	Shift fork Teach-In
3	Line pressure Test
4	Stroke Teach-In
5	Boost Teach-In
6	Interlock Teach-In
7	Clutch Ventilation
8	Reset clutch gain

NOTE:

- Item No. 3 and No. 6 are displayed on the scan tool, however, those are not used.
- Item No.8 is not displayed when the Diag. Version of TC-SST-ECU is pre-0002. (Diag. Version can be checked by the Teach-In screen of scan tool.)

2-2. ITEM EXECUTION ORDER

Type	Teach-In	Item execution order
A	Teach-In for Shift fork	No.7 →No.1 →No.2
B	Teach-In for Clutch	No.7 →No.4 →No.5 →No.8

NOTE: Item No.8 is not displayed when the Diag. Version of TC-SST-ECU is pre-0002. (Diag. Version can be checked by the Teach-In screen of scan tool.)

3. Confirmation of Teach-In operation status

Using the data list simultaneously displayed with Teach-In, the execution status and results can be confirmed.

No.	Data List Item Name	Scan tool display
100	Teach-In executing	No/Pending/Yes
101	Normal End	No/Yes
102	Abnormal End	No/Yes
103	Timeout error	No/Yes
104	Abort conditions error	No/Yes
110	Execute last Teach-In item	The previously conducted scan tool item name is displayed
111	Internal Error Data	The monitoring unit No. is displayed in case of an error

TEACH-IN PROCEDURE

NOTE:

- According to the transmission fluid state (fluid -filled state), Teach-In executed time is not equal.
- Item No.8 is not displayed when the Diag. Version of TC-SST-ECU is pre-0002. (Diag. Version can be checked by the Teach-In screen of scan tool.)

<MECHATRONIC ASSEMBLY REPLACEMENT>


Steps	Contents
1	With the scan tool connected and the vehicle set to the condition below, execute the Teach-In. <ul style="list-style-type: none"> • Engine: Idling • Shift lever position: P range • Brake pedal: Depressed • Parking brake: Pulled • Transmission fluid temperature: 40° C to 80° C (104° F to 176° F)
2	Select "Special Function" of TC-SST.
3	Select "Teach-In" of Special Function.
4	According to "2-2 Item execution order", select the Item No.7: Clutch Ventilation to execute. <i>NOTE: Before execution, "No" is displayed in the Data list No. 100: Teach-In executing.</i>
5	After execution, check that "Yes" is displayed in the Data list No. 100: Teach-In executing. <i>NOTE: In a case other than the execution conditions, "Pending" is displayed in the Data list No. 100: Teach-In executing.</i>
6	After the Teach-In (Item No. 7: Clutch Ventilation) completion, check that "No" is displayed in the Data list No. 100: Teach-In executing and execution results are displayed in the Data list No. 101 to No. 104. <ul style="list-style-type: none"> • No.101: Normal End: On normal end, "Yes" is displayed. • No.102: Abnormal End: On abnormal end, "Yes" is displayed. • No.103: Timeout error: On timeout error, "Yes" is displayed. • No.104: Abort conditions error: In a case other than the execution conditions, "Yes" is displayed.
7	Change the item to No. 1: Plausibility check, and execute steps from 4 to 6 in the same manner.
8	Change the item to No. 2: Shift fork Teach-In, and execute steps from 4 to 6 in the same manner.
9	Turn the ignition switch to the LOCK (OFF) position.
10	Change the item to No. 7: Clutch Ventilation, and execute steps from 4 to 6 in the same manner.
11	Change the item to No. 4: Stroke Teach-In, and execute steps from 4 to 6 in the same manner.
12	<div style="border: 1px solid black; padding: 2px; display: inline-block;">⚠ CAUTION</div> Be careful with the following item when performing Item No.5: Boost Teach-In. <ul style="list-style-type: none"> • The engine speed could be high (4,000 r/min) when the Boost Teach-In is in progress. (Depending on the transaxle state, the engine speed may not be high.) Change the item to No. 5: Boost Teach-In, and execute steps from 4 to 6 in the same manner.
13	Change the item to No. 8: Reset clutch gain, and execute steps from 4 to 6 in the same manner.
14	Turn the ignition switch to the LOCK (OFF) position.

<CLUTCH ASSEMBLY REPLACEMENT>

Contents
Execute the mechatronic assembly replacement procedures form 1 to 3, and from 10 to 14.

DIAGNOSIS FUNCTION

WARNING INDICATOR

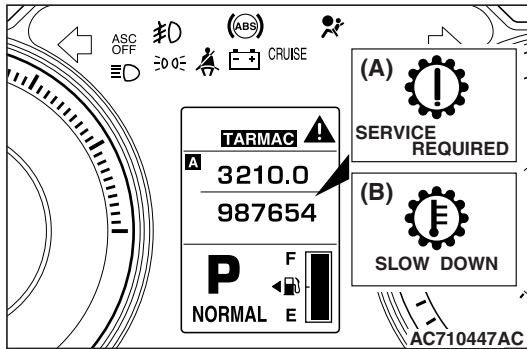

When a malfunction occurs in the TC-SST system, the figure (A) remains displayed on the information screen of multi information display.

If the figure (A) remains displayed on the information screen of multi information display, check whether or not a diagnostic trouble code is set.

NOTE: When the figure (B) is displayed on the information screen of multi information display, the transmission fluid temperature is high.

FAIL-SAFE FUNCTION

If an abnormality occurs to the signal of sensors, switches, solenoids, or others, TC-SST-ECU performs a control for the driver safety and system protection. The control contents are as follows.

FAIL-SAFE REFERENCE TABLE

Diagnostic trouble code No.			Control content
P0702	P1806	P185D	Clutch open prohibits the vehicle from driving, and displays an occurrence of trouble to the multi information display to warn the driver.
P1803	P1807	P1866	
P1804	P1857	P1868	
P1805	P1858	P1872	
P0776	P0968	P2736	Continues driving with the current gear fixed, and an occurrence of trouble is displayed to the multi information display to warn the driver.
P0777	P0970	P2738	
P0964	P0971	P2739	
P0965	P1852		
P0966	P2733		
P0715	P1823	P184B	Drives with the odd number gear axle (1st, 3rd, 5th gear) or with the even gear axle (2nd, 4th, 6th gear), and an occurrence of trouble is displayed to the multi information display to warn the driver.
P0716	P1824	P1855	
P0753	P1825	P1885	
P0758	P1826	P1886	
P0841	P1827	P1887	
P0842	P1828	P1888	
P0843	P1829	P2718	
P0846	P182A	P2719	
P0847	P182B	P2720	
P0848	P182C	P2721	
P0973	P182D	P2728	
P0974	P182E	P2729	
P0976	P1831	P2730	
P181B	P1832	P2766	
P181C	P1833	P2809	
P181E	P1834	P2812	
P181F	P1835	P2814	
P1820	P1836	P2815	
P1821	P183D		
P1822	P1844		

Diagnostic trouble code No.			Control content
P1862 P1863 P186A P186B	P1876 P1877 P1878 P1879	P187A P187B P187C	Drives with the gears other than the gears related to the part in trouble, and an occurrence of trouble is displayed to the multi information display to warn the driver.
P1871	U0001	U0100	The creep driving cannot be performed, and displays an occurrence of trouble to the multi information display to warn the driver.
P0746 P0963	P1870	P1871	Shift shock or shift response deterioration occurs, and displays an occurrence of trouble to the multi information display to warn the driver.
P0630 P0701 P0712 P0713 P0960 P0961 P0962 P0967	P1637 P1676 P180C P1864 P1867 P186C P186D P186E	P186F P1873 P1874 P1875 P1880 P1881 P1890	Normal driving can be performed, and displays an occurrence of trouble to the multi information display to warn the driver.

HOW TO CONNECT THE SCAN TOOL (M.U.T.-III)

Required Special Tools:

- MB991958 Scan Tool (M.U.T.-III Sub Assembly)
 - MB991824: Vehicle Communication Interface (V.C.I.)
 - MB991827 M.U.T.-III USB Cable
 - MB991910 M.U.T.-III Main Harness A (Vehicles with CAN communication system)

⚠ CAUTION


To prevent damage to scan tool MB991958, always turn the ignition switch to the "LOCK" (OFF) position before connecting or disconnecting scan tool MB991958.

1. Ensure that the ignition switch is at the "LOCK" (OFF) position.
2. Start up the personal computer.
3. Connect special tool MB991827 to special tool MB991824 and the personal computer.
4. Connect special tool MB991910 to special tool MB991824.
5. Connect special tool MB991910 to the data link connector.
6. Turn the power switch of special tool MB991824 to the "ON" position.

NOTE: When special tool MB991824 is energized, special tool MB991824 indicator light will be illuminated in a green color.

7. Start the scan tool system on the personal computer.

NOTE: Disconnecting scan tool MB991958 is the reverse of the connecting sequence, making sure that the ignition switch is at the "LOCK" (OFF) position.

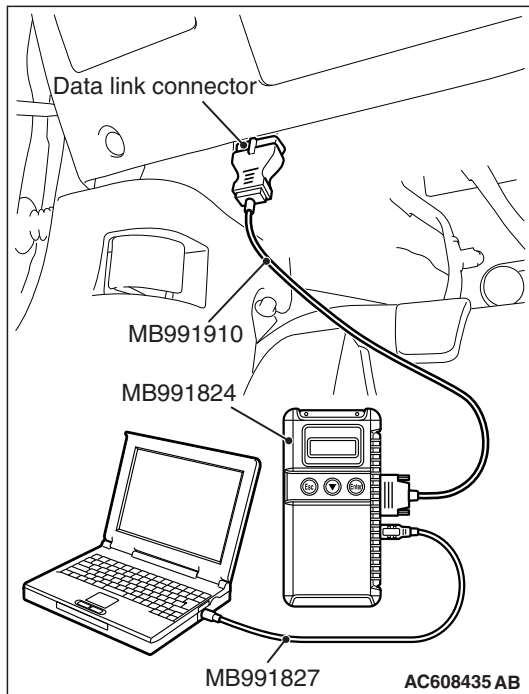

PERMANENT DTC

Refer to GROUP 13A –Multiport Fuel Injection (MFI) Diagnosis, Diagnostic Function [P.13A-10](#).

PROCEDURES FOR ERASING PERMANENT DTC

Repair the relevant DTC, and then erase the permanent DTC according to the following procedure.

NOTE: The permanent DTC corresponding to the DTC that takes multiple drive cycles to detect a malfunction, can be erased by performing the erasing procedure once.

CAUTION

If the malfunction indicator lamp turns on while erasing the permanent DTC, repeat from Step 1.

1. Check that the DTC is not stored. If the DTC is stored, perform the DTC troubleshooting, then repair the DTC.
2. Turn the ignition switch to the "LOCK" (OFF) position.
3. Start the engine.
4. Drive the vehicle with all the following conditions satisfied.
 - Total driving time (engine running) is 10 minutes or more continuously.
 - The driving time includes continuous idling for 30 seconds or more.

NOTE: The accelerator pedal is not depressed.

- While driving, drive with the vehicle speed 40 km/h (25 mph) or more for 5 minutes or more.

NOTE: Drive the vehicle so that the total accumulated driving time with the vehicle speed 40 km/h (25 mph) or more will be 5 minutes or more. Do not include the time when the vehicle is driven at 40 km/h (25 mph) or less.

5. Turn the ignition switch to the "LOCK" (OFF) position.

FREEZE FRAME DATA CHECK

Various data of when the diagnostic trouble code is determined is obtained, and the status of that time is stored. By analyzing each data using the scan tool, troubleshooting can be performed efficiently.

Display items of the freeze frame data are as follows.

FREEZE FRAME DATA REFERENCE TABLE

Item No.	Item	Unit/Display
1	Odometer	mile
2	Drive cycle	Count
4	Current trouble accumulative time	min
5	System power supply	V
7	Clutch pressure (Odd number gears)	mbar
8	Clutch pressure (Even number gears)	mbar
9	Clutch status (Odd number gears)	<ul style="list-style-type: none"> • Inactive • Closed (During the torque control) • Hydraulic pressure charging • Pre-stroke • During hydraulic pressure relief • Clutch not engaged • Open • Clutch in engagement • Clutch in disengagement
10	Clutch status (Even number gears)	<ul style="list-style-type: none"> • Inactive • Closed (During the torque control) • Hydraulic pressure charging • Pre-stroke • During hydraulic pressure relief • Clutch not engaged • Open • Clutch in engagement • Clutch in disengagement
11	Shift fork position sensor 1	mm
12	Shift fork position sensor 2	mm
13	Shift fork position sensor 3	mm
14	Shift fork position sensor 4	mm
15	Input shaft (odd) speed	r/min
16	Input shaft (even) speed	r/min

Item No.	Item	Unit/Display
22	Current gear	<ul style="list-style-type: none"> • N • 1st • 2nd • 3rd • 4th • 5th • 6th • R • N (Odd number) • N (Even number) • Undefined gear
23	Target gear	<ul style="list-style-type: none"> • N • 1st • 2nd • 3rd • 4th • 5th • 6th • R • N (Odd number) • N (Even number) • Undefined gear
24	SST control mode	<ul style="list-style-type: none"> • NORMAL • SPORT
25	Gear change mode	<ul style="list-style-type: none"> • AUTO • Manual
26	Torque limit request (Fuel cut)	<ul style="list-style-type: none"> • ON • OFF
27	Torque limit request (Throttle closing)	<ul style="list-style-type: none"> • ON • OFF
28	Torque limit request (Retard)	<ul style="list-style-type: none"> • ON • OFF
30	Monitoring unit number (1)	Monitoring unit No. indication(Refer to P.22C-16)
31	Monitoring unit number (2)	
32	Monitoring unit number (3)	
33	Monitoring unit number (4)	
34	Monitoring unit number (5)	
35	Monitoring unit number (6)	
36	Monitoring unit number (7)	
37	Monitoring unit number (8)	
39	Vehicle speed	mph
40	Highside driver 1 state	<ul style="list-style-type: none"> • ON • OFF
41	Highside driver 2 state	<ul style="list-style-type: none"> • ON • OFF
42	Highside driver 3 state	<ul style="list-style-type: none"> • ON • OFF
43	Dumper speed sensor	r/min

DIAGNOSTIC TROUBLE CODE CHART

M122500600395

⚠ CAUTION

During diagnosis, a DTC associated with other system may be set when the ignition switch is turned ON with connector(s) disconnected. On completion, confirm all systems for DTC(s). If DTC(s) are set, erase them all.

NOTE:

- The monitoring unit No. indicates the malfunction code applicable to each DTC No., and it can be confirmed by the freeze frame data (item No. 30 to No. 37).
- For the DTC No. with *, the malfunction indicator lamp lights up when the applicable DTC No. is set.
- The definition of drive cycle indicates from (Ignition switch: "ON" after starting the engine), (Ignition switch: "LOCK" (OFF)) to (Ignition switch: "ON" again).

DTC No.	Monitoring unit No.	Diagnostic item	Judgment drive cycle	Reference page
P0630	204	VIN not recorded	1	P.22C-22
P0701	081	EEPROM system (Malfunction)	2	P.22C-23
P0702	087, 088	Internal control module, monitoring processor system (Malfunction)	1	P.22C-24
P0712*	136	TC-SST-ECU temperature sensor system (Output low range out)	2	P.22C-25
P0713*	101	TC-SST-ECU temperature sensor system (Output high range out)	2	P.22C-26
P0715*	090	Input shaft 1 (odd number gear axle) speed sensor system (Output high range out)	2	P.22C-28
P0716*	114, 138	Input shaft 1 (odd number gear axle) speed sensor system (Poor performance)	2	P.22C-30
P0717*	070	Input shaft 1 (odd number gear axle) speed sensor system (Output low range out)	2	P.22C-35
P0725	258	Engine speed signal abnormality	2	P.22C-37
P0746*	107, 108	Line pressure solenoid system (Drive current range out)	1	P.22C-38
P0753*	039	Shift select solenoid 1 system (Open circuit)	1	P.22C-41
P0758*	042	Shift select solenoid 2 system (Open circuit)	1	P.22C-43
P0776*	110, 111	Clutch cooling flow solenoid system (Drive current range out)	1	P.22C-45
P0777*	112	Clutch cooling flow solenoid system (Stuck)	1	P.22C-47
P0841*	117	Clutch 1 pressure sensor system (Poor performance)	2	P.22C-50
P0842*	004	Clutch 1 pressure sensor system (Output low range out)	2	P.22C-52
P0843*	005	Clutch 1 pressure sensor system (Output high range out)	2	P.22C-54
P0846*	121	Clutch 2 pressure sensor system (Poor performance)	2	P.22C-56
P0847*	006	Clutch 2 pressure sensor system (Output low range out)	2	P.22C-58
P0848*	007	Clutch 2 pressure sensor system (Output high range out)	2	P.22C-60
P0960*	030	Line pressure solenoid system (Open circuit)	1	P.22C-62

DTC No.	Monitoring unit No.	Diagnostic item	Judgment drive cycle	Reference page
P0961*	077	Line pressure solenoid system (Overcurrent)	1	P.22C-64
P0962*	029	Line pressure solenoid system (Short to ground)	1	P.22C-66
P0963*	028	Line pressure solenoid system (Short to power supply)	1	P.22C-68
P0964*	033	Clutch cooling flow solenoid system (Open circuit)	1	P.22C-70
P0965*	078	Clutch cooling flow solenoid system (Overcurrent)	1	P.22C-72
P0966*	032	Clutch cooling flow solenoid system (Short to ground)	1	P.22C-74
P0967*	031	Clutch cooling flow solenoid system (Short to power supply)	1	P.22C-76
P0968*	036	Shift/cooling switching solenoid system (Open circuit)	1	P.22C-78
P0970*	035	Shift/cooling switching solenoid system (Short to ground)	1	P.22C-80
P0971*	034	Shift/cooling switching solenoid system (Short to power supply)	1	P.22C-82
P0973*	038	Shift select solenoid 1 system (Short to ground)	1	P.22C-84
P0974*	037	Shift select solenoid 1 system (Short to power supply)	1	P.22C-86
P0976*	041	Shift select solenoid 2 system (Short to ground)	1	P.22C-88
P0977	040	Shift select solenoid 2 system (Short to power supply)	1	P.22C-90
P1637*	082	EEPROM system (DTC storing malfunction)	1	P.22C-91
P1676*	109	Coding incomplete	1	P.22C-92
P1802	089, 230	Shift lever system (LIN communication malfunction)	2	P.22C-94
P1803	233	Shift lever system (CAN or LIN time-out error)	1	P.22C-96
P1804*	024	Shift fork position sensor 1 and 2 system (Power supply voltage low range out)	1	P.22C-98
P1805*	025	Shift fork position sensor 1 and 2 system (Power supply voltage high range out)	1	P.22C-100
P1806*	026	Shift fork position sensor 3 and 4 system (Power supply voltage low range out)	1	P.22C-102
P1807*	027	Shift fork position sensor 3 and 4 system (Power supply voltage high range out)	1	P.22C-104
P1808*	105	TC-SST-ECU temperature, fluid temperature sensor system (Correlation error)	1	P.22C-106
P180C	113	Clutch pressure cut spool sticking	2	P.22C-108
P181B*	124	Clutch 1 (Pressure low range out)	2	P.22C-109
P181C*	125	Clutch 1 (Pressure high range out)	2	P.22C-111
P181E*	129	Clutch 2 (Pressure low range out)	2	P.22C-118
P181F*	130	Clutch 2 (Pressure high range out)	2	P.22C-121
P1820*	008	Shift fork position sensor 1 system (Voltage low range out)	1	P.22C-128

DTC No.	Monitoring unit No.	Diagnostic item	Judgment drive cycle	Reference page
P1821*	009	Shift fork position sensor 1 system (Voltage high range out)	1	P.22C-130
P1822*	144	Shift fork position sensor 1 system (Output range out)	1	P.22C-133
P1823*	158	Shift fork position sensor 1 system (Neutral)	1	P.22C-136
P1824*	156	Shift fork position sensor 1 system (Poor performance)	2	P.22C-139
P1825*	010	Shift fork position sensor 2 system (Voltage low range out)	1	P.22C-143
P1826*	011	Shift fork position sensor 2 system (Voltage high range out)	1	P.22C-145
P1827*	146	Shift fork position sensor 2 system (Output range out)	1	P.22C-148
P1828*	218	Shift fork position sensor 2 system (Neutral)	1	P.22C-151
P1829*	152	Shift fork position sensor 2 system (Poor performance)	2	P.22C-154
P182A*	012	Shift fork position sensor 3 system (Voltage low range out)	1	P.22C-158
P182B*	013	Shift fork position sensor 3 system (Voltage high range out)	1	P.22C-160
P182C*	148	Shift fork position sensor 3 system (Output range out)	1	P.22C-163
P182D*	219	Shift fork position sensor 3 system (Neutral)	1	P.22C-166
P182E*	153	Shift fork position sensor 3 system (Poor performance)	2	P.22C-169
P1831*	014	Shift fork position sensor 4 system (Voltage low range out)	1	P.22C-172
P1832*	015	Shift fork position sensor 4 system (Voltage high range out)	1	P.22C-174
P1833*	150	Shift fork position sensor 4 system (Output range out)	1	P.22C-176
P1834*	159	Shift fork position sensor 4 system (Neutral)	1	P.22C-179
P1835*	157	Shift fork position sensor 4 system (Poor performance)	2	P.22C-182
P1836*	160, 172, 182, 183	Shift fork 1 malfunction	1	P.22C-186
P183D*	161, 174, 184, 185	Shift fork 2 malfunction	1	P.22C-193
P1844*	162, 178, 186, 187	Shift fork 3 malfunction	1	P.22C-201
P184B*	163, 180, 188, 189	Shift fork 4 malfunction	1	P.22C-208
P1852*	190, 191	Shift fork 1 or 2 opposite direction movement	1	P.22C-216
P1855*	192, 193	Shift fork 3 or 4 opposite direction movement	1	P.22C-218
P1857*	194	Odd number gear axle interlock	1	P.22C-221
P1858*	195	Even number gear axle interlock	1	P.22C-224
P185D	223	Clutch open not possible	1	P.22C-226

DTC No.	Monitoring unit No.	Diagnostic item	Judgment drive cycle	Reference page
P1862*	059	High side 1 system (Overcurrent)	1	P.22C-226
P1863*	060	High side 1 system (Open circuit)	1	P.22C-228
P1864*	061	High side 1 system (Short to power supply)	1	P.22C-230
P1866*	062	High side 2 system (Overcurrent)	1	P.22C-232
P1867*	063	High side 2 system (Open circuit)	1	P.22C-234
P1868*	064	High side 2 system (Short to power supply)	1	P.22C-236
P186A*	065	High side 3 system (Overcurrent)	1	P.22C-238
P186B*	066	High side 3 system (Open circuit)	1	P.22C-240
P186C*	067	High side 3 system (Short to power supply)	1	P.22C-242
P186D*	173	High side 1 system (Voltage low range out)	1	P.22C-244
P186E*	177	High side 2 system (Voltage low range out)	1	P.22C-246
P186F*	179	High side 3 system (Voltage low range out)	1	P.22C-248
P1870*	205	Engine torque signal abnormality	2	P.22C-250
P1871*	203	APS system (Signal abnormality)	1	P.22C-253
P1872	220	Between shift lever and TC-SST system (Q-A function abnormality)	1	P.22C-256
P1873	212, 216	Clutch 1 system (Pressure abnormality)	2	P.22C-257
P1874	213, 217	Clutch 2 system (Pressure abnormality)	2	P.22C-258
P1875*	139, 207	Damper speed sensor system (Poor performance)	2	P.22C-259
P1876	196	Gear block 1st	3	P.22C-262
P1877*	197	Gear block 2nd	2	P.22C-264
P1878*	198	Gear block 3rd	2	P.22C-266
P1879*	199	Gear block 4th	2	P.22C-268
P187A*	200	Gear block 5th	2	P.22C-270
P187B*	201	Gear block 6th	2	P.22C-272
P187C	202	Gear block reverse	3	P.22C-274
P1880	137	EOL Mode Active	1	P.22C-275
P1881	268	Twin clutch SST control mode switch system (Malfunction)	2	P.22C-276
P1885	168, 170	Shift fork 1 jump out	3	P.22C-277
P1886	164, 166	Shift fork 2 jump out	3	P.22C-278
P1887	165	Shift fork 3 jump out	3	P.22C-279
P1888	169, 171	Shift fork 4 jump out	3	P.22C-280
P1890	132	Teach-In not completed	2	P.22C-281
P2718*	045	Clutch/shift pressure solenoid 1 system (Open circuit)	1	P.22C-282

DTC No.	Monitoring unit No.	Diagnostic item	Judgment drive cycle	Reference page
P2719*	079	Clutch/shift pressure solenoid 1 system (Overcurrent)	1	P.22C-284
P2720*	044	Clutch/shift pressure solenoid 1 system (Short to ground)	1	P.22C-286
P2721*	043	Clutch/shift pressure solenoid 1 system (Short to power supply)	1	P.22C-288
P2727*	048	Clutch/shift pressure solenoid 2 system (Open circuit)	1	P.22C-290
P2728*	080	Clutch/shift pressure solenoid 2 system (Overcurrent)	1	P.22C-292
P2729*	047	Clutch/shift pressure solenoid 2 system (Short to ground)	1	P.22C-294
P2730*	046	Clutch/shift pressure solenoid 2 system (Short to power supply)	1	P.22C-296
P2733*	134	Clutch/shift switching solenoid 1, spool stuck	1	P.22C-298
P2736*	051	Clutch/shift switching solenoid 1 system (Open circuit)	1	P.22C-301
P2738*	050	Clutch/shift switching solenoid 1 system (Short to ground)	1	P.22C-302
P2739*	049	Clutch/shift switching solenoid 1 system (Short to power supply)	1	P.22C-304
P2742*	135	Fluid temperature sensor system (Output low range out)	2	P.22C-306
P2743*	103	Fluid temperature sensor system (Output high range out)	2	P.22C-308
P2766*	115, 240	Input shaft 2 (even number gear axle) speed sensor system (Poor performance)	2	P.22C-310
P2809*	141	Clutch/shift switching solenoid 2, spool stuck	1	P.22C-315
P2812*	054	Clutch/shift switching solenoid 2 system (Open circuit)	1	P.22C-318
P2814*	053	Clutch/shift switching solenoid 2 system (Short to ground)	1	P.22C-320
P2815*	052	Clutch/shift switching solenoid 2 system (Short to power supply)	1	P.22C-322
U0001*	083	Bus off	1	P.22C-324
U0100*	116	Engine time-out error	1	P.22C-326
U0103	123	Shift lever time-out error	1	P.22C-328
U0121	122	ASC time-out error	1	P.22C-329
U0136	209	AWC time-out error	1	P.22C-330
U0141	120	ETACS time-out error	1	P.22C-331

SYMPTOM CHART

⚠ CAUTION

During diagnosis, a DTC associated with other system may be set when the ignition switch is turned ON with connector(s) disconnected. On completion, confirm all systems for diagnostic trouble code(s). If diagnostic trouble code(s) are set, erase them all.

Symptom	Inspection procedure No.	Reference page
The scan tool cannot communicate with TC-SST-ECU.	1	P.22C-332
The driving mode cannot be changed.	2	P.22C-333
Speed change with the paddle shift is impossible.	3	P.22C-335
TC-SST-ECU power supply circuit malfunction	4	P.22C-338
The shift lever does not operate.	5	P.22C-342
Gears cannot be changed with the manual mode.	6	P.22C-345
The vehicle moves with the P-range.	7	P.22C-346
Slipping occurs with the D-range/R-range/manual mode, and engine racing occurs during gear shifting/driving.	8	P.22C-347
The vehicle does not creep with the D-range/R-range/manual mode.	9	P.22C-348
The shock is large when the vehicle is stopped and the brake pedal is released with the D-range/R-range/manual mode.	10	P.22C-349
Poor acceleration	11	P.22C-349
The gear shifting does not occur. (The transmission does not upshift or downshift.)	12	P.22C-350
The shift shock is large.	13	P.22C-351
Delay occurs when the lever is shifted N →D or N →R.	14	P.22C-352
The engine stops when the lever is shifted N →D or N →R.	15	P.22C-353
The vehicle moves with the N-range on the level ground.	16	P.22C-354
Judder/vibration/noise	17	P.22C-354

DIAGNOSTIC TROUBLE CODE PROCEDURES

DTC P0630: VIN not Recorded**⚠ CAUTION**

- If there is any problem in the CAN bus lines, an incorrect diagnostic trouble code may be set. Prior to this diagnosis, diagnose the CAN bus lines.
- Whenever the ECU is replaced, ensure that the CAN bus lines are normal.

DIAGNOSTIC FUNCTION

TC-SST-ECU checks that the chassis number is normal.

(TC-SST-ECU receives chassis number information from the engine control module via CAN, and write to TC-SST-ECU.)

DESCRIPTIONS OF MONITOR METHODS

The chassis number is determined to be written abnormally.

PROBABLE CAUSES

- The CAN bus line is defective.
- Malfunction of engine control module
- Malfunction of TC-SST-ECU

DIAGNOSTIC PROCEDURE**Required Special Tools:**

- MB991958 Scan Tool (M.U.T.-III Sub Assembly)
 - MB991824: Vehicle Communication Interface (V.C.I.)
 - MB991827 M.U.T.-III USB Cable
 - MB991910 M.U.T.-III Main Harness A

STEP 1. Scan tool CAN bus diagnostics

Using scan tool MB991958, diagnose the CAN bus lines.

Q: Is the check result normal?

YES : Go to Step 2.

NO : Repair the CAN bus lines. (Refer to GROUP 54C – Troubleshooting [P.54C-16.](#)) After repairing the CAN bus line, go to Step 2.

STEP 2. Scan tool diagnostic trouble code

Check the engine diagnostic trouble code. (Refer to GROUP 13A –Troubleshooting [P.13A-50.](#))

Q: Is the DTC set?

YES : Perform the relevant troubleshooting.

NO : Go to Step 3.

STEP 3. Check whether the DTC is reset.**Q: Is DTC No. P0630 set?**

YES : Replace the mechatronic assembly. (Refer to [P.22C-505.](#))

NO : Intermittent malfunction. (Refer to GROUP 00 –How to Cope with Intermittent Malfunction [P.00-13.](#))

DTC P0701: EEPROM System (Malfunction)

⚠ CAUTION

- If there is any problem in the CAN bus lines, an incorrect diagnostic trouble code may be set. Prior to this diagnosis, diagnose the CAN bus lines.
- Whenever the ECU is replaced, ensure that the CAN bus lines are normal.

DIAGNOSTIC FUNCTION

TC-SST-ECU checks that the EEPROM and RAM in the TC-SST-ECU is normal.

DESCRIPTIONS OF MONITOR METHODS

The EEPROM writing data is determined to be abnormal.

PROBABLE CAUSES

- Malfunction of TC-SST-ECU

DIAGNOSTIC PROCEDURE

Required Special Tools:

- MB991958 Scan Tool (M.U.T.-III Sub Assembly)
 - MB991824: Vehicle Communication Interface (V.C.I.)
 - MB991827 M.U.T.-III USB Cable
 - MB991910 M.U.T.-III Main Harness A

STEP 1. Scan tool CAN bus diagnostics

Using scan tool MB991958, diagnose the CAN bus lines.

Q: Is the check result normal?

YES : Go to Step 2.

NO : Repair the CAN bus lines. (Refer to GROUP 54C – Troubleshooting [P.54C-16.](#)) After repairing the CAN bus line, go to Step 2.

STEP 2. Check whether the DTC is reset.

Q: Is DTC No. P0701 set?

YES : Replace the mechatronic assembly. (Refer to [P.22C-505.](#))

NO : Intermittent malfunction. (Refer to GROUP 00 –How to Cope with Intermittent Malfunction [P.00-13.](#))

DTC P0702: Internal control module, monitoring processor system (Malfunction)

⚠ CAUTION

- If there is any problem in the CAN bus lines, an incorrect diagnostic trouble code may be set. Prior to this diagnosis, diagnose the CAN bus lines.
- Whenever the ECU is replaced, ensure that the CAN bus lines are normal.

DIAGNOSTIC FUNCTION

TC-SST-ECU checks that the internal module and monitoring processor are normal.

DESCRIPTIONS OF MONITOR METHODS

The internal module and monitoring processor are determined to be abnormal.

PROBABLE CAUSES

- Malfunction of TC-SST-ECU

DIAGNOSTIC PROCEDURE**Required Special Tools:**

- MB991958 Scan Tool (M.U.T.-III Sub Assembly)
 - MB991824: Vehicle Communication Interface (V.C.I.)
 - MB991827 M.U.T.-III USB Cable
 - MB991910 M.U.T.-III Main Harness A

STEP 1. Scan tool CAN bus diagnostics

Using scan tool MB991958, diagnose the CAN bus lines.

Q: Is the check result normal?

YES : Go to Step 2.

NO : Repair the CAN bus lines. (Refer to GROUP 54C – Troubleshooting [P.54C-16.](#)) After repairing the CAN bus line, go to Step 2.

STEP 2. Check the TC-SST-ECU power supply circuit

Refer to [P.22C-338.](#)

Q: Is the check result normal?

YES : Go to Step 3.

NO : Repair the TC-SST-ECU power supply circuit. (Refer to [P.22C-338.](#)) After repairing the power supply circuit, go to Step 3.

STEP 3. Check whether the DTC is reset.**Q: Is DTC No. P0702 set?**

YES : Replace the mechatronic assembly. (Refer to [P.22C-505.](#))

NO : Intermittent malfunction. (Refer to GROUP 00 –How to Cope with Intermittent Malfunction [P.00-13.](#))

DTC P0712: TC-SST-ECU temperature sensor system (Output low range out)

CAUTION

- If there is any problem in the CAN bus lines, an incorrect diagnostic trouble code may be set. Prior to this diagnosis, diagnose the CAN bus lines.
- Whenever the ECU is replaced, ensure that the CAN bus lines are normal.

DIAGNOSTIC FUNCTION

TC-SST-ECU checks that the output of the ECU temperature sensor is normal.

DESCRIPTIONS OF MONITOR METHODS

The output of the ECU temperature is determined to be too low.

MONITOR EXECUTION

- Continuous

MONITOR EXECUTION CONDITIONS (OTHER MONITOR AND SENSOR)


Other Monitor (There is no temporary DTC stored in memory for the item monitored below)

- P0713: TC-SST-ECU temperature sensor system (Output high range out)
- P1808: TC-SST-ECU temperature, fluid temperature sensor system (Correlation error)

Sensor (The sensor below is determined to be normal)

- Not applicable

LOGIC FLOW CHARTS (Monitor Sequence)

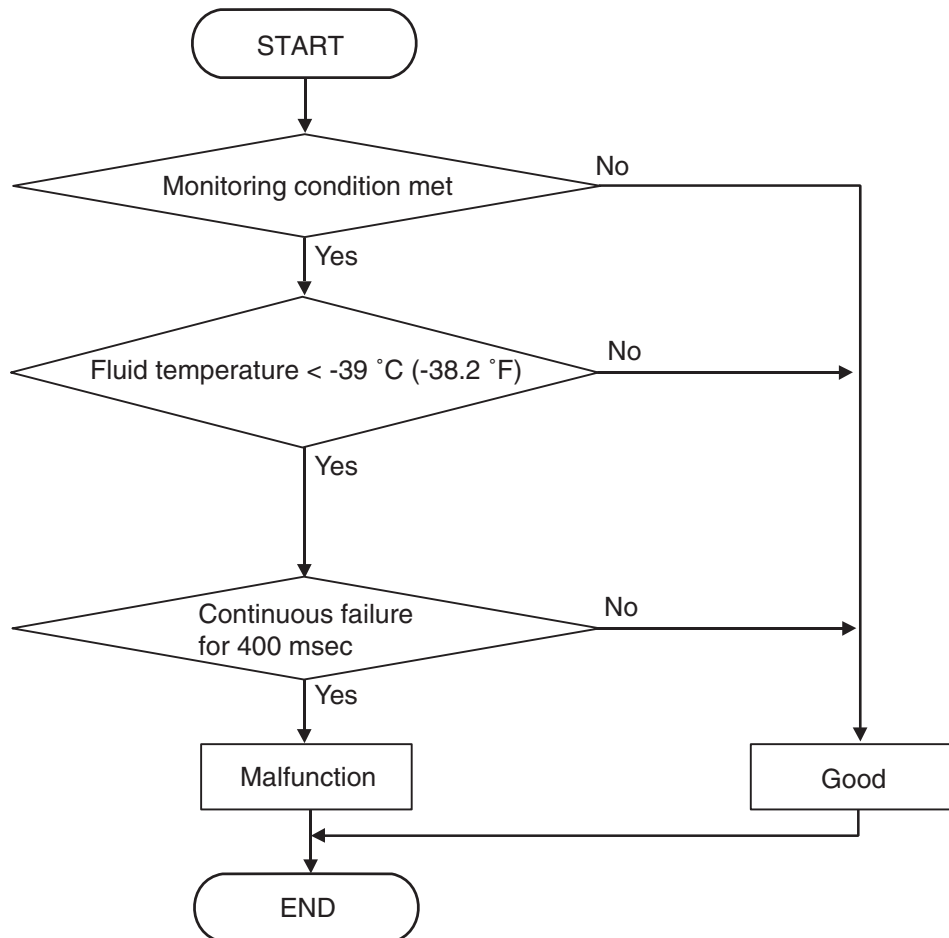

AC710593AC

DTC SET CONDITIONS**Check Conditions**

- Voltage of battery: 8 V or more.
- Voltage of battery: 16.5 V or less.

JUDGMENT CRITERIA

- Fluid temperature: -39°C (-38.2°F) or less. (400 millisecond)

OBD-II DRIVE CYCLE PATTERN

The TC-SST-ECU temperature remains -39°C (-38.2°F) or more for 400 milliseconds.

PROBABLE CAUSES

- Malfunction of TC-SST-ECU

DIAGNOSTIC PROCEDURE**Required Special Tools:**

- MB991958 Scan Tool (M.U.T.-III Sub Assembly)
 - MB991824: Vehicle Communication Interface (V.C.I.)
 - MB991827 M.U.T.-III USB Cable
 - MB991910 M.U.T.-III Main Harness A

STEP 1. Scan tool CAN bus diagnostics

Using scan tool MB991958, diagnose the CAN bus lines.

Q: Is the check result normal?

YES : Go to Step 2.

NO : Repair the CAN bus lines. (Refer to GROUP 54C – Troubleshooting [P.54C-16.](#)) After repairing the CAN bus line, go to Step 2.

STEP 2. Check whether the DTC is reset.

30 seconds after turning ON the ignition switch, check that the diagnostic trouble code is reset.

Q: Is DTC No. P0712 set?

YES : Replace the mechatronic assembly. (Refer to [P.22C-505.](#))

NO : Intermittent malfunction. (Refer to GROUP 00 –How to Cope with Intermittent Malfunction [P.00-13.](#))

DTC P0713: TC-SST-ECU temperature sensor system (Output high range out)**CAUTION**

- If there is any problem in the CAN bus lines, an incorrect diagnostic trouble code may be set. Prior to this diagnosis, diagnose the CAN bus lines.
- Whenever the ECU is replaced, ensure that the CAN bus lines are normal.

DIAGNOSTIC FUNCTION

TC-SST-ECU checks that the output of the ECU temperature sensor is normal.

DESCRIPTIONS OF MONITOR METHODS

The output of the ECU temperature is determined to be too high.

MONITOR EXECUTION

- Continuous

MONITOR EXECUTION CONDITIONS (OTHER MONITOR AND SENSOR)


Other Monitor (There is no temporary DTC stored in memory for the item monitored below)

- P0712: TC-SST-ECU temperature sensor system (Output low range out)
- P1808: TC-SST-ECU temperature, fluid temperature sensor system (Correlation error)

Sensor (The sensor below is determined to be normal)

- Not applicable

LOGIC FLOW CHARTS (Monitor Sequence)

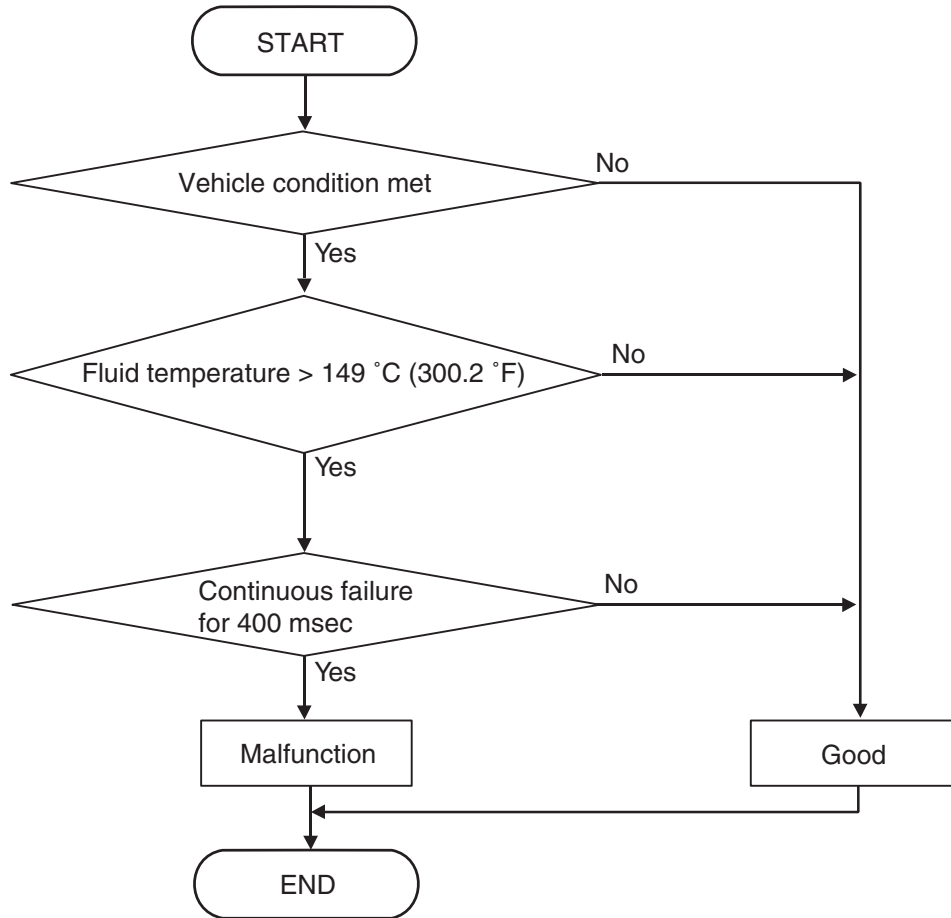

AC710594AB

DTC SET CONDITIONS

Check Conditions

- Voltage of battery: 8 V or more.
- Voltage of battery: 16.5 V or less.

JUDGMENT CRITERIA

- Fluid temperature: 149° C (300.2° F) or more. (400 millisecond)

OBD-II DRIVE CYCLE PATTERN

The TC-SST-ECU temperature remains 149° C (300.2° F) or less for 400 milliseconds.

PROBABLE CAUSES

- Malfunction of TC-SST-ECU

DIAGNOSTIC PROCEDURE

Required Special Tools:

- MB991958 Scan Tool (M.U.T.-III Sub Assembly)
 - MB991824: Vehicle Communication Interface (V.C.I.)
 - MB991827 M.U.T.-III USB Cable
 - MB991910 M.U.T.-III Main Harness A

STEP 1. Scan tool CAN bus diagnostics

Using scan tool MB991958, diagnose the CAN bus lines.

Q: Is the check result normal?

YES : Go to Step 2.

NO : Repair the CAN bus lines. (Refer to GROUP 54C – Troubleshooting P.54C-16.) After repairing the CAN bus line, go to Step 2.

STEP 2. Check whether the DTC is reset.

30 seconds after turning ON the ignition switch, check that the DTC is reset.

Q: Is DTC No. P0713 set?

YES : Replace the mechatronic assembly. (Refer to [P.22C-505.](#))

NO : Intermittent malfunction. (Refer to GROUP 00 –How to Cope with Intermittent Malfunction [P.00-13.](#))

DTC P0715: Input shaft 1 (odd number gear axle) speed sensor system (Output high range out)**⚠ CAUTION**

- If there is any problem in the CAN bus lines, an incorrect diagnostic trouble code may be set. Prior to this diagnosis, diagnose the CAN bus lines.
- Whenever the ECU is replaced, ensure that the CAN bus lines are normal.

DIAGNOSTIC FUNCTION

TC-SST-ECU checks that the input shaft 1 (odd number gear axle) speed sensor is normal.

DESCRIPTIONS OF MONITOR METHODS

The output of the input shaft 1 (odd number gear axle) is determined to be too high.

MONITOR EXECUTION

- Continuous

**MONITOR EXECUTION CONDITIONS
(OTHER MONITOR AND SENSOR)**


Other Monitor (There is no temporary DTC stored in memory for the item monitored below)

- P0716: Input shaft 1 (odd number gear axle) speed sensor system (Poor performance)
- P0717: Input shaft 1 (odd number gear axle) speed sensor system (Output low range out)
- P2766: Input shaft 2 (even number gear axle) speed sensor system (Poor performance)

Sensor (The sensor below is determined to be normal)

- Input shaft 2 (even number gear axle) speed sensor

LOGIC FLOW CHARTS (Monitor Sequence)

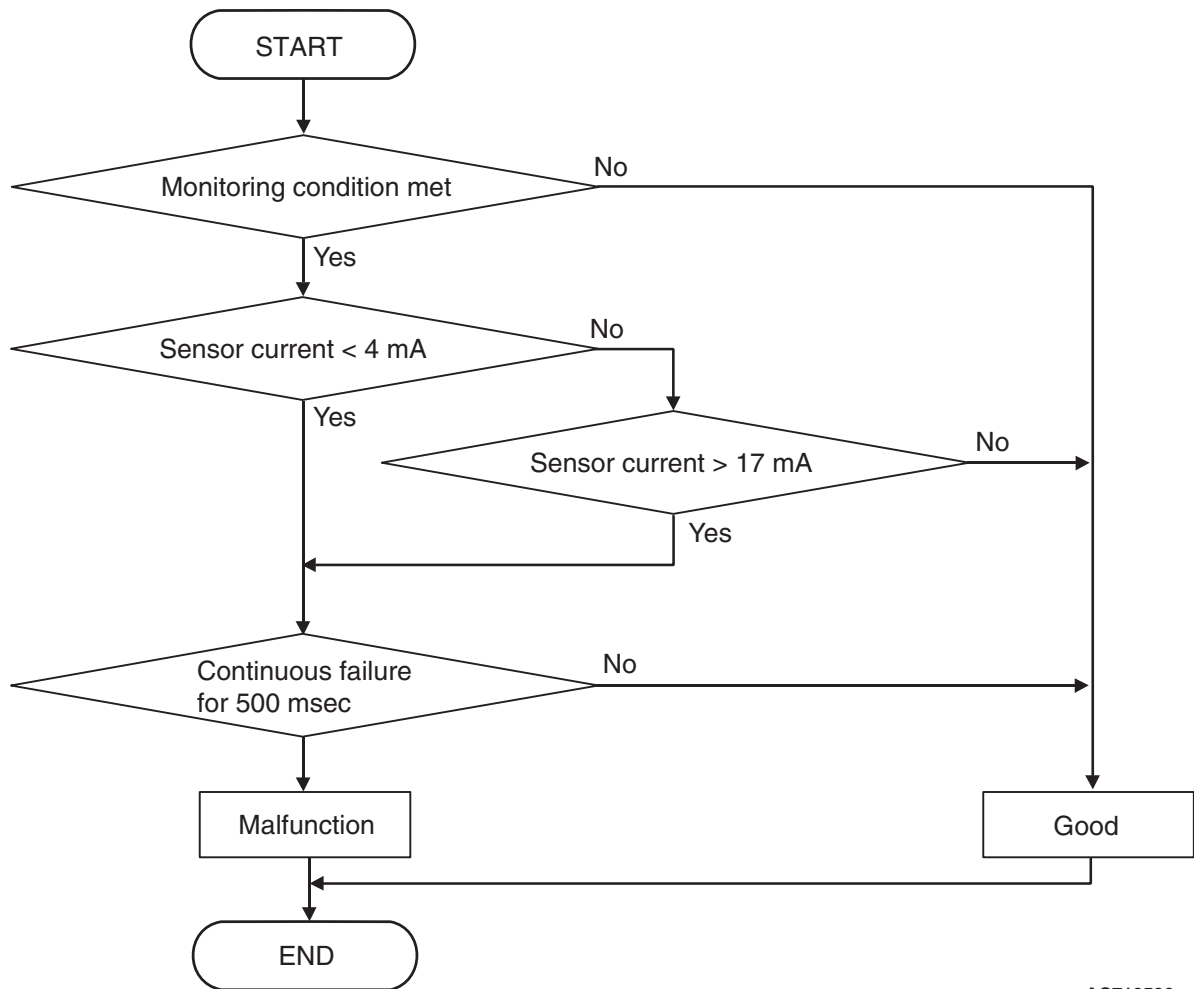

AC710596

DTC SET CONDITIONS

Check Conditions

- Voltage of battery: 8 V or more.
- Voltage of battery: 16.5 V or less.
- Time after engine start: 1.5 seconds or more.

JUDGMENT CRITERIA

- Sensor current: 17 mA or more. (500 millisecond)

OBD-II DRIVE CYCLE PATTERN

The sensor current remains 17 mA or less for 500 milliseconds.

PROBABLE CAUSES

- Malfunction of TC-SST-ECU
- Malfunction of input shaft 1 speed sensor

DIAGNOSTIC PROCEDURE

Required Special Tools:

- MB991958 Scan Tool (M.U.T.-III Sub Assembly)
 - MB991824: Vehicle Communication Interface (V.C.I.)
 - MB991827 M.U.T.-III USB Cable
 - MB991910 M.U.T.-III Main Harness A

STEP 1. Scan tool CAN bus diagnostics

Using scan tool MB991958, diagnose the CAN bus lines.

Q: Is the check result normal?

YES : Go to Step 2.

NO : Repair the CAN bus lines. (Refer to GROUP 54C – Troubleshooting P.54C-16.) After repairing the CAN bus line, go to Step 2.

STEP 2. Check whether the DTC is reset.

After 5 or more seconds have passed with the engine idle status, check that the DTC is reset.

Q: Is DTC No. P0715 set?

YES : Replace the mechatronic assembly. (Refer to P.22C-505.)

NO : Intermittent malfunction. (Refer to GROUP 00 –How to Cope with Intermittent Malfunction P.00-13.)

DTC P0716: Input shaft 1 (odd number gear axle) speed sensor system (Poor performance)**⚠ CAUTION**

- If there is any problem in the CAN bus lines, an incorrect diagnostic trouble code may be set. Prior to this diagnosis, diagnose the CAN bus lines.
- Whenever the ECU is replaced, ensure that the CAN bus lines are normal.

DIAGNOSTIC FUNCTION

TC-SST-ECU checks that the input shaft 1 (odd number gear axle) speed sensor is normal.

DESCRIPTIONS OF MONITOR METHODS

The rotation speed of the input shaft 1 (odd number gear axle) is determined to be abnormal.

MONITOR EXECUTION

- Continuous

**MONITOR EXECUTION CONDITIONS
(OTHER MONITOR AND SENSOR)**


Other Monitor (There is no temporary DTC stored in memory for the item monitored below)

- P0715: Input shaft 1 (odd number gear axle) speed sensor system (Output high range out)
- P0717: Input shaft 1 (odd number gear axle) speed sensor system (Output low range out)
- P2766: Input shaft 2 (even number gear axle) speed sensor system (Poor performance)


Sensor (The sensor below is determined to be normal)

- Input shaft 2 (even number gear axle) speed sensor

LOGIC FLOW CHARTS (Monitor Sequence) <Rationality>

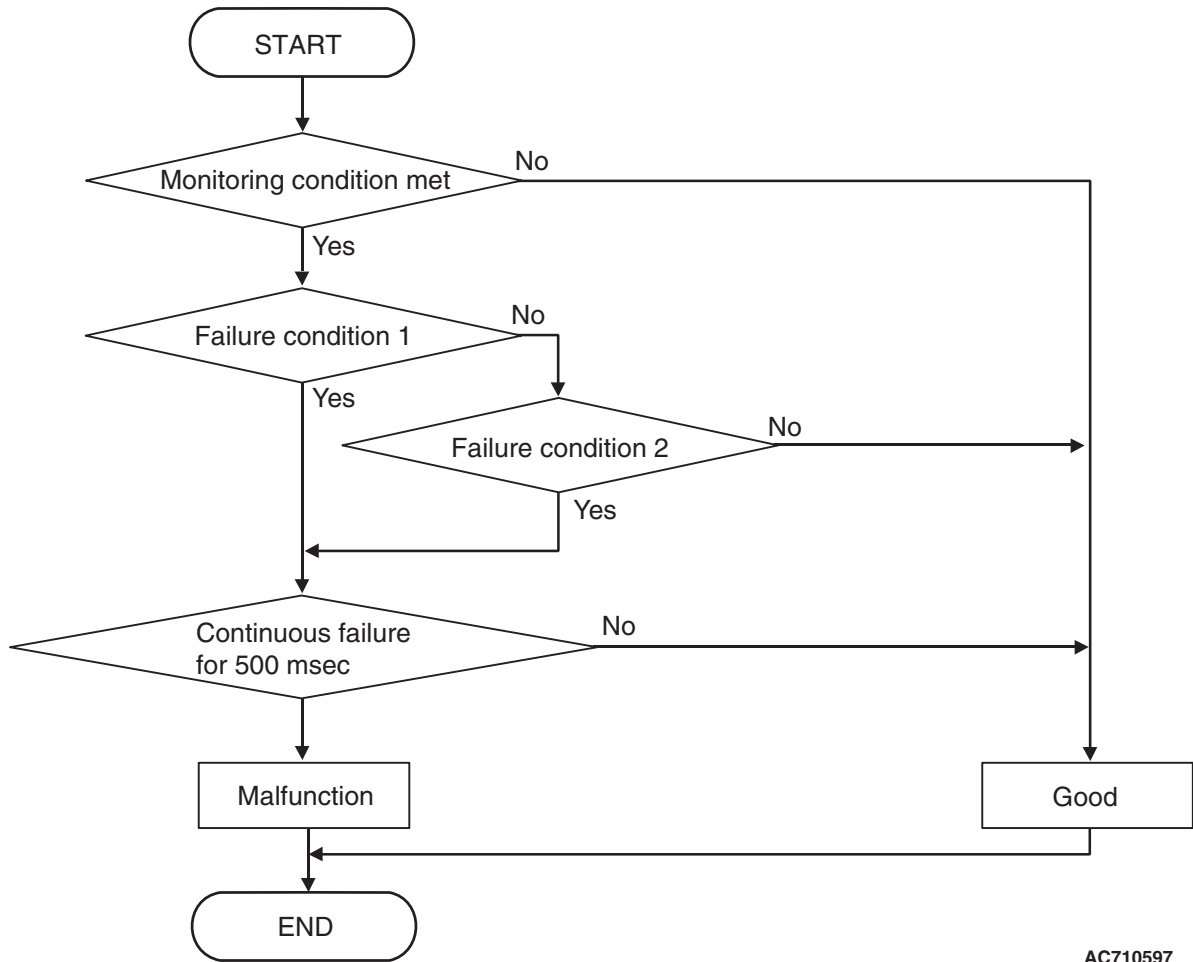

LOGIC FLOW CHARTS (Monitor Sequence) <Rationality (Failure condition 1)>

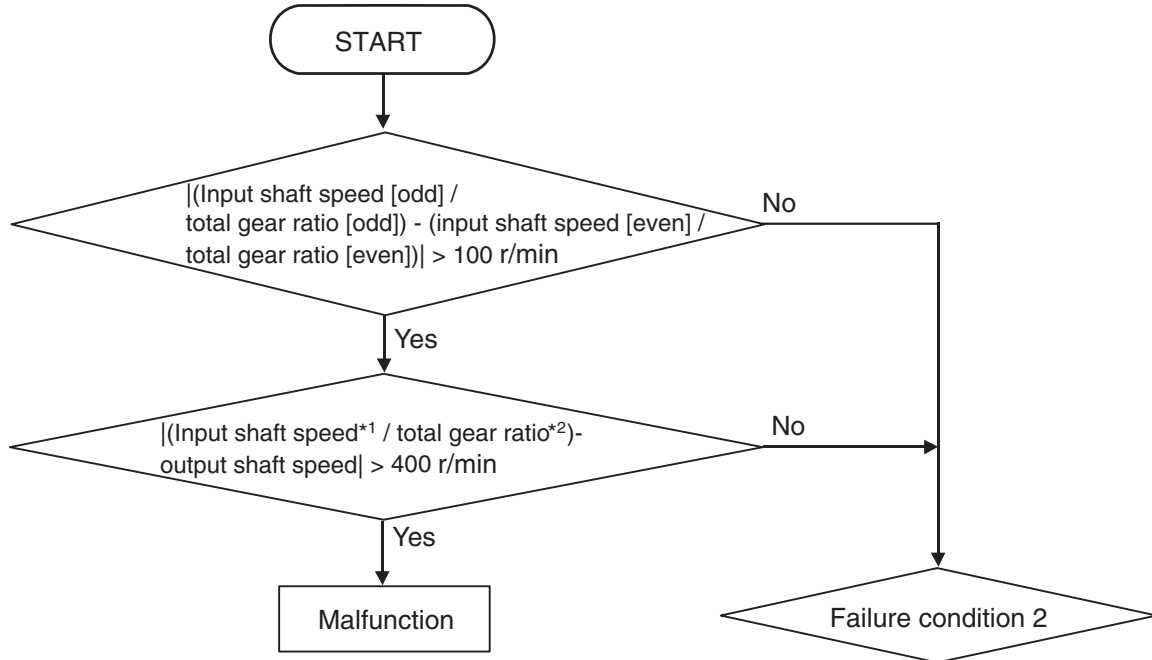


*1 : In case of input speed sensor A monitor, this is speed of input shaft (odd).
In case of input speed sensor B monitor, this is speed of input shaft (even).

*2 : In case of input speed sensor A monitor, this is total gear ratio of input shaft (odd).
In case of input speed sensor B monitor, this is total gear ratio of input shaft (even).

AC710598AC

LOGIC FLOW CHARTS (Monitor Sequence) <Rationality (Failure condition 2)>

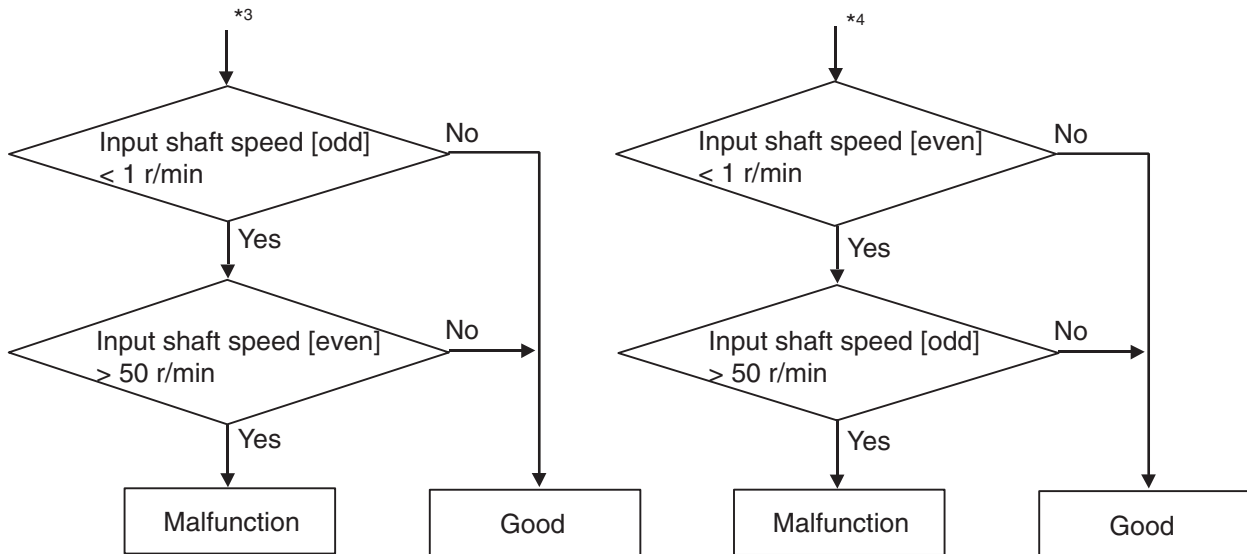

*3 :In case of input speed sensor A monitor

*4 :In case of input speed sensor B monitor

AC710599AB

DTC SET CONDITIONS

Check Conditions <Rationality>

- Voltage of battery: 8 V or more.
- Voltage of battery: 16.5 V or less.
- Input shaft [odd] gear: engaged.

- Input shaft [even] gear: engaged.

JUDGMENT CRITERIA <Rationality>


- Failure condition 1 or failure condition 2 (Refer to Logic Flow Charts (Monitor Sequence) <Rationality>). (500 millisecond)

OBD-II DRIVE CYCLE PATTERN

<RATIONALITY>

Each value of failure condition 1 or failure condition 2 (Logic Flow Charts (Monitor Sequence) <Rationality>) returns to the normal value and remains in the state for 500 milliseconds.

LOGIC FLOW CHARTS (Monitor Sequence) <Rationality - plausibility failure>

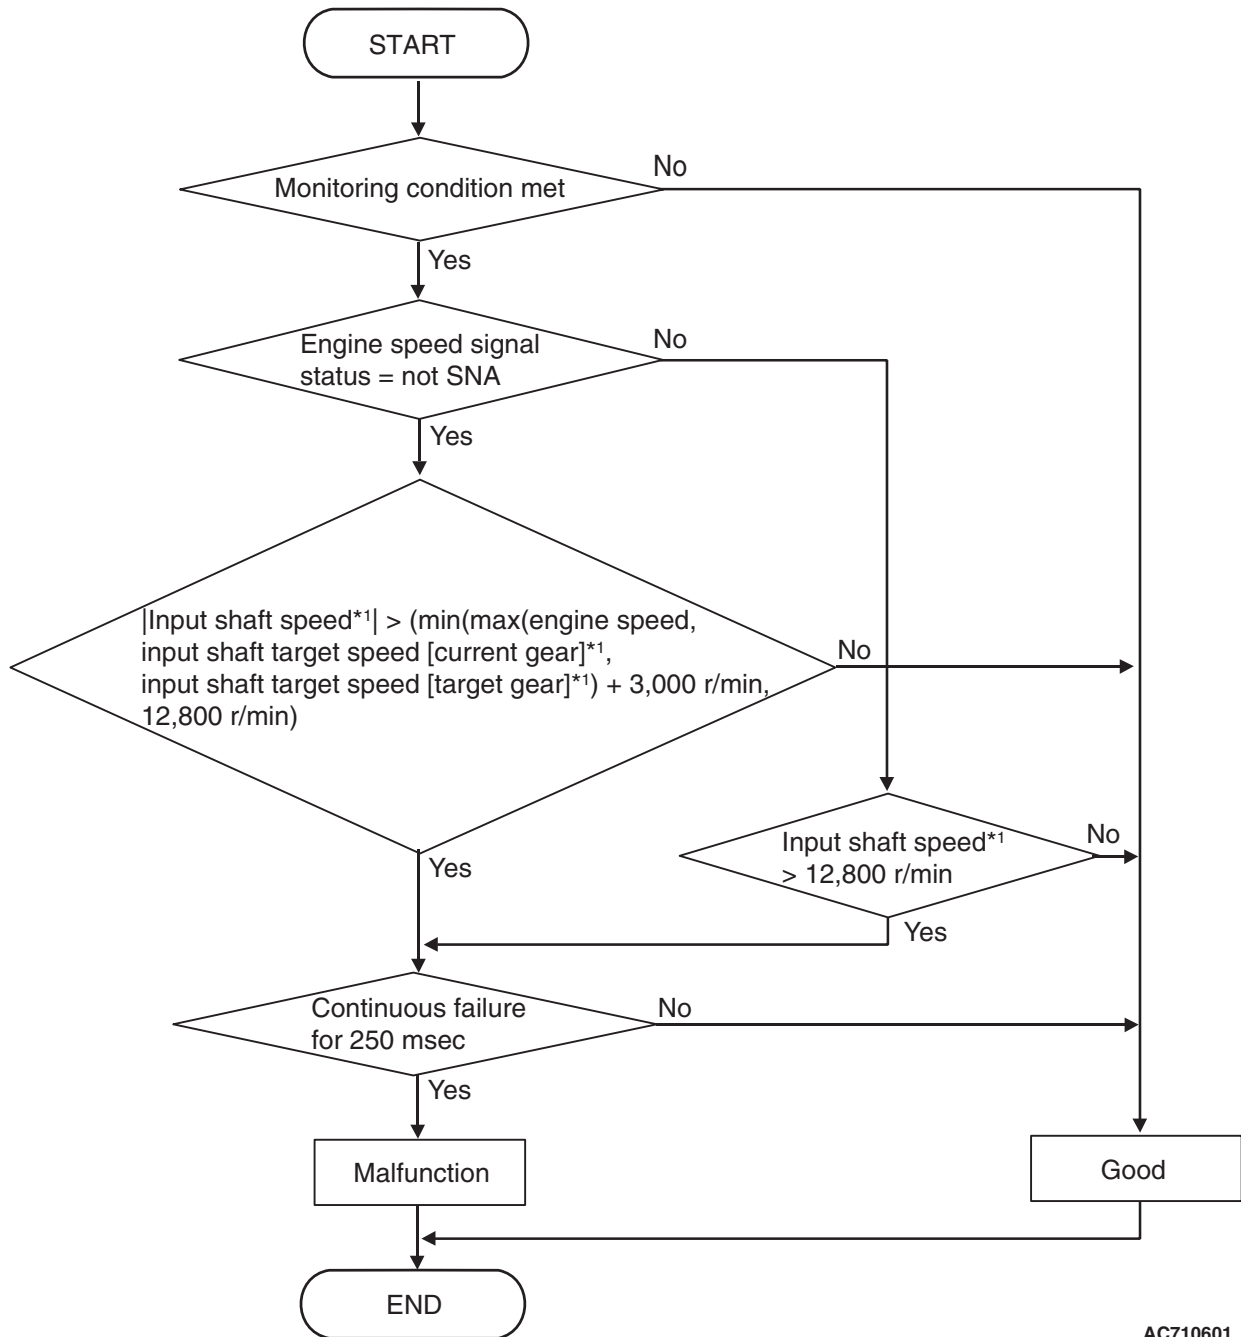

AC710601

*1 :In case of input shaft 1 (odd) speed sensor monitor, this is speed of input shaft (odd).
 In case of input shaft 2 (even) speed sensor monitor, this is speed of input shaft (even).

Check Conditions <Rationality plausibility failure>

- Voltage of battery: 8 V or more.
- Voltage of battery: 16.5 V or less.

JUDGMENT CRITERIA <Rationality plausibility failure>

- Input shaft 1 (odd) speed: Refer to Logic Flow Charts (Monitor Sequence) <Rationality plausibility failure>. (250 millisecond)

OBD-II DRIVE CYCLE PATTERN**<RATIONALITY PLAUSIBILITY FAILURE>**

The value of the Logic Flow Charts (Monitor Sequence) <Rationality plausibility failure> returns to the normal value and remains in the state for 250 milliseconds.

PROBABLE CAUSES

- Malfunction of TC-SST-ECU
- Malfunction of input shaft 1 speed sensor

DIAGNOSTIC PROCEDURE**Required Special Tools:**

- MB991958 Scan Tool (M.U.T.-III Sub Assembly)
 - MB991824: Vehicle Communication Interface (V.C.I.)
 - MB991827 M.U.T.-III USB Cable
 - MB991910 M.U.T.-III Main Harness A

STEP 1. Scan tool CAN bus diagnostics

Using scan tool MB991958, diagnose the CAN bus lines.

Q: Is the check result normal?

YES : Go to Step 2.

NO : Repair the CAN bus lines. (Refer to GROUP 54C – Troubleshooting [P.54C-16.](#)) After repairing the CAN bus line, go to Step 2.

STEP 2. Monitoring unit No. check

(1) Check the freeze frame data (item No. 30 to No. 37).

(2) Check which monitoring unit (No. 114 or No. 138) is set.

Q: Which monitoring unit is set, No. 114 or No. 138?

No. 114 : Go to Step 4

No. 138 : Go to Step 3

STEP 3. Check whether the DTC is reset.

(1) Erase the DTC.

(2) Drive the vehicle at 50 km/h (31 mph) or more.

(3) Check that the DTC is reset.

Q: Is DTC No.P0716 set?

YES : Replace the mechatronic assembly. (Refer to [P.22C-505.](#))

NO : Intermittent malfunction. (Refer to GROUP 00 –How to Cope with Intermittent Malfunction [P.00-13.](#))

STEP 4. Check whether the DTC is reset.

(1) Erase the DTC.

⚠ CAUTION

When driving with each gear range, check that the gear engagement is correct and the engine rotation speed does not increase abnormally after gear shifting.

(2) Drive with shifting to each gear range.

(3) Check that the DTC is reset.

Q: Is DTC No.P0716 set?

YES : Go to Step 5.

NO : Intermittent malfunction. (Refer to GROUP 00 –How to Cope with Intermittent Malfunction [P.00-13.](#))

STEP 5. Scan tool Teach-In

(1) Carry out the Item No. 1: Plausibility check. (Refer to Special Function (Teach-In Reference Table [P.22C-362.](#))

(2) After Teach-In, check which result ("Yes" or "No") is displayed in the Data list No. 101: Normal End. (Refer to Special Function (Teach-In Reference Table [P.22C-362.](#))

Q: Which is displayed, "Yes" or "No"?

"Yes" : Replace the mechatronic assembly. (Refer to [P.22C-505.](#))

"No" : Replace the transaxle assembly. (Refer to [P.22C-497.](#))

DTC P0717: Input shaft 1 (odd number gear axle) speed sensor system (Output current low range out)

⚠ CAUTION

- If there is any problem in the CAN bus lines, an incorrect diagnostic trouble code may be set. Prior to this diagnosis, diagnose the CAN bus lines.
- Whenever the ECU is replaced, ensure that the CAN bus lines are normal.

DIAGNOSTIC FUNCTION

TC-SST-ECU checks that the input shaft 1 (odd number gear axle) speed sensor is normal.

DESCRIPTIONS OF MONITOR METHODS

The output of the input shaft 1 (odd number gear axle) speed sensor is determined to be too low.

MONITOR EXECUTION

- Continuous

**MONITOR EXECUTION CONDITIONS
(OTHER MONITOR AND SENSOR)**


Other Monitor (There is no temporary DTC stored in memory for the item monitored below)

- P0715: Input shaft 1 (odd number gear axle) speed sensor system (Output high range out)
- P0716: Input shaft 1 (odd number gear axle) speed sensor system (Poor performance)
- P2766: Input shaft 2 (even number gear axle) speed sensor system (Poor performance)

Sensor (The sensor below is determined to be normal)

- Input shaft 2 (even number gear axle) speed sensor

LOGIC FLOW CHARTS (Monitor Sequence)

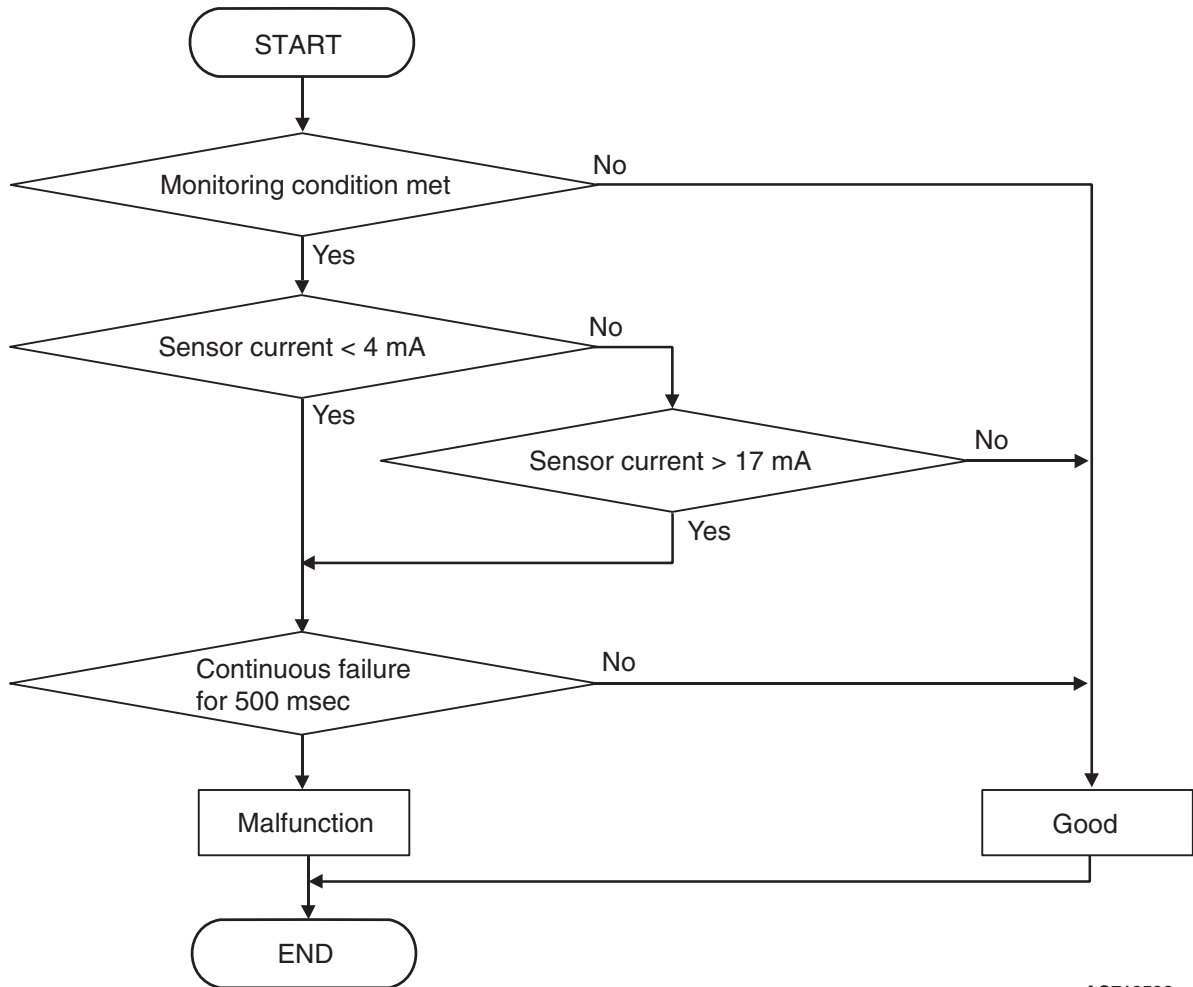

AC710596

DTC SET CONDITIONS

Check Conditions

- Voltage of battery: 8 V or more.
- Voltage of battery: 16.5 V or less.
- Time after engine start: 1.5 seconds or more.

JUDGMENT CRITERIA

- Sensor current: 4 mA or less. (500 millisecond)

OBD-II DRIVE CYCLE PATTERN

The sensor current remains 4 mA or more for 500 milliseconds.

PROBABLE CAUSES

- Malfunction of TC-SST-ECU
- Malfunction of input shaft 1 speed sensor

DIAGNOSTIC PROCEDURE

Required Special Tools:

- MB991958 Scan Tool (M.U.T.-III Sub Assembly)
 - MB991824: Vehicle Communication Interface (V.C.I.)
 - MB991827 M.U.T.-III USB Cable
 - MB991910 M.U.T.-III Main Harness A

STEP 1. Scan tool CAN bus diagnostics

Using scan tool MB991958, diagnose the CAN bus lines.

Q: Is the check result normal?

YES : Go to Step 2.

NO : Repair the CAN bus lines. (Refer to GROUP 54C – Troubleshooting P.54C-16.) After repairing the CAN bus line, go to Step 2.

STEP 2. Check whether the DTC is reset.

After 5 or more seconds have passed with the engine idle status, check that the DTC is reset.

Q: Is DTC No. P0717 set?

YES : Replace the mechatronic assembly. (Refer to P.22C-505.)

NO : Intermittent malfunction. (Refer to GROUP 00 –How to Cope with Intermittent Malfunction P.00-13.)

DTC P0725: Engine speed signal abnormality

CAUTION

- If there is any problem in the CAN bus lines, an incorrect diagnostic trouble code may be set. Prior to this diagnosis, diagnose the CAN bus lines.
- Whenever the ECU is replaced, ensure that the CAN bus lines are normal.

DIAGNOSTIC FUNCTION

TC-SST-ECU receives the periodic communication data from the engine control module via the CAN bus lines, and checks the data for abnormality.

DESCRIPTIONS OF MONITOR METHODS

The engine speed signal from the engine control module is determined to be abnormal.

PROBABLE CAUSES

- The CAN bus line is defective.
- Malfunction of crankshaft position sensor
- Malfunction of engine control module
- Malfunction of TC-SST-ECU

DIAGNOSTIC PROCEDURE

Required Special Tools:

- MB991958 Scan Tool (M.U.T.-III Sub Assembly)
 - MB991824: Vehicle Communication Interface (V.C.I.)
 - MB991827 M.U.T.-III USB Cable
 - MB991910 M.U.T.-III Main Harness A

STEP 1. Scan tool CAN bus diagnostics

Using the scan tool, diagnose the CAN bus lines.

Q: Is the check result normal?

YES : Go to Step 2.

NO : Repair the CAN bus lines. (Refer to GROUP 54C – Troubleshooting P.54C-16.) After repairing the CAN bus line, go to Step 2.

STEP 2. Scan tool diagnostic trouble code

Check the engine diagnostic trouble code. (Refer to GROUP 13A –Troubleshooting [P.13A-50.](#))

Q: Is the DTC set?

YES : Perform the relevant troubleshooting.

NO : Go to Step 3.

STEP 3. Check whether the DTC is reset.

After 10 or more seconds have passed with the engine idle status, check that the DTC is reset.

Q: Is DTC No. P0725 set?

YES : Replace the mechatronic assembly. (Refer to [P.22C-505.](#))

NO : Intermittent malfunction. (Refer to GROUP 00 –How to Cope with Intermittent Malfunction [P.00-13.](#))

DTC P0746: Line Pressure Solenoid System (Drive current range out)**CAUTION**

- If there is any problem in the CAN bus lines, an incorrect diagnostic trouble code may be set. Prior to this diagnosis, diagnose the CAN bus lines.
- Whenever the ECU is replaced, ensure that the CAN bus lines are normal.

DIAGNOSTIC FUNCTION

TC-SST-ECU checks that the line pressure solenoid is normal.

DESCRIPTIONS OF MONITOR METHODS

The difference between the actual current of the line pressure solenoid and target current is large.

MONITOR EXECUTION

- Continuous

**MONITOR EXECUTION CONDITIONS
(OTHER MONITOR AND SENSOR)**


Other Monitor (There is no temporary DTC stored in memory for the item monitored below)

- P0960: Line pressure solenoid system (Open circuit)
- P0961: Line pressure solenoid system (Overvoltage)
- P0962: Line pressure solenoid system (Short to ground)
- P0963: Line pressure solenoid system (Short to power supply)

Sensor (The sensor below is determined to be normal)

- Not applicable

LOGIC FLOW CHARTS (Monitor Sequence) <Rationality - high>

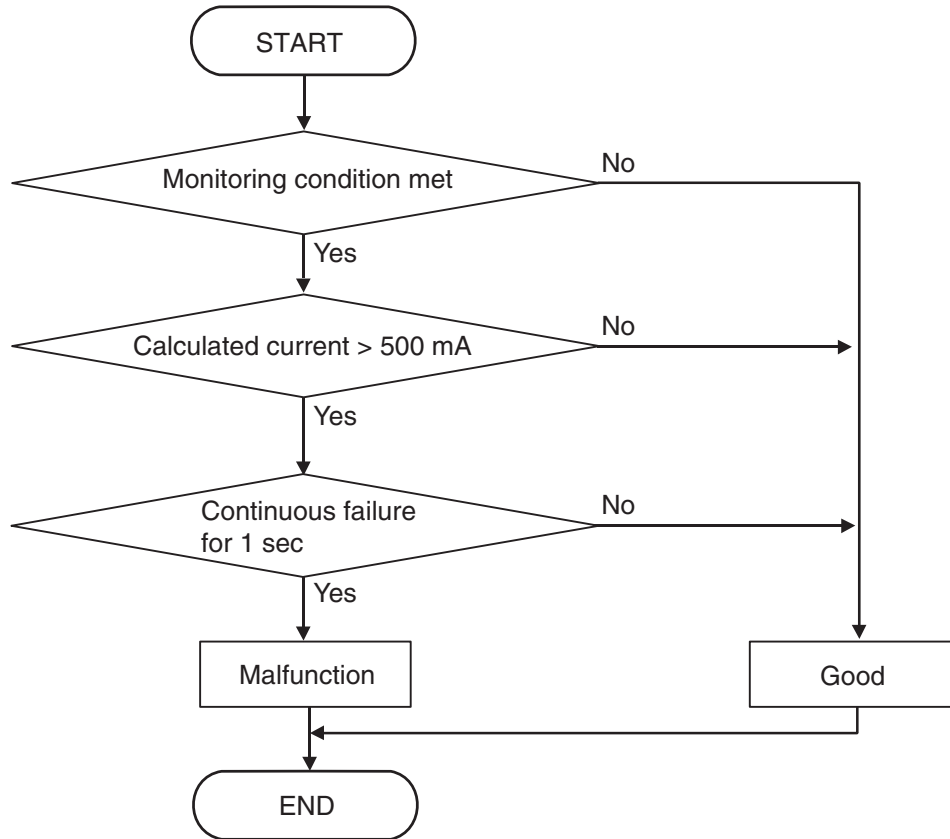

AC710625

DTC SET CONDITIONS

Check Conditions <Rationality-high>

- Voltage of battery: 8 V or more.
- Voltage of battery: 16.5 V or less.


JUDGMENT CRITERIA <Rationality-high>

- Calculated current (actual current – target current): 500 mA or more. (1 second)

**OBD-II DRIVE CYCLE PATTERN
 <RATIONALITY-HIGH>**

The value of the calculated current (actual current – target current) remains 500 mA or less for 1 second.

LOGIC FLOW CHARTS (Monitor Sequence) <Rationality - low>

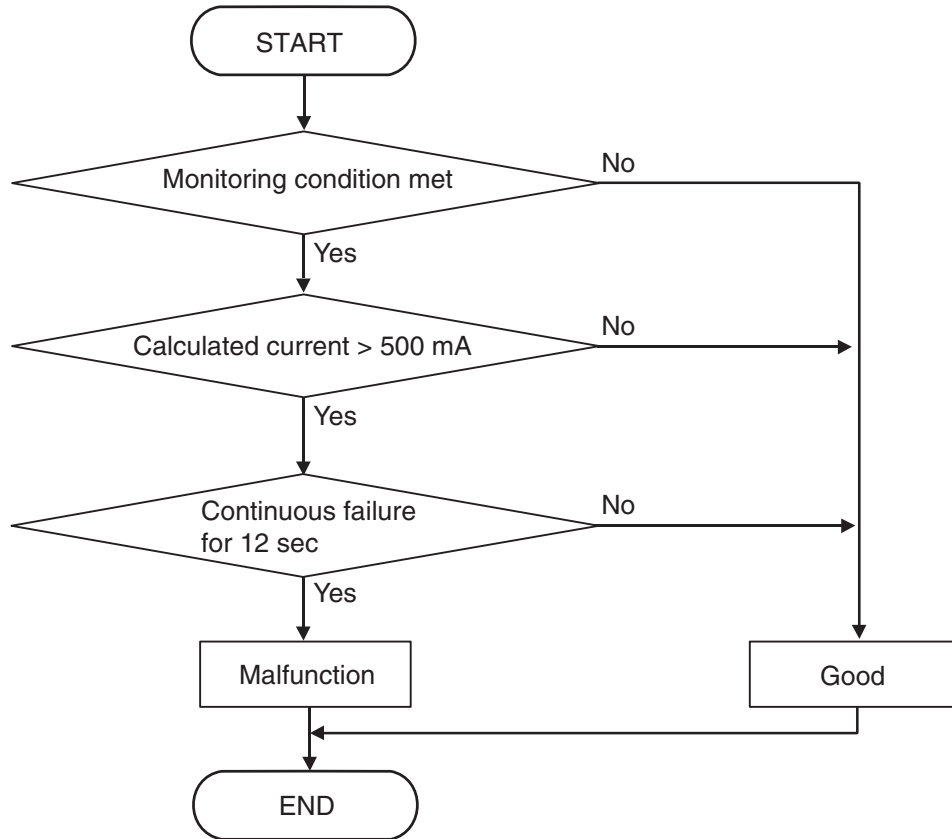

AC710626

DTC SET CONDITIONS

Check Conditions <Rationality-low>

- Voltage of battery: 8 V or more.
- Voltage of battery: 16.5 V or less.

JUDGMENT CRITERIA <Rationality-low>

- Calculated current (target current – actual current): 500 mA or more. (12 seconds)

**OBD-II DRIVE CYCLE PATTERN
<RATIONALITY-LOW>**

The value of the calculated current (target current – actual current) remains 500 mA or less for 12 seconds.

PROBABLE CAUSES

- Malfunction of TC-SST-ECU
- Malfunction of line pressure solenoid

DIAGNOSTIC PROCEDURE

Required Special Tools:

- MB991958 Scan Tool (M.U.T.-III Sub Assembly)
 - MB991824: Vehicle Communication Interface (V.C.I.)
 - MB991827 M.U.T.-III USB Cable
 - MB991910 M.U.T.-III Main Harness A

STEP 1. Scan tool CAN bus diagnostics

Using scan tool MB991958, diagnose the CAN bus lines.

Q: Is the check result normal?

YES : Go to Step 2.

NO : Repair the CAN bus lines. (Refer to GROUP 54C – Troubleshooting P.54C-16.) After repairing the CAN bus line, go to Step 2.

STEP 2. Check whether the DTC is reset.

Leave the engine idle for 15 seconds, and perform a test run of the vehicle. Then check that the DTC is reset.

Q: Is DTC No. P0746 set?

YES : Replace the mechatronic assembly. (Refer to [P.22C-505.](#))

NO : Intermittent malfunction. (Refer to GROUP 00 –How to Cope with Intermittent Malfunction [P.00-13.](#))

DTC P0753: Shift Select Solenoid 1 System (Open circuit)

⚠ CAUTION

- If there is any problem in the CAN bus lines, an incorrect diagnostic trouble code may be set. Prior to this diagnosis, diagnose the CAN bus lines.
- Whenever the ECU is replaced, ensure that the CAN bus lines are normal.

DIAGNOSTIC FUNCTION

TC-SST-ECU checks that the shift select solenoid 1 circuit is normal.

DESCRIPTIONS OF MONITOR METHODS

The shift select solenoid 1 circuit is determined to be open.

MONITOR EXECUTION

- Continuous

**MONITOR EXECUTION CONDITIONS
(OTHER MONITOR AND SENSOR)**


Other Monitor (There is no temporary DTC stored in memory for the item monitored below)

- Not applicable

Sensor (The sensor below is determined to be normal)

- Not applicable

LOGIC FLOW CHARTS (Monitor Sequence)

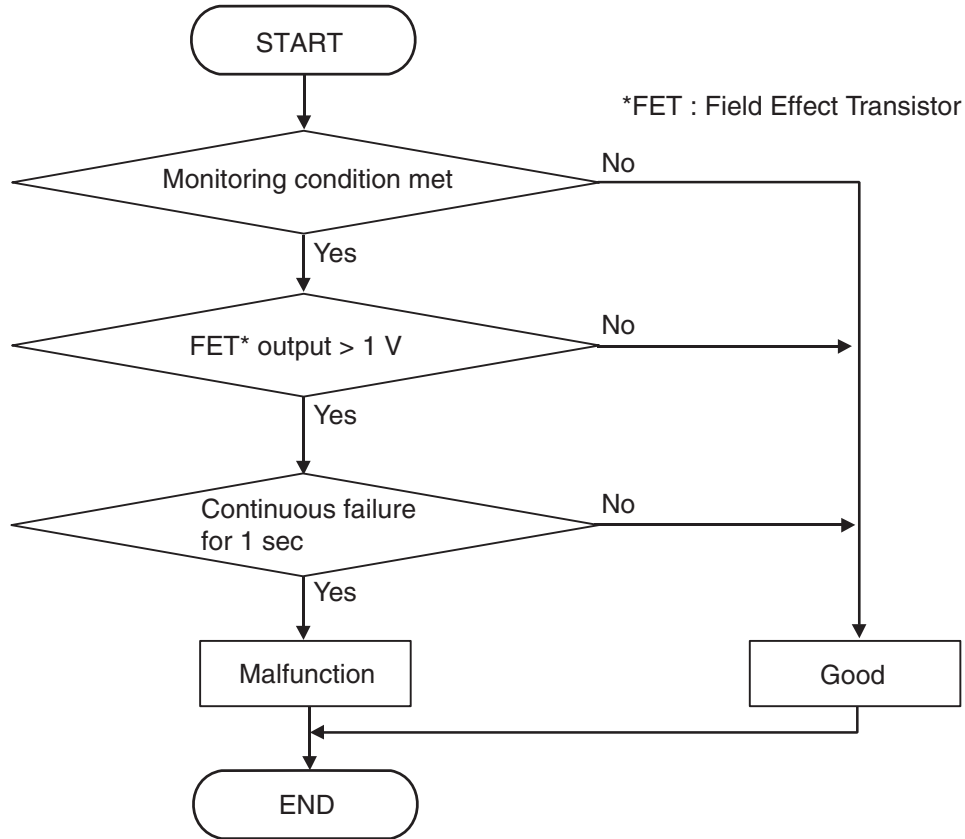

AC710622

DTC SET CONDITIONS

Check Conditions

- Voltage of battery: 8 V or more.
- Voltage of battery: 16.5 V or less.

JUDGMENT CRITERIA

- FET (Field Effect Transistor) output: 1 V or more. (1 second)

OBD-II DRIVE CYCLE PATTERN

The FET channel output remains 1 V or less for 1 second.

PROBABLE CAUSES

- Malfunction of TC-SST-ECU
- Malfunction of shift select solenoid 1

DIAGNOSTIC PROCEDURE

Required Special Tools:

- MB991958 Scan Tool (M.U.T.-III Sub Assembly)
 - MB991824: Vehicle Communication Interface (V.C.I.)
 - MB991827 M.U.T.-III USB Cable
 - MB991910 M.U.T.-III Main Harness A

STEP 1. Scan tool CAN bus diagnostics

Using scan tool MB991958, diagnose the CAN bus lines.

Q: Is the check result normal?

YES : Go to Step 2.

NO : Repair the CAN bus lines. (Refer to GROUP 54C – Troubleshooting P.54C-16.) After repairing the CAN bus line, go to Step 2.

STEP 2. Check whether the DTC is reset.

Q: Is DTC No. P0753 set?

YES : Replace the mechatronic assembly. (Refer to [P.22C-505.](#))

NO : Intermittent malfunction. (Refer to GROUP 00 –How to Cope with Intermittent Malfunction [P.00-13.](#))

DTC P0758: Shift Select Solenoid 2 System (Open circuit)

⚠ CAUTION

- If there is any problem in the CAN bus lines, an incorrect diagnostic trouble code may be set. Prior to this diagnosis, diagnose the CAN bus lines.
- Whenever the ECU is replaced, ensure that the CAN bus lines are normal.

DIAGNOSTIC FUNCTION

TC-SST-ECU checks that the shift select solenoid 2 circuit is normal.

DESCRIPTIONS OF MONITOR METHODS

The shift select solenoid 2 circuit is determined to be open.

MONITOR EXECUTION

- Continuous

**MONITOR EXECUTION CONDITIONS
(OTHER MONITOR AND SENSOR)**


Other Monitor (There is no temporary DTC stored in memory for the item monitored below)

- Not applicable

Sensor (The sensor below is determined to be normal)

- Not applicable

LOGIC FLOW CHARTS (Monitor Sequence)

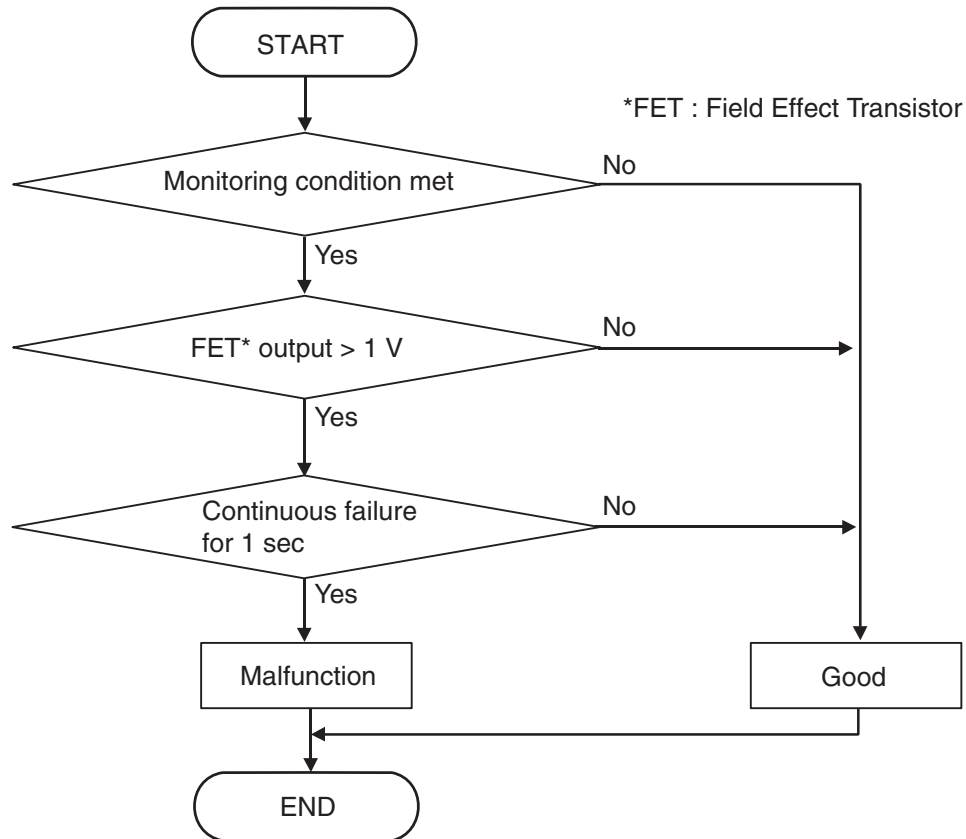

AC710622

DTC SET CONDITIONS**Check Conditions**

- Voltage of battery: 8 V or more.
- Voltage of battery: 16.5 V or less.

JUDGMENT CRITERIA

- FET (Field Effect Transistor) output: 1 V or more. (1 second)

OBD-II DRIVE CYCLE PATTERN

The FET channel output remains 1 V or less for 1 second.

PROBABLE CAUSES

- Malfunction of TC-SST-ECU
- Malfunction of shift select solenoid 2

DIAGNOSTIC PROCEDURE**Required Special Tools:**

- MB991958 Scan Tool (M.U.T.-III Sub Assembly)
 - MB991824: Vehicle Communication Interface (V.C.I.)
 - MB991827 M.U.T.-III USB Cable
 - MB991910 M.U.T.-III Main Harness A

STEP 1. Scan tool CAN bus diagnostics

Using scan tool MB991958, diagnose the CAN bus lines.

Q: Is the check result normal?

YES : Go to Step 2.

NO : Repair the CAN bus lines. (Refer to GROUP 54C – Troubleshooting P.54C-16.) After repairing the CAN bus line, go to Step 2.

STEP 2. Check whether the DTC is reset.

Q: Is DTC No. P0758 set?

YES : Replace the mechatronic assembly. (Refer to [P.22C-505.](#))

NO : Intermittent malfunction. (Refer to GROUP 00 –How to Cope with Intermittent Malfunction [P.00-13.](#))

DTC P0776: Clutch Cooling Flow Solenoid System (Drive current range out)

⚠ CAUTION

- If there is any problem in the CAN bus lines, an incorrect diagnostic trouble code may be set. Prior to this diagnosis, diagnose the CAN bus lines.
- Whenever the ECU is replaced, ensure that the CAN bus lines are normal.

DIAGNOSTIC FUNCTION

TC-SST-ECU checks that the clutch cooling flow solenoid is normal.

DESCRIPTIONS OF MONITOR METHODS

The difference between the actual current of the clutch cooling flow solenoid and target current is large.

MONITOR EXECUTION

- Continuous

**MONITOR EXECUTION CONDITIONS
(OTHER MONITOR AND SENSOR)**


Other Monitor (There is no temporary DTC stored in memory for the item monitored below)

- P0777: Clutch cooling flow solenoid system (Stuck)
- P0964: Clutch cooling flow solenoid system (Open circuit)
- P0965: Clutch cooling flow solenoid system (Overvoltage)
- P0966: Clutch cooling flow solenoid system (Short to ground)
- P0967: Clutch cooling flow solenoid system (Short to power supply)

Sensor (The sensor below is determined to be normal)

- Not applicable

LOGIC FLOW CHARTS (Monitor Sequence)

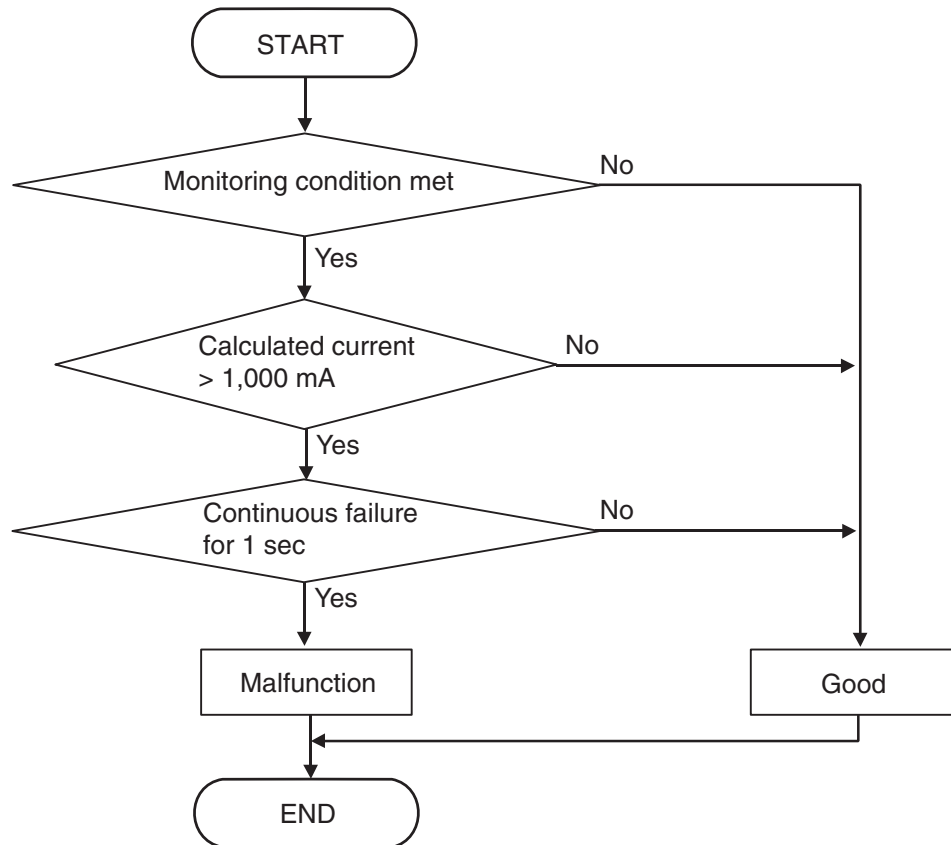

AC710633

DTC SET CONDITIONS**Check Conditions**

- Voltage of battery: 8 V or more.
- Voltage of battery: 16.5 V or less.
- Engine speed: 650 r/min or more.
- Time since above engine condition: 1.5 seconds or more.

JUDGMENT CRITERIA <Rationality-high>

- Calculated current (actual current – target current): 1,000 mA or more. (1 second)

JUDGMENT CRITERIA <Rationality-low>

- Calculated current (target current – actual current): 1,000 mA or more. (1 second)

**OBD-II DRIVE CYCLE PATTERN
<RATIONALITY-HIGH>**

The value of the calculated current (actual current – target current) remains 1,000 mA or less for 1 second.

**OBD-II DRIVE CYCLE PATTERN
<RATIONALITY-LOW>**

The value of the calculated current (target current – actual current) remains 1,000 mA or less for 1 second.

PROBABLE CAUSES

- Malfunction of TC-SST-ECU
- Malfunction of clutch cooling flow solenoid

DIAGNOSTIC PROCEDURE**Required Special Tools:**

- MB991958 Scan Tool (M.U.T.-III Sub Assembly)
 - MB991824: Vehicle Communication Interface (V.C.I.)
 - MB991827 M.U.T.-III USB Cable
 - MB991910 M.U.T.-III Main Harness A

STEP 1. Scan tool CAN bus diagnostics

Using scan tool MB991958, diagnose the CAN bus lines.

Q: Is the check result normal?

YES : Go to Step 2.

NO : Repair the CAN bus lines. (Refer to GROUP 54C – Troubleshooting [P.54C-16.](#)) After repairing the CAN bus line, go to Step 2.

STEP 2. Check whether the DTC is reset.

Leave the engine idle for 15 seconds, and perform a test run of the vehicle. Then check that the DTC is reset.

Q: Is DTC No. P0776 set?

YES : Replace the mechatronic assembly. (Refer to [P.22C-505.](#))

NO : Intermittent malfunction. (Refer to GROUP 00 –How to Cope with Intermittent Malfunction [P.00-13.](#))

DTC P0777: Clutch Cooling Flow Solenoid System (Stuck)

⚠ CAUTION

- If there is any problem in the CAN bus lines, an incorrect diagnostic trouble code may be set. Prior to this diagnosis, diagnose the CAN bus lines.
- Whenever the ECU is replaced, ensure that the CAN bus lines are normal.

DIAGNOSTIC FUNCTION

TC-SST-ECU checks that the clutch cooling flow solenoid is normal.

DESCRIPTIONS OF MONITOR METHODS

The clutch cooling flow solenoid is determined to be seized.

MONITOR EXECUTION

- Continuous

**MONITOR EXECUTION CONDITIONS
(OTHER MONITOR AND SENSOR)**


Other Monitor (There is no temporary DTC stored in memory for the item monitored below)

- P0776: Clutch cooling flow solenoid system (Drive current range out)
- P0964: Clutch cooling flow solenoid system (Open circuit)
- P0965: Clutch cooling flow solenoid system (Overvoltage)
- P0966: Clutch cooling flow solenoid system (Short to ground)
- P0967: Clutch cooling flow solenoid system (Short to power supply)

Sensor (The sensor below is determined to be normal)

- Not applicable

LOGIC FLOW CHARTS (Monitor Sequence)

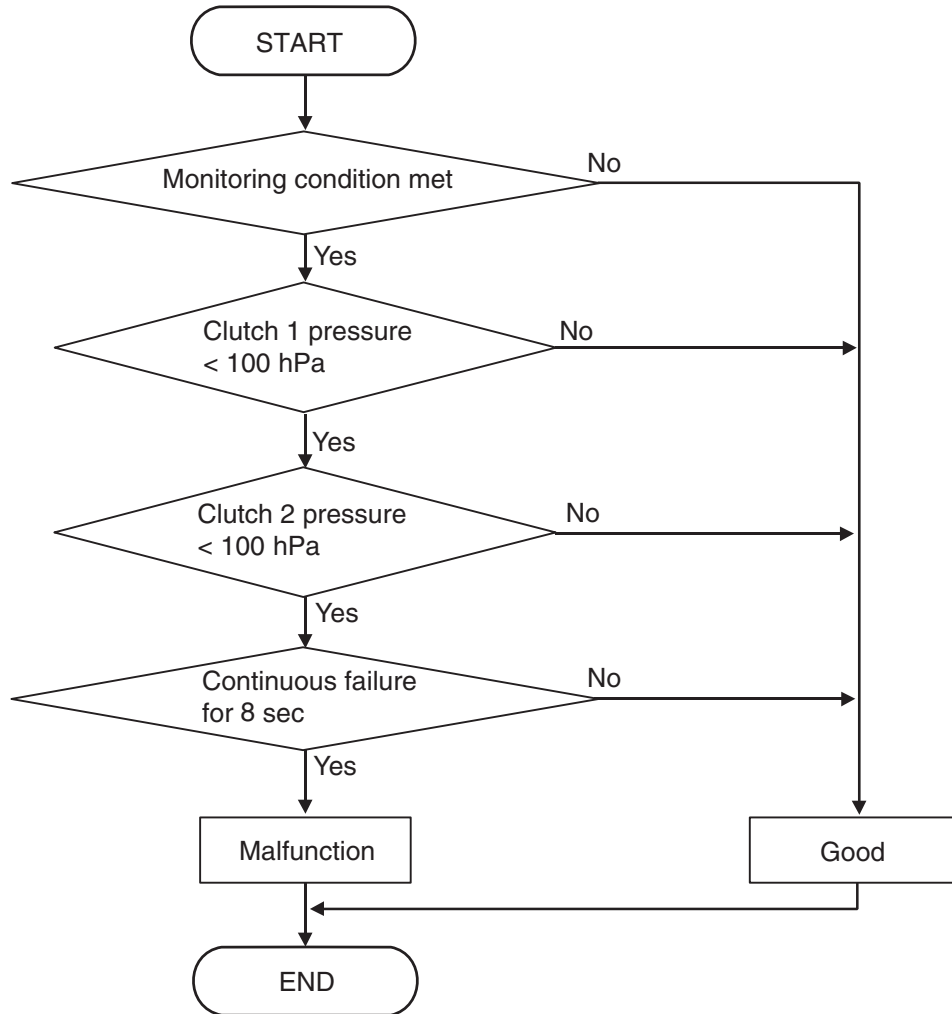

AC710635AC

DTC SET CONDITIONS

Check Conditions

- Voltage of battery: 8 V or more.
- Voltage of battery: 16.5 V or less.
- Engine speed: 650 r/min or more.
- Time since above engine condition: 1.5 seconds or more.
- Clutch 1 target pressure: 380 hPa or more.
- Clutch 2 target pressure: 380 hPa or more.

JUDGMENT CRITERIA

- Clutch 1 pressure: 100 hPa or less, and clutch 2 pressure: 100 hPa or less. (8 seconds)

OBD-II DRIVE CYCLE PATTERN

The Clutch 1 pressure and clutch 2 pressure remain 100 hPa or more for 8 seconds.

PROBABLE CAUSES

- Malfunction of TC-SST-ECU
- Malfunction of clutch cooling flow solenoid
- Insufficient fluid level
- Improper installation of mechatronic assembly

DIAGNOSTIC PROCEDURE

Required Special Tools:

- MB991958 Scan Tool (M.U.T.-III Sub Assembly)
 - MB991824: Vehicle Communication Interface (V.C.I.)
 - MB991827 M.U.T.-III USB Cable
 - MB991910 M.U.T.-III Main Harness A

STEP 1. Scan tool CAN bus diagnostics

Using scan tool MB991958, diagnose the CAN bus lines.

Q: Is the check result normal?

YES : Go to Step 2.

NO : Repair the CAN bus lines. (Refer to GROUP 54C – Troubleshooting [P.54C-16](#).) After repairing the CAN bus line, go to Step 2.

STEP 2. Check whether the DTC is reset.

(1) Erase the DTC.

(2) Carry out the Item No. 3 (Teach-In) : Line pressure Test. (Refer to Special Function (Teach-In Reference Table [P.22C-362](#).)

(3) With the engine idle status, check that the DTC is reset.

Q: Is the DTC No. P0777 restored? or Is the line pressure test of Teach-In not completed normally ("No" is displayed in the Data list No.101: Normal End)?

YES : Go to Step 3.

NO : Intermittent malfunction. (Refer to GROUP 00 –How to Cope with Intermittent Malfunction [P.00-13](#).)

STEP 3. Check the fluid.

Q: Is the fluid level proper?

YES : Go to Step 4

NO : Add the fluid.

STEP 4. Check the installation status of the mechatronic assembly.

Q: Is the mechatronic assembly installed correctly?

YES : Go to Step 5

NO : Install the mechatronic assembly correctly. (Refer to [P.22C-505](#).)

STEP 5. Check whether the DTC is reset.

(1) Erase the DTC.

(2) With the engine idle status, check that the DTC is reset.

Q: Is DTC No.P0777 set?

YES : Replace the mechatronic assembly. (Refer to [P.22C-505](#).) Then, go to Step 6.

NO : Intermittent malfunction. (Refer to GROUP 00 –How to Cope with Intermittent Malfunction [P.00-13](#).)

STEP 6. Check whether the DTC is reset.

(1) Erase the DTC.

(2) With the engine idle status, check that the DTC is reset.

Q: Is DTC No.P0777 set?

YES : Replace the transaxle assembly. (Refer to [P.22C-497](#).)

NO : This diagnosis is complete.

DTC P0841: Clutch 1 Pressure Sensor System (Poor performance)**⚠ CAUTION**

- If there is any problem in the CAN bus lines, an incorrect diagnostic trouble code may be set. Prior to this diagnosis, diagnose the CAN bus lines.
- Whenever the ECU is replaced, ensure that the CAN bus lines are normal.

DIAGNOSTIC FUNCTION

TC-SST-ECU checks that the clutch 1 pressure sensor is normal.

DESCRIPTIONS OF MONITOR METHODS

The difference between the allowable torque of clutch 1 and the engine torque is large.

MONITOR EXECUTION

- Continuous

**MONITOR EXECUTION CONDITIONS
(OTHER MONITOR AND SENSOR)**

Other Monitor (There is no temporary DTC stored in memory for the item monitored below)


- P0842: Clutch 1 pressure sensor system (Output low range out)

- P0843: Clutch 1 pressure sensor system (Output high range out)
- P0753: Shift select solenoid 1 system (Open circuit)
- P0973: Shift select solenoid 1 system (Short to ground)
- P0974: Shift select solenoid 1 system (Short to power supply)
- P2733: Clutch/shift switching solenoid 1, spool stuck
- P2736: Clutch/shift switching solenoid 1 system (Open circuit)
- P2738: Clutch/shift switching solenoid 1 system (Short to ground)
- P2739: Clutch/shift switching solenoid 1 system (Short to power supply)
- P181B: Clutch 1 (Pressure low range out)
- P181C: Clutch 1 (Pressure high range out)
- P181E: Clutch 2 (Pressure low range out)
- P181F: Clutch 2 (Pressure high range out)
- P185D: Clutch open not possible

Sensor (The sensor below is determined to be normal)

- Shift select solenoid 1
- Clutch/shift switching solenoid 1

LOGIC FLOW CHARTS (Monitor Sequence)

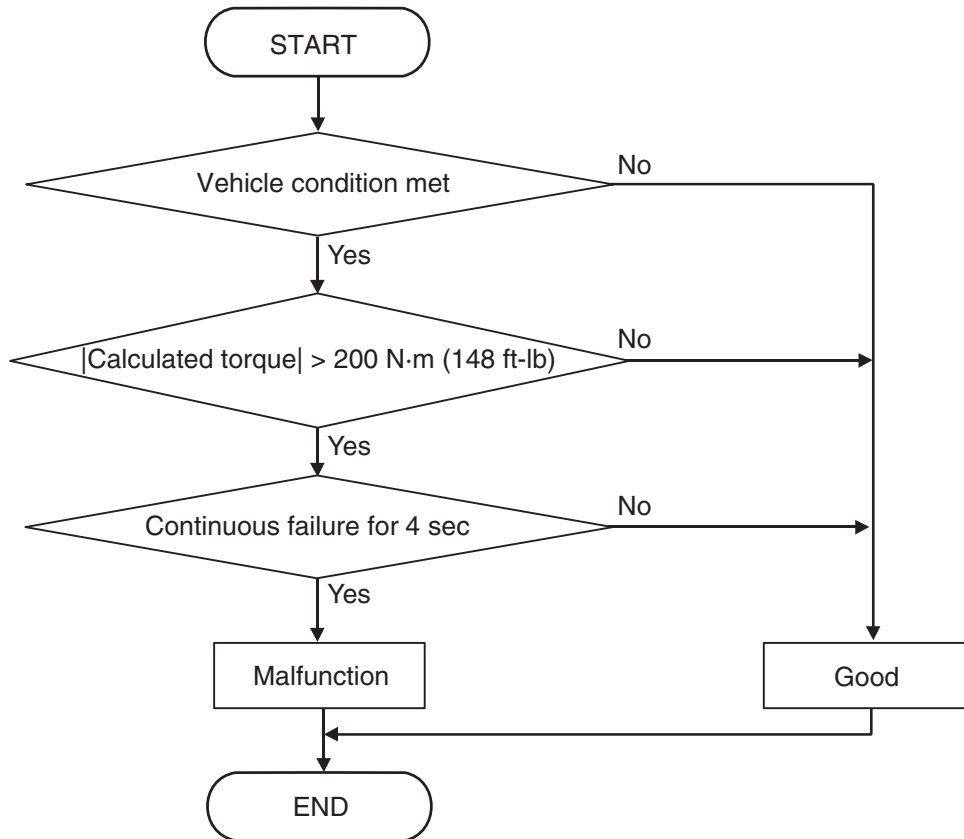

AC710619AB

DTC SET CONDITIONS

Check Conditions

- Voltage of battery: 8 V or more.
- Voltage of battery: 16.5 V or less.
- Engine speed: 650 r/min or more.
- Time since above engine condition: 1.5 seconds or more.
- Engine speed: 6,800 r/min or less.
- Clutch 1 (odd) slip state: Slip or engaged.
- Clutch 1 (odd) slip speed: 20 r/min or more.
- Clutch 2 (even) state: Disengaged.

JUDGMENT CRITERIA

- Calculated torque (Clutch 1 (odd) permit torque – engine torque): 200 N· m (148 ft-lb) or more. (4 seconds)

OBD-II DRIVE CYCLE PATTERN

The value of the calculated torque (clutch 1 (odd) permit torque –engine torque) remains 200 N· m (148 ft-lb) or less for 4 seconds.

PROBABLE CAUSES

- Malfunction of TC-SST-ECU
- Malfunction of clutch 1 pressure sensor
- Malfunction of clutch assembly
- Malfunction of engine system
- Insufficient fluid

DIAGNOSTIC PROCEDURE

Required Special Tools:

- MB991958 Scan Tool (M.U.T.-III Sub Assembly)
 - MB991824: Vehicle Communication Interface (V.C.I.)
 - MB991827 M.U.T.-III USB Cable
 - MB991910 M.U.T.-III Main Harness A

STEP 1. Scan tool CAN bus diagnostics

Using scan tool MB991958, diagnose the CAN bus lines.

Q: Is the check result normal?

YES : Go to Step 2.

NO : Repair the CAN bus lines. (Refer to GROUP 54C – Troubleshooting [P.54C-16.](#)) After repairing the CAN bus line, go to Step 2.

STEP 2. Scan tool diagnostic trouble code

Check the engine diagnostic trouble code. (Refer to GROUP 13A –Troubleshooting [P.13A-50.](#))

Q: Is the DTC set?

YES : Perform the relevant troubleshooting.

NO : Go to Step 3.

STEP 3. Fluid check

Drain the fluid and check that no bubbles, foreign material and contamination are found.

Q: Is the check result normal?

YES : Go to Step 4.

NO : Replace the fluid.

STEP 4. Check whether the DTC is reset.

(1) Erase the DTC.

(2) Gradually accelerate the vehicle.

(3) Accelerate the vehicle with the accelerator pedal fully opened.

(4) Check that the DTC is reset.

Q: Is DTC No.P0841 set?

YES : Replace the clutch assembly. (Refer to GROUP 22D –Transaxle [P.22D-6.](#))

NO : Intermittent malfunction. (Refer to GROUP 00 –How to Cope with Intermittent Malfunction [P.00-13.](#))

DTC P0842: Clutch 1 Pressure Sensor System (Output low range out)**⚠ CAUTION**

- If there is any problem in the CAN bus lines, an incorrect diagnostic trouble code may be set. Prior to this diagnosis, diagnose the CAN bus lines.
- Whenever the ECU is replaced, ensure that the CAN bus lines are normal.

DIAGNOSTIC FUNCTION

TC-SST-ECU checks that the clutch 1 pressure sensor is normal.

DESCRIPTIONS OF MONITOR METHODS

The output of the clutch 1 pressure sensor is too low.

MONITOR EXECUTION

- Continuous

MONITOR EXECUTION CONDITIONS (OTHER MONITOR AND SENSOR)

Other Monitor (There is no temporary DTC stored in memory for the item monitored below)

- P0841: Clutch 1 pressure sensor system (Poor performance)
- P0843: Clutch 1 pressure sensor system (Output high range out)
- P0753: Shift select solenoid 1 system (Open circuit)


- P0973: Shift select solenoid 1 system (Short to ground)
- P0974: Shift select solenoid 1 system (Short to power supply)
- P2733: Clutch/shift switching solenoid 1, spool stuck
- P2736: Clutch/shift switching solenoid 1 system (Open circuit)
- P2738: Clutch/shift switching solenoid 1 system (Short to ground)
- P2739: Clutch/shift switching solenoid 1 system (Short to power supply)

- P181B: Clutch 1 (Pressure low range out)
- P181C: Clutch 1 (Pressure high range out)
- P181E: Clutch 2 (Pressure low range out)
- P181F: Clutch 2 (Pressure high range out)
- P185D: Clutch open not possible

Sensor (The sensor below is determined to be normal)

- Shift select solenoid 1
- Clutch/shift switching solenoid 1

LOGIC FLOW CHARTS (Monitor Sequence)

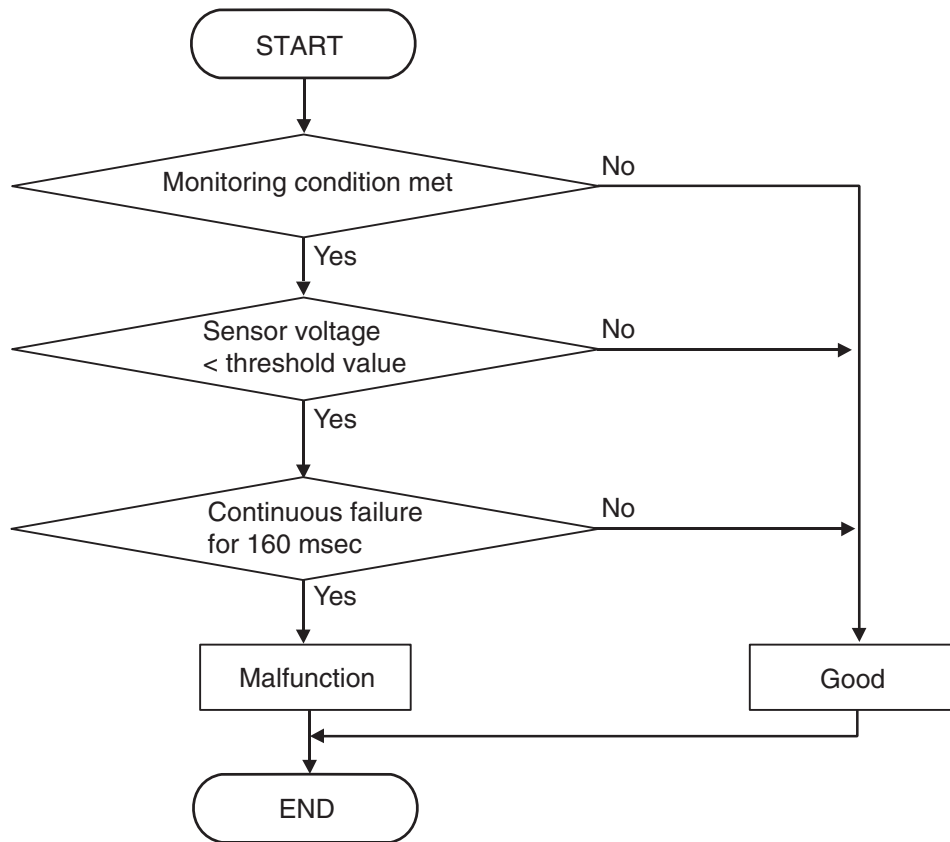

AC710620

DTC SET CONDITIONS

Check Conditions

- Voltage of battery: 8 V or more.
- Voltage of battery: 16.5 V or less.

JUDGMENT CRITERIA

- Sensor voltage: 1.16 V or less. (160 millisecond)

OBD-II DRIVE CYCLE PATTERN

The voltage of the clutch 1 pressure sensor remains 1.16 V or more for 160 milliseconds.

PROBABLE CAUSES

- Malfunction of TC-SST-ECU
- Malfunction of clutch 1 pressure sensor

DIAGNOSTIC PROCEDURE**Required Special Tools:**

- MB991958 Scan Tool (M.U.T.-III Sub Assembly)
 - MB991824: Vehicle Communication Interface (V.C.I.)
 - MB991827 M.U.T.-III USB Cable
 - MB991910 M.U.T.-III Main Harness A

STEP 1. Scan tool CAN bus diagnostics

Using scan tool MB991958, diagnose the CAN bus lines.

Q: Is the check result normal?

YES : Go to Step 2.

NO : Repair the CAN bus lines. (Refer to GROUP 54C – Troubleshooting [P.54C-16.](#)) After repairing the CAN bus line, go to Step 2.

STEP 2. Check whether the DTC is reset.

15 seconds after turning ON the ignition switch, check that the DTC is reset.

Q: Is DTC No. P0842 set?

YES : Replace the mechatronic assembly. (Refer to [P.22C-505.](#))

NO : Intermittent malfunction. (Refer to GROUP 00 –How to Cope with Intermittent Malfunction [P.00-13.](#))

DTC P0843: Clutch 1 Pressure Sensor System (Output high range out)**CAUTION**

- If there is any problem in the CAN bus lines, an incorrect diagnostic trouble code may be set. Prior to this diagnosis, diagnose the CAN bus lines.
- Whenever the ECU is replaced, ensure that the CAN bus lines are normal.

DIAGNOSTIC FUNCTION

TC-SST-ECU checks that the clutch 1 pressure sensor is normal.

DESCRIPTIONS OF MONITOR METHODS

The output of the clutch 1 pressure sensor is too high.

MONITOR EXECUTION

- Continuous

MONITOR EXECUTION CONDITIONS (OTHER MONITOR AND SENSOR)


Other Monitor (There is no temporary DTC stored in memory for the item monitored below)

- P0841: Clutch 1 pressure sensor system (Poor performance)
- P0842: Clutch 1 pressure sensor system (Output low range out)
- P0753: Shift select solenoid 1 system (Open circuit)
- P0973: Shift select solenoid 1 system (Short to ground)
- P0974: Shift select solenoid 1 system (Short to power supply)
- P2733: Clutch/shift switching solenoid 1, spool stuck
- P2736: Clutch/shift switching solenoid 1 system (Open circuit)
- P2738: Clutch/shift switching solenoid 1 system (Short to ground)
- P2739: Clutch/shift switching solenoid 1 system (Short to power supply)
- P181B: Clutch 1 (Pressure low range out)
- P181C: Clutch 1 (Pressure high range out)
- P181E: Clutch 2 (Pressure low range out)
- P181F: Clutch 2 (Pressure high range out)
- P185D: Clutch open not possible

Sensor (The sensor below is determined to be normal)

- Shift select solenoid 1
- Clutch/shift switching solenoid 1

LOGIC FLOW CHARTS (Monitor Sequence)

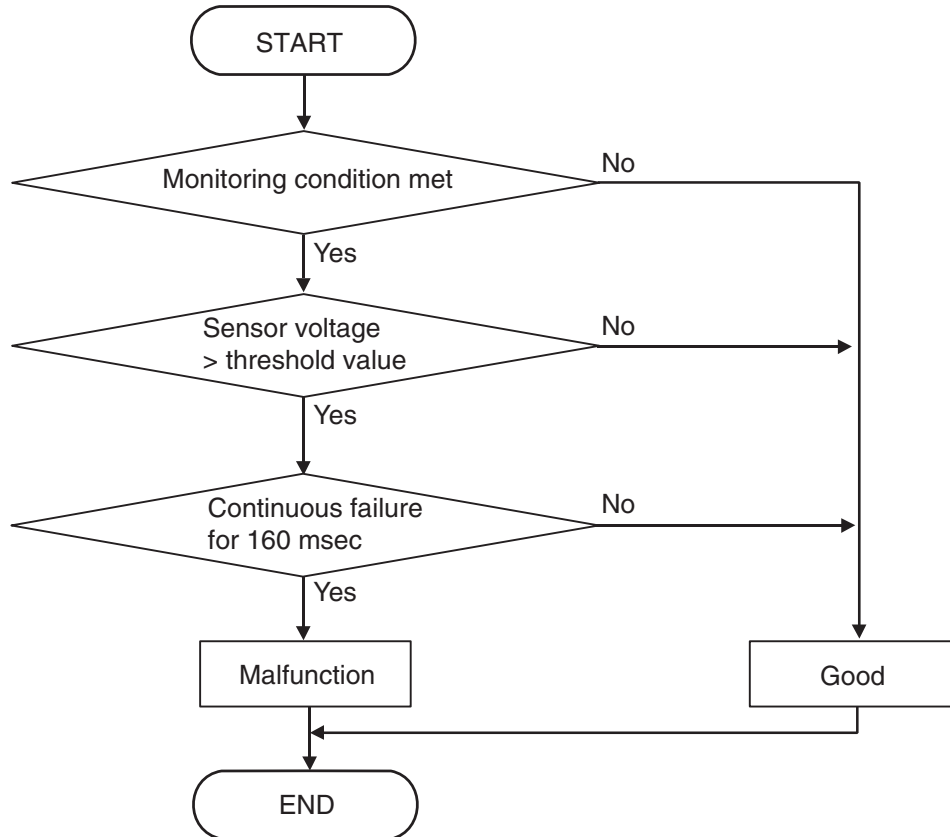

AC710621

DTC SET CONDITIONS

Check Conditions

- Voltage of battery: 8 V or more.
- Voltage of battery: 16.5 V or less.

JUDGMENT CRITERIA

- Sensor voltage: 2.48 V or more. (160 millisecond)

OBD-II DRIVE CYCLE PATTERN

The voltage of the clutch 1 pressure sensor remains 2.48 V or less for 160 milliseconds.

PROBABLE CAUSES

- Malfunction of TC-SST-ECU
- Malfunction of clutch 1 pressure sensor

DIAGNOSTIC PROCEDURE

Required Special Tools:

- MB991958 Scan Tool (M.U.T.-III Sub Assembly)
 - MB991824: Vehicle Communication Interface (V.C.I.)
 - MB991827 M.U.T.-III USB Cable
 - MB991910 M.U.T.-III Main Harness A

STEP 1. Scan tool CAN bus diagnostics

Using scan tool MB991958, diagnose the CAN bus lines.

Q: Is the check result normal?

YES : Go to Step 2.

NO : Repair the CAN bus lines. (Refer to GROUP 54C – Troubleshooting P.54C-16.) After repairing the CAN bus line, go to Step 2.

STEP 2. Check whether the DTC is reset.

15 seconds after turning ON the ignition switch, check that the diagnostic trouble code is reset.

Q: Is DTC No. P0843 set?

YES : Replace the mechatronic assembly. (Refer to P.22C-505.)

NO : Intermittent malfunction. (Refer to GROUP 00 –How to Cope with Intermittent Malfunction P.00-13.)

DTC P0846: Clutch 2 Pressure Sensor System (Poor performance)**CAUTION**

- If there is any problem in the CAN bus lines, an incorrect diagnostic trouble code may be set. Prior to this diagnosis, diagnose the CAN bus lines.
- Whenever the ECU is replaced, ensure that the CAN bus lines are normal.

DIAGNOSTIC FUNCTION

TC-SST-ECU checks that the clutch 2 pressure sensor is normal.

DESCRIPTIONS OF MONITOR METHODS

The difference between the allowable torque of clutch 2 and the engine torque is large.

MONITOR EXECUTION

- Continuous

**MONITOR EXECUTION CONDITIONS
(OTHER MONITOR AND SENSOR)**

Other Monitor (There is no temporary DTC stored in memory for the item monitored below)


- P0847: Clutch 2 pressure sensor system (Output low range out)

- P0848: Clutch 2 pressure sensor system (Output high range out)
- P0753: Shift select solenoid 1 system (Open circuit)
- P0973: Shift select solenoid 1 system (Short to ground)
- P0974: Shift select solenoid 1 system (Short to power supply)
- P2809: Clutch/shift switching solenoid 2, spool stuck
- P2812: Clutch/shift switching solenoid 2 system (Open circuit)
- P2814: Clutch/shift switching solenoid 2 system (Short to ground)
- P2815: Clutch/shift switching solenoid 2 system (Short to power supply)
- P181B: Clutch 1 (Pressure low range out)
- P181C: Clutch 1 (Pressure high range out)
- P181E: Clutch 2 (Pressure low range out)
- P181F: Clutch 2 (Pressure high range out)
- P185D: Clutch open not possible

Sensor (The sensor below is determined to be normal)

- Shift select solenoid 1
- Clutch/shift switching solenoid 2

LOGIC FLOW CHARTS (Monitor Sequence)

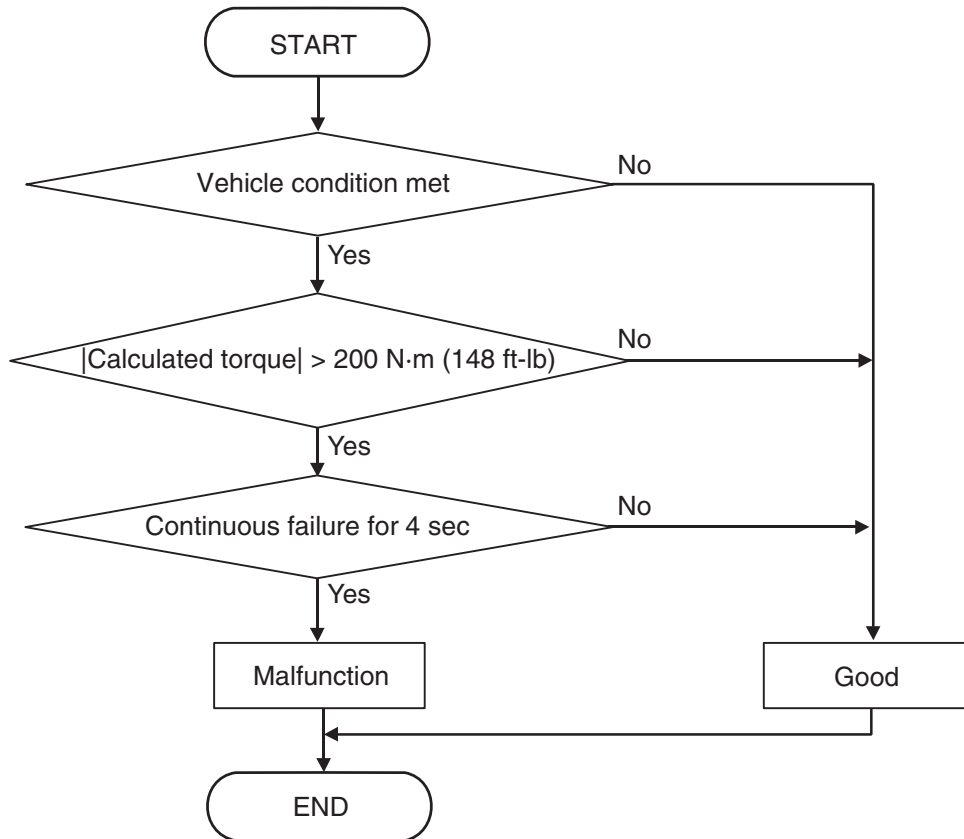

AC710619AB

DTC SET CONDITIONS

Check Conditions

- Voltage of battery: 8 V or more.
- Voltage of battery: 16.5 V or less.
- Engine speed: 650 r/min or more.
- Time since above engine condition: 1.5 seconds or more.
- Engine speed: 6,800 r/min or less.
- Clutch 2 (even) slip state: Slip or engaged.
- Clutch 2 (even) slip speed: 20 r/min or more.
- Clutch 1 (odd) state: Disengaged.

JUDGMENT CRITERIA

- Calculated torque (Clutch 2 (even) permit torque – engine torque): 200 N· m (148 ft-lb) or more. (4 seconds)

OBD-II DRIVE CYCLE PATTERN

The value of the calculated torque (clutch 2 (even) permit torque –engine torque) remains 200 N· m (148 ft-lb) or less for 4 seconds.

PROBABLE CAUSES

- Malfunction of TC-SST-ECU
- Malfunction of clutch 2 pressure sensor
- Malfunction of clutch assembly
- Malfunction of engine system
- Insufficient fluid

DIAGNOSTIC PROCEDURE

Required Special Tools:

- MB991958 Scan Tool (M.U.T.-III Sub Assembly)
 - MB991824: Vehicle Communication Interface (V.C.I.)
 - MB991827 M.U.T.-III USB Cable
 - MB991910 M.U.T.-III Main Harness A

STEP 1. Scan tool CAN bus diagnostics

Using scan tool MB991958, diagnose the CAN bus lines.

Q: Is the check result normal?

YES : Go to Step 2.

NO : Repair the CAN bus lines. (Refer to GROUP 54C – Troubleshooting P.54C-16.) After repairing the CAN bus line, go to Step 2.

STEP 2. Scan tool diagnostic trouble code

Check the engine diagnostic trouble code. (Refer to GROUP 13A –Troubleshooting P.13A-50.)

Q: Is the DTC set?

YES : Perform the relevant troubleshooting.

NO : Go to Step 3.

STEP 3. Fluid check

Drain the fluid and check that no bubbles, foreign material and contamination are found.

Q: Is the check result normal?

YES : Go to Step 4.

NO : Replace the fluid.

STEP 4. Check whether the DTC is reset.

(1) Erase the DTC.

(2) Gradually accelerate the vehicle.

(3) Accelerate the vehicle with the accelerator pedal fully opened.

(4) Check that the DTC is reset.

Q: Is DTC No.P0846 set?

YES : Replace the clutch assembly. (Refer to GROUP 22D –Transaxle P.22D-6.)

NO : Intermittent malfunction. (Refer to GROUP 00 –How to Cope with Intermittent Malfunction P.00-13.)

DTC P0847: Clutch 2 Pressure Sensor System (Output low range out)**CAUTION**

- If there is any problem in the CAN bus lines, an incorrect diagnostic trouble code may be set. Prior to this diagnosis, diagnose the CAN bus lines.
- Whenever the ECU is replaced, ensure that the CAN bus lines are normal.

DIAGNOSTIC FUNCTION

TC-SST-ECU checks that the clutch 2 pressure sensor is normal.

DESCRIPTIONS OF MONITOR METHODS

The output of the clutch 2 pressure sensor is too low.

MONITOR EXECUTION

- Continuous

MONITOR EXECUTION CONDITIONS (OTHER MONITOR AND SENSOR)

Other Monitor (There is no temporary DTC stored in memory for the item monitored below)


- P0846: Clutch 2 pressure sensor system (Poor performance)

- P0848: Clutch 2 pressure sensor system (Output high range out)
- P0753: Shift select solenoid 1 system (Open circuit)
- P0973: Shift select solenoid 1 system (Short to ground)
- P0974: Shift select solenoid 1 system (Short to power supply)
- P2809: Clutch/shift switching solenoid 2, spool stuck
- P2812: Clutch/shift switching solenoid 2 system (Open circuit)
- P2814: Clutch/shift switching solenoid 2 system (Short to ground)
- P2815: Clutch/shift switching solenoid 2 system (Short to power supply)
- P181B: Clutch 1 (Pressure low range out)
- P181C: Clutch 1 (Pressure high range out)
- P181E: Clutch 2 (Pressure low range out)
- P181F: Clutch 2 (Pressure high range out)
- P185D: Clutch open not possible

Sensor (The sensor below is determined to be normal)

- Shift select solenoid 1
- Clutch/shift switching solenoid 2

LOGIC FLOW CHARTS (Monitor Sequence)

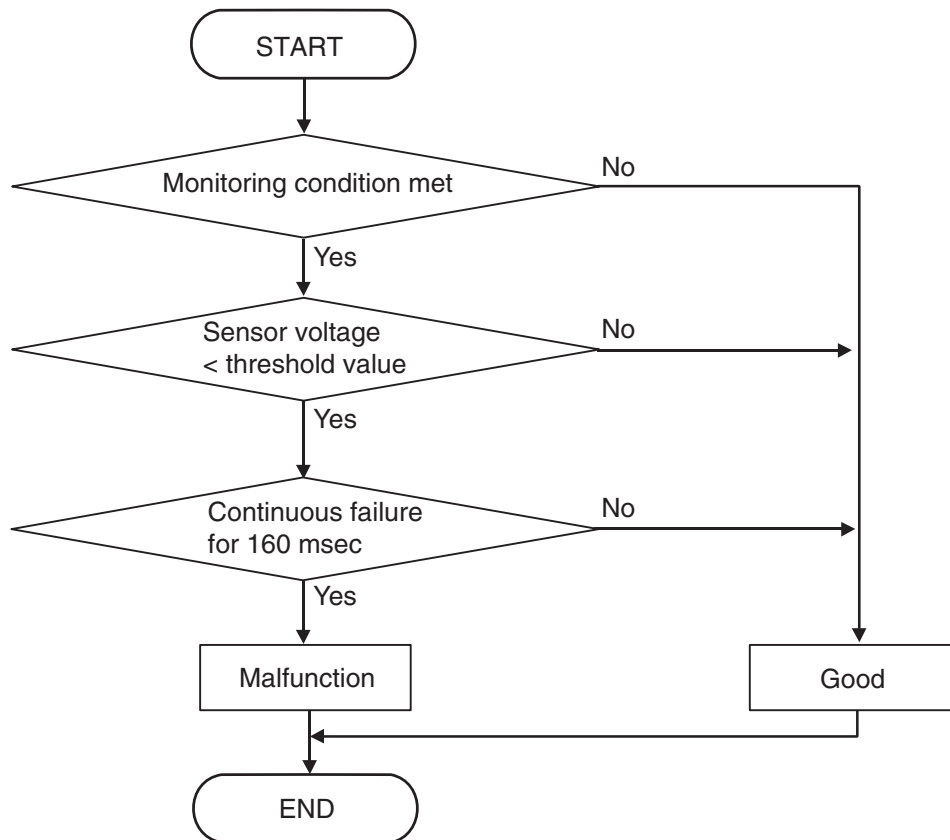

AC710620

DTC SET CONDITIONS

Check Conditions

- Voltage of battery: 8 V or more.
- Voltage of battery: 16.5 V or less.

JUDGMENT CRITERIA

- Sensor voltage: 0.69 V or less. (160 millisecond)

OBD-II DRIVE CYCLE PATTERN

The voltage of the clutch 2 pressure sensor remains 0.69 V or more for 160 milliseconds.

PROBABLE CAUSES

- Malfunction of TC-SST-ECU
- Malfunction of clutch 2 pressure sensor

DIAGNOSTIC PROCEDURE**Required Special Tools:**

- MB991958 Scan Tool (M.U.T.-III Sub Assembly)
 - MB991824: Vehicle Communication Interface (V.C.I.)
 - MB991827 M.U.T.-III USB Cable
 - MB991910 M.U.T.-III Main Harness A

STEP 1. Scan tool CAN bus diagnostics

Using scan tool MB991958, diagnose the CAN bus lines.

Q: Is the check result normal?

YES : Go to Step 2.

NO : Repair the CAN bus lines. (Refer to GROUP 54C – Troubleshooting [P.54C-16.](#)) After repairing the CAN bus line, go to Step 2.

STEP 2. Check whether the DTC is reset.

15 seconds after turning ON the ignition switch, check that the DTC is reset.

Q: Is DTC No. P0847 set?

YES : Replace the mechatronic assembly. (Refer to [P.22C-505.](#))

NO : Intermittent malfunction. (Refer to GROUP 00 –How to Cope with Intermittent Malfunction [P.00-13.](#))

DTC P0848: Clutch 2 Pressure Sensor System (Output high range out)**CAUTION**

- If there is any problem in the CAN bus lines, an incorrect diagnostic trouble code may be set. Prior to this diagnosis, diagnose the CAN bus lines.
- Whenever the ECU is replaced, ensure that the CAN bus lines are normal.

DIAGNOSTIC FUNCTION

TC-SST-ECU checks that the clutch 2 pressure sensor is normal.

DESCRIPTIONS OF MONITOR METHODS

The output of the clutch 2 pressure sensor is too high.

MONITOR EXECUTION

- Continuous

MONITOR EXECUTION CONDITIONS (OTHER MONITOR AND SENSOR)


Other Monitor (There is no temporary DTC stored in memory for the item monitored below)

- P0846: Clutch 2 pressure sensor system (Poor performance)
- P0847: Clutch 2 pressure sensor system (Output low range out)
- P0753: Shift select solenoid 1 system (Open circuit)
- P0973: Shift select solenoid 1 system (Short to ground)
- P0974: Shift select solenoid 1 system (Short to power supply)
- P2809: Clutch/shift switching solenoid 2, spool stuck
- P2812: Clutch/shift switching solenoid 2 system (Open circuit)
- P2814: Clutch/shift switching solenoid 2 system (Short to ground)
- P2815: Clutch/shift switching solenoid 2 system (Short to power supply)
- P181B: Clutch 1 (Pressure low range out)
- P181C: Clutch 1 (Pressure high range out)
- P181E: Clutch 2 (Pressure low range out)
- P181F: Clutch 2 (Pressure high range out)
- P185D: Clutch open not possible

Sensor (The sensor below is determined to be normal)

- Shift select solenoid 1
- Clutch/shift switching solenoid 2

LOGIC FLOW CHARTS (Monitor Sequence)

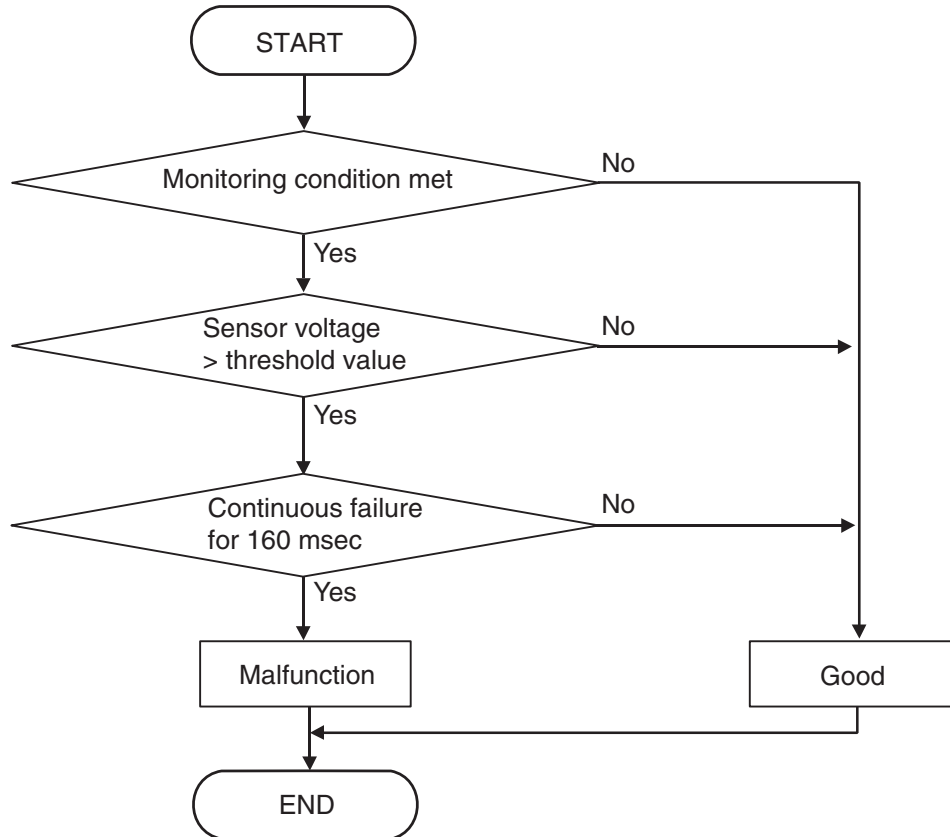

AC710621

DTC SET CONDITIONS

Check Conditions

- Voltage of battery: 8 V or more.
- Voltage of battery: 16.5 V or less.

JUDGMENT CRITERIA

- Sensor voltage: 2.66 V or more. (160 millisecond)

OBD-II DRIVE CYCLE PATTERN

The voltage of the clutch 2 pressure sensor remains 2.66 V or less for 160 milliseconds.

PROBABLE CAUSES

- Malfunction of TC-SST-ECU
- Malfunction of clutch 2 pressure sensor

DIAGNOSTIC PROCEDURE

Required Special Tools:

- MB991958 Scan Tool (M.U.T.-III Sub Assembly)
 - MB991824: Vehicle Communication Interface (V.C.I.)
 - MB991827 M.U.T.-III USB Cable
 - MB991910 M.U.T.-III Main Harness A

STEP 1. Scan tool CAN bus diagnostics

Using scan tool MB991958, diagnose the CAN bus lines.

Q: Is the check result normal?

YES : Go to Step 2.

NO : Repair the CAN bus lines. (Refer to GROUP 54C – Troubleshooting [P.54C-16.](#)) After repairing the CAN bus line, go to Step 2.

STEP 2. Check whether the DTC is reset.

15 seconds after turning ON the ignition switch, check that the DTC is reset.

Q: Is DTC No. P0848 set?

YES : Replace the mechatronic assembly. (Refer to [P.22C-505.](#))

NO : Intermittent malfunction. (Refer to GROUP 00 –How to Cope with Intermittent Malfunction [P.00-13.](#))

DTC P0960: Line Pressure Solenoid System (Open circuit)**⚠ CAUTION**

- If there is any problem in the CAN bus lines, an incorrect diagnostic trouble code may be set. Prior to this diagnosis, diagnose the CAN bus lines.
- Whenever the ECU is replaced, ensure that the CAN bus lines are normal.

DIAGNOSTIC FUNCTION

TC-SST-ECU checks that the line pressure solenoid circuit is normal.

DESCRIPTIONS OF MONITOR METHODS

The line pressure solenoid circuit is determined to be open.

MONITOR EXECUTION

- Continuous

**MONITOR EXECUTION CONDITIONS
(OTHER MONITOR AND SENSOR)**


Other Monitor (There is no temporary DTC stored in memory for the item monitored below)

- P0746: Line pressure solenoid system (Drive current range out)
- P0961: Line pressure solenoid system (Overvoltage)
- P0962: Line pressure solenoid system (Short to ground)
- P0963: Line pressure solenoid system (Short to power supply)

Sensor (The sensor below is determined to be normal)

- Not applicable

LOGIC FLOW CHARTS (Monitor Sequence)

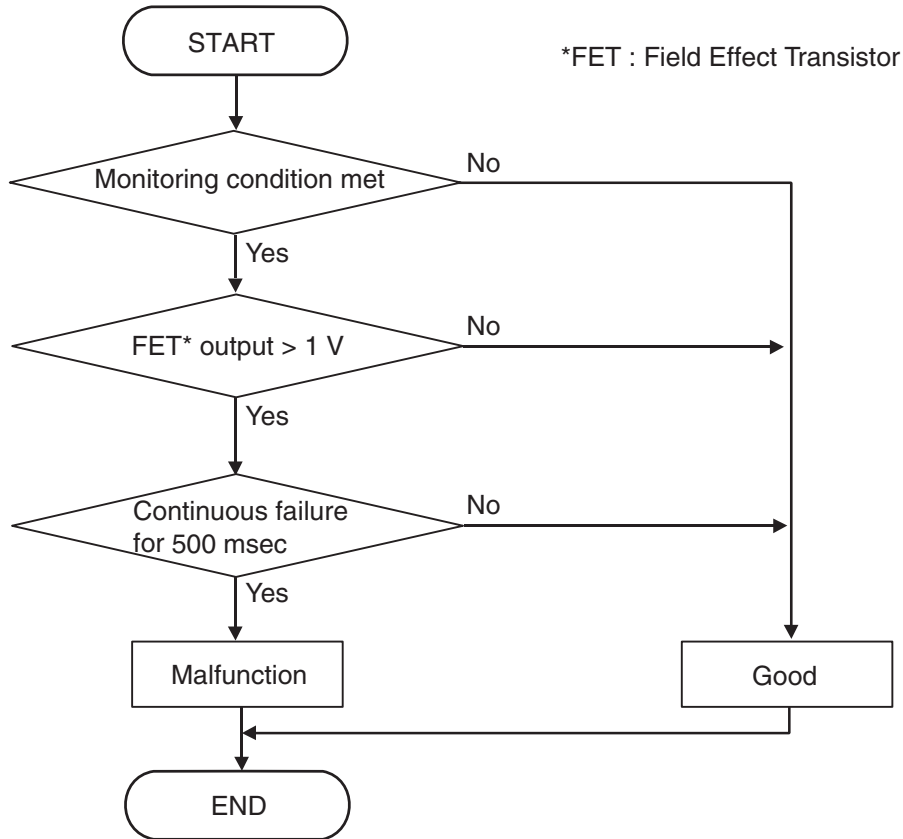

AC710629AB

DTC SET CONDITIONS

Check Conditions

- Voltage of battery: 8 V or more.
- Voltage of battery: 16.5 V or less.

JUDGMENT CRITERIA

- FET (Field Effect Transistor) output: 1 V or more. (500 millisecond)

OBD-II DRIVE CYCLE PATTERN

The FET channel output remains 1 V or less for 500 millisecond.

PROBABLE CAUSES

- Malfunction of TC-SST-ECU
- Malfunction of line pressure solenoid

DIAGNOSTIC PROCEDURE

Required Special Tools:

- MB991958 Scan Tool (M.U.T.-III Sub Assembly)
 - MB991824: Vehicle Communication Interface (V.C.I.)
 - MB991827 M.U.T.-III USB Cable
 - MB991910 M.U.T.-III Main Harness A

STEP 1. Scan tool CAN bus diagnostics

Using scan tool MB991958, diagnose the CAN bus lines.

Q: Is the check result normal?

YES : Go to Step 2.

NO : Repair the CAN bus lines. (Refer to GROUP 54C – Troubleshooting P.54C-16.) After repairing the CAN bus line, go to Step 2.

STEP 2. Check whether the DTC is reset.

15 seconds after turning ON the ignition switch, check that the DTC is reset.

Q: Is DTC No. P0960 set?

YES : Replace the mechatronic assembly. (Refer to [P.22C-505.](#))

NO : Intermittent malfunction. (Refer to GROUP 00 –How to Cope with Intermittent Malfunction [P.00-13.](#))

DTC P0961: Line Pressure Solenoid System (Overcurrent)**⚠ CAUTION**

- If there is any problem in the CAN bus lines, an incorrect diagnostic trouble code may be set. Prior to this diagnosis, diagnose the CAN bus lines.
- Whenever the ECU is replaced, ensure that the CAN bus lines are normal.

DIAGNOSTIC FUNCTION

TC-SST-ECU checks that the line pressure solenoid circuit is normal.

DESCRIPTIONS OF MONITOR METHODS

The supply current to the line pressure solenoid is determined to be overcurrent.

MONITOR EXECUTION

- Continuous

**MONITOR EXECUTION CONDITIONS
(OTHER MONITOR AND SENSOR)**


Other Monitor (There is no temporary DTC stored in memory for the item monitored below)

- P0746: Line pressure solenoid system (Drive current range out)
- P0960: Line pressure solenoid system (Open circuit)
- P0962: Line pressure solenoid system (Short to ground)
- P0963: Line pressure solenoid system (Short to power supply)

Sensor (The sensor below is determined to be normal)

- Not applicable

LOGIC FLOW CHARTS (Monitor Sequence)

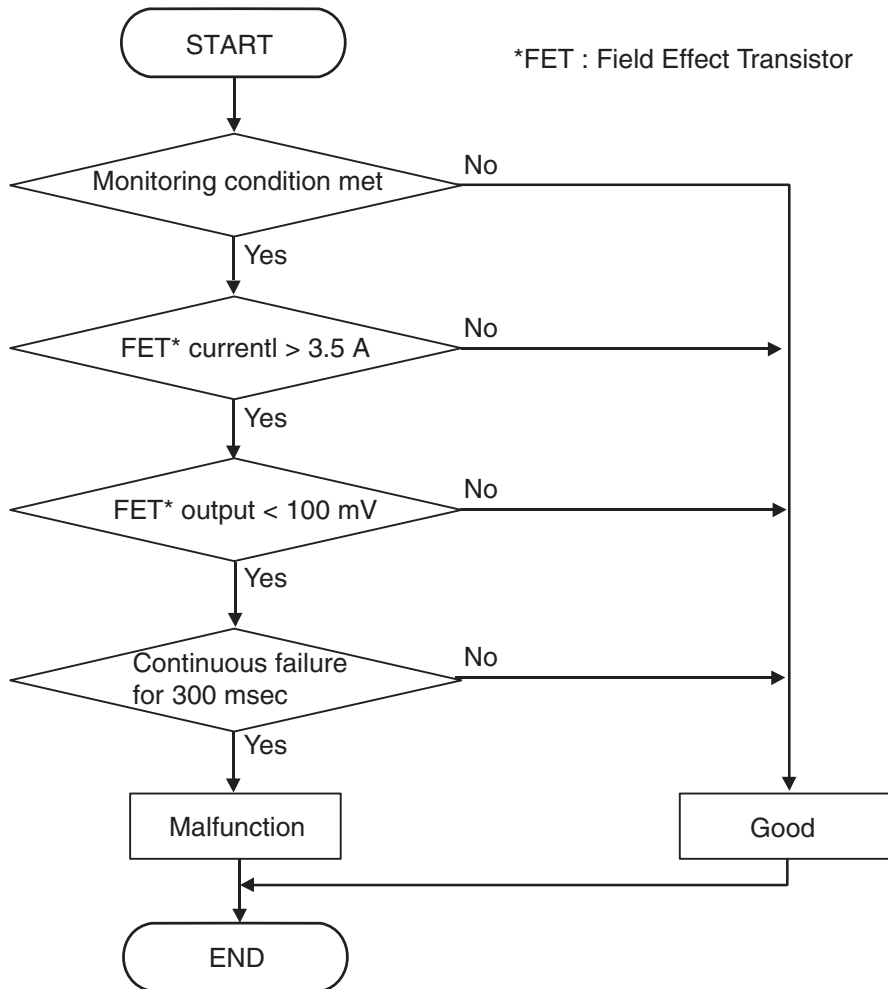

AC710630AB

DTC SET CONDITIONS

Check Conditions

- Voltage of battery: 8 V or more.
- Voltage of battery: 16.5 V or less.

JUDGMENT CRITERIA

- FET (Field Effect Transistor) current: 3.5 A or more, and FET (Field Effect Transistor) output: 100 mV or less (300 millisecond).

OBD-II DRIVE CYCLE PATTERN

The current of the FET channel shunt is 3.5 A or less, and the FET channel output is 100 mV or more for 300 millisecond.

PROBABLE CAUSES

- Malfunction of TC-SST-ECU
- Malfunction of line pressure solenoid

DIAGNOSTIC PROCEDURE

Required Special Tools:

- MB991958 Scan Tool (M.U.T.-III Sub Assembly)
 - MB991824: Vehicle Communication Interface (V.C.I.)
 - MB991827 M.U.T.-III USB Cable
 - MB991910 M.U.T.-III Main Harness A

STEP 1. Scan tool CAN bus diagnostics

Using scan tool MB991958, diagnose the CAN bus lines.

Q: Is the check result normal?

YES : Go to Step 2.

NO : Repair the CAN bus lines. (Refer to GROUP 54C – Troubleshooting [P.54C-16.](#)) After repairing the CAN bus line, go to Step 2.

STEP 2. Check whether the DTC is reset.

After 5 or more seconds have passed with the ignition switch ON position, check that the DTC is reset.

Q: Is DTC No. P0961 set?

YES : Replace the mechatronic assembly. (Refer to [P.22C-505.](#))

NO : Intermittent malfunction. (Refer to GROUP 00 –How to Cope with Intermittent Malfunction [P.00-13.](#))

DTC P0962: Line Pressure Solenoid System (Short to ground)**⚠ CAUTION**

- If there is any problem in the CAN bus lines, an incorrect diagnostic trouble code may be set. Prior to this diagnosis, diagnose the CAN bus lines.
- Whenever the ECU is replaced, ensure that the CAN bus lines are normal.

DIAGNOSTIC FUNCTION

TC-SST-ECU checks that the line pressure solenoid circuit is normal.

DESCRIPTIONS OF MONITOR METHODS

The line pressure solenoid circuit is determined to be short to ground.

MONITOR EXECUTION

- Continuous

**MONITOR EXECUTION CONDITIONS
(OTHER MONITOR AND SENSOR)**


Other Monitor (There is no temporary DTC stored in memory for the item monitored below)

- P0746: Line pressure solenoid system (Drive current range out)
- P0960: Line pressure solenoid system (Open circuit)
- P0961: Line pressure solenoid system (Overvoltage)
- P0963: Line pressure solenoid system (Short to power supply)

Sensor (The sensor below is determined to be normal)

- Not applicable

LOGIC FLOW CHARTS (Monitor Sequence)

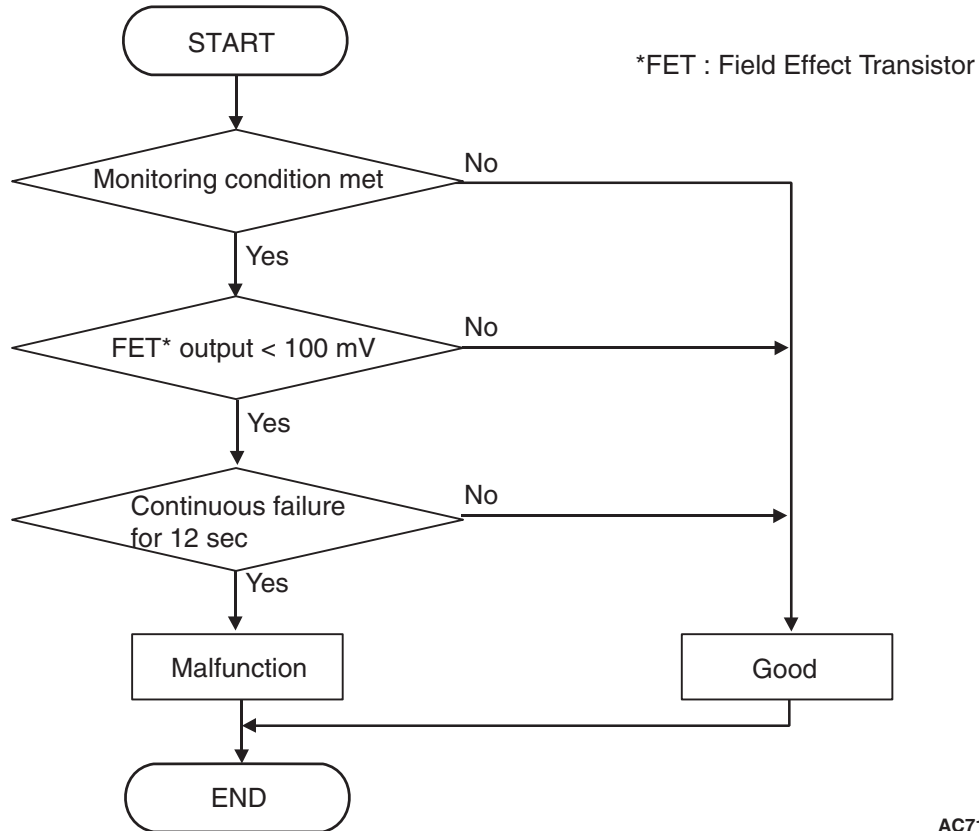

AC710631

DTC SET CONDITIONS

Check Conditions

- Voltage of battery: 8 V or more.
- Voltage of battery: 16.5 V or less.

JUDGMENT CRITERIA

- FET (Field Effect Transistor) output: 100 mV or less. (12 seconds)

OBD-II DRIVE CYCLE PATTERN

The FET channel output remains 100 mV or more for 12 seconds.

PROBABLE CAUSES

- Malfunction of TC-SST-ECU
- Malfunction of line pressure solenoid

DIAGNOSTIC PROCEDURE

Required Special Tools:

- MB991958 Scan Tool (M.U.T.-III Sub Assembly)
 - MB991824: Vehicle Communication Interface (V.C.I.)
 - MB991827 M.U.T.-III USB Cable
 - MB991910 M.U.T.-III Main Harness A

STEP 1. Scan tool CAN bus diagnostics

Using scan tool MB991958, diagnose the CAN bus lines.

Q: Is the check result normal?

YES : Go to Step 2.

NO : Repair the CAN bus lines. (Refer to GROUP 54C – Troubleshooting P.54C-16.) After repairing the CAN bus line, go to Step 2.

STEP 2. Check whether the DTC is reset.**Q: Is DTC No. P0962 set?**

YES : Replace the mechatronic assembly. (Refer to [P.22C-505.](#))

NO : Intermittent malfunction. (Refer to GROUP 00 –How to Cope with Intermittent Malfunction [P.00-13.](#))

DTC P0963: Line Pressure Solenoid System (Short to power supply)

⚠ CAUTION

- If there is any problem in the CAN bus lines, an incorrect diagnostic trouble code may be set. Prior to this diagnosis, diagnose the CAN bus lines.
- Whenever the ECU is replaced, ensure that the CAN bus lines are normal.

DIAGNOSTIC FUNCTION

TC-SST-ECU checks that the line pressure solenoid circuit is normal.

DESCRIPTIONS OF MONITOR METHODS

The line pressure solenoid circuit is determined to be short to power supply.

MONITOR EXECUTION

- Continuous

**MONITOR EXECUTION CONDITIONS
(OTHER MONITOR AND SENSOR)**


Other Monitor (There is no temporary DTC stored in memory for the item monitored below)

- P0746: Line pressure solenoid system (Drive current range out)
- P0960: Line pressure solenoid system (Open circuit)
- P0961: Line pressure solenoid system (Overvoltage)
- P0962: Line pressure solenoid system (Short to ground)

Sensor (The sensor below is determined to be normal)

- Not applicable

LOGIC FLOW CHARTS (Monitor Sequence)

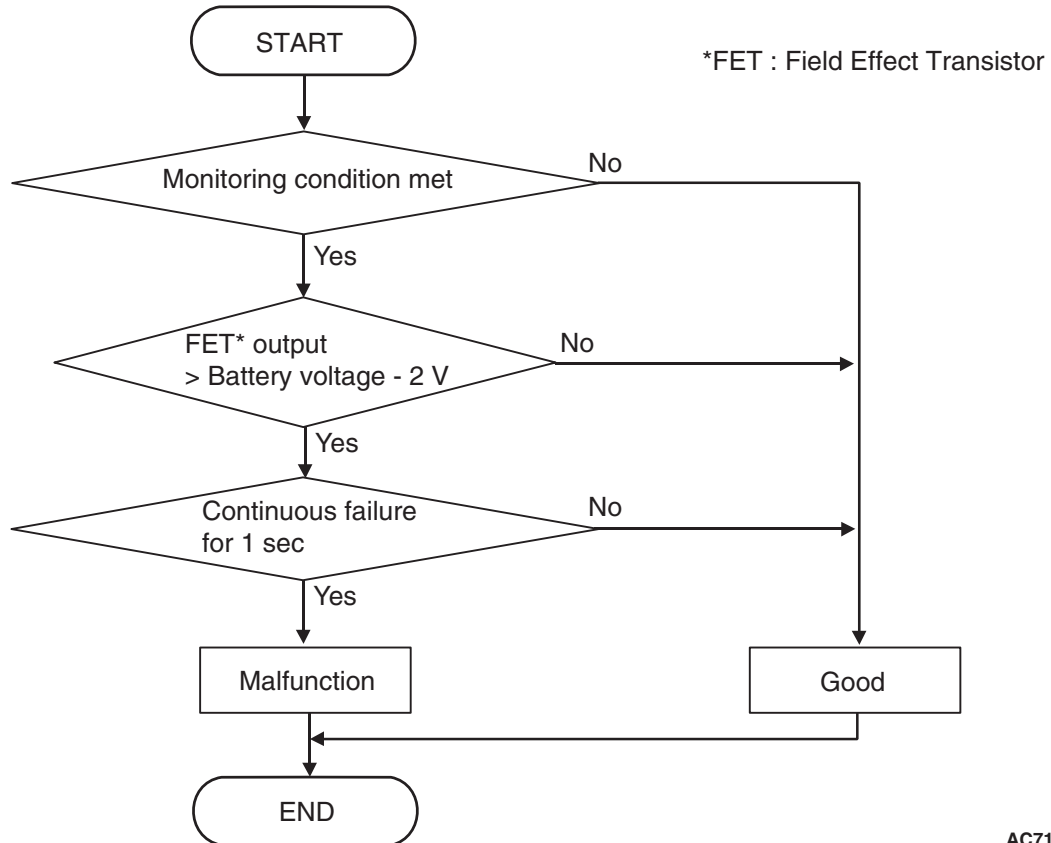

AC710632

DTC SET CONDITIONS

Check Conditions

- Voltage of battery: 8 V or more.
- Voltage of battery: 16.5 V or less.
- Line pressure solenoid: OFF.

JUDGMENT CRITERIA

- FET (Field Effect Transistor) output: (Battery voltage -2 V) or more. (1 second)

OBD-II DRIVE CYCLE PATTERN

The FET channel output remains (Battery voltage -2 V) or less for 1 second.

PROBABLE CAUSES

- Malfunction of TC-SST-ECU
- Malfunction of line pressure solenoid

DIAGNOSTIC PROCEDURE

Required Special Tools:

- MB991958 Scan Tool (M.U.T.-III Sub Assembly)
 - MB991824: Vehicle Communication Interface (V.C.I.)
 - MB991827 M.U.T.-III USB Cable
 - MB991910 M.U.T.-III Main Harness A

STEP 1. Scan tool CAN bus diagnostics

Using scan tool MB991958, diagnose the CAN bus lines.

Q: Is the check result normal?

YES : Go to Step 2.

NO : Repair the CAN bus lines. (Refer to GROUP 54C – Troubleshooting P.54C-16.) After repairing the CAN bus line, go to Step 2.

STEP 2. Check whether the DTC is reset.

After 5 or more seconds have passed with the ignition switch ON position, check that the DTC is reset.

Q: Is DTC No. P0963 set?

YES : Replace the mechatronic assembly. (Refer to [P.22C-505.](#))

NO : Intermittent malfunction. (Refer to GROUP 00 –How to Cope with Intermittent Malfunction [P.00-13.](#))

DTC P0964: Clutch Cooling Flow Solenoid System (Open circuit)**⚠ CAUTION**

- If there is any problem in the CAN bus lines, an incorrect diagnostic trouble code may be set. Prior to this diagnosis, diagnose the CAN bus lines.
- Whenever the ECU is replaced, ensure that the CAN bus lines are normal.

DIAGNOSTIC FUNCTION

TC-SST-ECU checks that the clutch cooling flow solenoid circuit is normal.

DESCRIPTIONS OF MONITOR METHODS

The clutch cooling flow solenoid circuit is determined to be open.

MONITOR EXECUTION

- Continuous

**MONITOR EXECUTION CONDITIONS
(OTHER MONITOR AND SENSOR)**


Other Monitor (There is no temporary DTC stored in memory for the item monitored below)

- P0776: Clutch cooling flow solenoid system (Drive current range out)
- P0777: Clutch cooling flow solenoid system (Stuck)
- P0965: Clutch cooling flow solenoid system (Overvoltage)
- P0966: Clutch cooling flow solenoid system (Short to ground)
- P0967: Clutch cooling flow solenoid system (Short to power supply)

Sensor (The sensor below is determined to be normal)

- Not applicable

LOGIC FLOW CHARTS (Monitor Sequence)

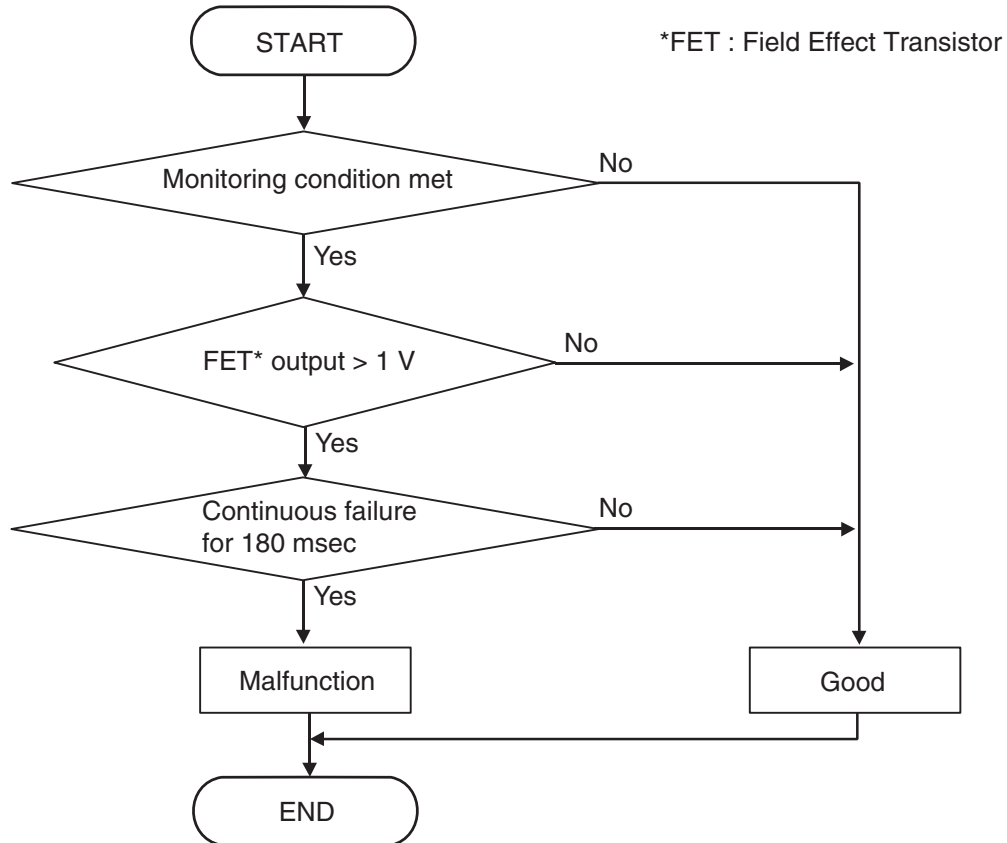

AC710636

DTC SET CONDITIONS

Check Conditions

- Voltage of battery: 8 V or more.
- Voltage of battery: 16.5 V or less.

JUDGMENT CRITERIA

- FET (Field Effect Transistor) output: 1 V or more. (180 millisecond)

OBD-II DRIVE CYCLE PATTERN

The FET channel output remains 1 V or less for 180 milliseconds.

PROBABLE CAUSES

- Malfunction of TC-SST-ECU
- Malfunction of clutch cooling flow solenoid

DIAGNOSTIC PROCEDURE

Required Special Tools:

- MB991958 Scan Tool (M.U.T.-III Sub Assembly)
 - MB991824: Vehicle Communication Interface (V.C.I.)
 - MB991827 M.U.T.-III USB Cable
 - MB991910 M.U.T.-III Main Harness A

STEP 1. Scan tool CAN bus diagnostics

Using scan tool MB991958, diagnose the CAN bus lines.

Q: Is the check result normal?

YES : Go to Step 2.

NO : Repair the CAN bus lines. (Refer to GROUP 54C – Troubleshooting P.54C-16.) After repairing the CAN bus line, go to Step 2.

STEP 2. Check whether the DTC is reset.**Q: Is DTC No. P0964 set?**

YES : Replace the mechatronic assembly. (Refer to [P.22C-505.](#))

NO : Intermittent malfunction. (Refer to GROUP 00 –How to Cope with Intermittent Malfunction [P.00-13.](#))

DTC P0965: Clutch Cooling Flow Solenoid System (Overcurrent)

⚠ CAUTION

- If there is any problem in the CAN bus lines, an incorrect diagnostic trouble code may be set. Prior to this diagnosis, diagnose the CAN bus lines.
- Whenever the ECU is replaced, ensure that the CAN bus lines are normal.

DIAGNOSTIC FUNCTION

TC-SST-ECU checks that the clutch cooling flow solenoid circuit is normal.

DESCRIPTIONS OF MONITOR METHODS

The supply current to the clutch cooling flow solenoid is determined to be overcurrent.

MONITOR EXECUTION

- Continuous

**MONITOR EXECUTION CONDITIONS
(OTHER MONITOR AND SENSOR)**


Other Monitor (There is no temporary DTC stored in memory for the item monitored below)

- P0776: Clutch cooling flow solenoid system (Drive current range out)
- P0777: Clutch cooling flow solenoid system (Stuck)
- P0964: Clutch cooling flow solenoid system (Open circuit)
- P0966: Clutch cooling flow solenoid system (Short to ground)
- P0967: Clutch cooling flow solenoid system (Short to power supply)

Sensor (The sensor below is determined to be normal)

- Not applicable

LOGIC FLOW CHARTS (Monitor Sequence)

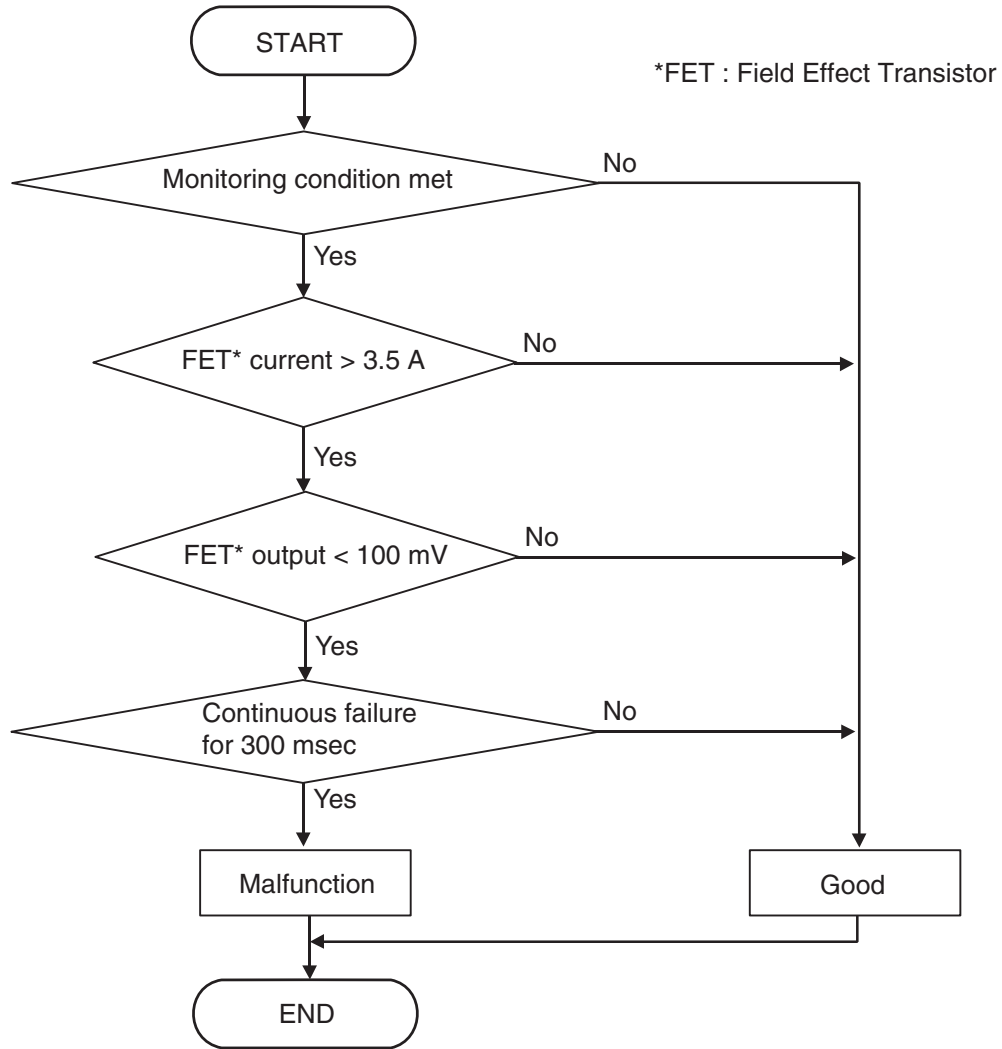

AC710634AB

DTC SET CONDITIONS

Check Conditions

- Voltage of battery: 8 V or more.
- Voltage of battery: 16.5 V or less.

JUDGMENT CRITERIA

- FET (Field Effect Transistor) current: 3.5 A or more, and FET (Field Effect Transistor) output: 100 mV or less (300 millisecond).

OBD-II DRIVE CYCLE PATTERN

The status with the current of the FET channel shunt 3.5 A or less and with the FET channel output 100 mV or more continues for 300 milliseconds.

PROBABLE CAUSES

- Malfunction of TC-SST-ECU
- Malfunction of clutch cooling flow solenoid

DIAGNOSTIC PROCEDURE

Required Special Tools:

- MB991958 Scan Tool (M.U.T.-III Sub Assembly)
 - MB991824: Vehicle Communication Interface (V.C.I.)
 - MB991827 M.U.T.-III USB Cable
 - MB991910 M.U.T.-III Main Harness A

STEP 1. Scan tool CAN bus diagnostics

Using scan tool MB991958, diagnose the CAN bus lines.

Q: Is the check result normal?

YES : Go to Step 2.

NO : Repair the CAN bus lines. (Refer to GROUP 54C – Troubleshooting [P.54C-16.](#)) After repairing the CAN bus line, go to Step 2.

STEP 2. Check whether the DTC is reset.

5 seconds after turning ON the ignition switch, check that the DTC is reset.

Q: Is DTC No. P0965 set?

YES : Replace the mechatronic assembly. (Refer to [P.22C-505.](#))

NO : Intermittent malfunction. (Refer to GROUP 00 –How to Cope with Intermittent Malfunction [P.00-13.](#))

DTC P0966: Clutch Cooling Flow Solenoid System (Short to ground)**⚠ CAUTION**

- If there is any problem in the CAN bus lines, an incorrect diagnostic trouble code may be set. Prior to this diagnosis, diagnose the CAN bus lines.
- Whenever the ECU is replaced, ensure that the CAN bus lines are normal.

DIAGNOSTIC FUNCTION

TC-SST-ECU checks that the clutch cooling flow solenoid circuit is normal.

DESCRIPTIONS OF MONITOR METHODS

The clutch cooling flow solenoid circuit is determined to be short to ground.

MONITOR EXECUTION

- Continuous

**MONITOR EXECUTION CONDITIONS
(OTHER MONITOR AND SENSOR)**


Other Monitor (There is no temporary DTC stored in memory for the item monitored below)

- P0776: Clutch cooling flow solenoid system (Drive current range out)
- P0777: Clutch cooling flow solenoid system (Stuck)
- P0964: Clutch cooling flow solenoid system (Open circuit)
- P0965: Clutch cooling flow solenoid system (Overvoltage)
- P0967: Clutch cooling flow solenoid system (Short to power supply)

Sensor (The sensor below is determined to be normal)

- Not applicable

LOGIC FLOW CHARTS (Monitor Sequence)

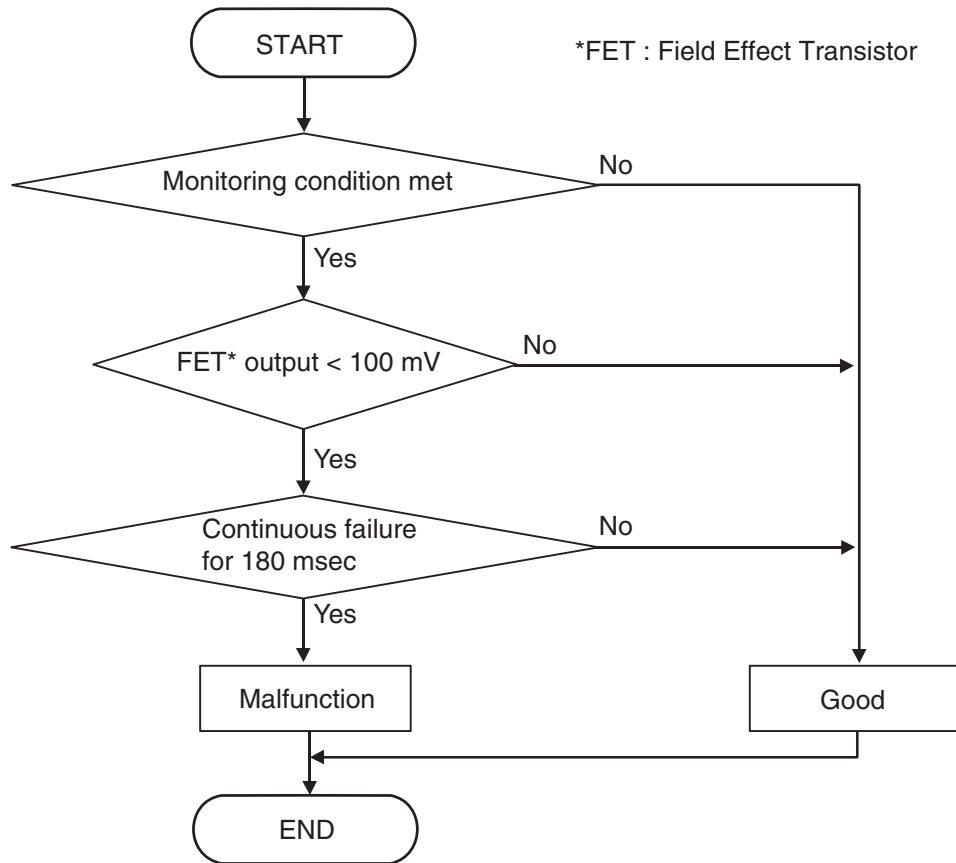

AC710637

DTC SET CONDITIONS

Check Conditions

- Voltage of battery: 8 V or more.
- Voltage of battery: 16.5 V or less.

JUDGMENT CRITERIA

- FET (Field Effect Transistor) output: 100 mV or less. (180 millisecond)

OBD-II DRIVE CYCLE PATTERN

The FET channel output remains 100 mV or more for 180 milliseconds.

PROBABLE CAUSES

- Malfunction of TC-SST-ECU
- Malfunction of clutch cooling flow solenoid

DIAGNOSTIC PROCEDURE

Required Special Tools:

- MB991958 Scan Tool (M.U.T.-III Sub Assembly)
 - MB991824: Vehicle Communication Interface (V.C.I.)
 - MB991827 M.U.T.-III USB Cable
 - MB991910 M.U.T.-III Main Harness A

STEP 1. Scan tool CAN bus diagnostics

Using scan tool MB991958, diagnose the CAN bus lines.

Q: Is the check result normal?

YES : Go to Step 2.

NO : Repair the CAN bus lines. (Refer to GROUP 54C – Troubleshooting P.54C-16.) After repairing the CAN bus line, go to Step 2.

STEP 2. Check whether the DTC is reset.**Q: Is DTC No. P0966 set?**

YES : Replace the mechatronic assembly. (Refer to [P.22C-505.](#))

NO : Intermittent malfunction. (Refer to GROUP 00 –How to Cope with Intermittent Malfunction [P.00-13.](#))

DTC P0967: Clutch Cooling Flow Solenoid System (Short to power supply)

⚠ CAUTION

- If there is any problem in the CAN bus lines, an incorrect diagnostic trouble code may be set. Prior to this diagnosis, diagnose the CAN bus lines.
- Whenever the ECU is replaced, ensure that the CAN bus lines are normal.

DIAGNOSTIC FUNCTION

TC-SST-ECU checks that the clutch cooling flow solenoid circuit is normal.

DESCRIPTIONS OF MONITOR METHODS

The clutch cooling flow solenoid circuit is determined to be short to power supply.

MONITOR EXECUTION

- Continuous

**MONITOR EXECUTION CONDITIONS
(OTHER MONITOR AND SENSOR)**


Other Monitor (There is no temporary DTC stored in memory for the item monitored below)

- P0776: Clutch cooling flow solenoid system (Drive current range out)
- P0777: Clutch cooling flow solenoid system (Stuck)
- P0964: Clutch cooling flow solenoid system (Open circuit)
- P0965: Clutch cooling flow solenoid system (Overvoltage)
- P0966: Clutch cooling flow solenoid system (Short to ground)

Sensor (The sensor below is determined to be normal)

- Not applicable

LOGIC FLOW CHARTS (Monitor Sequence)

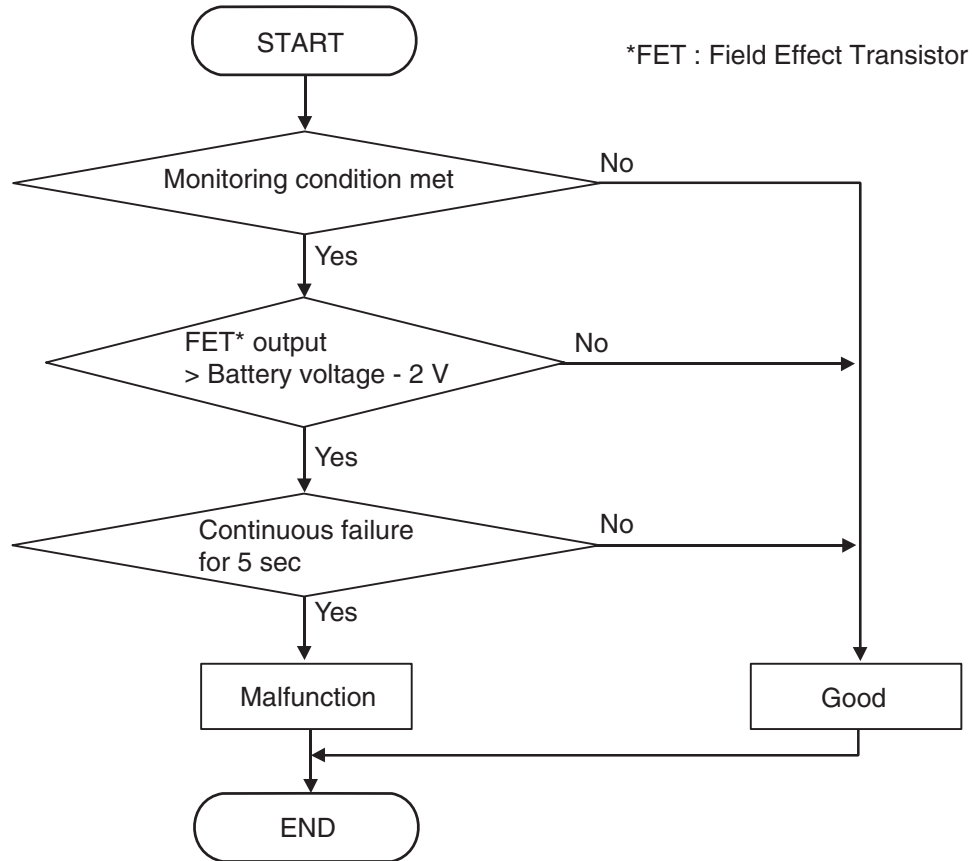

AC710638

DTC SET CONDITIONS

Check Conditions

- Voltage of battery: 8 V or more.
- Voltage of battery: 16.5 V or less.
- Clutch cooling flow solenoid: OFF.

JUDGMENT CRITERIA

- FET (Field Effect Transistor) output: (Battery voltage -2 V) or more. (5 seconds)

OBD-II DRIVE CYCLE PATTERN

The FET channel output remains (Battery voltage -2 V) or less for 5 seconds.

PROBABLE CAUSES

- Malfunction of TC-SST-ECU
- Malfunction of clutch cooling flow solenoid

DIAGNOSTIC PROCEDURE

Required Special Tools:

- MB991958 Scan Tool (M.U.T.-III Sub Assembly)
 - MB991824: Vehicle Communication Interface (V.C.I.)
 - MB991827 M.U.T.-III USB Cable
 - MB991910 M.U.T.-III Main Harness A

STEP 1. Scan tool CAN bus diagnostics

Using scan tool MB991958, diagnose the CAN bus lines.

Q: Is the check result normal?

YES : Go to Step 2.

NO : Repair the CAN bus lines. (Refer to GROUP 54C – Troubleshooting P.54C-16.) After repairing the CAN bus line, go to Step 2.

STEP 2. Check whether the DTC is reset.

After 5 or more seconds have passed with the ignition switch ON position, check that the DTC is reset.

Q: Is DTC No. P0967 set?

YES : Replace the mechatronic assembly. (Refer to [P.22C-505.](#))

NO : Intermittent malfunction. (Refer to GROUP 00 –How to Cope with Intermittent Malfunction [P.00-13.](#))

DTC P0968: Shift/Cooling Switching Solenoid System (Open circuit)**⚠ CAUTION**

- If there is any problem in the CAN bus lines, an incorrect diagnostic trouble code may be set. Prior to this diagnosis, diagnose the CAN bus lines.
- Whenever the ECU is replaced, ensure that the CAN bus lines are normal.

DIAGNOSTIC FUNCTION

TC-SST-ECU checks that the shift/cooling switching solenoid circuit is normal.

DESCRIPTIONS OF MONITOR METHODS

The shift/cooling switching solenoid circuit is determined to be open.

MONITOR EXECUTION

- Continuous

MONITOR EXECUTION CONDITIONS (OTHER MONITOR AND SENSOR)


Other Monitor (There is no temporary DTC stored in memory for the item monitored below)

- P1852: Shift fork 1 or 2 opposite direction movement
- P1855: Shift fork 3 or 4 opposite direction movement

Sensor (The sensor below is determined to be normal)

- Not applicable

LOGIC FLOW CHARTS (Monitor Sequence)

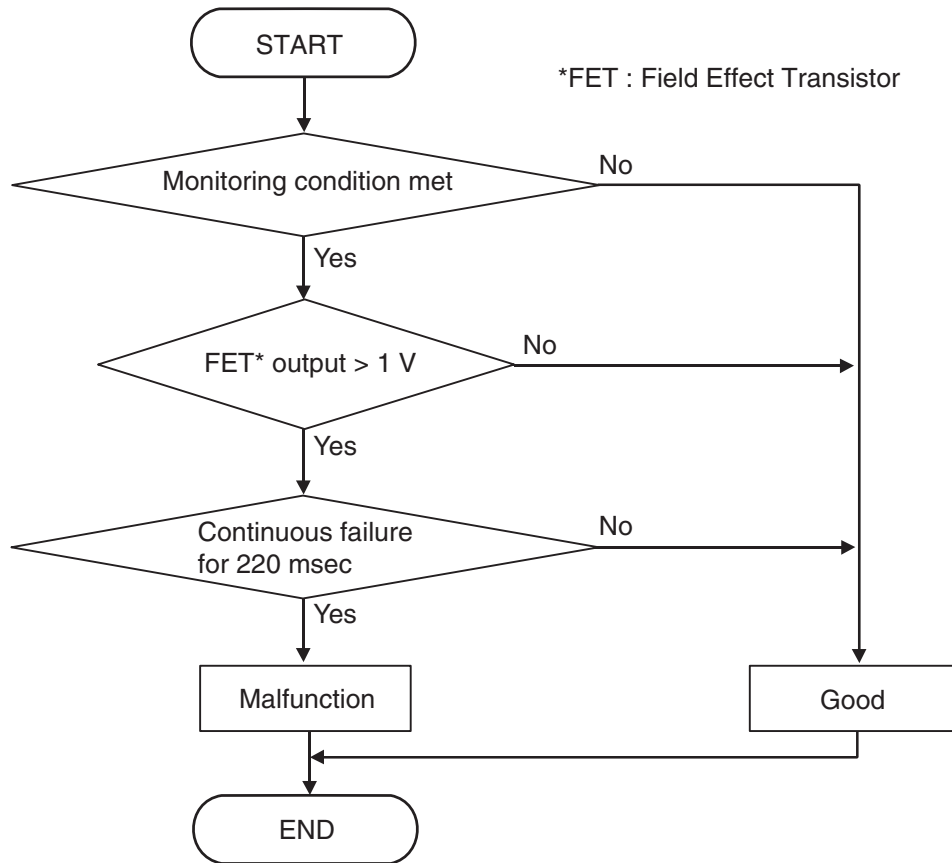

AC710653

DTC SET CONDITIONS

Check Conditions

- Voltage of battery: 8 V or more.
- Voltage of battery: 16.5 V or less.

JUDGMENT CRITERIA

- FET (Field Effect Transistor) output: 1 V or more. (220 millisecond)

OBD-II DRIVE CYCLE PATTERN

The FET channel output remains 1 V or less for 220 milliseconds.

PROBABLE CAUSES

- Malfunction of TC-SST-ECU
- Malfunction of shift/cooling switching solenoid

DIAGNOSTIC PROCEDURE

Required Special Tools:

- MB991958 Scan Tool (M.U.T.-III Sub Assembly)
 - MB991824: Vehicle Communication Interface (V.C.I.)
 - MB991827 M.U.T.-III USB Cable
 - MB991910 M.U.T.-III Main Harness A

STEP 1. Scan tool CAN bus diagnostics

Using scan tool MB991958, diagnose the CAN bus lines.

Q: Is the check result normal?

YES : Go to Step 2.

NO : Repair the CAN bus lines. (Refer to GROUP 54C – Troubleshooting P.54C-16.) After repairing the CAN bus line, go to Step 2.

STEP 2. Check whether the DTC is reset.

15 seconds after turning ON the ignition switch, check that the DTC is reset.

Q: Is DTC No. P0968 set?

YES : Replace the mechatronic assembly. (Refer to [P.22C-505.](#))

NO : Intermittent malfunction. (Refer to GROUP 00 –How to Cope with Intermittent Malfunction [P.00-13.](#))

DTC P0970: Shift/Cooling Switching Solenoid System (Short to ground)**⚠ CAUTION**

- If there is any problem in the CAN bus lines, an incorrect diagnostic trouble code may be set. Prior to this diagnosis, diagnose the CAN bus lines.
- Whenever the ECU is replaced, ensure that the CAN bus lines are normal.

DIAGNOSTIC FUNCTION

TC-SST-ECU checks that the shift/cooling switching solenoid circuit is normal.

DESCRIPTIONS OF MONITOR METHODS

The shift/cooling switching solenoid circuit is determined to be short to ground.

MONITOR EXECUTION

- Continuous

**MONITOR EXECUTION CONDITIONS
(OTHER MONITOR AND SENSOR)**


Other Monitor (There is no temporary DTC stored in memory for the item monitored below)

- P1852: Shift fork 1 or 2 opposite direction movement
- P1855: Shift fork 3 or 4 opposite direction movement

Sensor (The sensor below is determined to be normal)

- Not applicable

LOGIC FLOW CHARTS (Monitor Sequence)

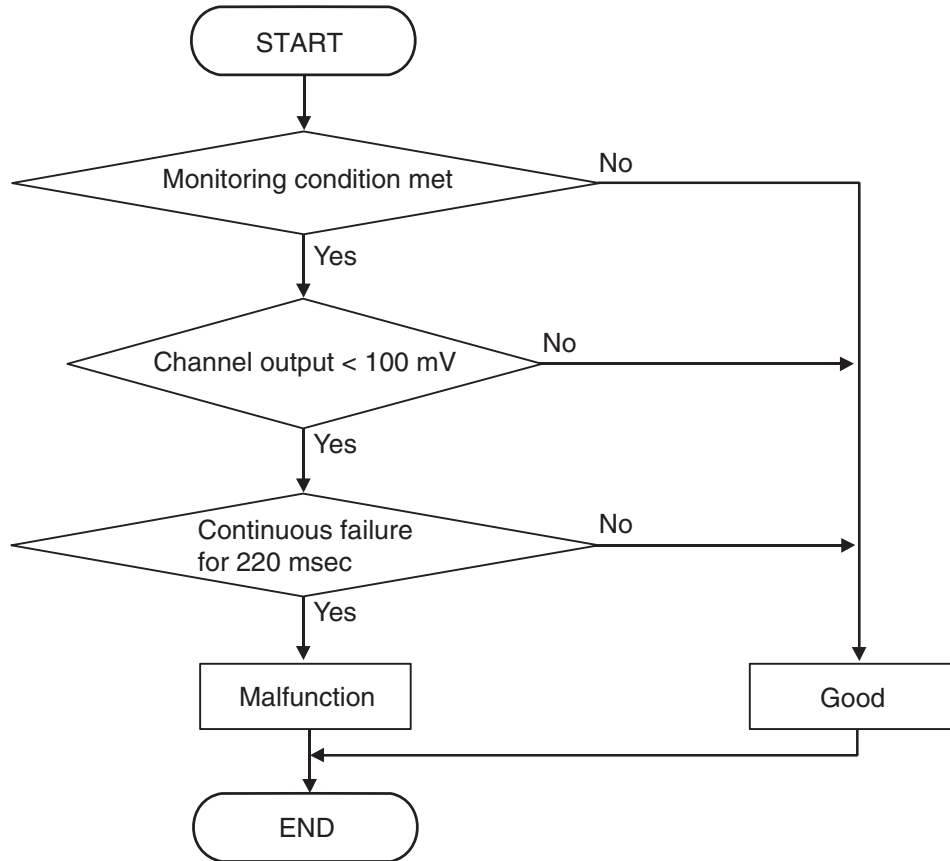

AC710654

DTC SET CONDITIONS

Check Conditions

- Voltage of battery: 8 V or more.
- Voltage of battery: 16.5 V or less.

JUDGMENT CRITERIA

- FET (Field Effect Transistor) output: 100 mV or less. (220 millisecond)

OBD-II DRIVE CYCLE PATTERN

The FET channel output remains 100 mV or more for 220 milliseconds.

PROBABLE CAUSES

- Malfunction of TC-SST-ECU
- Malfunction of shift/cooling switching solenoid

DIAGNOSTIC PROCEDURE

Required Special Tools:

- MB991958 Scan Tool (M.U.T.-III Sub Assembly)
 - MB991824: Vehicle Communication Interface (V.C.I.)
 - MB991827 M.U.T.-III USB Cable
 - MB991910 M.U.T.-III Main Harness A

STEP 1. Scan tool CAN bus diagnostics

Using scan tool MB991958, diagnose the CAN bus lines.

Q: Is the check result normal?

YES : Go to Step 2.

NO : Repair the CAN bus lines. (Refer to GROUP 54C – Troubleshooting P.54C-16.) After repairing the CAN bus line, go to Step 2.

STEP 2. Check whether the DTC is reset.**Q: Is DTC No. P0970 set?**

YES : Replace the mechatronic assembly. (Refer to [P.22C-505.](#))

NO : Intermittent malfunction. (Refer to GROUP 00 –How to Cope with Intermittent Malfunction [P.00-13.](#))

DTC P0971: Shift/Cooling Switching Solenoid System (Short to power supply)**⚠ CAUTION**

- If there is any problem in the CAN bus lines, an incorrect diagnostic trouble code may be set. Prior to this diagnosis, diagnose the CAN bus lines.
- Whenever the ECU is replaced, ensure that the CAN bus lines are normal.

DIAGNOSTIC FUNCTION

TC-SST-ECU checks that the shift/cooling switching solenoid circuit is normal.

DESCRIPTIONS OF MONITOR METHODS

The shift/cooling switching solenoid circuit is determined to be short to power supply.

MONITOR EXECUTION

- Continuous

MONITOR EXECUTION CONDITIONS (OTHER MONITOR AND SENSOR)


Other Monitor (There is no temporary DTC stored in memory for the item monitored below)

- P1852: Shift fork 1 or 2 opposite direction movement
- P1855: Shift fork 3 or 4 opposite direction movement

Sensor (The sensor below is determined to be normal)

- Not applicable

LOGIC FLOW CHARTS (Monitor Sequence)

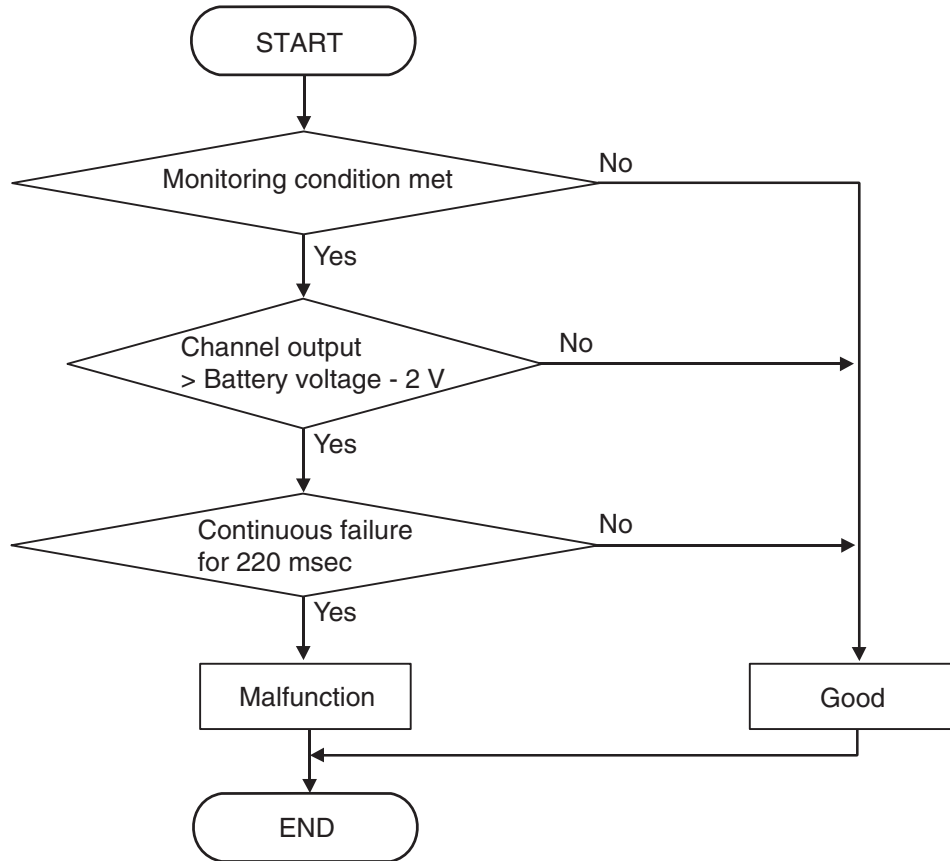

AC710655

DTC SET CONDITIONS

Check Conditions

- Voltage of battery: 8 V or more.
- Voltage of battery: 16.5 V or less.
- Shift/cooling switching solenoid: OFF.

JUDGMENT CRITERIA

- FET (Field Effect Transistor) output: (Battery voltage -2 V) or more. (220 millisecond)

OBD-II DRIVE CYCLE PATTERN

The FET channel output remains (Battery voltage -2 V) or less for 220 milliseconds.

PROBABLE CAUSES

- Malfunction of TC-SST-ECU
- Malfunction of shift/cooling switching solenoid

DIAGNOSTIC PROCEDURE

Required Special Tools:

- MB991958 Scan Tool (M.U.T.-III Sub Assembly)
 - MB991824: Vehicle Communication Interface (V.C.I.)
 - MB991827 M.U.T.-III USB Cable
 - MB991910 M.U.T.-III Main Harness A

STEP 1. Scan tool CAN bus diagnostics

Using scan tool MB991958, diagnose the CAN bus lines.

Q: Is the check result normal?

YES : Go to Step 2.

NO : Repair the CAN bus lines. (Refer to GROUP 54C – Troubleshooting P.54C-16.) After repairing the CAN bus line, go to Step 2.

STEP 2. Check whether the DTC is reset.**Q: Is DTC No. P0971 set?**

YES : Replace the mechatronic assembly. (Refer to [P.22C-505.](#))

NO : Intermittent malfunction. (Refer to GROUP 00 –How to Cope with Intermittent Malfunction [P.00-13.](#))

DTC P0973: Shift Select Solenoid 1 System (Short to ground)

⚠ CAUTION

- If there is any problem in the CAN bus lines, an incorrect diagnostic trouble code may be set. Prior to this diagnosis, diagnose the CAN bus lines.
- Whenever the ECU is replaced, ensure that the CAN bus lines are normal.

DIAGNOSTIC FUNCTION

TC-SST-ECU checks that the shift select solenoid 1 circuit is normal.

DESCRIPTIONS OF MONITOR METHODS

The shift select solenoid 1 circuit is determined to be short to ground.

MONITOR EXECUTION

- Continuous

**MONITOR EXECUTION CONDITIONS
(OTHER MONITOR AND SENSOR)**


Other Monitor (There is no temporary DTC stored in memory for the item monitored below)

- Not applicable

Sensor (The sensor below is determined to be normal)

- Not applicable

LOGIC FLOW CHARTS (Monitor Sequence)

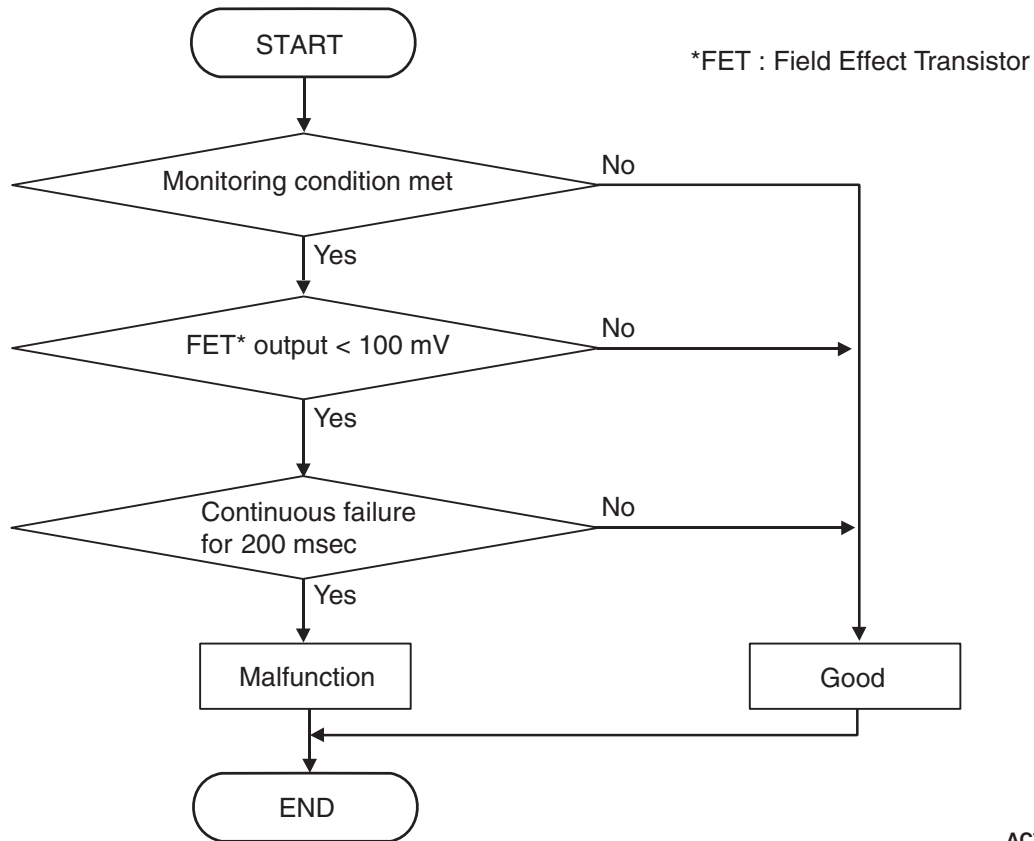

AC710623AB

DTC SET CONDITIONS

Check Conditions

- Voltage of battery: 8 V or more.
- Voltage of battery: 16.5 V or less.

JUDGMENT CRITERIA

- FET (Field Effect Transistor) output: 100 mV or less. (200 millisecond)

OBD-II DRIVE CYCLE PATTERN

The FET channel output remains 100 mV or more for 200 millisecond.

PROBABLE CAUSES

- Malfunction of TC-SST-ECU
- Malfunction of shift select solenoid 1

DIAGNOSTIC PROCEDURE

Required Special Tools:

- MB991958 Scan Tool (M.U.T.-III Sub Assembly)
 - MB991824: Vehicle Communication Interface (V.C.I.)
 - MB991827 M.U.T.-III USB Cable
 - MB991910 M.U.T.-III Main Harness A

STEP 1. Scan tool CAN bus diagnostics

Using scan tool MB991958, diagnose the CAN bus lines.

Q: Is the check result normal?

YES : Go to Step 2.

NO : Repair the CAN bus lines. (Refer to GROUP 54C – Troubleshooting P.54C-16.) After repairing the CAN bus line, go to Step 2.

STEP 2. Check whether the DTC is reset.**Q: Is DTC No. P0973 set?**

YES : Replace the mechatronic assembly. (Refer to [P.22C-505.](#))

NO : Intermittent malfunction. (Refer to GROUP 00 –How to Cope with Intermittent Malfunction [P.00-13.](#))

DTC P0974: Shift Select Solenoid 1 System (Short to power supply)

⚠ CAUTION

- If there is any problem in the CAN bus lines, an incorrect diagnostic trouble code may be set. Prior to this diagnosis, diagnose the CAN bus lines.
- Whenever the ECU is replaced, ensure that the CAN bus lines are normal.

DIAGNOSTIC FUNCTION

TC-SST-ECU checks that the shift select solenoid 1 circuit is normal.

DESCRIPTIONS OF MONITOR METHODS

The shift select solenoid 1 circuit is determined to be short to power supply.

MONITOR EXECUTION

- Continuous

**MONITOR EXECUTION CONDITIONS
(OTHER MONITOR AND SENSOR)**


Other Monitor (There is no temporary DTC stored in memory for the item monitored below)

- Not applicable

Sensor (The sensor below is determined to be normal)

- Not applicable

LOGIC FLOW CHARTS (Monitor Sequence)

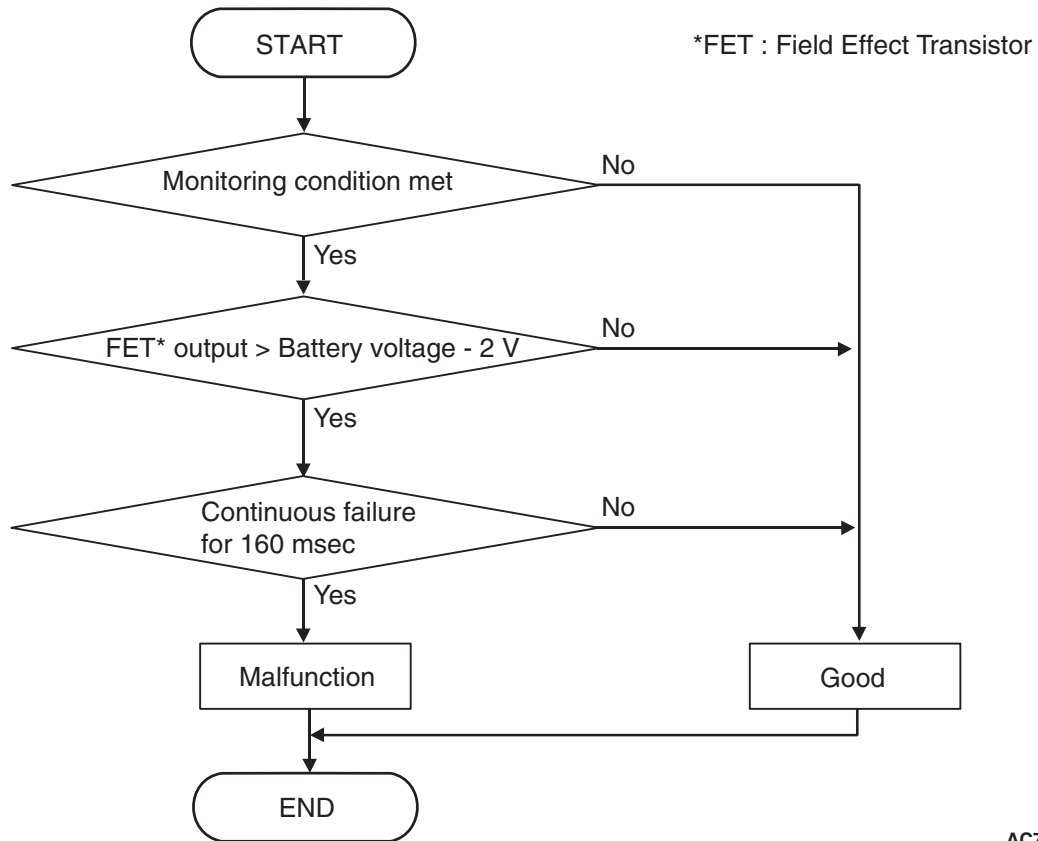

AC710624

DTC SET CONDITIONS

Check Conditions

- Voltage of battery: 8 V or more.
- Voltage of battery: 16.5 V or less.
- Shift select solenoid 1: OFF.

JUDGMENT CRITERIA

- FET (Field Effect Transistor) output: (Battery voltage -2 V) or more. (160 millisecond)

OBD-II DRIVE CYCLE PATTERN

The FET channel output remains (Battery voltage -2 V) or less for 160 milliseconds.

PROBABLE CAUSES

- Malfunction of TC-SST-ECU
- Malfunction of shift select solenoid 1

DIAGNOSTIC PROCEDURE

Required Special Tools:

- MB991958 Scan Tool (M.U.T.-III Sub Assembly)
 - MB991824: Vehicle Communication Interface (V.C.I.)
 - MB991827 M.U.T.-III USB Cable
 - MB991910 M.U.T.-III Main Harness A

STEP 1. Scan tool CAN bus diagnostics

Using scan tool MB991958, diagnose the CAN bus lines.

Q: Is the check result normal?

YES : Go to Step 2.

NO : Repair the CAN bus lines. (Refer to GROUP 54C – Troubleshooting P.54C-16.) After repairing the CAN bus line, go to Step 2.

STEP 2. Check whether the DTC is reset.

After 5 or more seconds have passed with the ignition switch ON position, check that the DTC is reset.

Q: Is DTC No. P0974 set?

YES : Replace the mechatronic assembly. (Refer to [P.22C-505.](#))

NO : Intermittent malfunction. (Refer to GROUP 00 –How to Cope with Intermittent Malfunction [P.00-13.](#))

DTC P0976: Shift Select Solenoid 2 System (Short to ground)**⚠ CAUTION**

- If there is any problem in the CAN bus lines, an incorrect diagnostic trouble code may be set. Prior to this diagnosis, diagnose the CAN bus lines.
- Whenever the ECU is replaced, ensure that the CAN bus lines are normal.

DIAGNOSTIC FUNCTION

TC-SST-ECU checks that the shift select solenoid 2 circuit is normal.

DESCRIPTIONS OF MONITOR METHODS

The shift select solenoid 2 circuit is determined to be short to ground.

MONITOR EXECUTION

- Continuous

**MONITOR EXECUTION CONDITIONS
(OTHER MONITOR AND SENSOR)**


Other Monitor (There is no temporary DTC stored in memory for the item monitored below)

- Not applicable

Sensor (The sensor below is determined to be normal)

- Not applicable

LOGIC FLOW CHARTS (Monitor Sequence)

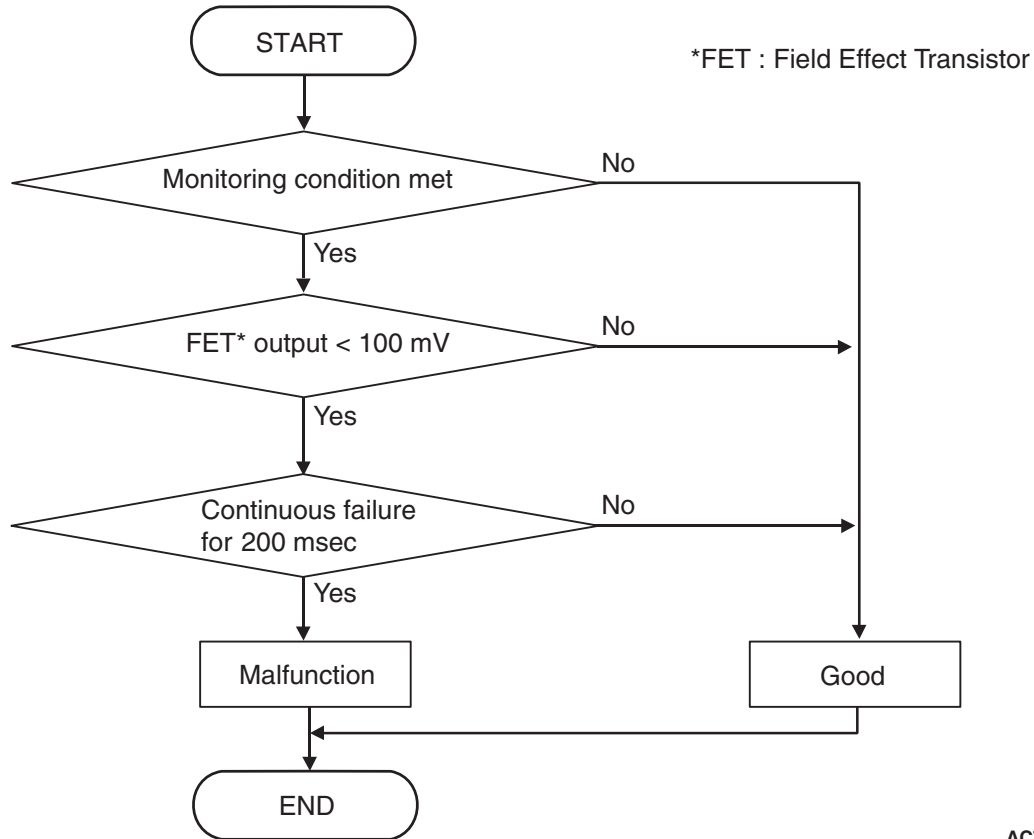

AC710623AB

DTC SET CONDITIONS

Check Conditions

- Voltage of battery: 8 V or more.
- Voltage of battery: 16.5 V or less.

JUDGMENT CRITERIA

- FET (Field Effect Transistor) output: 100 mV or less. (200 millisecond)

OBD-II DRIVE CYCLE PATTERN

The FET channel output remains 100 mV or more for 200 millisecond.

PROBABLE CAUSES

- Malfunction of TC-SST-ECU
- Malfunction of shift select solenoid 2

DIAGNOSTIC PROCEDURE

Required Special Tools:

- MB991958 Scan Tool (M.U.T.-III Sub Assembly)
 - MB991824: Vehicle Communication Interface (V.C.I.)
 - MB991827 M.U.T.-III USB Cable
 - MB991910 M.U.T.-III Main Harness A

STEP 1. Scan tool CAN bus diagnostics

Using scan tool MB991958, diagnose the CAN bus lines.

Q: Is the check result normal?

YES : Go to Step 2.

NO : Repair the CAN bus lines. (Refer to GROUP 54C – Troubleshooting P.54C-16.) After repairing the CAN bus line, go to Step 2.

STEP 2. Check whether the DTC is reset.**Q: Is DTC No. P0976 set?**

YES : Replace the mechatronic assembly. (Refer to [P.22C-505.](#))

NO : Intermittent malfunction. (Refer to GROUP 00 –How to Cope with Intermittent Malfunction [P.00-13.](#))

DTC P0977: Shift Select Solenoid 2 System (Short to power supply)**⚠ CAUTION**

- If there is any problem in the CAN bus lines, an incorrect diagnostic trouble code may be set. Prior to this diagnosis, diagnose the CAN bus lines.
- Whenever the ECU is replaced, ensure that the CAN bus lines are normal.

DIAGNOSTIC FUNCTION

TC-SST-ECU checks that the shift select solenoid 2 circuit is normal.

DESCRIPTIONS OF MONITOR METHODS

The shift select solenoid 2 circuit is determined to be short to power supply.

PROBABLE CAUSES

- Malfunction of TC-SST-ECU
- Malfunction of shift select solenoid 2

DIAGNOSTIC PROCEDURE**Required Special Tools:**

- MB991958 Scan Tool (M.U.T.-III Sub Assembly)
 - MB991824: Vehicle Communication Interface (V.C.I.)
 - MB991827 M.U.T.-III USB Cable
 - MB991910 M.U.T.-III Main Harness A

STEP 1. Scan tool CAN bus diagnostics

Using scan tool MB991958, diagnose the CAN bus lines.

Q: Is the check result normal?

YES : Go to Step 2.

NO : Repair the CAN bus lines. (Refer to GROUP 54C – Troubleshooting [P.54C-16.](#)) After repairing the CAN bus line, go to Step 2.

STEP 2. Check whether the DTC is reset.

15 seconds after turning ON the ignition switch, check that the DTC is reset.

Q: Is DTC No. P0977 set?

YES : Replace the mechatronic assembly. (Refer to [P.22C-505.](#))

NO : Intermittent malfunction. (Refer to GROUP 00 –How to Cope with Intermittent Malfunction [P.00-13.](#))

DTC P1637: EEPROM System (DTC storing malfunction)

⚠ CAUTION

- If there is any problem in the CAN bus lines, an incorrect diagnostic trouble code may be set. Prior to this diagnosis, diagnose the CAN bus lines.
- Whenever the ECU is replaced, ensure that the CAN bus lines are normal.

DIAGNOSTIC FUNCTION

TC-SST-ECU checks that EEPROM in TC-SST-ECU is normal.

DESCRIPTIONS OF MONITOR METHODS

The EEPROM writing data is determined to be abnormal.

MONITOR EXECUTION

- Continuous

MONITOR EXECUTION CONDITIONS (OTHER MONITOR AND SENSOR)


Other Monitor (There is no temporary DTC stored in memory for the item monitored below)

- Not applicable

Sensor (The sensor below is determined to be normal)

- Not applicable

LOGIC FLOW CHARTS (Monitor Sequence)

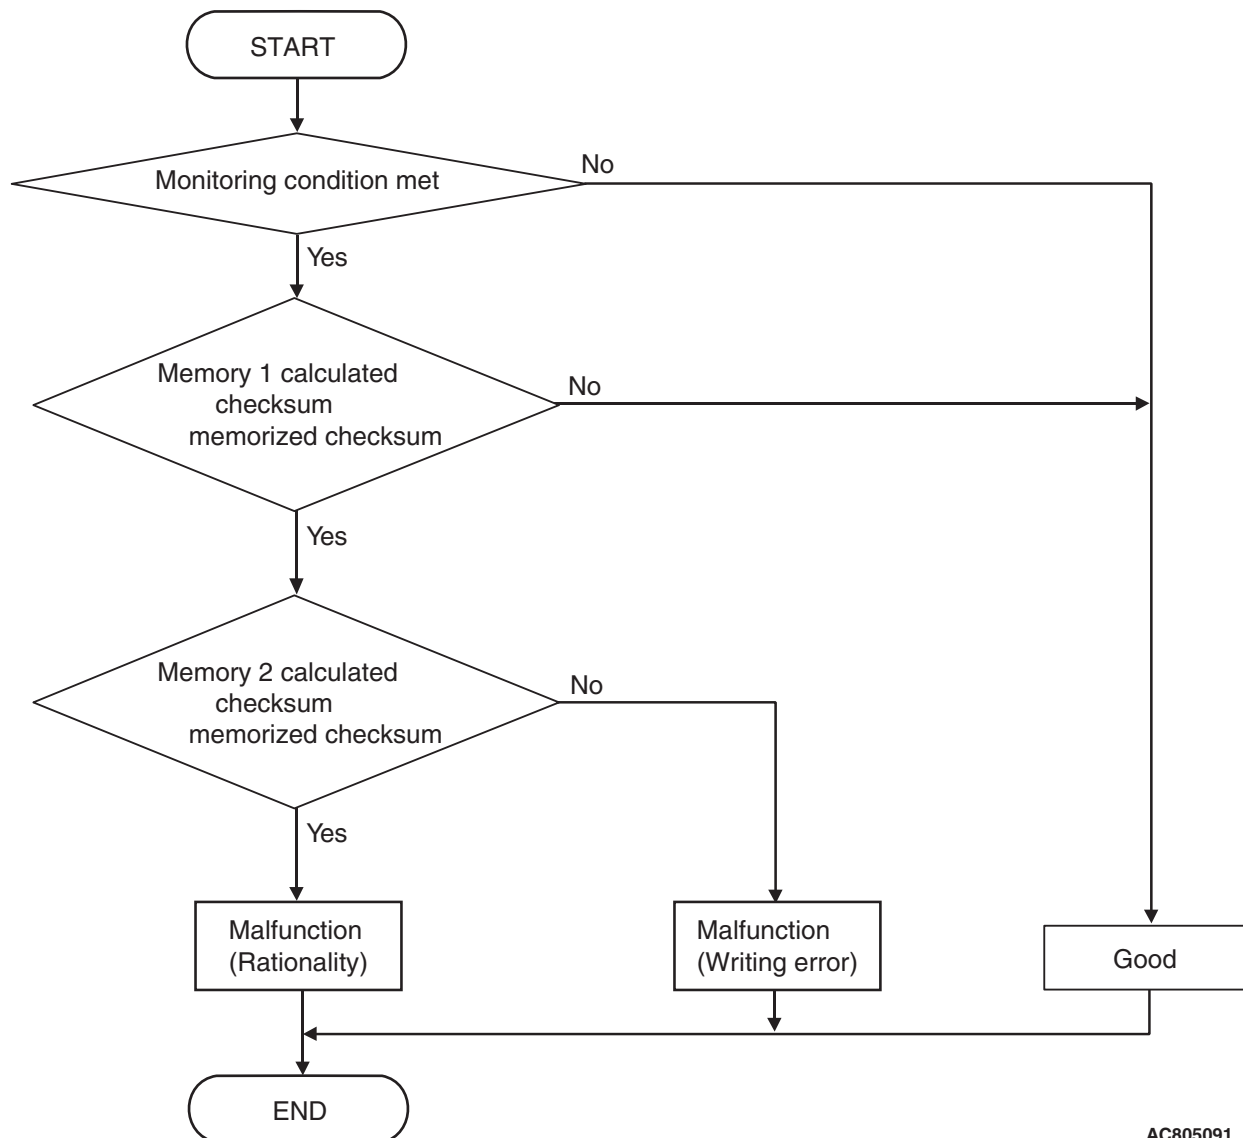

AC805091

DTC SET CONDITIONS**Check Conditions**

- Voltage of battery: 8 V or more.
- Voltage of battery: 16.5 V or less.

JUDGMENT CRITERIA

- Calculated checksum: Not equal the memorized checksum.

OBD-II DRIVE CYCLE PATTERN

The calculated checksum corresponds with the memorized checksum.

PROBABLE CAUSES

- Malfunction of TC-SST-ECU

DIAGNOSTIC PROCEDURE**Required Special Tools:**

- MB991958 Scan Tool (M.U.T.-III Sub Assembly)
 - MB991824: Vehicle Communication Interface (V.C.I.)
 - MB991827 M.U.T.-III USB Cable
 - MB991910 M.U.T.-III Main Harness A

STEP 1. Scan tool CAN bus diagnostics

Using scan tool MB991958, diagnose the CAN bus lines.

Q: Is the check result normal?

YES : Go to Step 2.

NO : Repair the CAN bus lines. (Refer to GROUP 54C – Troubleshooting [P.54C-16.](#)) After repairing the CAN bus line, go to Step 2.

STEP 2. Check whether the DTC is reset.

After 5 or more seconds have passed with the ignition switch ON position, check that the DTC is reset.

Q: Is DTC No. P1637 set?

YES : Replace the mechatronic assembly. (Refer to [P.22C-505.](#))

NO : Intermittent malfunction. (Refer to GROUP 00 –How to Cope with Intermittent Malfunction [P.00-13.](#))

DTC P1676: Coding incomplete**CAUTION**

- If there is any problem in the CAN bus lines, an incorrect diagnostic trouble code may be set. Prior to this diagnosis, diagnose the CAN bus lines.
- Whenever the ECU is replaced, ensure that the CAN bus lines are normal.

DIAGNOSTIC FUNCTION

TC-SST-ECU checks that the coding is normal. (TC-SST-ECU is a local coding.)

DESCRIPTIONS OF MONITOR METHODS

The coding is determined to be abnormal. (This abnormality occurs when the vehicle information has been incorrectly written to TC-SST-ECU at a factory before shipment.)

MONITOR EXECUTION

- Continuous

MONITOR EXECUTION CONDITIONS (OTHER MONITOR AND SENSOR)


Other Monitor (There is no temporary DTC stored in memory for the item monitored below)

- Not applicable

Sensor (The sensor below is determined to be normal)

- Not applicable

LOGIC FLOW CHARTS (Monitor Sequence)

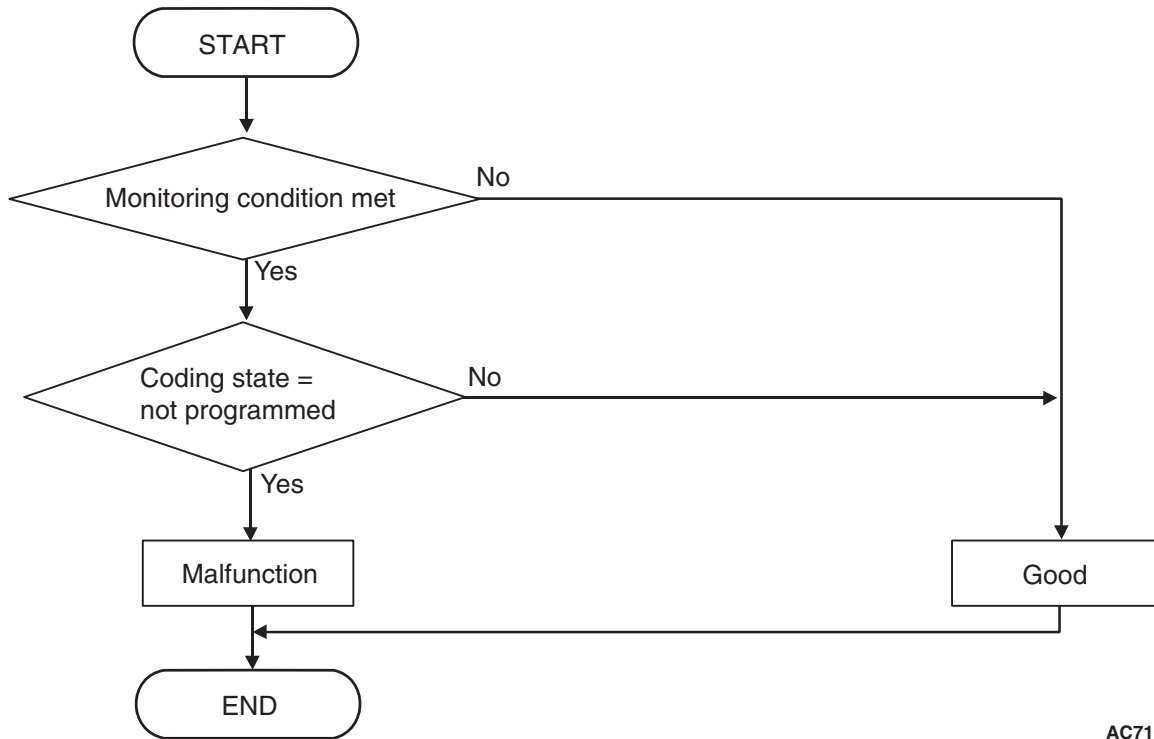

AC710730

DTC SET CONDITIONS

Check Conditions

- Ignition switch: ON

JUDGMENT CRITERIA

- Coding state: Not programmed. (Immediately)

OBD-II DRIVE CYCLE PATTERN

The coding is completed.

PROBABLE CAUSES

- Malfunction of TC-SST-ECU

DIAGNOSTIC PROCEDURE

Required Special Tools:

- MB991958 Scan Tool (M.U.T.-III Sub Assembly)
 - MB991824: Vehicle Communication Interface (V.C.I.)
 - MB991827 M.U.T.-III USB Cable
 - MB991910 M.U.T.-III Main Harness A

STEP 1. Scan tool CAN bus diagnostics

Using scan tool MB991958, diagnose the CAN bus lines.

Q: Is the check result normal?

YES : Go to Step 2.

NO : Repair the CAN bus lines. (Refer to GROUP 54C – Troubleshooting P.54C-16.) After repairing the CAN bus line, go to Step 2.

STEP 2. Check whether the DTC is reset.

After 5 or more seconds have passed with the ignition switch ON position, check that the DTC is reset.

Q: Is DTC No. P1676 set?


YES : Perform coding (Refer to the "Scan tool operation manual" and perform coding.) or Replace the mechatronic assembly (Refer to P.22C-505).

NO : Intermittent malfunction. (Refer to GROUP 00 –How to Cope with Intermittent Malfunction P.00-13.)



DTC P1802: Shift Lever System (LIN communication malfunction)


LIN communication system circuit

NOTE
* : THE TERMINAL NUMBERS DESCRIBED IN THE CIRCUIT DIAGRAM AGREE WITH THE NUMBERS MARKED ON THE TRANSAXLE ASSEMBLY CONNECTOR AND HARNESS SIDE CONNECTOR.

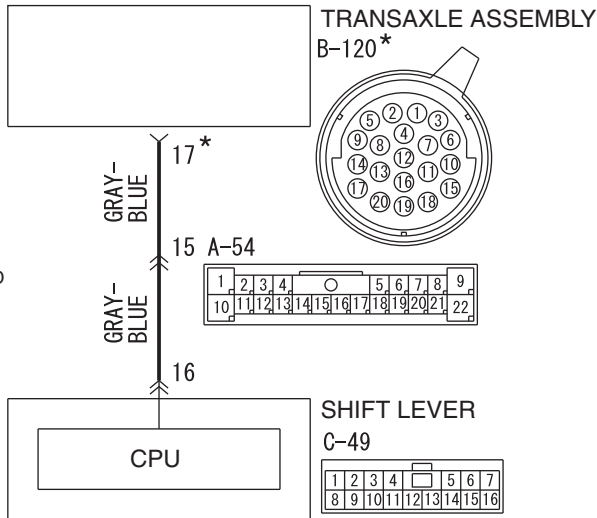

AC803068AB

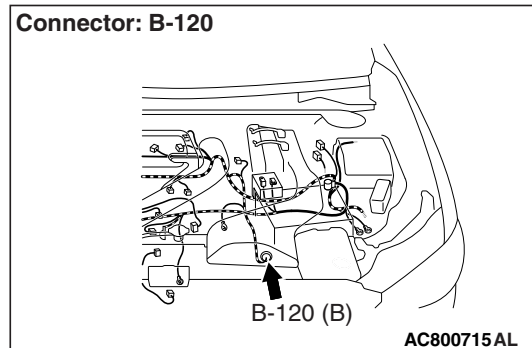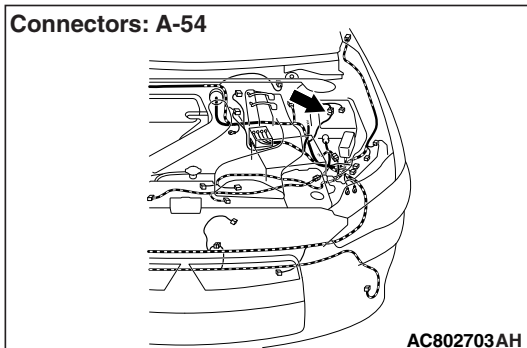

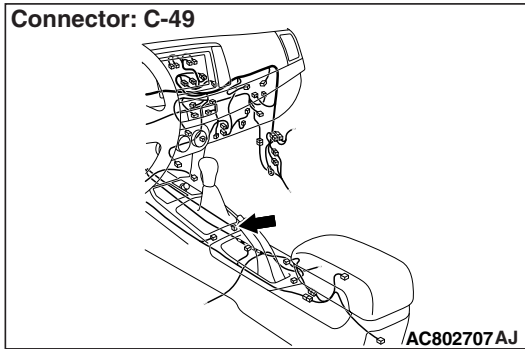

⚠ CAUTION

- If there is any problem in the CAN bus lines, an incorrect diagnostic trouble code may be set. Prior to this diagnosis, diagnose the CAN bus lines.
- Whenever the ECU is replaced, ensure that the CAN bus lines are normal.

DIAGNOSTIC FUNCTION

TC-SST-ECU checks that the CAN back-up communication (LIN) is normal.

DESCRIPTIONS OF MONITOR METHODS

The CAN back-up communication is determined to be abnormal.

PROBABLE CAUSES

- Malfunction of the shift lever-ECU
- Malfunction of the LIN bus
- Malfunction of TC-SST-ECU

DIAGNOSTIC PROCEDURE

Required Special Tools:

- MB991958 Scan Tool (M.U.T.-III Sub Assembly)
 - MB991824: Vehicle Communication Interface (V.C.I.)
 - MB991827 M.U.T.-III USB Cable
 - MB991910 M.U.T.-III Main Harness A

STEP 1. Scan tool CAN bus diagnostics

Using scan tool MB991958, diagnose the CAN bus lines.

Q: Is the check result normal?

YES : Go to Step 2.

NO : Repair the CAN bus lines. (Refer to GROUP 54C – Troubleshooting [P.54C-16.](#)) After repairing the CAN bus line, go to Step 2.

STEP 2. Scan tool diagnostic trouble code

Check the shift lever diagnostic trouble code. (Refer to [P.22C-366.](#))

Q: Is the DTC set?

YES : Perform the relevant troubleshooting.

NO : Go to Step 3.

STEP 3. Inspection of the TC-SST-ECU connector, intermediate connector, and shift lever-ECU connector: B-120, A-54, C-49

Check for the contact with terminals.

Q: Is the check result normal?

YES : Go to Step 4.

NO : Repair the defective connector.

STEP 4. Check the wiring harness between B-120 TC-SST-ECU connector terminal No. 17 and C-49 shift lever-ECU connector terminal No. 16.

Check the communication line for open and short circuit.

Q: Is the check result normal?

YES : Go to Step 5.

NO : Repair the wiring harness.

STEP 5. Check whether the DTC is reset.

10 seconds after turning ON the ignition switch, check that the DTC is reset.

Q: Is DTC No. P1802 set?

YES : Go to Step 6.

NO : This diagnosis is complete.

STEP 6. Replace the shift lever assembly, and check if the diagnostic trouble code is reset.

(1) Replace the shift lever assembly. (Refer to [P.22C-488.](#))

(2) Check the DTC.

(3) After 10 or more seconds have passed with the ignition switch ON position, check that the DTC is reset.

Q: Is DTC No. P1802 set?

YES : Replace the mechatronic assembly. (Refer to [P.22C-505.](#))

NO : Intermittent malfunction. (Refer to GROUP 00 –How to Cope with Intermittent Malfunction [P.00-13.](#))

DTC P1803: Shift Lever System (CAN, LIN Time-out Error)

SHIFT LEVER SYSTEM CIRCUIT

Refer to [P.22C-94.](#)

CAUTION

- If there is any problem in the CAN bus lines, an incorrect diagnostic trouble code may be set. Prior to this diagnosis, diagnose the CAN bus lines.
- Whenever the ECU is replaced, ensure that the CAN bus lines are normal.

DIAGNOSTIC FUNCTION

TC-SST-ECU checks that the communication with the shift lever-ECU (CAN and LIN) is normal.

DESCRIPTIONS OF MONITOR METHODS

The CAN and LIN communication with the shift lever-ECU is determined to be abnormal.

PROBABLE CAUSES

- Malfunction of the shift lever-ECU
- Malfunction of the LIN bus
- The CAN bus line is defective.
- Malfunction of TC-SST-ECU

DIAGNOSTIC PROCEDURE

Required Special Tools:

- MB991958 Scan Tool (M.U.T.-III Sub Assembly)
 - MB991824: Vehicle Communication Interface (V.C.I.)
 - MB991827 M.U.T.-III USB Cable
 - MB991910 M.U.T.-III Main Harness A

STEP 1. Scan tool CAN bus diagnostics

Using scan tool MB991958, diagnose the CAN bus lines.

Q: Is the check result normal?

YES : Go to Step 2.

NO : Repair the CAN bus lines. (Refer to GROUP 54C – Troubleshooting [P.54C-16.](#)) After repairing the CAN bus line, go to Step 2.

STEP 2. Scan tool diagnostic trouble code

Check the shift lever diagnostic trouble code. (Refer to [P.22C-366.](#))

Q: Is the DTC set?

YES : Perform the relevant troubleshooting.

NO : Go to Step 3.

STEP 3. Inspection of the TC-SST-ECU connector, intermediate connector, and shift lever-ECU connector: B-107, A-13, C-27

Check for the contact with terminals.

Q: Is the check result normal?

YES : Go to Step 4.

NO : Repair the defective connector.

STEP 4. Check the wiring harness between B-107 TC-SST-ECU connector terminal No. 17 and C-27 shift lever-ECU connector terminal No. 16.

Check the communication line for open and short circuit.

Q: Is the check result normal?

YES : Go to Step 5.

NO : Repair the wiring harness.

STEP 5. Check whether the DTC is reset.

30 seconds after turning ON the ignition switch, check that the DTC is reset.

Q: Is DTC No. P1803 set?

YES : Replace the shift lever assembly. (Refer to [P.22C-488.](#))

NO : Intermittent malfunction. (Refer to GROUP 00 –How to Cope with Intermittent Malfunction [P.00-13.](#))

DTC P1804: Shift Fork Position Sensor 1 and 2 System (Power supply voltage low range out)**⚠ CAUTION**

- If there is any problem in the CAN bus lines, an incorrect diagnostic trouble code may be set. Prior to this diagnosis, diagnose the CAN bus lines.
- Whenever the ECU is replaced, ensure that the CAN bus lines are normal.

DIAGNOSTIC FUNCTION

TC-SST-ECU checks that the supply voltage to the shift fork position sensor 1 and 2 is normal.

DESCRIPTIONS OF MONITOR METHODS

The supply voltage to the shift fork position sensor 1 and 2 is too low.

MONITOR EXECUTION

- Continuous

**MONITOR EXECUTION CONDITIONS
(OTHER MONITOR AND SENSOR)**

Other Monitor (There is no temporary DTC stored in memory for the item monitored below)


- P1820: Shift fork position sensor 1 system (Voltage low range out)
- P1821: Shift fork position sensor 1 system (Voltage high range out)
- P1822: Shift fork position sensor 1 system (Output range out)

- P1824: Shift fork position sensor 1 system (Poor performance)
- P1825: Shift fork position sensor 2 system (Voltage low range out)
- P1826: Shift fork position sensor 2 system (Voltage high range out)
- P1827: Shift fork position sensor 2 system (Output range out)
- P1829: Shift fork position sensor 2 system (Poor performance)
- P1836: Shift fork 1 malfunction
- P183D: Shift fork 2 malfunction
- P1844: Shift fork 3 malfunction
- P184B: Shift fork 4 malfunction
- P1852: Shift fork 1 or 2 opposite direction movement
- P1855: Shift fork 3 or 4 opposite direction movement
- P1857: Odd number gear axle interlock
- P1858: Even number gear axle interlock
- P1876: Gear block 1st
- P1877: Gear block 2nd
- P1878: Gear block 3rd
- P1879: Gear block 4th
- P187A: Gear block 5th
- P187B: Gear block 6th
- P187C: Gear block reverse

Sensor (The sensor below is determined to be normal)

- Shift fork position sensor 1
- Shift fork position sensor 2

LOGIC FLOW CHARTS (Monitor Sequence)

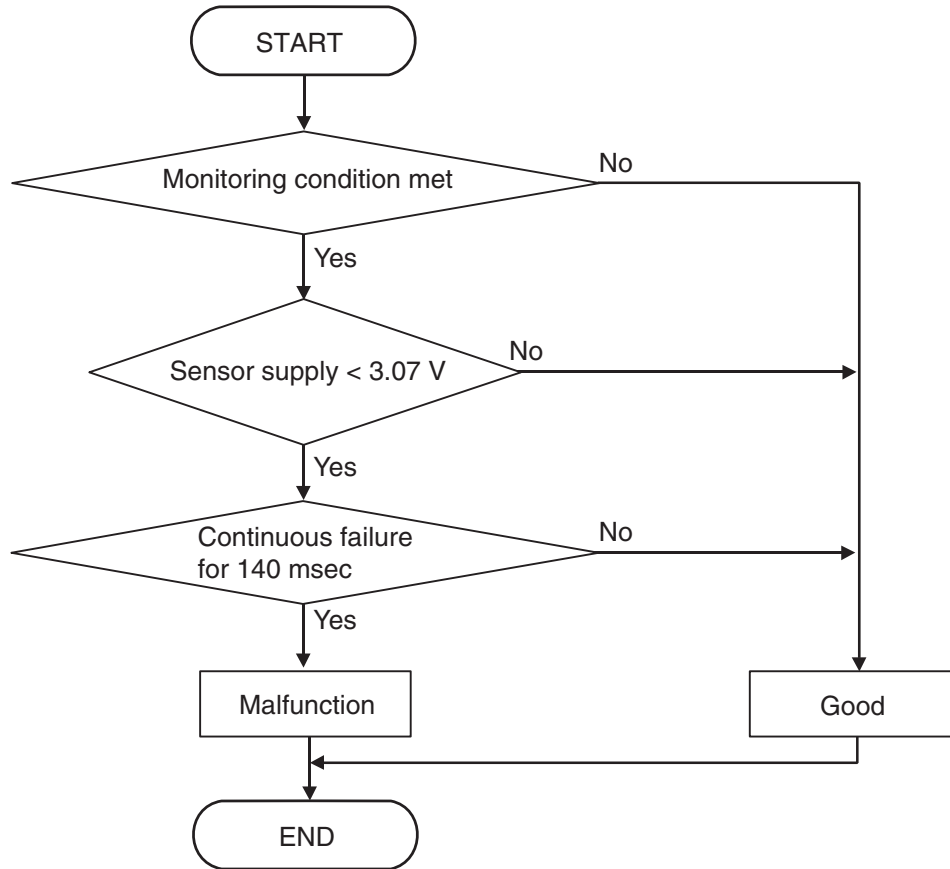

AC710669

DTC SET CONDITIONS

Check Conditions

- Voltage of battery: 8 V or more.
- Voltage of battery: 16.5 V or less.

JUDGMENT CRITERIA

- Supply voltage: 3.07 V or less. (140 millisecond)

OBD-II DRIVE CYCLE PATTERN

The supply voltage remains 3.07 V or more for 140 milliseconds.

PROBABLE CAUSES

- Malfunction of TC-SST-ECU
- Malfunction of shift fork position sensor 1 and 2

DIAGNOSTIC PROCEDURE

Required Special Tools:

- MB991958 Scan Tool (M.U.T.-III Sub Assembly)
 - MB991824: Vehicle Communication Interface (V.C.I.)
 - MB991827 M.U.T.-III USB Cable
 - MB991910 M.U.T.-III Main Harness A

STEP 1. Scan tool CAN bus diagnostics

Using scan tool MB991958, diagnose the CAN bus lines.

Q: Is the check result normal?

YES : Go to Step 2.

NO : Repair the CAN bus lines. (Refer to GROUP 54C – Troubleshooting P.54C-16.) After repairing the CAN bus line, go to Step 2.

STEP 2. Check the TC-SST-ECU power supply circuitRefer to [P.22C-338](#).**Q: Is the check result normal?****YES** : Go to Step 3.**NO** : Repair the TC-SST-ECU power supply circuit. (Refer to [P.22C-338](#).) After repairing the power supply circuit, go to Step 3.**STEP 3. Check whether the DTC is reset.****Q: Is DTC No. P1804 set?****YES** : Replace the mechatronic assembly. (Refer to [P.22C-505](#).)**NO** : Intermittent malfunction. (Refer to GROUP 00 –How to Cope with Intermittent Malfunction [P.00-13](#).)**DTC P1805: Shift Fork Position Sensor 1 and 2 System (Power supply voltage high range out)****⚠ CAUTION**

- If there is any problem in the CAN bus lines, an incorrect diagnostic trouble code may be set. Prior to this diagnosis, diagnose the CAN bus lines.
- Whenever the ECU is replaced, ensure that the CAN bus lines are normal.

DIAGNOSTIC FUNCTION

TC-SST-ECU checks that the supply voltage to the shift fork position sensor 1 and 2 is normal.

DESCRIPTIONS OF MONITOR METHODS

The supply voltage to the shift fork position sensor 1 and 2 is too high.

MONITOR EXECUTION

- Continuous

**MONITOR EXECUTION CONDITIONS
(OTHER MONITOR AND SENSOR)****Other Monitor (There is no temporary DTC stored in memory for the item monitored below)**


- P1820: Shift fork position sensor 1 system (Voltage low range out)
- P1821: Shift fork position sensor 1 system (Voltage high range out)
- P1822: Shift fork position sensor 1 system (Output range out)

- P1824: Shift fork position sensor 1 system (Poor performance)
- P1825: Shift fork position sensor 2 system (Voltage low range out)
- P1826: Shift fork position sensor 2 system (Voltage high range out)
- P1827: Shift fork position sensor 2 system (Output range out)
- P1829: Shift fork position sensor 2 system (Poor performance)
- P1836: Shift fork 1 malfunction
- P183D: Shift fork 2 malfunction
- P1844: Shift fork 3 malfunction
- P184B: Shift fork 4 malfunction
- P1852: Shift fork 1 or 2 opposite direction movement
- P1855: Shift fork 3 or 4 opposite direction movement
- P1857: Odd number gear axle interlock
- P1858: Even number gear axle interlock
- P1876: Gear block 1st
- P1877: Gear block 2nd
- P1878: Gear block 3rd
- P1879: Gear block 4th
- P187A: Gear block 5th
- P187B: Gear block 6th
- P187C: Gear block reverse

Sensor (The sensor below is determined to be normal)

- Shift fork position sensor 1
- Shift fork position sensor 2

LOGIC FLOW CHARTS (Monitor Sequence)

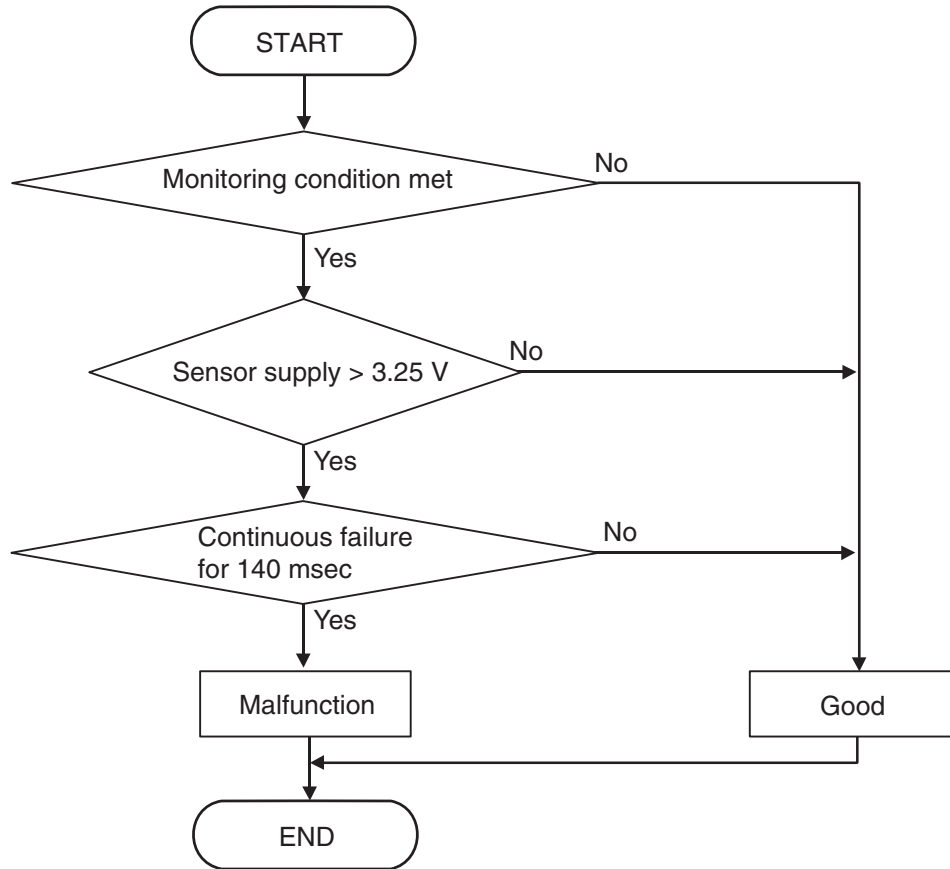

AC710670

DTC SET CONDITIONS

Check Conditions

- Voltage of battery: 8 V or more.
- Voltage of battery: 16.5 V or less.

JUDGMENT CRITERIA

- Supply voltage: 3.25 V or more. (140 millisecond)

OBD-II DRIVE CYCLE PATTERN

The supply voltage remains 3.25 V or less for 140 milliseconds.

PROBABLE CAUSES

- Malfunction of TC-SST-ECU
- Malfunction of shift fork position sensor 1 and 2

DIAGNOSTIC PROCEDURE

Required Special Tools:

- MB991958 Scan Tool (M.U.T.-III Sub Assembly)
 - MB991824: Vehicle Communication Interface (V.C.I.)
 - MB991827 M.U.T.-III USB Cable
 - MB991910 M.U.T.-III Main Harness A

STEP 1. Scan tool CAN bus diagnostics

Using scan tool MB991958, diagnose the CAN bus lines.

Q: Is the check result normal?

YES : Go to Step 2.

NO : Repair the CAN bus lines. (Refer to GROUP 54C – Troubleshooting P.54C-16.) After repairing the CAN bus line, go to Step 2.

STEP 2. Check the TC-SST-ECU power supply circuitRefer to [P.22C-338](#).**Q: Is the check result normal?****YES** : Go to Step 3.**NO** : Repair the TC-SST-ECU power supply circuit. (Refer to [P.22C-338](#).) After repairing the power supply circuit, go to Step 3.**STEP 3. Check whether the DTC is reset.****Q: Is DTC No. P1805 set?****YES** : Replace the mechatronic assembly. (Refer to [P.22C-505](#).)**NO** : Intermittent malfunction. (Refer to GROUP 00 –How to Cope with Intermittent Malfunction [P.00-13](#).)**DTC P1806: Shift Fork Position Sensor 3 and 4 System (Power supply voltage low range out)****⚠ CAUTION**

- If there is any problem in the CAN bus lines, an incorrect diagnostic trouble code may be set. Prior to this diagnosis, diagnose the CAN bus lines.
- Whenever the ECU is replaced, ensure that the CAN bus lines are normal.

DIAGNOSTIC FUNCTION

TC-SST-ECU checks that the supply voltage to the shift fork position sensor 3 and 4 is normal.

DESCRIPTIONS OF MONITOR METHODS

The supply voltage to the shift fork position sensor 3 and 4 is too low.

MONITOR EXECUTION

- Continuous

**MONITOR EXECUTION CONDITIONS
(OTHER MONITOR AND SENSOR)****Other Monitor (There is no temporary DTC stored in memory for the item monitored below)**


- P182A: Shift fork position sensor 3 system (Voltage low range out)
- P182B: Shift fork position sensor 3 system (Voltage high range out)
- P182C: Shift fork position sensor 3 system (Output range out)

- P182E: Shift fork position sensor 3 system (Poor performance)
- P1831: Shift fork position sensor 4 system (Voltage low range out)
- P1832: Shift fork position sensor 4 system (Voltage high range out)
- P1833: Shift fork position sensor 4 system (Output range out)
- P1835: Shift fork position sensor 4 system (Poor performance)
- P1836: Shift fork 1 malfunction
- P183D: Shift fork 2 malfunction
- P1844: Shift fork 3 malfunction
- P184B: Shift fork 4 malfunction
- P1852: Shift fork 1 or 2 opposite direction movement
- P1855: Shift fork 3 or 4 opposite direction movement
- P1857: Odd number gear axle interlock
- P1858: Even number gear axle interlock
- P1876: Gear block 1st
- P1877: Gear block 2nd
- P1878: Gear block 3rd
- P1879: Gear block 4th
- P187A: Gear block 5th
- P187B: Gear block 6th
- P187C: Gear block reverse

Sensor (The sensor below is determined to be normal)

- Shift fork position sensor 3
- Shift fork position sensor 4

LOGIC FLOW CHARTS (Monitor Sequence)

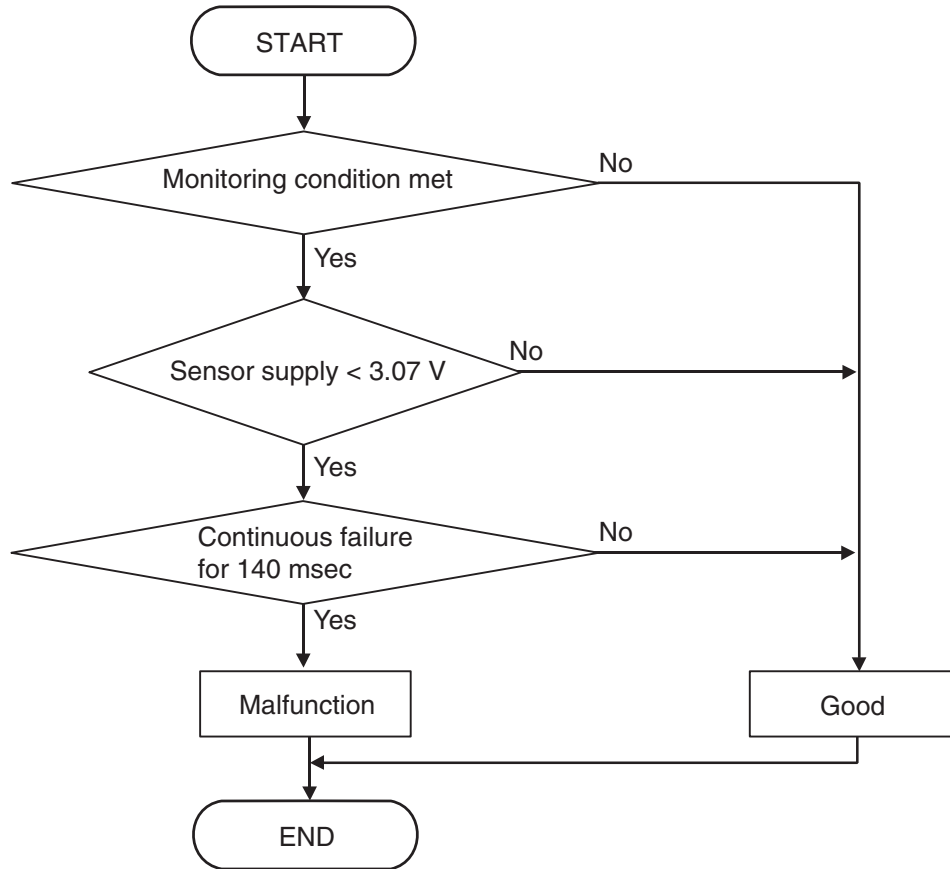

AC710669

DTC SET CONDITIONS

Check Conditions

- Voltage of battery: 8 V or more.
- Voltage of battery: 16.5 V or less.

JUDGMENT CRITERIA

- Supply voltage: 3.07 V or less. (140 millisecond)

OBD-II DRIVE CYCLE PATTERN

The supply voltage remains 3.07 V or more for 140 milliseconds.

PROBABLE CAUSES

- Malfunction of TC-SST-ECU
- Malfunction of shift fork position sensor 3 and 4

DIAGNOSTIC PROCEDURE

Required Special Tools:

- MB991958 Scan Tool (M.U.T.-III Sub Assembly)
 - MB991824: Vehicle Communication Interface (V.C.I.)
 - MB991827 M.U.T.-III USB Cable
 - MB991910 M.U.T.-III Main Harness A

STEP 1. Scan tool CAN bus diagnostics

Using scan tool MB991958, diagnose the CAN bus lines.

Q: Is the check result normal?

YES : Go to Step 2.

NO : Repair the CAN bus lines. (Refer to GROUP 54C – Troubleshooting P.54C-16.) After repairing the CAN bus line, go to Step 2.

STEP 2. Check the TC-SST-ECU power supply circuitRefer to [P.22C-338](#).**Q: Is the check result normal?****YES** : Go to Step 3.**NO** : Repair the TC-SST-ECU power supply circuit. (Refer to [P.22C-338](#).) After repairing the power supply circuit, go to Step 3.**STEP 3. Check whether the DTC is reset.****Q: Is DTC No. P1806 set?****YES** : Replace the mechatronic assembly. (Refer to [P.22C-505](#).)**NO** : Intermittent malfunction. (Refer to GROUP 00 –How to Cope with Intermittent Malfunction [P.00-13](#).)**DTC P1807: Shift Fork Position Sensor 3 and 4 System (Power supply voltage high range out)****⚠ CAUTION**

- If there is any problem in the CAN bus lines, an incorrect diagnostic trouble code may be set. Prior to this diagnosis, diagnose the CAN bus lines.
- Whenever the ECU is replaced, ensure that the CAN bus lines are normal.

DIAGNOSTIC FUNCTION

TC-SST-ECU checks that the supply voltage to the shift fork position sensor 3 and 4 is normal.

DESCRIPTIONS OF MONITOR METHODS

The supply voltage to the shift fork position sensor 3 and 4 is too high.

MONITOR EXECUTION

- Continuous

**MONITOR EXECUTION CONDITIONS
(OTHER MONITOR AND SENSOR)****Other Monitor (There is no temporary DTC stored in memory for the item monitored below)**


- P182A: Shift fork position sensor 3 system (Voltage low range out)
- P182B: Shift fork position sensor 3 system (Voltage high range out)
- P182C: Shift fork position sensor 3 system (Output range out)

- P182E: Shift fork position sensor 3 system (Poor performance)
- P1831: Shift fork position sensor 4 system (Voltage low range out)
- P1832: Shift fork position sensor 4 system (Voltage high range out)
- P1833: Shift fork position sensor 4 system (Output range out)
- P1835: Shift fork position sensor 4 system (Poor performance)
- P1836: Shift fork 1 malfunction
- P183D: Shift fork 2 malfunction
- P1844: Shift fork 3 malfunction
- P184B: Shift fork 4 malfunction
- P1852: Shift fork 1 or 2 opposite direction movement
- P1855: Shift fork 3 or 4 opposite direction movement
- P1857: Odd number gear axle interlock
- P1858: Even number gear axle interlock
- P1876: Gear block 1st
- P1877: Gear block 2nd
- P1878: Gear block 3rd
- P1879: Gear block 4th
- P187A: Gear block 5th
- P187B: Gear block 6th
- P187C: Gear block reverse

Sensor (The sensor below is determined to be normal)

- Shift fork position sensor 3
- Shift fork position sensor 4

LOGIC FLOW CHARTS (Monitor Sequence)

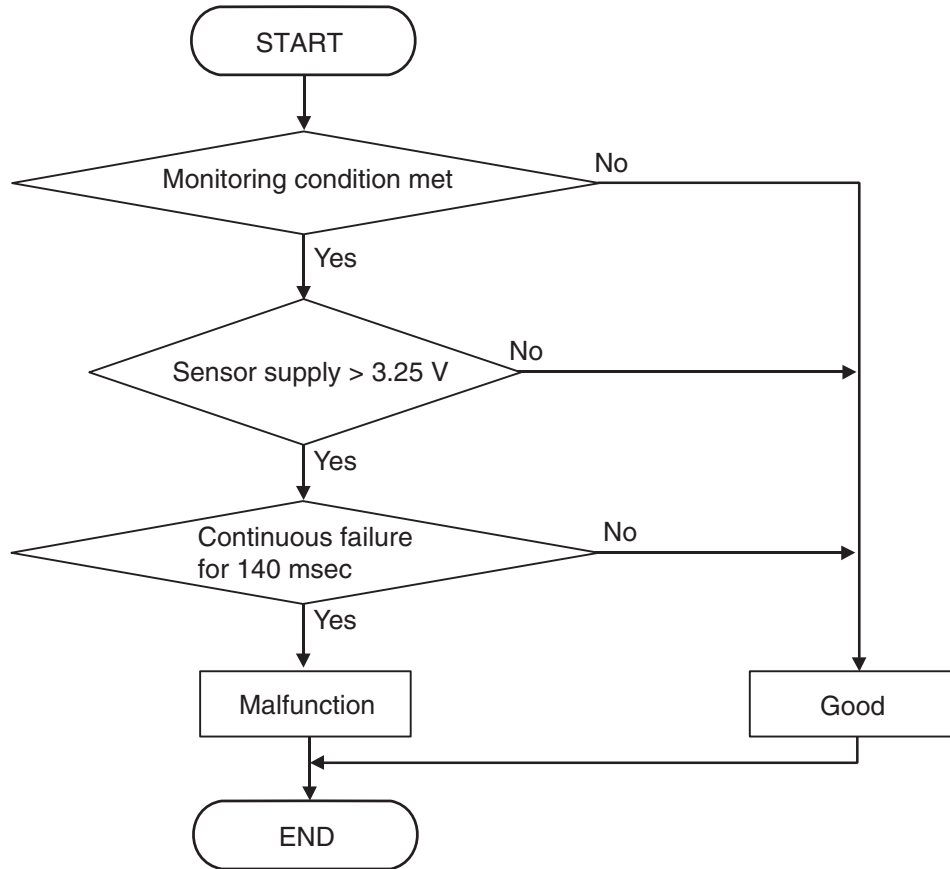

AC710670

DTC SET CONDITIONS

Check Conditions

- Voltage of battery: 8 V or more.
- Voltage of battery: 16.5 V or less.

JUDGMENT CRITERIA

- Supply voltage: 3.25 V or more. (140 millisecond)

OBD-II DRIVE CYCLE PATTERN

The supply voltage remains 3.25 V or less for 140 milliseconds.

PROBABLE CAUSES

- Malfunction of TC-SST-ECU
- Malfunction of shift fork position sensor 3 and 4

DIAGNOSTIC PROCEDURE

Required Special Tools:

- MB991958 Scan Tool (M.U.T.-III Sub Assembly)
 - MB991824: Vehicle Communication Interface (V.C.I.)
 - MB991827 M.U.T.-III USB Cable
 - MB991910 M.U.T.-III Main Harness A

STEP 1. Scan tool CAN bus diagnostics

Using scan tool MB991958, diagnose the CAN bus lines.

Q: Is the check result normal?

YES : Go to Step 2.

NO : Repair the CAN bus lines. (Refer to GROUP 54C – Troubleshooting P.54C-16.) After repairing the CAN bus line, go to Step 2.

STEP 2. Check the TC-SST-ECU power supply circuitRefer to [P.22C-338](#).**Q: Is the check result normal?****YES** : Go to Step 3.**NO** : Repair the TC-SST-ECU power supply circuit. (Refer to [P.22C-338](#).) After repairing the power supply circuit, go to Step 3.**STEP 3. Check whether the DTC is reset.****Q: Is DTC No. P1807 set?****YES** : Replace the mechatronic assembly. (Refer to [P.22C-505](#).)**NO** : Intermittent malfunction. (Refer to GROUP 00 –How to Cope with Intermittent Malfunction [P.00-13](#).)**DTC P1808: TC-SST-ECU temperature, fluid temperature sensor system (Correlation error)****⚠ CAUTION**

- If there is any problem in the CAN bus lines, an incorrect diagnostic trouble code may be set. Prior to this diagnosis, diagnose the CAN bus lines.
- Whenever the ECU is replaced, ensure that the CAN bus lines are normal.

DIAGNOSTIC FUNCTION

TC-SST-ECU checks that the temperature sensor and the fluid temperature sensor are normal.

DESCRIPTIONS OF MONITOR METHODS

The difference of the output between the ECU temperature sensor and fluid temperature sensor is large.


MONITOR EXECUTION CONDITIONS (OTHER MONITOR AND SENSOR)**Other Monitor (There is no temporary DTC stored in memory for the item monitored below)**

- Not applicable

Sensor (The sensor below is determined to be normal)

- Not applicable

LOGIC FLOW CHARTS (Monitor Sequence)

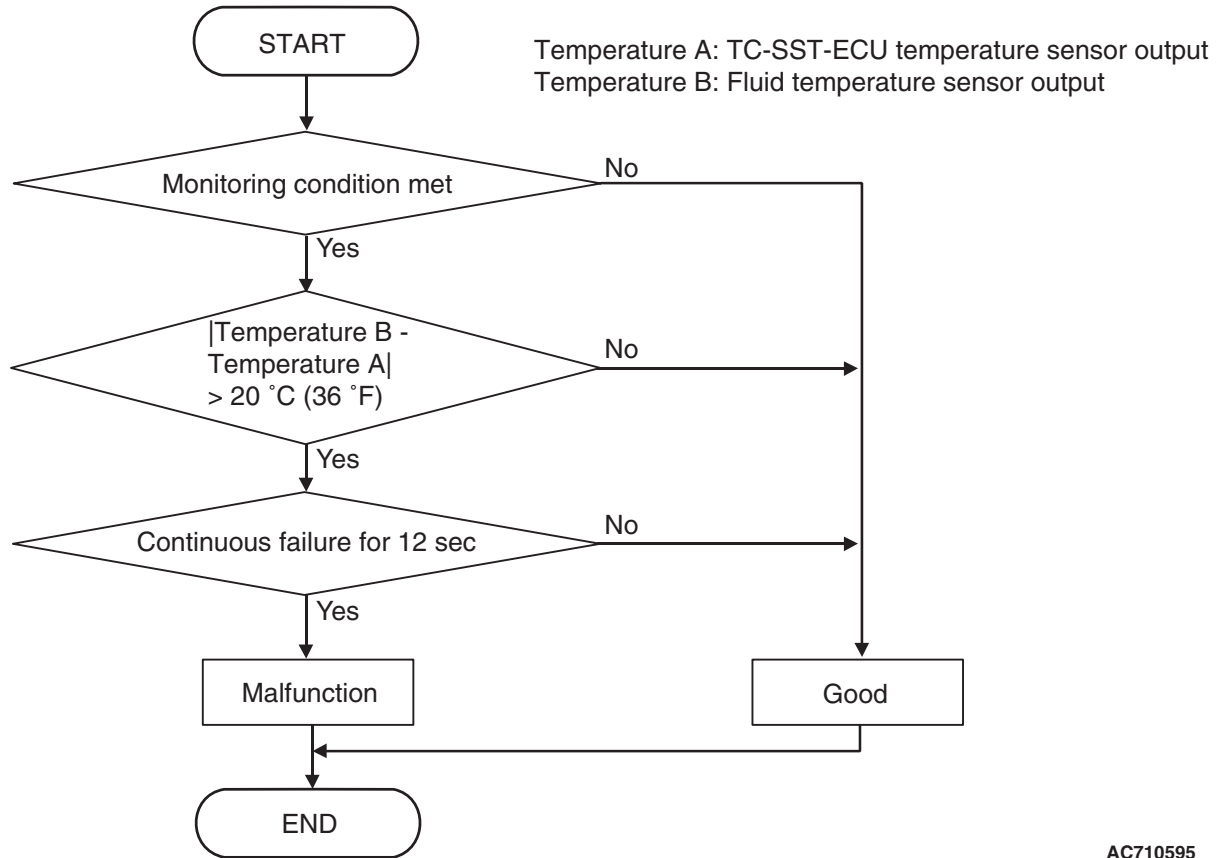

AC710595

DTC SET CONDITIONS

Check Conditions

- Voltage of battery: 8 V or more.
- Voltage of battery: 16.5 V or less.

JUDGMENT CRITERIA

- Calculated temperature ("Temperature B: Fluid temperature sensor output" - "Temperature A: TC-SST-ECU temperature sensor output"): 20° C (36° F) or more. (12 seconds)

OBD-II DRIVE CYCLE PATTERN

The difference of the calculated temperature is 20° C (36° F) or less.

PROBABLE CAUSES

- Malfunction of TC-SST-ECU

DIAGNOSTIC PROCEDURE

Required Special Tools:

- MB991958 Scan Tool (M.U.T.-III Sub Assembly)
 - MB991824: Vehicle Communication Interface (V.C.I.)
 - MB991827 M.U.T.-III USB Cable
 - MB991910 M.U.T.-III Main Harness A

STEP 1. Scan tool CAN bus diagnostics

Using scan tool MB991958, diagnose the CAN bus lines.

Q: Is the check result normal?

YES : Go to Step 2.

NO : Repair the CAN bus lines. (Refer to GROUP 54C – Troubleshooting P.54C-16.) After repairing the CAN bus line, go to Step 2.

STEP 2. Check whether the DTC is reset.

15 seconds after turning ON the ignition switch, check that the DTC is reset.

Q: Is DTC No. P1808 set?

YES : Replace the mechatronic assembly. (Refer to [P.22C-505.](#))

NO : Intermittent malfunction. (Refer to GROUP 00 –How to Cope with Intermittent Malfunction [P.00-13.](#))

DTC P180C: Clutch pressure cut spool sticking**⚠ CAUTION**

- If there is any problem in the CAN bus lines, an incorrect diagnostic trouble code may be set. Prior to this diagnosis, diagnose the CAN bus lines.
- Whenever the ECU is replaced, ensure that the CAN bus lines are normal.

DIAGNOSTIC FUNCTION

TC-SST-ECU checks that the clutch pressure cut spool is normal.

DESCRIPTIONS OF MONITOR METHODS

The clutch pressure cut spool is determined to be seized.

PROBABLE CAUSES

- Malfunction of TC-SST-ECU

DIAGNOSTIC PROCEDURE**Required Special Tools:**

- MB991958 Scan Tool (M.U.T.-III Sub Assembly)
 - MB991824: Vehicle Communication Interface (V.C.I.)
 - MB991827 M.U.T.-III USB Cable
 - MB991910 M.U.T.-III Main Harness A

STEP 1. Scan tool CAN bus diagnostics

Using scan tool MB991958, diagnose the CAN bus lines.

Q: Is the check result normal?

YES : Go to Step 2.

NO : Repair the CAN bus lines. (Refer to GROUP 54C – Troubleshooting [P.54C-16.](#)) After repairing the CAN bus line, go to Step 2.

STEP 2. Check whether the DTC is reset.

Warm up the engine and let it idle for 15 seconds. Then check that the DTC is reset.

Q: Is DTC No. P180C set?

YES : Replace the mechatronic assembly. (Refer to [P.22C-505.](#))

NO : Intermittent malfunction. (Refer to GROUP 00 –How to Cope with Intermittent Malfunction [P.00-13.](#))

DTC P181B: Clutch 1 (Pressure low range out)

⚠ CAUTION

- If there is any problem in the CAN bus lines, an incorrect diagnostic trouble code may be set. Prior to this diagnosis, diagnose the CAN bus lines.
- Whenever the ECU is replaced, ensure that the CAN bus lines are normal.

DIAGNOSTIC FUNCTION

TC-SST-ECU checks that the clutch 1 pressure is normal.


DESCRIPTIONS OF MONITOR METHODS

The pressure of the clutch 1 is too low.

MONITOR EXECUTION

- Continuous

LOGIC FLOW CHARTS (Monitor Sequence)

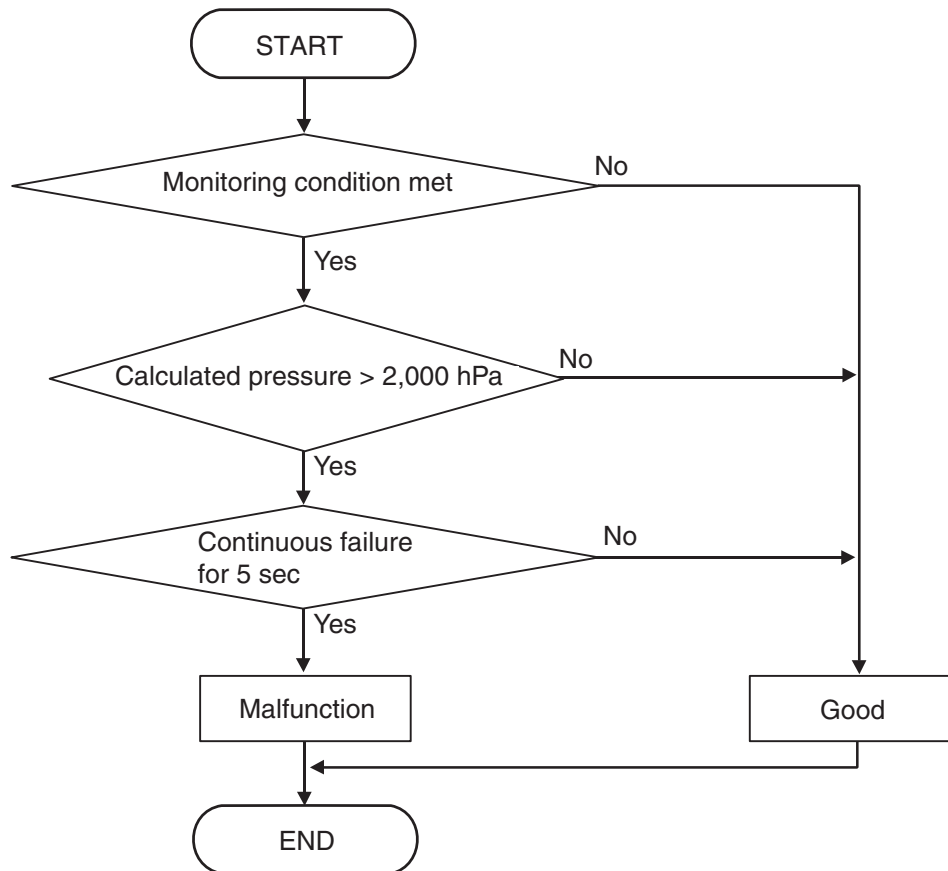

AC710671AB

DTC SET CONDITIONS**Check Conditions**

- Voltage of battery: 8 V or more.
- Voltage of battery: 16.5 V or less.
- Engine speed: 650 r/min or more.
- Time since above engine condition: 1.5 seconds or more.
- Clutch 1 (odd) state: Slip or engaged.
- Clutch/shift pressure solenoid 1: Not OFF or not in valve cleaning mode.

JUDGMENT CRITERIA

- Calculated pressure: 2,000 hPa or more. (5 seconds)

OBD-II DRIVE CYCLE PATTERN

The calculated pressure remains 2,000 hPa or less for 5 seconds.

PROBABLE CAUSES

- Malfunction of TC-SST-ECU
- Insufficient fluid level
- Improper installation of mechatronic assembly

DIAGNOSTIC PROCEDURE**Required Special Tools:**

- MB991958 Scan Tool (M.U.T.-III Sub Assembly)
 - MB991824: Vehicle Communication Interface (V.C.I.)
 - MB991827 M.U.T.-III USB Cable
 - MB991910 M.U.T.-III Main Harness A

STEP 1. Scan tool CAN bus diagnostics

Using scan tool MB991958, diagnose the CAN bus lines.

Q: Is the check result normal?

YES : Go to Step 2.

NO : Repair the CAN bus lines. (Refer to GROUP 54C – Troubleshooting [P.54C-16.](#)) After repairing the CAN bus line, go to Step 2.

STEP 2. Check whether the DTC is reset.

(1) Erase the DTC.

(2) Carry out the Item No. 3 (Teach-In) : Line pressure Test. (Refer to Special Function (Teach-In Reference Table [P.22C-362.](#))

(3) With the engine idle status, check that the DTC is reset.

Q: Is the DTC No. P181B restored? or Is the line pressure test of Teach-In not completed normally ("No" is displayed in the Data list No.101: Normal End)?

YES : Go to Step 3.

NO : Intermittent malfunction. (Refer to GROUP 00 –How to Cope with Intermittent Malfunction [P.00-13.](#))

STEP 3. Check the fluid.**Q: Is the fluid level proper?**

YES : Go to Step 4

NO : Add the fluid.

STEP 4. Check the installation status of the mechatronic assembly.

Q: Is the mechatronic assembly installed correctly?

YES : Go to Step 5

NO : Install the mechatronic assembly correctly. (Refer to [P.22C-505.](#))

STEP 5. Check whether the DTC is reset.

(1) Erase the DTC.

(2) With the engine idle status, check that the DTC is reset.

Q: Is DTC No.P181B set?

YES : Replace the mechatronic assembly. (Refer to [P.22C-505.](#)) Then, go to Step 6.

NO : Intermittent malfunction. (Refer to GROUP 00 –How to Cope with Intermittent Malfunction [P.00-13.](#))

STEP 6. Check whether the DTC is reset.

(1) Erase the DTC.

(2) With the engine idle status, check that the DTC is reset.

Q: Is DTC No.P181B set?

YES : Replace the transaxle assembly. (Refer to [P.22C-497.](#))

NO : This diagnosis is complete.

DTC P181C: Clutch 1 (Pressure high range out)

CAUTION

- If there is any problem in the CAN bus lines, an incorrect diagnostic trouble code may be set. Prior to this diagnosis, diagnose the CAN bus lines.
- Whenever the ECU is replaced, ensure that the CAN bus lines are normal.

DIAGNOSTIC FUNCTION

TC-SST-ECU checks that the clutch 1 pressure is normal.

DESCRIPTIONS OF MONITOR METHODS

The pressure of the clutch 1 is too high.

MONITOR EXECUTION

- Continuous

MONITOR EXECUTION CONDITIONS (OTHER MONITOR AND SENSOR)


Other Monitor (There is no temporary DTC stored in memory for the item monitored below)

- P0841: Clutch 1 pressure sensor system (Poor performance)
- P0842: Clutch 1 pressure sensor system (Output low range out)
- P0843: Clutch 1 pressure sensor system (Output high range out)
- P1836: Shift fork 1 malfunction
- P183D: Shift fork 2 malfunction

Sensor (The sensor below is determined to be normal)

- Clutch 1 pressure sensor

LOGIC FLOW CHARTS (Monitor Sequence) <Target clutch 1 (odd) pressure: 3,000 hPa or more>

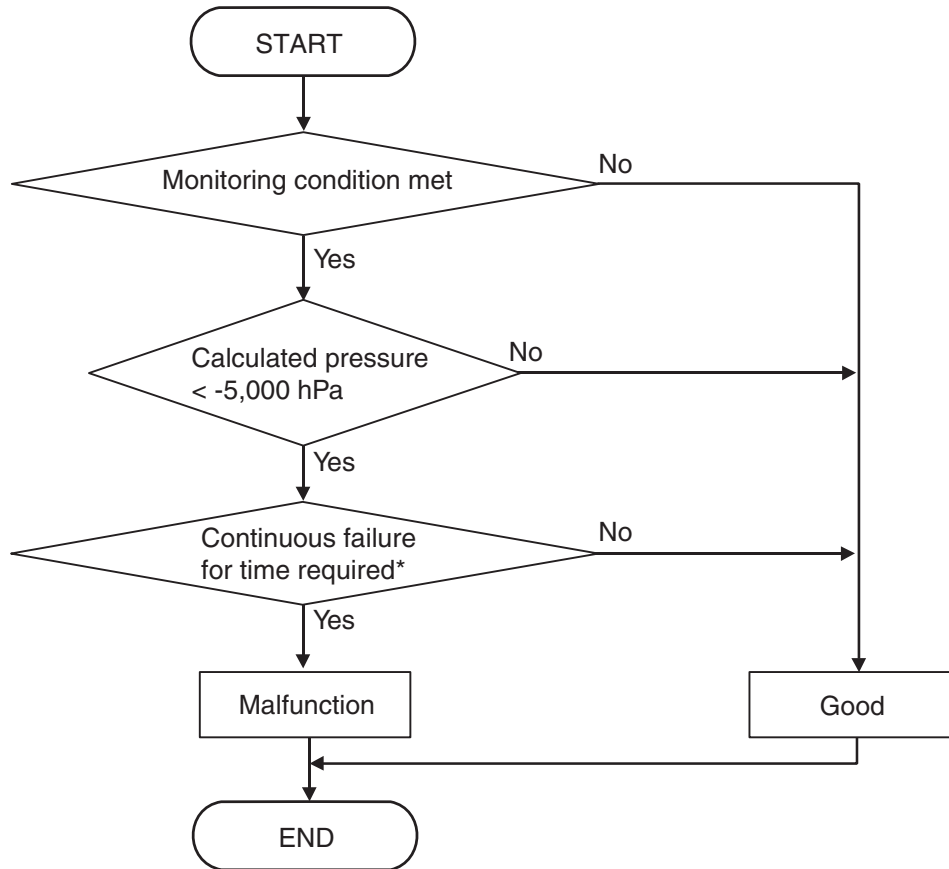

*: Time required

The time required for the "Rationality-high" monitor depends on the transmission fluid temperature, the shift lever position.

Shift lever position	Transmission fluid temperature	Time required
"D → N" or "R → N" or "R → P"	≥ -10°C (14°F)	1,220 msec
	< -10°C (14°F)	2,220 msec
"N" or "P"	All range	220 msec
"R" or "D" or manual mode	≤ -10°C (14°F)	3,220 msec
	> -10°C (14°F)	2,220 msec

Example of the time required

i) When the shift lever position is P: The time required is always 220 msec.

ii) When the shift lever position is "R → N":

If the transmission fluid temperature is -10°C (14°F) or more, the time required is 1,220 msec.

If the transmission fluid temperature is lower than -10°C (14°F), the time required is 2,220 msec.

iii) When shift lever position is D:

If the transmission fluid temperature is -10°C (14°F) or less, the time required is 3,220 msec.

If the transmission fluid temperature is higher than -10°C (14°F), the time required is 2,220 msec.

AC805097AB

**DTC SET CONDITIONS <TARGET
CLUTCH 1 (ODD) PRESSURE: 3,000 HPA
OR MORE>**

Check Conditions

- Engine speed: 650 r/min or more.
- Time since above engine condition: 1.5 seconds or more.

*: Time required

The time required for the "Rationality-high" monitor depends on the transmission fluid temperature, the shift lever position.

Shift lever position	Transmission fluid temperature	Time required
"D →N" or "R →N" or "R →P"	>= -10 °C (14 °F)	1,220 msec
	< -10 °C (14 °F)	2,220 msec
"N" or "P"	All range	220 msec
"R" or "D" or manual mode	<= -10 °C (14 °F)	3,220 msec
	> -10 °C (14 °F)	2,220 msec

Example of the time required

i) When the shift lever position is P: The time required is always 220 msec.

ii) When the shift lever position is "R →N":

If the transmission fluid temperature is -10 °C (14 °F) or more, the time required is 1,220 msec.

If the transmission fluid temperature is lower than -10 °C (14 °F), the time required is 2,220 msec.

iii) When shift lever position is D:

If the transmission fluid temperature is -10 °C (14 °F) or less, the time required is 3,220 msec.

If the transmission fluid temperature is higher than -10 °C (14 °F), the time required is 2,220 msec.

**OBD-II DRIVE CYCLE PATTERN <TARGET
CLUTCH 1 (ODD) PRESSURE: 3,000 HPA
OR MORE>**

The calculated pressure remains -5,000 hPa or more for time required*.

*: Time required

The time required for the "Rationality-high" monitor depends on the transmission fluid temperature, the shift lever position.

Shift lever position	Transmission fluid temperature	Time required
"D →N" or "R →N" or "R →P"	>= -10 °C (14 °F)	1,220 msec
	< -10 °C (14 °F)	2,220 msec
"N" or "P"	All range	220 msec
"R" or "D" or manual mode	<= -10 °C (14 °F)	3,220 msec
	> -10 °C (14 °F)	2,220 msec

Example of the time required

i) When the shift lever position is P: The time required is always 220 msec.

ii) When the shift lever position is "R →N":

If the transmission fluid temperature is -10 °C (14 °F) or more, the time required is 1,220 msec.


If the transmission fluid temperature is lower than -10 °C (14 °F), the time required is 2,220 msec.

iii) When shift lever position is D:

If the transmission fluid temperature is -10 °C (14 °F) or less, the time required is 3,220 msec.

If the transmission fluid temperature is higher than -10 °C (14 °F), the time required is 2,220 msec.

LOGIC FLOW CHARTS (Monitor Sequence) <Target clutch 1 (odd) pressure: 1,400 hPa or more to 3,000 hPa or less>

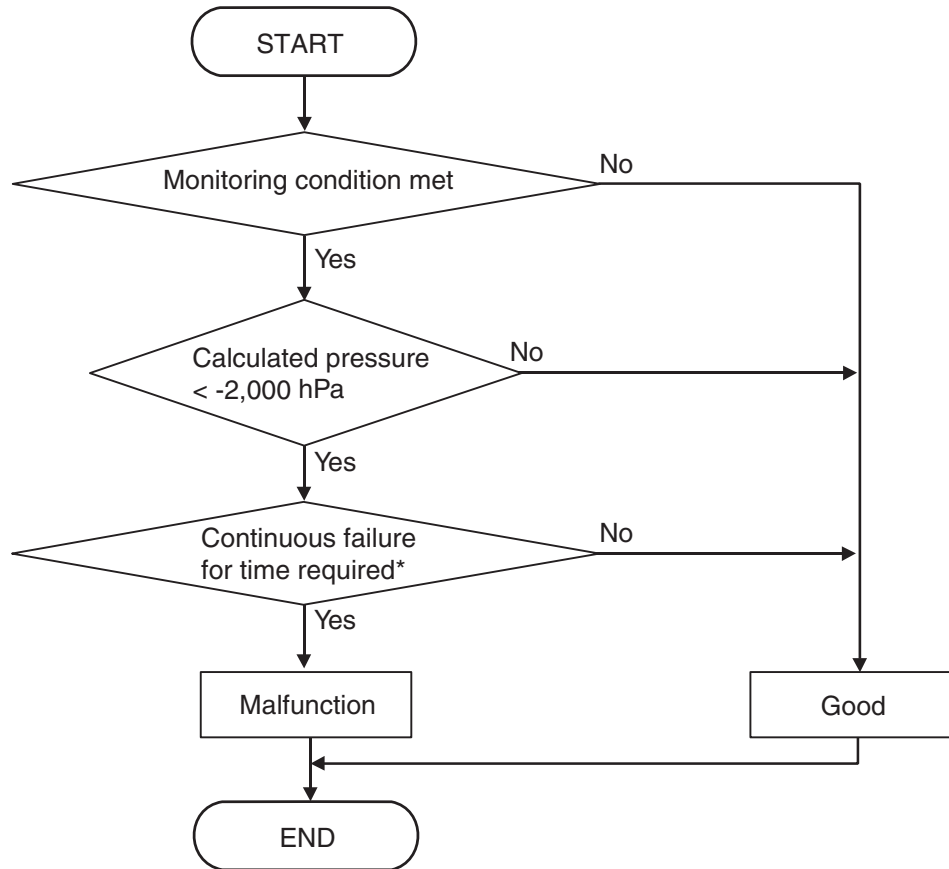

*: Time required

The time required for the "Rationality-high" monitor depends on the transmission fluid temperature, the shift lever position.

Shift lever position	Transmission fluid temperature	Time required
"D → N" or "R → N" or "R → P"	≥ -10°C (14°F)	1,220 msec
	< -10°C (14°F)	2,220 msec
"N" or "P"	All range	220 msec
"R" or "D" or manual mode	≤ -10°C (14°F)	3,220 msec
	> -10°C (14°F)	2,220 msec

Example of the time required

i) When the shift lever position is P: The time required is always 220 msec.

ii) When the shift lever position is "R → N":

If the transmission fluid temperature is -10°C (14°F) or more, the time required is 1,220 msec.

If the transmission fluid temperature is lower than -10°C (14°F), the time required is 2,220 msec.

iii) When shift lever position is D:

If the transmission fluid temperature is -10°C (14°F) or less, the time required is 3,220 msec.

If the transmission fluid temperature is higher than -10°C (14°F), the time required is 2,220 msec.

AC805098AB

**DTC SET CONDITIONS <TARGET
CLUTCH 1 (ODD) PRESSURE: 1,400 HPA
OR MORE TO 3,000 HPA OR LESS>**

Check Conditions

- Engine speed: 650 r/min or more.
- Time since above engine condition: 1.5 seconds or more.

*: Time required

The time required for the "Rationality-high" monitor depends on the transmission fluid temperature, the shift lever position.

- Clutch 1 (odd) state: Slip or engaged.
- Target clutch 1 (odd) pressure: 1,400 hPa or more.

JUDGMENT CRITERIA

- Calculated pressure: -2,000 hPa or less. (Time required*)

Shift lever position	Transmission fluid temperature	Time required
"D →N" or "R →N" or "R →P"	>= -10 °C (14 °F)	1,220 msec
	< -10 °C (14 °F)	2,220 msec
"N" or "P"	All range	220 msec
"R" or "D" or manual mode	<= -10 °C (14 °F)	3,220 msec
	> -10 °C (14 °F)	2,220 msec

Example of the time required

- When the shift lever position is P: The time required is always 220 msec.
- When the shift lever position is "R →N":
If the transmission fluid temperature is -10 °C (14 °F) or more, the time required is 1,220 msec.
If the transmission fluid temperature is lower than -10 °C (14 °F), the time required is 2,220 msec.
- When shift lever position is D:
If the transmission fluid temperature is -10 °C (14 °F) or less, the time required is 3,220 msec.
If the transmission fluid temperature is higher than -10 °C (14 °F), the time required is 2,220 msec.

**OBD-II DRIVE CYCLE PATTERN <TARGET
CLUTCH 1 (ODD) PRESSURE: 1,400 HPA
OR MORE TO 3,000 HPA OR LESS>**

The calculated pressure remains -2,000 hPa or more for time required*.

*: Time required


The time required for the "Rationality-high" monitor depends on the transmission fluid temperature, the shift lever position.

Shift lever position	Transmission fluid temperature	Time required
"D →N" or "R →N" or "R →P"	>= -10 °C (14 °F)	1,220 msec
	< -10 °C (14 °F)	2,220 msec
"N" or "P"	All range	220 msec
"R" or "D" or manual mode	<= -10 °C (14 °F)	3,220 msec
	> -10 °C (14 °F)	2,220 msec

Example of the time required

- When the shift lever position is P: The time required is always 220 msec.
- When the shift lever position is "R →N":
If the transmission fluid temperature is -10 °C (14 °F) or more, the time required is 1,220 msec.
If the transmission fluid temperature is lower than -10 °C (14 °F), the time required is 2,220 msec.
- When shift lever position is D:
If the transmission fluid temperature is -10 °C (14 °F) or less, the time required is 3,220 msec.
If the transmission fluid temperature is higher than -10 °C (14 °F), the time required is 2,220 msec.

LOGIC FLOW CHARTS (Monitor Sequence) <Target clutch 1 (odd) pressure: 1,400 hPa or less>

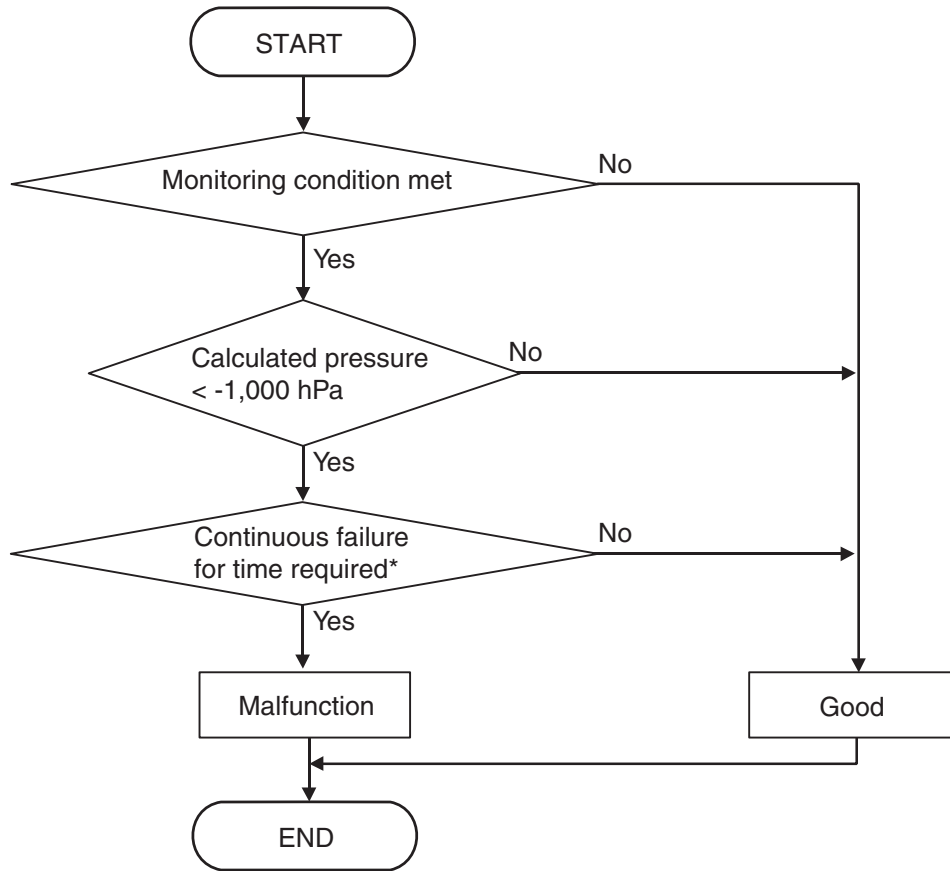

*: Time required

The time required for the "Rationality-high" monitor depends on the transmission fluid temperature, the shift lever position.

Shift lever position	Transmission fluid temperature	Time required
"D → N" or "R → N" or "R → P"	≥ -10°C (14°F)	1,220 msec
	< -10°C (14°F)	2,220 msec
"N" or "P"	All range	220 msec
"R" or "D" or manual mode	≤ -10°C (14°F)	3,220 msec
	> -10°C (14°F)	2,220 msec

Example of the time required

i) When the shift lever position is P: The time required is always 220 msec.

ii) When the shift lever position is "R → N":

If the transmission fluid temperature is -10°C (14°F) or more, the time required is 1,220 msec.

If the transmission fluid temperature is lower than -10°C (14°F), the time required is 2,220 msec.

iii) When shift lever position is D:

If the transmission fluid temperature is -10°C (14°F) or less, the time required is 3,220 msec.

If the transmission fluid temperature is higher than -10°C (14°F), the time required is 2,220 msec.

AC805099AB

**DTC SET CONDITIONS <TARGET
CLUTCH 1 (ODD) PRESSURE: 1,400 HPA
OR LESS>**

Check Conditions

- Engine speed: 650 r/min or more.

*: Time required

The time required for the "Rationality-high" monitor depends on the transmission fluid temperature, the shift lever position.

- Time since above engine condition: 1.5 seconds or more.
- Clutch 1 (odd) state: Slip or engaged.
- Target clutch 1 (odd) pressure: 1,400 hPa or less.

JUDGMENT CRITERIA

- Calculated pressure: -1,000 hPa or less. (Time required*)

Shift lever position	Transmission fluid temperature	Time required
"D →N" or "R →N" or "R →P"	>= -10 °C (14 °F)	1,220 msec
	< -10 °C (14 °F)	2,220 msec
"N" or "P"	All range	220 msec
"R" or "D" or manual mode	<= -10 °C (14 °F)	3,220 msec
	> -10 °C (14 °F)	2,220 msec

Example of the time required

i) When the shift lever position is P: The time required is always 220 msec.

ii) When the shift lever position is "R →N":

If the transmission fluid temperature is -10 °C (14 °F) or more, the time required is 1,220 msec.

If the transmission fluid temperature is lower than -10 °C (14 °F), the time required is 2,220 msec.

iii) When shift lever position is D:

If the transmission fluid temperature is -10 °C (14 °F) or less, the time required is 3,220 msec.

If the transmission fluid temperature is higher than -10 °C (14 °F), the time required is 2,220 msec.

**OBD-II DRIVE CYCLE PATTERN <TARGET
CLUTCH 1 (ODD) PRESSURE: 1,400 HPA
OR LESS>**

The clutch 1 (odd) pressure remains -1,000 hPa or more for time required*.

*: Time required

The time required for the "Rationality-high" monitor depends on the transmission fluid temperature, the shift lever position.

Shift lever position	Transmission fluid temperature	Time required
"D →N" or "R →N" or "R →P"	>= -10 °C (14 °F)	1,220 msec
	< -10 °C (14 °F)	2,220 msec
"N" or "P"	All range	220 msec
"R" or "D" or manual mode	<= -10 °C (14 °F)	3,220 msec
	> -10 °C (14 °F)	2,220 msec

Example of the time required

i) When the shift lever position is P: The time required is always 220 msec.

ii) When the shift lever position is "R →N":

If the transmission fluid temperature is -10 °C (14 °F) or more, the time required is 1,220 msec.

If the transmission fluid temperature is lower than -10 °C (14 °F), the time required is 2,220 msec.

iii) When shift lever position is D:

If the transmission fluid temperature is -10 °C (14 °F) or less, the time required is 3,220 msec.

If the transmission fluid temperature is higher than -10 °C (14 °F), the time required is 2,220 msec.

PROBABLE CAUSES

- Malfunction of TC-SST-ECU

DIAGNOSTIC PROCEDURE**Required Special Tools:**

- MB991958 Scan Tool (M.U.T.-III Sub Assembly)
 - MB991824: Vehicle Communication Interface (V.C.I.)
 - MB991827 M.U.T.-III USB Cable
 - MB991910 M.U.T.-III Main Harness A

STEP 1. Scan tool CAN bus diagnostics

Using scan tool MB991958, diagnose the CAN bus lines.

Q: Is the check result normal?

YES : Go to Step 2.

NO : Repair the CAN bus lines. (Refer to GROUP 54C – Troubleshooting [P.54C-16.](#)) After repairing the CAN bus line, go to Step 2.

STEP 2. Check whether the DTC is reset.

After the test run, check that the DTC is reset.

Q: Is DTC No. P181C set?

YES : Replace the mechatronic assembly. (Refer to [P.22C-505.](#))

NO : Intermittent malfunction. (Refer to GROUP 00 –How to Cope with Intermittent Malfunction [P.00-13.](#))

DTC P181E: Clutch 2 (Pressure low range out)**⚠ CAUTION**

- If there is any problem in the CAN bus lines, an incorrect diagnostic trouble code may be set. Prior to this diagnosis, diagnose the CAN bus lines.
- Whenever the ECU is replaced, ensure that the CAN bus lines are normal.

DIAGNOSTIC FUNCTION

TC-SST-ECU checks that the clutch 2 pressure is normal.

DESCRIPTIONS OF MONITOR METHODS

The pressure of the clutch 2 is too low.

MONITOR EXECUTION

- Continuous

**MONITOR EXECUTION CONDITIONS
(OTHER MONITOR AND SENSOR)**


Other Monitor (There is no temporary DTC stored in memory for the item monitored below)

- P0846: Clutch 2 pressure sensor system (Poor performance)
- P0847: Clutch 2 pressure sensor system (Output low range out)
- P0848: Clutch 2 pressure sensor system (Output high range out)
- P1844: Shift fork 3 malfunction
- P184B: Shift fork 4 malfunction

Sensor (The sensor below is determined to be normal)

- Clutch 2 pressure sensor

LOGIC FLOW CHARTS (Monitor Sequence)

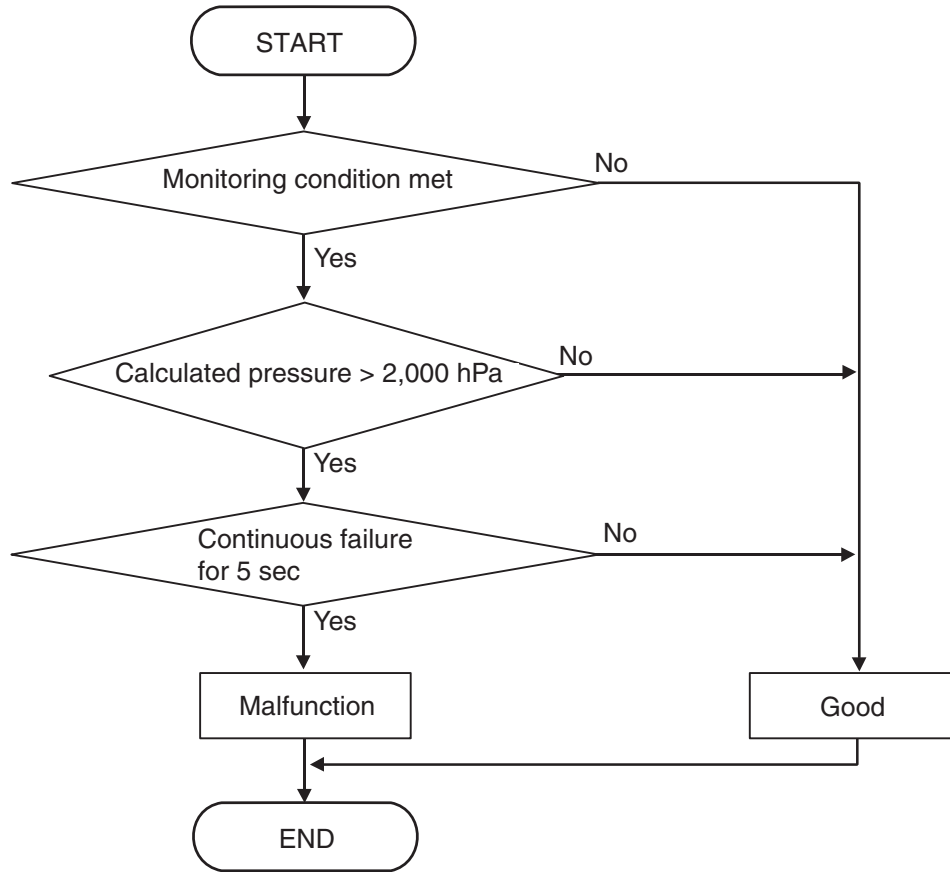

AC710671AB

DTC SET CONDITIONS

Check Conditions

- Voltage of battery: 8 V or more.
- Voltage of battery: 16.5 V or less.
- Engine speed: 650 r/min or more.
- Time since above engine condition: 1.5 seconds or more.
- Clutch 2 (even) state: Slip or engaged.
- Clutch/shift pressure solenoid 2: Not OFF or not in valve cleaning mode.

JUDGMENT CRITERIA

- Calculated pressure: 2,000 hPa or more. (5 seconds)

OBD-II DRIVE CYCLE PATTERN

The calculated pressure remains 2,000 hPa or less for 5 seconds.

PROBABLE CAUSES

- Malfunction of TC-SST-ECU
- Insufficient fluid level
- Improper installation of mechatronic assembly

DIAGNOSTIC PROCEDURE

Required Special Tools:

- MB991958 Scan Tool (M.U.T.-III Sub Assembly)
 - MB991824: Vehicle Communication Interface (V.C.I.)
 - MB991827 M.U.T.-III USB Cable
 - MB991910 M.U.T.-III Main Harness A

STEP 1. Scan tool CAN bus diagnostics

Using scan tool MB991958, diagnose the CAN bus lines.

Q: Is the check result normal?

YES : Go to Step 2.

NO : Repair the CAN bus lines. (Refer to GROUP 54C – Troubleshooting [P.54C-16.](#)) After repairing the CAN bus line, go to Step 2.

STEP 2. Check whether the DTC is reset.

(1) Erase the DTC.

(2) Carry out the Item No. 3 (Teach-In) : Line pressure Test. (Refer to Special Function (Teach-In Reference Table [P.22C-362.](#))

(3) With the engine idle status, check that the DTC is reset.

Q: Is the DTC No. P181E restored? or Is the line pressure test of Teach-In not completed normally ("No" is displayed in the Data list No.101: Normal End)?

YES : Go to Step 3

NO : Intermittent malfunction. (Refer to GROUP 00 –How to Cope with Intermittent Malfunction [P.00-13.](#))

STEP 3. Check the fluid.**Q: Is the fluid level proper?**

YES : Go to Step 4

NO : Add the fluid.

STEP 4. Check the installation status of the mechatronic assembly.**Q: Is the mechatronic assembly installed correctly?**

YES : Go to Step 5

NO : Install the mechatronic assembly correctly. (Refer to [P.22C-505.](#))

STEP 5. Check whether the DTC is reset.

(1) Erase the DTC.

(2) With the engine idle status, check that the DTC is reset.

Q: Is DTC No.P181E set?

YES : Replace the mechatronic assembly. (Refer to [P.22C-505.](#)) Then, go to Step 6.

NO : Intermittent malfunction. (Refer to GROUP 00 –How to Cope with Intermittent Malfunction [P.00-13.](#))

STEP 6. Check whether the DTC is reset.

(1) Erase the DTC.

(2) With the engine idle status, check that the DTC is reset.

Q: Is DTC No.P181E set?

YES : Replace the transaxle assembly. (Refer to [P.22C-497.](#))

NO : This diagnosis is complete.

DTC P181F: Clutch 2 (Pressure high range out)

⚠ CAUTION

- If there is any problem in the CAN bus lines, an incorrect diagnostic trouble code may be set. Prior to this diagnosis, diagnose the CAN bus lines.
- Whenever the ECU is replaced, ensure that the CAN bus lines are normal.

DIAGNOSTIC FUNCTION

TC-SST-ECU checks that the clutch 2 pressure is normal.

DESCRIPTIONS OF MONITOR METHODS

The pressure of the clutch 2 is too high.

MONITOR EXECUTION

- Continuous

**MONITOR EXECUTION CONDITIONS
(OTHER MONITOR AND SENSOR)**


Other Monitor (There is no temporary DTC stored in memory for the item monitored below)

- P0846: Clutch 2 pressure sensor system (Poor performance)
- P0847: Clutch 2 pressure sensor system (Output low range out)
- P0848: Clutch 2 pressure sensor system (Output high range out)
- P1844: Shift fork 3 malfunction
- P184B: Shift fork 4 malfunction

Sensor (The sensor below is determined to be normal)

- Clutch 2 pressure sensor

LOGIC FLOW CHARTS (Monitor Sequence) <Target clutch 2 (even) pressure: 3,000 hPa or more>

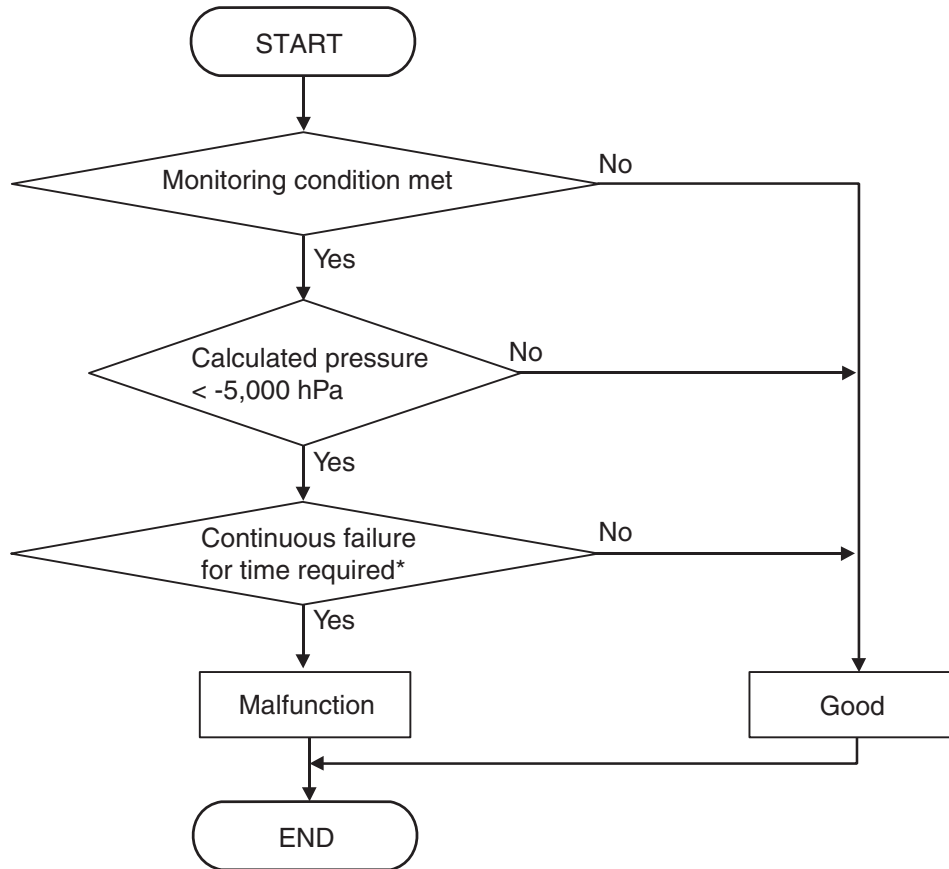

*: Time required

The time required for the "Rationality-high" monitor depends on the transmission fluid temperature, the shift lever position.

Shift lever position	Transmission fluid temperature	Time required
"D → N" or "R → N" or "R → P"	≥ -10°C (14°F)	1,220 msec
	< -10°C (14°F)	2,220 msec
"N" or "P"	All range	220 msec
"R" or "D" or manual mode	≤ -10°C (14°F)	3,220 msec
	> -10°C (14°F)	2,220 msec

Example of the time required

i) When the shift lever position is P: The time required is always 220 msec.

ii) When the shift lever position is "R → N":

If the transmission fluid temperature is -10°C (14°F) or more, the time required is 1,220 msec.

If the transmission fluid temperature is lower than -10°C (14°F), the time required is 2,220 msec.

iii) When shift lever position is D:

If the transmission fluid temperature is -10°C (14°F) or less, the time required is 3,220 msec.

If the transmission fluid temperature is higher than -10°C (14°F), the time required is 2,220 msec.

AC805097AB

DTC SET CONDITIONS <TARGET CLUTCH 2 (EVEN) PRESSURE: 3,000 HPA OR MORE>

Check Conditions

- Engine speed: 650 r/min or more.
- Time since above engine condition: 1.5 seconds or more.

*: Time required

The time required for the "Rationality-high" monitor depends on the transmission fluid temperature, the shift lever position.

- Clutch 2 (even) state: Slip or engaged.
- Target clutch 2 (even) pressure: 3,000 hPa or more.

JUDGMENT CRITERIA

- Calculated pressure: -5,000 hPa or less. (Time required*)

Shift lever position	Transmission fluid temperature	Time required
"D →N" or "R →N" or "R →P"	>= -10 °C (14 °F)	1,220 msec
	< -10 °C (14 °F)	2,220 msec
"N" or "P"	All range	220 msec
"R" or "D" or manual mode	<= -10 °C (14 °F)	3,220 msec
	> -10 °C (14 °F)	2,220 msec

Example of the time required

- When the shift lever position is P: The time required is always 220 msec.
- When the shift lever position is "R →N":
If the transmission fluid temperature is -10 °C (14 °F) or more, the time required is 1,220 msec.
If the transmission fluid temperature is lower than -10 °C (14 °F), the time required is 2,220 msec.
- When shift lever position is D:
If the transmission fluid temperature is -10 °C (14 °F) or less, the time required is 3,220 msec.
If the transmission fluid temperature is higher than -10 °C (14 °F), the time required is 2,220 msec.

OBD-II DRIVE CYCLE PATTERN <TARGET CLUTCH 2 (EVEN) PRESSURE: 3,000 HPA OR MORE>

The calculated pressure remains -5,000 hPa or more for time required*.

*: Time required


The time required for the "Rationality-high" monitor depends on the transmission fluid temperature, the shift lever position.

Shift lever position	Transmission fluid temperature	Time required
"D →N" or "R →N" or "R →P"	>= -10 °C (14 °F)	1,220 msec
	< -10 °C (14 °F)	2,220 msec
"N" or "P"	All range	220 msec
"R" or "D" or manual mode	<= -10 °C (14 °F)	3,220 msec
	> -10 °C (14 °F)	2,220 msec

Example of the time required

- When the shift lever position is P: The time required is always 220 msec.
- When the shift lever position is "R →N":
If the transmission fluid temperature is -10 °C (14 °F) or more, the time required is 1,220 msec.
If the transmission fluid temperature is lower than -10 °C (14 °F), the time required is 2,220 msec.
- When shift lever position is D:
If the transmission fluid temperature is -10 °C (14 °F) or less, the time required is 3,220 msec.
If the transmission fluid temperature is higher than -10 °C (14 °F), the time required is 2,220 msec.

LOGIC FLOW CHARTS (Monitor Sequence) <Target clutch 2 (even) pressure: 1,400 hPa or more to 3,000 hPa or less>

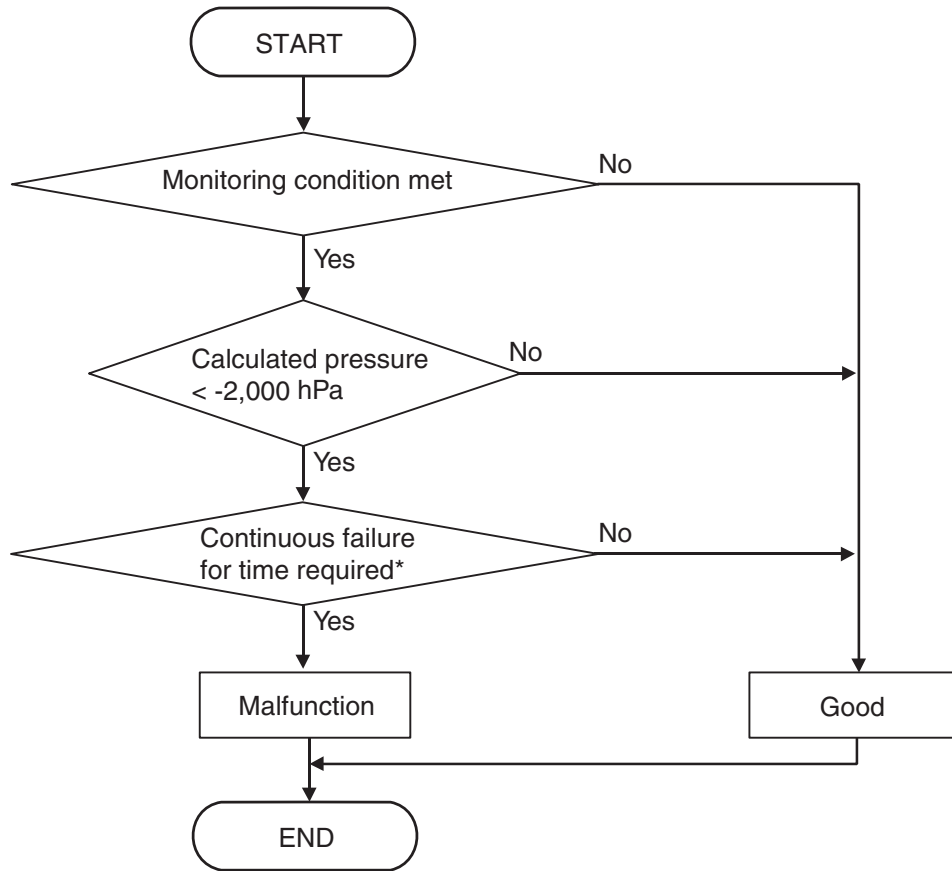

*: Time required

The time required for the "Rationality-high" monitor depends on the transmission fluid temperature, the shift lever position.

Shift lever position	Transmission fluid temperature	Time required
"D → N" or "R → N" or "R → P"	≥ -10°C (14°F)	1,220 msec
	< -10°C (14°F)	2,220 msec
"N" or "P"	All range	220 msec
"R" or "D" or manual mode	≤ -10°C (14°F)	3,220 msec
	> -10°C (14°F)	2,220 msec

Example of the time required

i) When the shift lever position is P: The time required is always 220 msec.

ii) When the shift lever position is "R → N":

If the transmission fluid temperature is -10°C (14°F) or more, the time required is 1,220 msec.

If the transmission fluid temperature is lower than -10°C (14°F), the time required is 2,220 msec.

iii) When shift lever position is D:

If the transmission fluid temperature is -10°C (14°F) or less, the time required is 3,220 msec.

If the transmission fluid temperature is higher than -10°C (14°F), the time required is 2,220 msec.

AC805098AB

**DTC SET CONDITIONS <TARGET
CLUTCH 2 (EVEN) PRESSURE: 1,400 HPA
OR MORE TO 3,000 HPA OR LESS>**

Check Conditions

- Engine speed: 650 r/min or more.
- Time since above engine condition: 1.5 seconds or more.

*: Time required

The time required for the "Rationality-high" monitor depends on the transmission fluid temperature, the shift lever position.

- Clutch 2 (even) state: Slip or engaged.
- Target clutch 2 (even) pressure: 1,400 hPa or more.

JUDGMENT CRITERIA

- Calculated pressure: -2,000 hPa or less. (Time required*)

Shift lever position	Transmission fluid temperature	Time required
"D →N" or "R →N" or "R →P"	>= -10 °C (14 °F)	1,220 msec
	< -10 °C (14 °F)	2,220 msec
"N" or "P"	All range	220 msec
"R" or "D" or manual mode	<= -10 °C (14 °F)	3,220 msec
	> -10 °C (14 °F)	2,220 msec

Example of the time required

i) When the shift lever position is P: The time required is always 220 msec.

ii) When the shift lever position is "R →N":

If the transmission fluid temperature is -10 °C (14 °F) or more, the time required is 1,220 msec.

If the transmission fluid temperature is lower than -10 °C (14 °F), the time required is 2,220 msec.

iii) When shift lever position is D:

If the transmission fluid temperature is -10 °C (14 °F) or less, the time required is 3,220 msec.

If the transmission fluid temperature is higher than -10 °C (14 °F), the time required is 2,220 msec.

**OBD-II DRIVE CYCLE PATTERN <TARGET
CLUTCH 1 (ODD) PRESSURE: 1,400 HPA
OR MORE TO 3,000 HPA OR LESS>**

The calculated pressure remains -2,000 hPa or more for time required*.

*: Time required

The time required for the "Rationality-high" monitor depends on the transmission fluid temperature, the shift lever position.

Shift lever position	Transmission fluid temperature	Time required
"D →N" or "R →N" or "R →P"	>= -10 °C (14 °F)	1,220 msec
	< -10 °C (14 °F)	2,220 msec
"N" or "P"	All range	220 msec
"R" or "D" or manual mode	<= -10 °C (14 °F)	3,220 msec
	> -10 °C (14 °F)	2,220 msec

Example of the time required

i) When the shift lever position is P: The time required is always 220 msec.

ii) When the shift lever position is "R →N":

If the transmission fluid temperature is -10 °C (14 °F) or more, the time required is 1,220 msec.


If the transmission fluid temperature is lower than -10 °C (14 °F), the time required is 2,220 msec.

iii) When shift lever position is D:

If the transmission fluid temperature is -10 °C (14 °F) or less, the time required is 3,220 msec.

If the transmission fluid temperature is higher than -10 °C (14 °F), the time required is 2,220 msec.

LOGIC FLOW CHARTS (Monitor Sequence) <Target clutch 2 (even) pressure: 1,400 hPa or less>

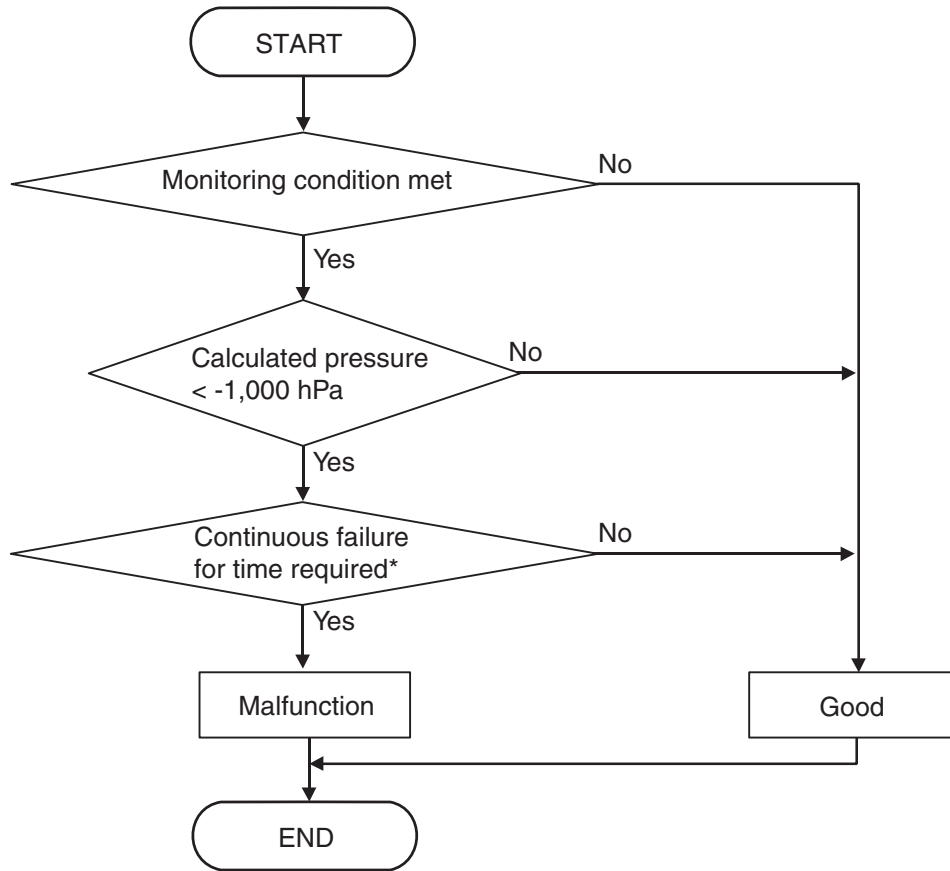

*: Time required

The time required for the "Rationality-high" monitor depends on the transmission fluid temperature, the shift lever position.

Shift lever position	Transmission fluid temperature	Time required
"D → N" or "R → N" or "R → P"	≥ -10°C (14°F)	1,220 msec
	< -10°C (14°F)	2,220 msec
"N" or "P"	All range	220 msec
"R" or "D" or manual mode	≤ -10°C (14°F)	3,220 msec
	> -10°C (14°F)	2,220 msec

Example of the time required

i) When the shift lever position is P: The time required is always 220 msec.

ii) When the shift lever position is "R → N":

If the transmission fluid temperature is -10°C (14°F) or more, the time required is 1,220 msec.

If the transmission fluid temperature is lower than -10°C (14°F), the time required is 2,220 msec.

iii) When shift lever position is D:

If the transmission fluid temperature is -10°C (14°F) or less, the time required is 3,220 msec.

If the transmission fluid temperature is higher than -10°C (14°F), the time required is 2,220 msec.

AC805099AB

**DTC SET CONDITIONS <TARGET
CLUTCH 2 (EVEN) PRESSURE: 1,400 HPA
OR LESS>**

Check Conditions

- Engine speed: 650 r/min or more.
- Time since above engine condition: 1.5 seconds or more.

*: Time required

The time required for the "Rationality-high" monitor depends on the transmission fluid temperature, the shift lever position.

- Clutch 2 (even) state: Slip or engaged.
- Target clutch 2 (even) pressure: 1,400 hPa or less.

JUDGMENT CRITERIA

- Calculated pressure: -1,000 hPa or less. (Time required*)

Shift lever position	Transmission fluid temperature	Time required
"D →N" or "R →N" or "R →P"	>= -10 °C (14 °F)	1,220 msec
	< -10 °C (14 °F)	2,220 msec
"N" or "P"	All range	220 msec
"R" or "D" or manual mode	<= -10 °C (14 °F)	3,220 msec
	> -10 °C (14 °F)	2,220 msec

Example of the time required

i) When the shift lever position is P: The time required is always 220 msec.

ii) When the shift lever position is "R →N":

If the transmission fluid temperature is -10 °C (14 °F) or more, the time required is 1,220 msec.

If the transmission fluid temperature is lower than -10 °C (14 °F), the time required is 2,220 msec.

iii) When shift lever position is D:

If the transmission fluid temperature is -10 °C (14 °F) or less, the time required is 3,220 msec.

If the transmission fluid temperature is higher than -10 °C (14 °F), the time required is 2,220 msec.

**OBD-II DRIVE CYCLE PATTERN <TARGET
CLUTCH 2 (EVEN) PRESSURE: 1,400 HPA
OR LESS>**

The clutch 2 (even) pressure remains -1,000 hPa or more for time required* .

*: Time required

The time required for the "Rationality-high" monitor depends on the transmission fluid temperature, the shift lever position.

Shift lever position	Transmission fluid temperature	Time required
"D →N" or "R →N" or "R →P"	>= -10 °C (14 °F)	1,220 msec
	< -10 °C (14 °F)	2,220 msec
"N" or "P"	All range	220 msec
"R" or "D" or manual mode	<= -10 °C (14 °F)	3,220 msec
	> -10 °C (14 °F)	2,220 msec

Example of the time required

i) When the shift lever position is P: The time required is always 220 msec.

ii) When the shift lever position is "R →N":

If the transmission fluid temperature is -10 °C (14 °F) or more, the time required is 1,220 msec.

If the transmission fluid temperature is lower than -10 °C (14 °F), the time required is 2,220 msec.

iii) When shift lever position is D:

If the transmission fluid temperature is -10 °C (14 °F) or less, the time required is 3,220 msec.

If the transmission fluid temperature is higher than -10 °C (14 °F), the time required is 2,220 msec.

PROBABLE CAUSES

- Malfunction of TC-SST-ECU

DIAGNOSTIC PROCEDURE**Required Special Tools:**

- MB991958 Scan Tool (M.U.T.-III Sub Assembly)
 - MB991824: Vehicle Communication Interface (V.C.I.)
 - MB991827 M.U.T.-III USB Cable
 - MB991910 M.U.T.-III Main Harness A

STEP 1. Scan tool CAN bus diagnostics

Using scan tool MB991958, diagnose the CAN bus lines.

Q: Is the check result normal?

YES : Go to Step 2.

NO : Repair the CAN bus lines. (Refer to GROUP 54C – Troubleshooting [P.54C-16.](#)) After repairing the CAN bus line, go to Step 2.

STEP 2. Check whether the DTC is reset.

After the test run, check that the DTC is reset.

Q: Is DTC No. P181F set?

YES : Replace the mechatronic assembly. (Refer to [P.22C-505.](#))

NO : Intermittent malfunction. (Refer to GROUP 00 –How to Cope with Intermittent Malfunction [P.00-13.](#))

DTC P1820: Shift Fork Position Sensor 1 System (Voltage low range out)**⚠ CAUTION**

- If there is any problem in the CAN bus lines, an incorrect diagnostic trouble code may be set. Prior to this diagnosis, diagnose the CAN bus lines.
- Whenever the ECU is replaced, ensure that the CAN bus lines are normal.

DIAGNOSTIC FUNCTION

TC-SST-ECU checks that the voltage of the shift fork position sensor 1 is normal.

DESCRIPTIONS OF MONITOR METHODS

The voltage of the shift fork position sensor 1 is too low.

MONITOR EXECUTION

- Continuous

**MONITOR EXECUTION CONDITIONS
(OTHER MONITOR AND SENSOR)**


Other Monitor (There is no temporary DTC stored in memory for the item monitored below)

- P1821: Shift fork position sensor 1 system (Voltage high range out)
- P1822: Shift fork position sensor 1 system (Output range out)
- P1823: Shift fork position sensor 1 system (Neutral)
- P1824: Shift fork position sensor 1 system (Poor performance)
- P1836: Shift fork 1 malfunction
- P1852: Shift fork 1 or 2 opposite direction movement
- P1855: Shift fork 3 or 4 opposite direction movement
- P1857: Odd number gear axle interlock
- P1876: Gear block 1st
- P1877: Gear block 2nd
- P1878: Gear block 3rd
- P1879: Gear block 4th

- P187A: Gear block 5th
- P187B: Gear block 6th
- P187C: Gear block reverse

- Sensor (The sensor below is determined to be normal)**
- Not applicable

LOGIC FLOW CHARTS (Monitor Sequence)

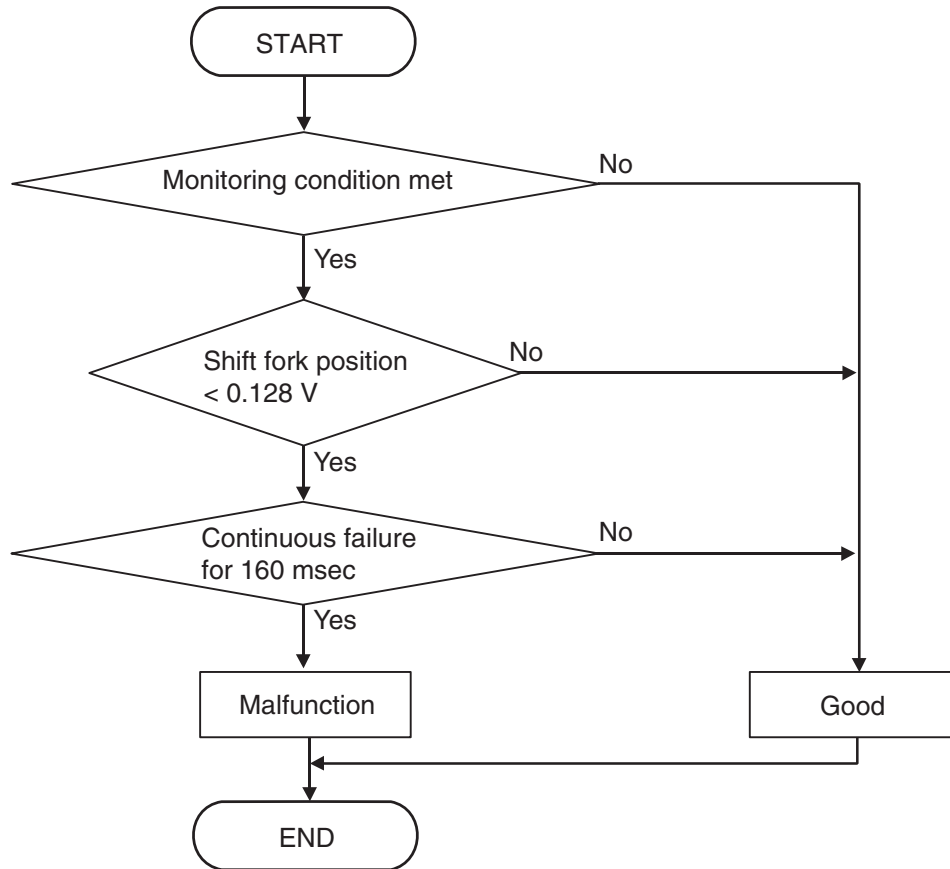

AC710676

DTC SET CONDITIONS

Check Conditions

- Voltage of battery: 8 V or more.
- Voltage of battery: 16.5 V or less.

JUDGMENT CRITERIA

- Position sensor voltage: 0.128 V or less. (160 millisecond)

OBD-II DRIVE CYCLE PATTERN

The position sensor voltage remains 0.128 V or more for 160 milliseconds.

PROBABLE CAUSES

- Malfunction of TC-SST-ECU
- Malfunction of shift fork position sensor 1

DIAGNOSTIC PROCEDURE

Required Special Tools:

- MB991958 Scan Tool (M.U.T.-III Sub Assembly)
 - MB991824: Vehicle Communication Interface (V.C.I.)
 - MB991827 M.U.T.-III USB Cable
 - MB991910 M.U.T.-III Main Harness A

STEP 1. Scan tool CAN bus diagnostics

Using scan tool MB991958, diagnose the CAN bus lines.

Q: Is the check result normal?

YES : Go to Step 2.

NO : Repair the CAN bus lines. (Refer to GROUP 54C – Troubleshooting P.54C-16.) After repairing the CAN bus line, go to Step 2.

STEP 2. Check whether the DTC is reset.**Q: Is DTC No. P1820 set?**

YES : Go to Step 3.

NO : Intermittent malfunction. (Refer to GROUP 00 –How to Cope with Intermittent Malfunction P.00-13.)

STEP 3. Scan tool Teach-In

(1) Carry out the Item No. 1: Plausibility check. (Refer to Special Function (Teach-In Reference Table P.22C-362).)

(2) After Teach-In, check which result ("Yes" or "No") is displayed in the Data list No. 101: Normal End. (Refer to Special Function (Teach-In Reference Table P.22C-362).)

Q: Which is displayed, "Yes" or "No"?

"Yes" : Replace the transaxle assembly. (Refer to P.22C-497.)

"No" : Go to Step 4.

STEP 4. Replace the mechatronic assembly, and check if the DTC is reset.

(1) Replace the mechatronic assembly. (Refer to P.22C-505.)

(2) Perform a test run of the vehicle.

(3) Check the DTC.

Q: Is DTC No.P1820 set?

YES : Replace the transaxle assembly. (Refer to P.22C-497.)

NO : This diagnosis is complete.

DTC P1821: Shift Fork Position Sensor 1 System (Voltage high range out)**⚠ CAUTION**

- If there is any problem in the CAN bus lines, an incorrect diagnostic trouble code may be set. Prior to this diagnosis, diagnose the CAN bus lines.
- Whenever the ECU is replaced, ensure that the CAN bus lines are normal.

DIAGNOSTIC FUNCTION

TC-SST-ECU checks that the voltage of the shift fork position sensor 1 is normal.

DESCRIPTIONS OF MONITOR METHODS

The voltage of the shift fork position sensor 1 is too high.

MONITOR EXECUTION

- Continuous

**MONITOR EXECUTION CONDITIONS
(OTHER MONITOR AND SENSOR)**

Other Monitor (There is no temporary DTC stored in memory for the item monitored below)


- P1820: Shift fork position sensor 1 system (Voltage low range out)
- P1822: Shift fork position sensor 1 system (Output range out)
- P1823: Shift fork position sensor 1 system (Neutral)
- P1824: Shift fork position sensor 1 system (Poor performance)
- P1836: Shift fork 1 malfunction
- P1852: Shift fork 1 or 2 opposite direction movement

- P1855: Shift fork 3 or 4 opposite direction movement
- P1857: Odd number gear axle interlock
- P1876: Gear block 1st
- P1877: Gear block 2nd
- P1878: Gear block 3rd
- P1879: Gear block 4th
- P187A: Gear block 5th
- P187B: Gear block 6th
- P187C: Gear block reverse

Sensor (The sensor below is determined to be normal)

- Not applicable

LOGIC FLOW CHARTS (Monitor Sequence)

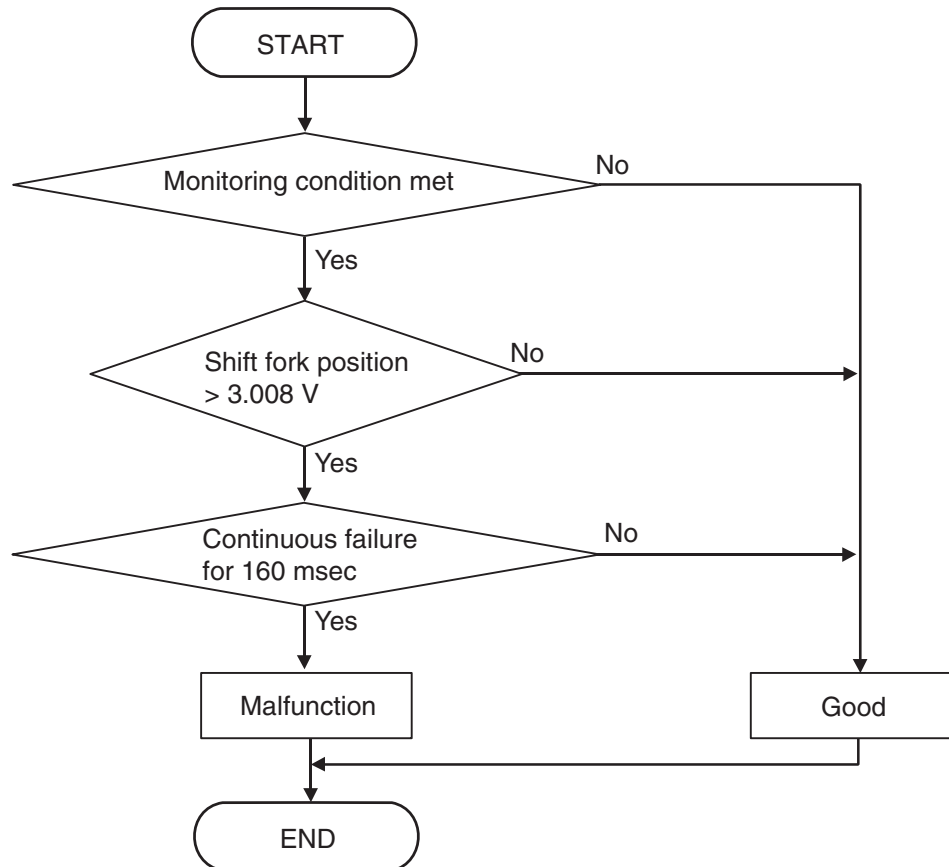

AC710680

DTC SET CONDITIONS

Check Conditions

- Voltage of battery: 8 V or more.
- Voltage of battery: 16.5 V or less.

JUDGMENT CRITERIA

- Position sensor voltage: 3.008 V or more. (160 millisecond)

OBD-II DRIVE CYCLE PATTERN

The position sensor voltage remains 3.008 V or less for 160 milliseconds.

PROBABLE CAUSES

- Malfunction of TC-SST-ECU
- Malfunction of shift fork position sensor 1

DIAGNOSTIC PROCEDURE**Required Special Tools:**

- MB991958 Scan Tool (M.U.T.-III Sub Assembly)
 - MB991824: Vehicle Communication Interface (V.C.I.)
 - MB991827 M.U.T.-III USB Cable
 - MB991910 M.U.T.-III Main Harness A

STEP 1. Scan tool CAN bus diagnostics

Using scan tool MB991958, diagnose the CAN bus lines.

Q: Is the check result normal?

YES : Go to Step 2.

NO : Repair the CAN bus lines. (Refer to GROUP 54C – Troubleshooting [P.54C-16.](#)) After repairing the CAN bus line, go to Step 2.

STEP 2. Check whether the DTC is reset.**Q: Is DTC No. P1821 set?**

YES : Go to Step 3.

NO : Intermittent malfunction. (Refer to GROUP 00 –How to Cope with Intermittent Malfunction [P.00-13.](#))

STEP 3. Scan tool Teach-In

- (1) Carry out the Item No. 1: Plausibility check. (Refer to Special Function (Teach-In Reference Table [P.22C-362.](#))
- (2) After Teach-In, check which result ("Yes" or "No") is displayed in the Data list No. 101: Normal End. (Refer to Special Function (Teach-In Reference Table [P.22C-362.](#))

Q: Which is displayed, "Yes" or "No"?

"Yes" : Replace the transaxle assembly. (Refer to [P.22C-497.](#))

"No" : Go to Step 4.

STEP 4. Replace the mechatronic assembly, and check if the DTC is reset.

- (1) Replace the mechatronic assembly. (Refer to [P.22C-505.](#))
- (2) Perform a test run of the vehicle.
- (3) Check the DTC.

Q: Is DTC No.P1821 set?

YES : Replace the transaxle assembly. (Refer to [P.22C-497.](#))

NO : This diagnosis is complete.

DTC P1822: Shift Fork Position Sensor 1 System (Output range out)

⚠ CAUTION

- If there is any problem in the CAN bus lines, an incorrect diagnostic trouble code may be set. Prior to this diagnosis, diagnose the CAN bus lines.
- Whenever the ECU is replaced, ensure that the CAN bus lines are normal.

DIAGNOSTIC FUNCTION

TC-SST-ECU checks that the output of the shift fork position sensor 1 is normal.

DESCRIPTIONS OF MONITOR METHODS

The output of the shift fork position sensor 1 is determined to be abnormal.

MONITOR EXECUTION

- Continuous

**MONITOR EXECUTION CONDITIONS
(OTHER MONITOR AND SENSOR)**

Other Monitor (There is no temporary DTC stored in memory for the item monitored below)


- P1820: Shift fork position sensor 1 system (Voltage low range out)

- P1821: Shift fork position sensor 1 system (Voltage high range out)
- P1823: Shift fork position sensor 1 system (Neutral)
- P1824: Shift fork position sensor 1 system (Poor performance)
- P1836: Shift fork 1 malfunction
- P1852: Shift fork 1 or 2 opposite direction movement
- P1855: Shift fork 3 or 4 opposite direction movement
- P1857: Odd number gear axle interlock
- P1876: Gear block 1st
- P1877: Gear block 2nd
- P1878: Gear block 3rd
- P1879: Gear block 4th
- P187A: Gear block 5th
- P187B: Gear block 6th
- P187C: Gear block reverse

Sensor (The sensor below is determined to be normal)

- Not applicable

LOGIC FLOW CHARTS (Monitor Sequence)

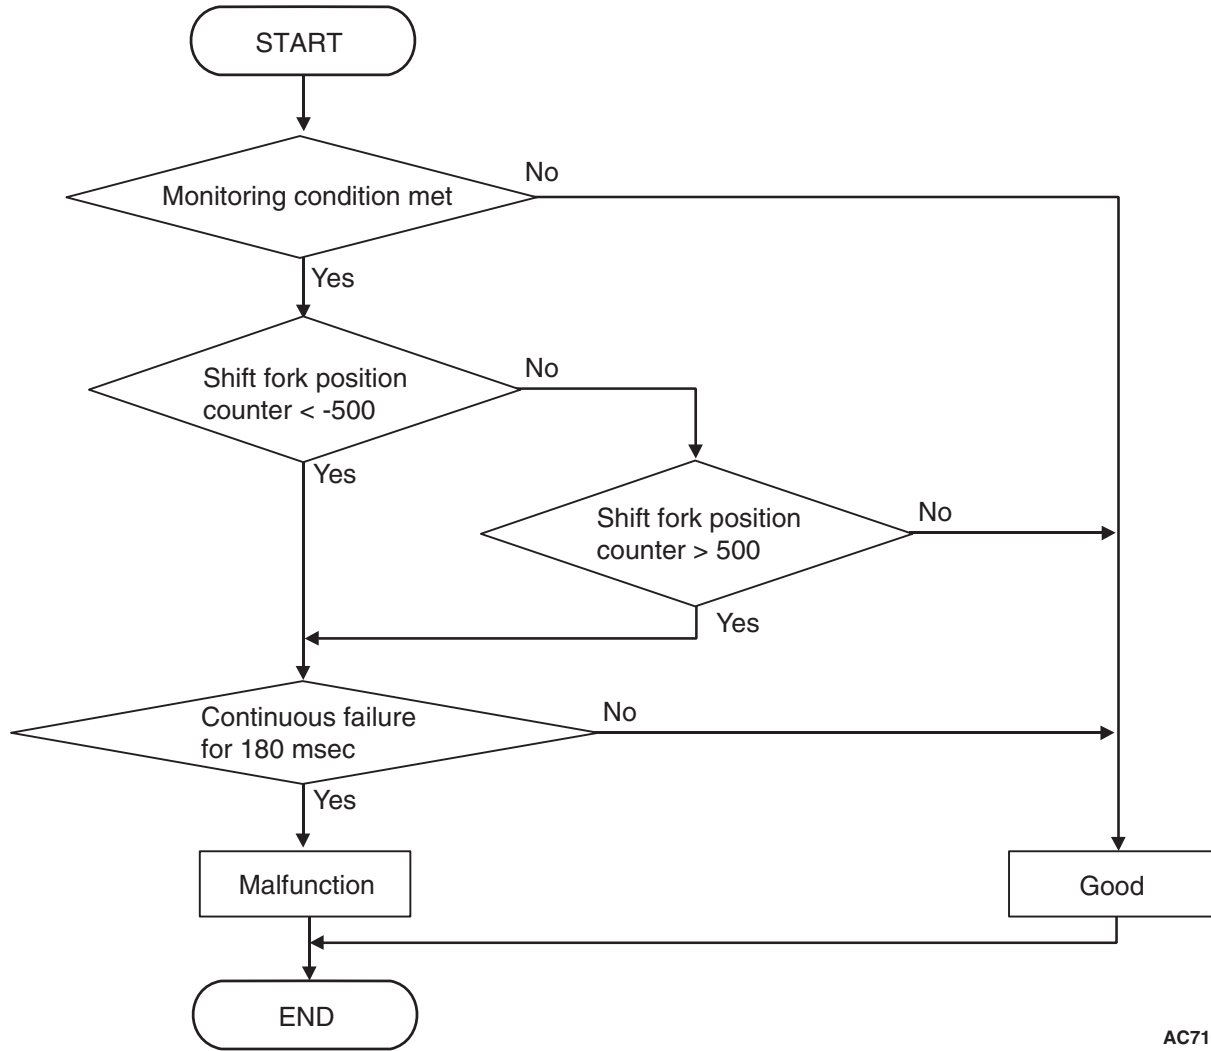

AC710681

DTC SET CONDITIONS

Check Conditions

- Voltage of battery: 8 V or more.
- Voltage of battery: 16.5 V or less.
- Engine speed: 650 r/min or more.
- Time since above engine condition: 1.5 seconds or more.
- Shift system status: Gear change mode (during shift fork moving).

JUDGMENT CRITERIA

- Shift fork 1 position counter (digitized sensor value): -500 counts or less, or shift fork 1 position counter (digitized sensor value): 500 counts or more. (180 millisecond)

OBD-II DRIVE CYCLE PATTERN

The status with the shift fork 1 position counter (digitized sensor value) -500 counts or more, or with the shift fork 1 position counter (digitized sensor value) 500 counts or less continues for 180 milliseconds.

PROBABLE CAUSES

- Malfunction of TC-SST-ECU
- Malfunction of shift fork position sensor 1

DIAGNOSTIC PROCEDURE

Required Special Tools:

- MB991958 Scan Tool (M.U.T.-III Sub Assembly)
 - MB991824: Vehicle Communication Interface (V.C.I.)
 - MB991827 M.U.T.-III USB Cable
 - MB991910 M.U.T.-III Main Harness A

STEP 1. Scan tool CAN bus diagnostics

Using scan tool MB991958, diagnose the CAN bus lines.

Q: Is the check result normal?

YES : Go to Step 2.

NO : Repair the CAN bus lines. (Refer to GROUP 54C – Troubleshooting [P.54C-16.](#)) After repairing the CAN bus line, go to Step 2.

STEP 2. Check whether the DTC is reset.

(1) Erase the DTC.

(2) With the engine idle status, operate the shift lever in the following sequence: P →R →D →R →P. (Hold each range for 5 seconds or more.)

(3) Check that the DTC is reset.

Q: Is DTC No.P1822 set?

YES : Go to Step 3.

NO : Intermittent malfunction. (Refer to GROUP 00 –How to Cope with Intermittent Malfunction [P.00-13.](#))

STEP 3. Scan tool Teach-In

(1) Carry out the Item No. 1: Plausibility check. (Refer to Special Function (Teach-In Reference Table [P.22C-362.](#))

(2) After Teach-In, check which result ("Yes" or "No") is displayed in the Data list No. 101: Normal End. (Refer to Special Function (Teach-In Reference Table [P.22C-362.](#))

Q: Which is displayed, "Yes" or "No"?

"Yes" : Replace the transaxle assembly. (Refer to [P.22C-497.](#))

"No" : Go to Step 4.

STEP 4. Replace the mechatronic assembly, and check if the DTC is reset.

(1) Replace the mechatronic assembly. (Refer to [P.22C-505.](#))

(2) With the engine idle status, operate the shift lever in the following sequence: P →R →D →R →P. (Hold each range for 5 seconds or more.)

(3) Check the DTC.

Q: Is DTC No.P1822 set?

YES : Replace the transaxle assembly. (Refer to [P.22C-497.](#))

NO : This diagnosis is complete.

DTC P1823: Shift Fork Position Sensor 1 System (Neutral)

⚠ CAUTION

- If there is any problem in the CAN bus lines, an incorrect diagnostic trouble code may be set. Prior to this diagnosis, diagnose the CAN bus lines.
- Whenever the ECU is replaced, ensure that the CAN bus lines are normal.

DIAGNOSTIC FUNCTION

TC-SST-ECU checks that the shift fork position sensor 1 is normal.

DESCRIPTIONS OF MONITOR METHODS

The shift fork position sensor 1 is determined to be abnormal.

MONITOR EXECUTION

- Continuous

**MONITOR EXECUTION CONDITIONS
(OTHER MONITOR AND SENSOR)**

Other Monitor (There is no temporary DTC stored in memory for the item monitored below)


- P1820: Shift fork position sensor 1 system (Voltage low range out)

- P1821: Shift fork position sensor 1 system (Voltage high range out)
- P1822: Shift fork position sensor 1 system (Output range out)
- P1824: Shift fork position sensor 1 system (Poor performance)
- P1836: Shift fork 1 malfunction
- P1852: Shift fork 1 or 2 opposite direction movement
- P1855: Shift fork 3 or 4 opposite direction movement
- P1857: Odd number gear axle interlock
- P1876: Gear block 1st
- P1877: Gear block 2nd
- P1878: Gear block 3rd
- P1879: Gear block 4th
- P187A: Gear block 5th
- P187B: Gear block 6th
- P187C: Gear block reverse

Sensor (The sensor below is determined to be normal)

- Not applicable

LOGIC FLOW CHARTS (Monitor Sequence)

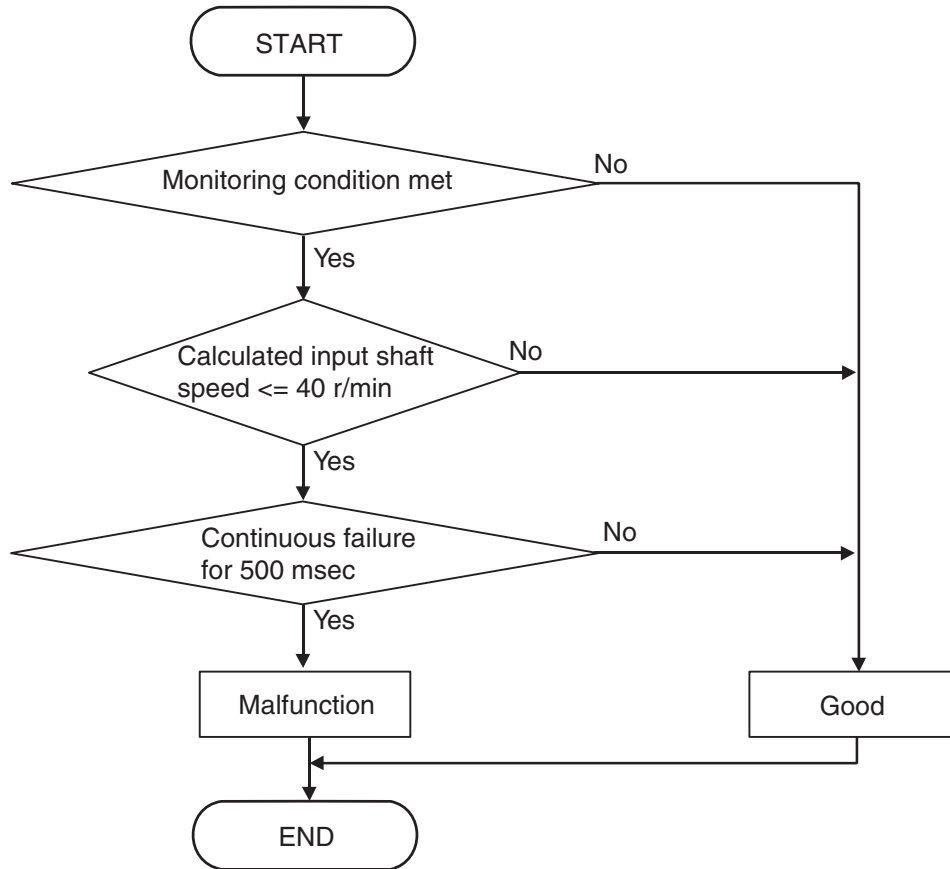

AC711383AC

DTC SET CONDITIONS

Check Conditions

- Voltage of battery: 8 V or more.
- Voltage of battery: 16.5 V or less.
- Engine speed: 650 r/min or more.
- Time since above engine condition: 1.5 seconds or more.
- Input shaft 1 (odd) speed: 500 r/min or more.
- Input shaft 2 (even) speed: 500 r/min or more.
- Shift fork 1 position: Neutral.
- Input shaft 2 (even) gear: Engaged.
- Engine speed –input shaft 2 speed: 50 r/min or less.

JUDGMENT CRITERIA

- Calculated speed: 40 r/min or less. (500 millisecond)

OBD-II DRIVE CYCLE PATTERN

The calculated speed remains 40 r/min or more for 500 millisecond.

PROBABLE CAUSES

- Malfunction of TC-SST-ECU
- Malfunction of shift fork position sensor 1

DIAGNOSTIC PROCEDURE

Required Special Tools:

- MB991958 Scan Tool (M.U.T.-III Sub Assembly)
 - MB991824: Vehicle Communication Interface (V.C.I.)
 - MB991827 M.U.T.-III USB Cable
 - MB991910 M.U.T.-III Main Harness A

STEP 1. Scan tool CAN bus diagnostics

Using scan tool MB991958, diagnose the CAN bus lines.

Q: Is the check result normal?

YES : Go to Step 2.

NO : Repair the CAN bus lines. (Refer to GROUP 54C – Troubleshooting [P.54C-16.](#)) After repairing the CAN bus line, go to Step 2.

STEP 2. Check whether the DTC is reset.

After driving in the 3rd gear, check that the DTC is reset.

Q: Is DTC No.P1823 set?

YES : Go to Step 3.

NO : Intermittent malfunction. (Refer to GROUP 00 –How to Cope with Intermittent Malfunction [P.00-13.](#))

STEP 3. Scan tool diagnostic trouble code for other systems

Check if a shift fork and shift fork position sensor-related diagnostic trouble code No. other than P1823 is stored.

Q: Is the DTC set?

YES : Go to Step 5.

NO : Go to Step 4.

STEP 4. Scan tool Teach-In

(1) Carry out the Item No. 1: Plausibility check. (Refer to Special Function (Teach-In Reference Table [P.22C-362.](#)).

(2) After Teach-In, check which result ("Yes" or "No") is displayed in the Data list No. 101: Normal End. (Refer to Special Function (Teach-In Reference Table [P.22C-362.](#)).

Q: Which is displayed, "Yes" or "No"?

"Yes" : Replace the transaxle assembly. (Refer to [P.22C-497.](#))

"No" : Go to Step 5.

STEP 5. Replace the mechatronic assembly, and check if the DTC is reset.

After driving in the 3rd gear, check that the DTC is reset.

Q: Is DTC No.P1823 set?

YES : Replace the transaxle assembly. (Refer to [P.22C-497.](#))

NO : This diagnosis is complete.

DTC P1824: Shift Fork Position Sensor 1 System (Poor performance)

⚠ CAUTION

- If there is any problem in the CAN bus lines, an incorrect diagnostic trouble code may be set. Prior to this diagnosis, diagnose the CAN bus lines.
- Whenever the ECU is replaced, ensure that the CAN bus lines are normal.

DIAGNOSTIC FUNCTION

TC-SST-ECU checks that the shift fork position sensor 1 is normal.

DESCRIPTIONS OF MONITOR METHODS

The shift fork position sensor 1 is determined to be abnormal.

MONITOR EXECUTION

- Continuous

**MONITOR EXECUTION CONDITIONS
(OTHER MONITOR AND SENSOR)**

Other Monitor (There is no temporary DTC stored in memory for the item monitored below)


- P1820: Shift fork position sensor 1 system (Voltage low range out)

- P1821: Shift fork position sensor 1 system (Voltage high range out)
- P1822: Shift fork position sensor 1 system (Output range out)
- P1823: Shift fork position sensor 1 system (Neutral)
- P1836: Shift fork 1 malfunction
- P1852: Shift fork 1 or 2 opposite direction movement
- P1855: Shift fork 3 or 4 opposite direction movement
- P1857: Odd number gear axle interlock
- P1876: Gear block 1st
- P1877: Gear block 2nd
- P1878: Gear block 3rd
- P1879: Gear block 4th
- P187A: Gear block 5th
- P187B: Gear block 6th
- P187C: Gear block reverse

Sensor (The sensor below is determined to be normal)

- Not applicable

LOGIC FLOW CHARTS (Monitor Sequence) <Shift fork 1 current gear: 1st gear>

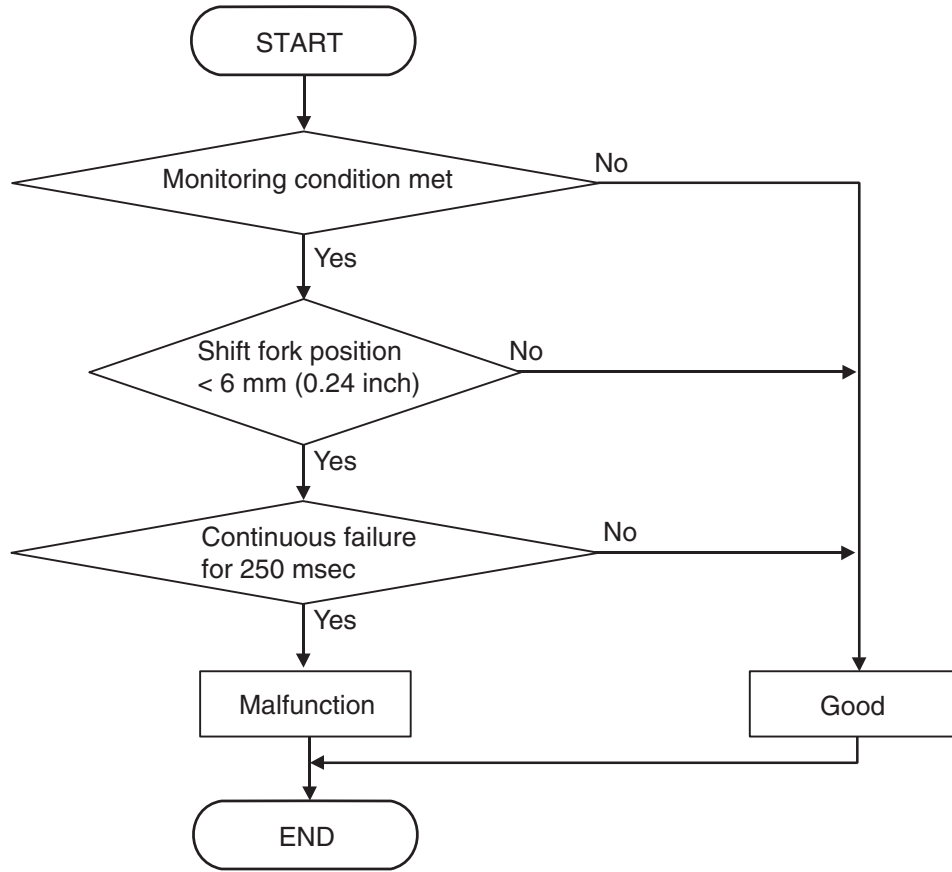

AC710682

DTC SET CONDITIONS <SHIFT FORK 1 CURRENT GEAR: 1ST GEAR>

Check Conditions

- Voltage of battery: 8 V or more.
- Voltage of battery: 16.5 V or less.
- Engine speed: 650 r/min or more.
- Time since above engine condition: 1.5 seconds or more.
- Input shaft 1 (odd) speed: 500 r/min or more.
- Shift fork 1 current gear: 1st gear.

- Clutch 1 (odd) transmit torque: 40 N· m (30 ft-lb) or more.
- Requested shift fork: Not shift fork 1.


JUDGMENT CRITERIA

- Shift fork 1 position: 6 mm (0.24 inch) or less. (250 millisecond)

OBD-II DRIVE CYCLE PATTERN <SHIFT FORK 1 CURRENT GEAR: 1ST GEAR>

The travel distance of the shift fork 1 remains 6 mm (0.24 inch) or more for 250 millisecond.

LOGIC FLOW CHARTS (Monitor Sequence) <Shift fork 1 current gear: Reverse gear>

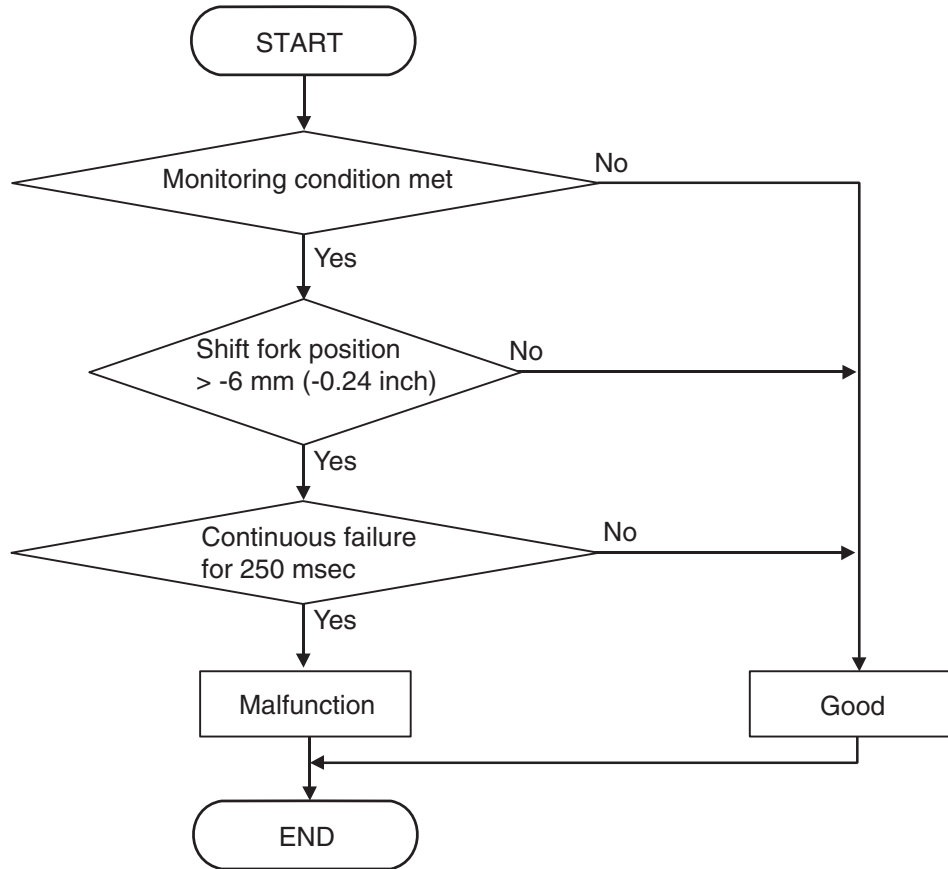

AC710683

DTC SET CONDITIONS <SHIFT FORK 1 CURRENT GEAR: REVERSE GEAR>

Check Conditions

- Voltage of battery: 8 V or more.
- Voltage of battery: 16.5 V or less.
- Engine speed: 650 r/min or more.
- Time since above engine condition: 1.5 seconds or more.
- Input shaft 1 (odd) speed: 500 r/min or more.
- Shift fork 1 current gear: Reverse gear.
- Clutch 1 (odd) transmit torque: 40 N·m (30 ft-lb) or more.
- Requested shift fork: Not shift fork 1.

JUDGMENT CRITERIA

- Shift fork 1 position: -6 mm (-0.24 inch) or more. (250 millisecond)

OBD-II DRIVE CYCLE PATTERN <SHIFT FORK 1 CURRENT GEAR: REVERSE GEAR>

The travel distance of the shift fork 1 remains -6 mm (-0.24 inch) or less for 250 millisecond.

PROBABLE CAUSES

- Malfunction of TC-SST-ECU
- Malfunction of shift fork position sensor 1

DIAGNOSTIC PROCEDURE

Required Special Tools:

- MB991958 Scan Tool (M.U.T.-III Sub Assembly)
 - MB991824: Vehicle Communication Interface (V.C.I.)
 - MB991827 M.U.T.-III USB Cable
 - MB991910 M.U.T.-III Main Harness A

STEP 1. Scan tool CAN bus diagnostics

Using scan tool MB991958, diagnose the CAN bus lines.

Q: Is the check result normal?

YES : Go to Step 2.

NO : Repair the CAN bus lines. (Refer to GROUP 54C – Troubleshooting [P.54C-16.](#)) After repairing the CAN bus line, go to Step 2.

STEP 2. Check whether the DTC is reset.

(1) Erase the DTC.

(2) With the engine idle status, operate the shift lever in the following sequence: P →R →D →R →P. (Hold each range for 5 seconds or more.)

(3) Check that the DTC is reset.

Q: Is DTC No.P1824 set?

YES : Go to Step 3.

NO : Intermittent malfunction. (Refer to GROUP 00 –How to Cope with Intermittent Malfunction [P.00-13.](#))

STEP 3. Scan tool Teach-In

(1) Carry out the Item No. 1: Plausibility check. (Refer to Special Function (Teach-In Reference Table [P.22C-362.](#)))

(2) After Teach-In, check which result ("Yes" or "No") is displayed in the Data list No. 101: Normal End. (Refer to Special Function (Teach-In Reference Table [P.22C-362.](#)))

Q: Which is displayed, "Yes" or "No"?

"Yes" : Replace the transaxle assembly. (Refer to [P.22C-497.](#))

"No" : Go to Step 4.

STEP 4. Replace the mechatronic assembly, and check if the DTC is reset.

(1) Replace the mechatronic assembly. (Refer to [P.22C-505.](#))

(2) With the engine idle status, operate the shift lever in the following sequence: P →R →D →R →P. (Hold each range for 5 seconds or more.)

(3) Check the DTC.

Q: Is DTC No.P1824 set?

YES : Replace the transaxle assembly. (Refer to [P.22C-497.](#))

NO : This diagnosis is complete.

DTC P1825: Shift Fork Position Sensor 2 System (Voltage low range out)

⚠ CAUTION

- If there is any problem in the CAN bus lines, an incorrect diagnostic trouble code may be set. Prior to this diagnosis, diagnose the CAN bus lines.
- Whenever the ECU is replaced, ensure that the CAN bus lines are normal.

DIAGNOSTIC FUNCTION

TC-SST-ECU checks that the voltage of the shift fork position sensor 2 is normal.

DESCRIPTIONS OF MONITOR METHODS

The voltage of the shift fork position sensor 2 is too low.

MONITOR EXECUTION

- Continuous

**MONITOR EXECUTION CONDITIONS
(OTHER MONITOR AND SENSOR)**

Other Monitor (There is no temporary DTC stored in memory for the item monitored below)


- P1826: Shift fork position sensor 2 system (Voltage high range out)

- P1827: Shift fork position sensor 2 system (Output range out)
- P1828: Shift fork position sensor 2 system (Neutral)
- P1829: Shift fork position sensor 2 system (Poor performance)
- P183D: Shift fork 2 malfunction
- P1852: Shift fork 1 or 2 opposite direction movement
- P1855: Shift fork 3 or 4 opposite direction movement
- P1857: Odd number gear axle interlock
- P1876: Gear block 1st
- P1877: Gear block 2nd
- P1878: Gear block 3rd
- P1879: Gear block 4th
- P187A: Gear block 5th
- P187B: Gear block 6th
- P187C: Gear block reverse

Sensor (The sensor below is determined to be normal)

- Not applicable

LOGIC FLOW CHARTS (Monitor Sequence)

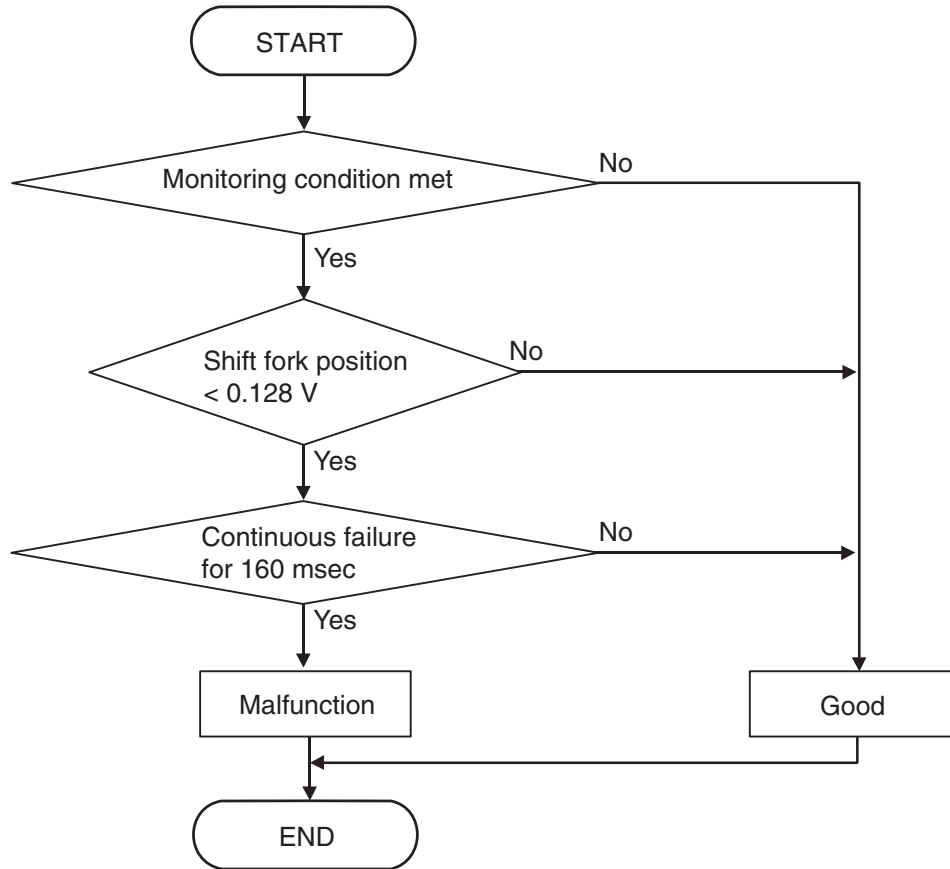

AC710676

DTC SET CONDITIONS**Check Conditions**

- Voltage of battery: 8 V or more.
- Voltage of battery: 16.5 V or less.

JUDGMENT CRITERIA

- Position sensor voltage: 0.128 V or less. (160 millisecond)

OBD-II DRIVE CYCLE PATTERN

The position sensor voltage remains 0.128 V or more for 160 millisecond.

PROBABLE CAUSES

- Malfunction of TC-SST-ECU
- Malfunction of shift fork position sensor 2

DIAGNOSTIC PROCEDURE**Required Special Tools:**

- MB991958 Scan Tool (M.U.T.-III Sub Assembly)
 - MB991824: Vehicle Communication Interface (V.C.I.)
 - MB991827 M.U.T.-III USB Cable
 - MB991910 M.U.T.-III Main Harness A

STEP 1. Scan tool CAN bus diagnostics

Using scan tool MB991958, diagnose the CAN bus lines.

Q: Is the check result normal?

YES : Go to Step 2.

NO : Repair the CAN bus lines. (Refer to GROUP 54C – Troubleshooting P.54C-16.) After repairing the CAN bus line, go to Step 2.

STEP 2. Check whether the DTC is reset.

Q: Is DTC No. P1825 set?

YES : Go to Step 3.

NO : Intermittent malfunction. (Refer to GROUP 00 –How to Cope with Intermittent Malfunction [P.00-13.](#))

STEP 3. Scan tool Teach-In

(1) Carry out the Item No. 1: Plausibility check. (Refer to Special Function (Teach-In Reference Table [P.22C-362.](#))

(2) After Teach-In, check which result ("Yes" or "No") is displayed in the Data list No. 101: Normal End. (Refer to Special Function (Teach-In Reference Table [P.22C-362.](#))

Q: Which is displayed, "Yes" or "No"?

"Yes" : Replace the transaxle assembly. (Refer to [P.22C-497.](#))

"No" : Go to Step 4.

STEP 4. Replace the mechatronic assembly, and check if the DTC is reset.

(1) Replace the mechatronic assembly. (Refer to [P.22C-505.](#))

(2) Perform a test run of the vehicle.

(3) Check the DTC.

Q: Is DTC No.P1825 set?

YES : Replace the transaxle assembly. (Refer to [P.22C-497.](#))

NO : This diagnosis is complete.

DTC P1826: Shift Fork Position Sensor 2 System (Voltage high range out)

CAUTION

- If there is any problem in the CAN bus lines, an incorrect diagnostic trouble code may be set. Prior to this diagnosis, diagnose the CAN bus lines.
- Whenever the ECU is replaced, ensure that the CAN bus lines are normal.

DIAGNOSTIC FUNCTION

TC-SST-ECU checks that the voltage of the shift fork position sensor 2 is normal.

DESCRIPTIONS OF MONITOR METHODS

The voltage of the shift fork position sensor 2 is too high.

MONITOR EXECUTION

- Continuous

**MONITOR EXECUTION CONDITIONS
(OTHER MONITOR AND SENSOR)**

Other Monitor (There is no temporary DTC stored in memory for the item monitored below)


- P1825: Shift fork position sensor 2 system (Voltage low range out)
- P1827: Shift fork position sensor 2 system (Output range out)
- P1828: Shift fork position sensor 2 system (Neutral)
- P1829: Shift fork position sensor 2 system (Poor performance)
- P183D: Shift fork 2 malfunction
- P1852: Shift fork 1 or 2 opposite direction movement
- P1855: Shift fork 3 or 4 opposite direction movement
- P1857: Odd number gear axle interlock
- P1876: Gear block 1st
- P1877: Gear block 2nd

- P1878: Gear block 3rd
- P1879: Gear block 4th
- P187A: Gear block 5th
- P187B: Gear block 6th
- P187C: Gear block reverse

Sensor (The sensor below is determined to be normal)

- Not applicable

LOGIC FLOW CHARTS (Monitor Sequence)

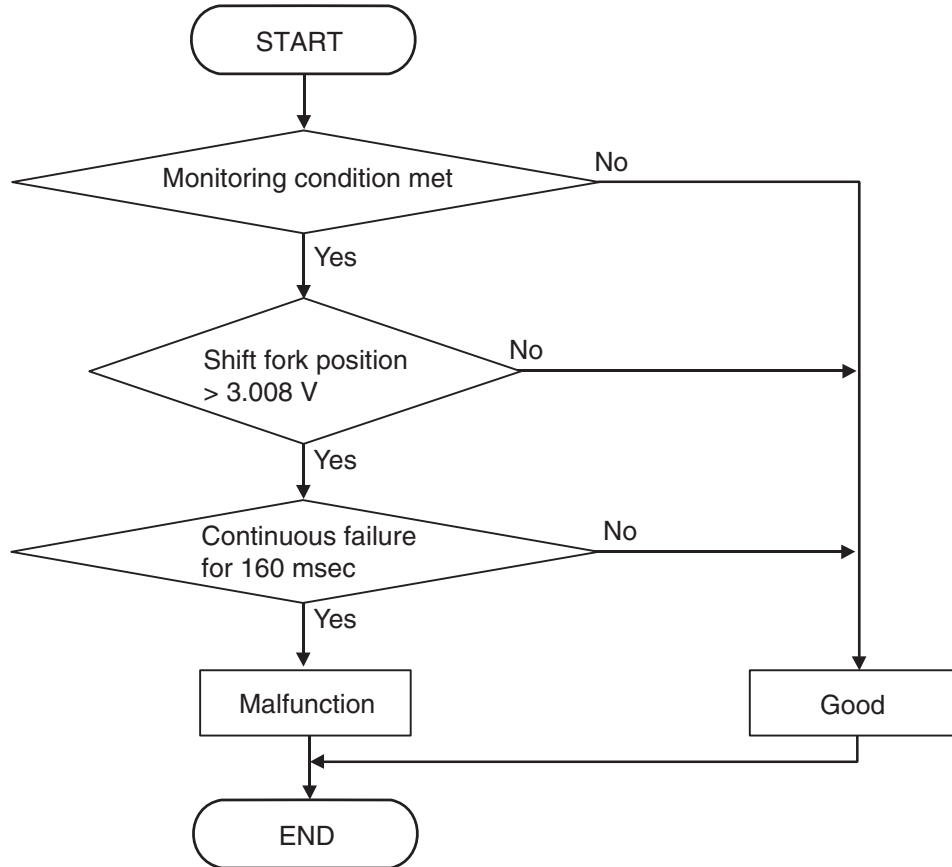

AC710680

DTC SET CONDITIONS

Check Conditions

- Voltage of battery: 8 V or more.
- Voltage of battery: 16.5 V or less.

JUDGMENT CRITERIA

- Position sensor voltage: 3.008 V or more. (160 millisecond)

OBD-II DRIVE CYCLE PATTERN

The position sensor voltage remains 3.008 V or less for 160 millisecond.

PROBABLE CAUSES

- Malfunction of TC-SST-ECU
- Malfunction of shift fork position sensor 2

DIAGNOSTIC PROCEDURE

Required Special Tools:

- MB991958 Scan Tool (M.U.T.-III Sub Assembly)
 - MB991824: Vehicle Communication Interface (V.C.I.)
 - MB991827 M.U.T.-III USB Cable
 - MB991910 M.U.T.-III Main Harness A

STEP 1. Scan tool CAN bus diagnostics

Using scan tool MB991958, diagnose the CAN bus lines.

Q: Is the check result normal?

YES : Go to Step 2.

NO : Repair the CAN bus lines. (Refer to GROUP 54C – Troubleshooting [P.54C-16](#).) After repairing the CAN bus line, go to Step 2.

STEP 2. Check whether the DTC is reset.

Q: Is DTC No. P1826 set?

YES : Go to Step 3.

NO : Intermittent malfunction. (Refer to GROUP 00 –How to Cope with Intermittent Malfunction [P.00-13](#).)

STEP 3. Scan tool Teach-In

- (1) Carry out the Item No. 1: Plausibility check. (Refer to Special Function (Teach-In Reference Table [P.22C-362](#).)
- (2) After Teach-In, check which result ("Yes" or "No") is displayed in the Data list No. 101: Normal End. (Refer to Special Function (Teach-In Reference Table [P.22C-362](#).)

Q: Which is displayed, "Yes" or "No"?

"Yes" : Replace the transaxle assembly. (Refer to [P.22C-497](#).)

"No" : Go to Step 4.

STEP 4. Replace the mechatronic assembly, and check if the DTC is reset.

- (1) Replace the mechatronic assembly. (Refer to [P.22C-505](#).)
- (2) Perform a test run of the vehicle.
- (3) Check the DTC.

Q: Is DTC No.P1826 set?

YES : Replace the transaxle assembly. (Refer to [P.22C-497](#).)

NO : This diagnosis is complete.

DTC P1827: Shift Fork Position Sensor 2 System (Output range out)**⚠ CAUTION**

- If there is any problem in the CAN bus lines, an incorrect diagnostic trouble code may be set. Prior to this diagnosis, diagnose the CAN bus lines.
- Whenever the ECU is replaced, ensure that the CAN bus lines are normal.

DIAGNOSTIC FUNCTION

TC-SST-ECU checks that the output of the shift fork position sensor 2 is normal.

DESCRIPTIONS OF MONITOR METHODS

The output of the shift fork position sensor 2 is determined to be abnormal.

MONITOR EXECUTION

- Continuous

**MONITOR EXECUTION CONDITIONS
(OTHER MONITOR AND SENSOR)**

Other Monitor (There is no temporary DTC stored in memory for the item monitored below)


- P1825: Shift fork position sensor 2 system (Voltage low range out)

- P1826: Shift fork position sensor 2 system (Voltage high range out)
- P1828: Shift fork position sensor 2 system (Neutral)
- P1829: Shift fork position sensor 2 system (Poor performance)
- P183D: Shift fork 2 malfunction
- P1852: Shift fork 1 or 2 opposite direction movement
- P1855: Shift fork 3 or 4 opposite direction movement
- P1857: Odd number gear axle interlock
- P1876: Gear block 1st
- P1877: Gear block 2nd
- P1878: Gear block 3rd
- P1879: Gear block 4th
- P187A: Gear block 5th
- P187B: Gear block 6th
- P187C: Gear block reverse

Sensor (The sensor below is determined to be normal)

- Not applicable

LOGIC FLOW CHARTS (Monitor Sequence)

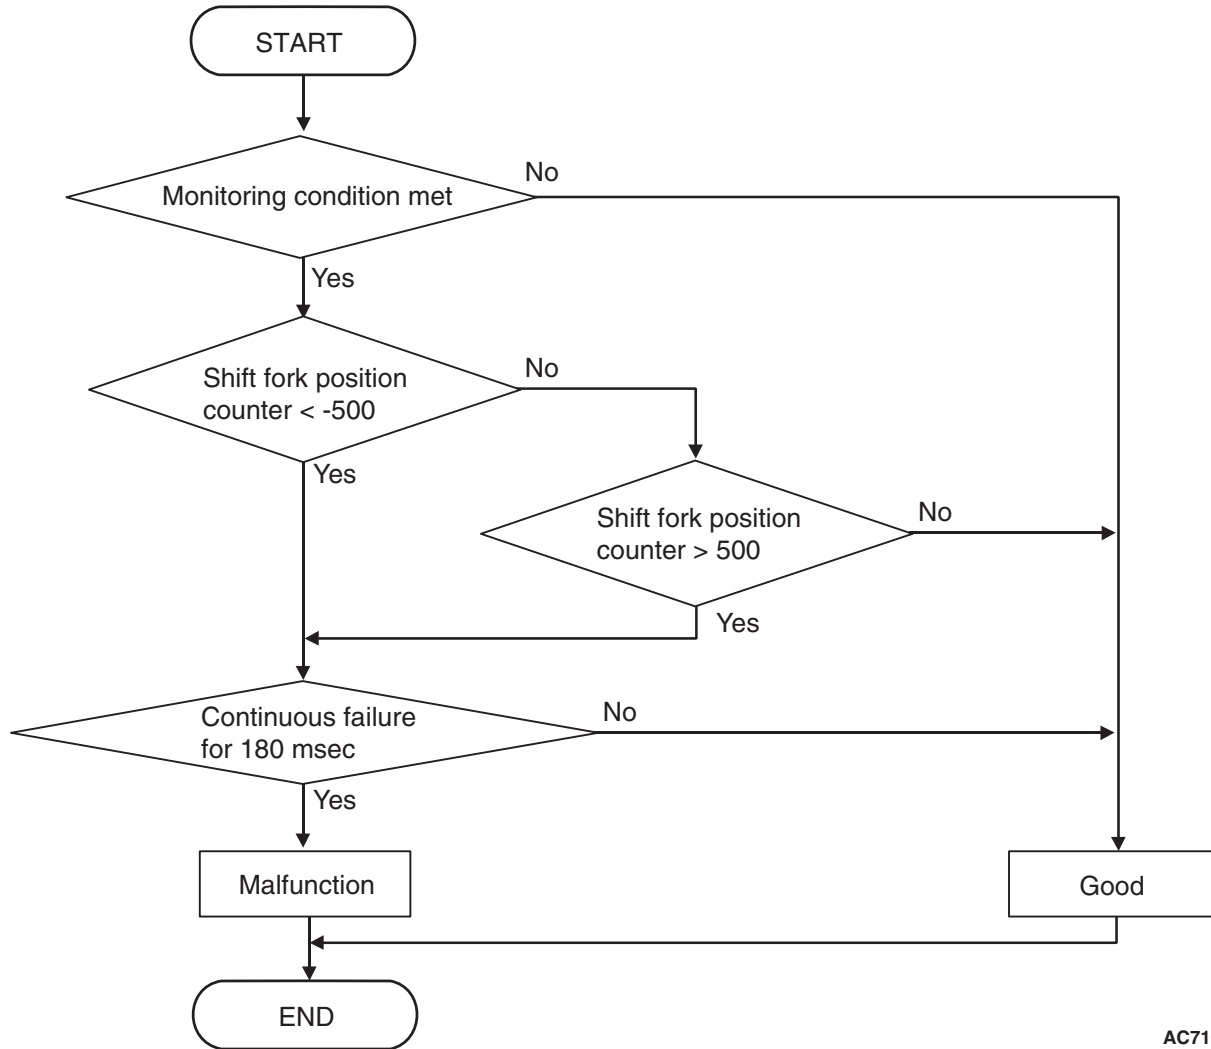

AC710681

DTC SET CONDITIONS

Check Conditions

- Voltage of battery: 8 V or more.
- Voltage of battery: 16.5 V or less.
- Engine speed: 650 r/min or more.
- Time since above engine condition: 1.5 seconds or more.
- Shift system status: Gear change mode (during shift fork moving).

JUDGMENT CRITERIA

- Shift fork 2 position counter (digitized sensor value): -500 counts or less, or shift fork 2 position counter (digitized sensor value): 500 counts or more. (180 millisecond)

OBD-II DRIVE CYCLE PATTERN

The status with the shift fork 2 position counter (digitized sensor value) -500 counts or more, or with the shift fork 2 position counter (digitized sensor value) 500 counts or less continues for 180 millisecond.

PROBABLE CAUSES

- Malfunction of TC-SST-ECU
- Malfunction of shift fork position sensor 2

DIAGNOSTIC PROCEDURE**Required Special Tools:**

- MB991958 Scan Tool (M.U.T.-III Sub Assembly)
 - MB991824: Vehicle Communication Interface (V.C.I.)
 - MB991827 M.U.T.-III USB Cable
 - MB991910 M.U.T.-III Main Harness A

STEP 1. Scan tool CAN bus diagnostics

Using scan tool MB991958, diagnose the CAN bus lines.

Q: Is the check result normal?

YES : Go to Step 2.

NO : Repair the CAN bus lines. (Refer to GROUP 54C – Troubleshooting [P.54C-16.](#)) After repairing the CAN bus line, go to Step 2.

STEP 2. Check whether the DTC is reset.

After driving in the 5th gear, check that the DTC is reset.

Q: Is DTC No. P1827 set?

YES : Go to Step 3.

NO : Intermittent malfunction. (Refer to GROUP 00 –How to Cope with Intermittent Malfunction [P.00-13.](#))

STEP 3. Scan tool Teach-In

- (1) Carry out the Item No. 1: Plausibility check. (Refer to Special Function (Teach-In Reference Table [P.22C-362.](#))
- (2) After Teach-In, check which result ("Yes" or "No") is displayed in the Data list No. 101: Normal End. (Refer to Special Function (Teach-In Reference Table [P.22C-362.](#))

Q: Which is displayed, "Yes" or "No"?

"Yes" : Replace the transaxle assembly. (Refer to [P.22C-497.](#))

"No" : Go to Step 4.

STEP 4. Replace the mechatronic assembly, and check if the DTC is reset.

- (1) Replace the mechatronic assembly. (Refer to [P.22C-505.](#))
- (2) Drive in the 5th gear.
- (3) Check the DTC.

Q: Is DTC No.P1827 set?

YES : Replace the transaxle assembly. (Refer to [P.22C-497.](#))

NO : This diagnosis is complete.

DTC P1828: Shift Fork Position Sensor 2 System (Neutral)

⚠ CAUTION

- If there is any problem in the CAN bus lines, an incorrect diagnostic trouble code may be set. Prior to this diagnosis, diagnose the CAN bus lines.
- Whenever the ECU is replaced, ensure that the CAN bus lines are normal.

DIAGNOSTIC FUNCTION

TC-SST-ECU checks that the shift fork position sensor 2 is normal.

DESCRIPTIONS OF MONITOR METHODS

The shift fork position sensor 2 is determined to be abnormal.

MONITOR EXECUTION

- Continuous

**MONITOR EXECUTION CONDITIONS
(OTHER MONITOR AND SENSOR)**

Other Monitor (There is no temporary DTC stored in memory for the item monitored below)


- P1825: Shift fork position sensor 2 system (Voltage low range out)

- P1826: Shift fork position sensor 2 system (Voltage high range out)
- P1827: Shift fork position sensor 2 system (Output range out)
- P1829: Shift fork position sensor 2 system (Poor performance)
- P183D: Shift fork 2 malfunction
- P1852: Shift fork 1 or 2 opposite direction movement
- P1855: Shift fork 3 or 4 opposite direction movement
- P1857: Odd number gear axle interlock
- P1876: Gear block 1st
- P1877: Gear block 2nd
- P1878: Gear block 3rd
- P1879: Gear block 4th
- P187A: Gear block 5th
- P187B: Gear block 6th
- P187C: Gear block reverse

Sensor (The sensor below is determined to be normal)

- Not applicable

LOGIC FLOW CHARTS (Monitor Sequence)

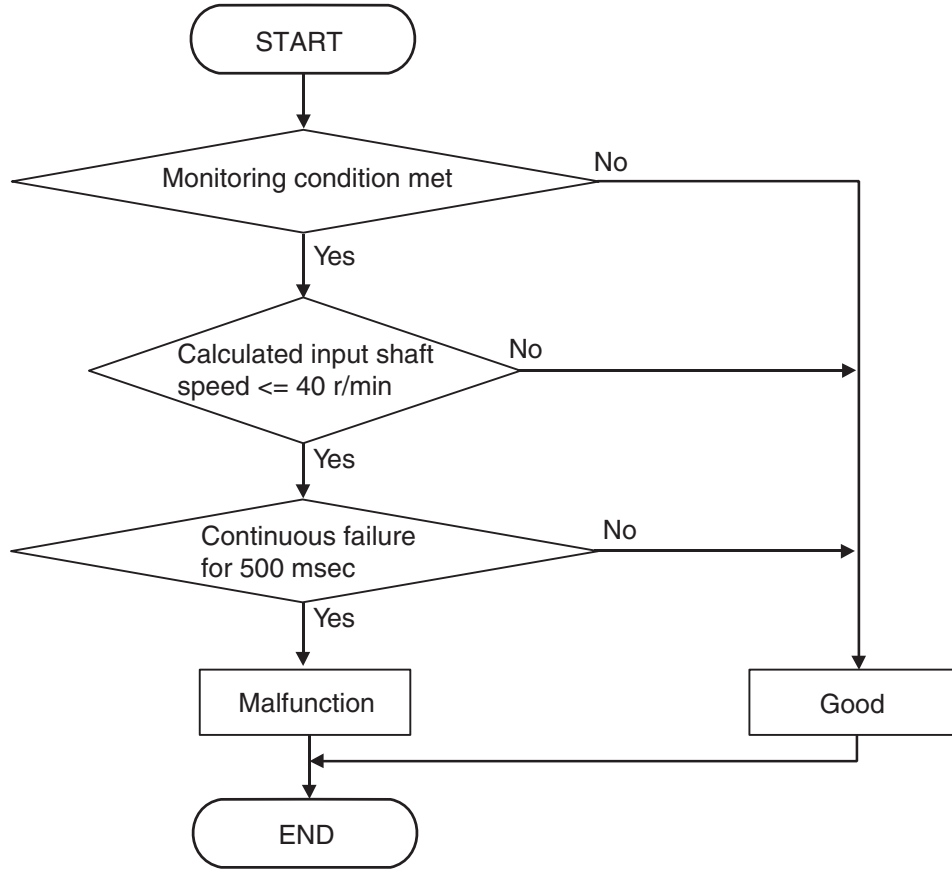

AC711383AC

DTC SET CONDITIONS

Check Conditions

- Voltage of battery: 8 V or more.
- Voltage of battery: 16.5 V or less.
- Engine speed: 650 r/min or more.
- Time since above engine condition: 1.5 seconds or more.
- Input shaft 1 (odd) speed: 500 r/min or more.
- Input shaft 2 (even) speed: 500 r/min or more.
- Shift fork 2 position: Neutral.
- Input shaft 2 (even) gear: Engaged.
- Engine speed –input shaft 2 speed: 50 r/min or less.

JUDGMENT CRITERIA

- Calculated speed: 40 r/min or less. (500 millisecond)

OBD-II DRIVE CYCLE PATTERN

The calculated speed remains 40 r/min or more for 500 millisecond.

PROBABLE CAUSES

- Malfunction of TC-SST-ECU
- Malfunction of shift fork position sensor 2

DIAGNOSTIC PROCEDURE

Required Special Tools:

- MB991958 Scan Tool (M.U.T.-III Sub Assembly)
 - MB991824: Vehicle Communication Interface (V.C.I.)
 - MB991827 M.U.T.-III USB Cable
 - MB991910 M.U.T.-III Main Harness A

STEP 1. Scan tool CAN bus diagnostics

Using scan tool MB991958, diagnose the CAN bus lines.

Q: Is the check result normal?

YES : Go to Step 2.

NO : Repair the CAN bus lines. (Refer to GROUP 54C – Troubleshooting [P.54C-16.](#)) After repairing the CAN bus line, go to Step 2.

STEP 2. Check whether the DTC is reset.

After driving in the 3rd gear, check that the DTC is reset.

Q: Is DTC No.P1828 set?

YES : Go to Step 3.

NO : Intermittent malfunction. (Refer to GROUP 00 –How to Cope with Intermittent Malfunction [P.00-13.](#))

STEP 3. Scan tool diagnostic trouble code for other systems

Check if a shift fork and shift fork position sensor-related diagnostic trouble code No. other than P1828 is stored.

Q: Is the DTC set?

YES : Go to Step 5.

NO : Go to Step 4.

STEP 4. Scan tool Teach-In

(1) Carry out the Item No. 1: Plausibility check. (Refer to Special Function (Teach-In Reference Table [P.22C-362.](#)).

(2) After Teach-In, check which result ("Yes" or "No") is displayed in the Data list No. 101: Normal End. (Refer to Special Function (Teach-In Reference Table [P.22C-362.](#)).

Q: Which is displayed, "Yes" or "No"?

"Yes" : Replace the transaxle assembly. (Refer to [P.22C-497.](#))

"No" : Go to Step 5.

STEP 5. Replace the mechatronic assembly, and check if the DTC is reset.

After driving in the 3rd gear, check that the DTC is reset.

Q: Is DTC No.P1828 set?

YES : Replace the transaxle assembly. (Refer to [P.22C-497.](#))

NO : This diagnosis is complete.

DTC P1829: Shift Fork Position Sensor 2 System (Poor performance)

⚠ CAUTION

- If there is any problem in the CAN bus lines, an incorrect diagnostic trouble code may be set. Prior to this diagnosis, diagnose the CAN bus lines.
- Whenever the ECU is replaced, ensure that the CAN bus lines are normal.

DIAGNOSTIC FUNCTION

TC-SST-ECU checks that the shift fork position sensor 2 is normal.

DESCRIPTIONS OF MONITOR METHODS

The shift fork position sensor 2 is determined to be abnormal.

MONITOR EXECUTION

- Continuous

**MONITOR EXECUTION CONDITIONS
(OTHER MONITOR AND SENSOR)**

Other Monitor (There is no temporary DTC stored in memory for the item monitored below)


- P1825: Shift fork position sensor 2 system (Voltage low range out)

- P1826: Shift fork position sensor 2 system (Voltage high range out)
- P1827: Shift fork position sensor 2 system (Output range out)
- P1828: Shift fork position sensor 2 system (Neutral)
- P183D: Shift fork 2 malfunction
- P1852: Shift fork 1 or 2 opposite direction movement
- P1855: Shift fork 3 or 4 opposite direction movement
- P1857: Odd number gear axle interlock
- P1876: Gear block 1st
- P1877: Gear block 2nd
- P1878: Gear block 3rd
- P1879: Gear block 4th
- P187A: Gear block 5th
- P187B: Gear block 6th
- P187C: Gear block reverse

Sensor (The sensor below is determined to be normal)

- Not applicable

LOGIC FLOW CHARTS (Monitor Sequence) <Shift fork 2 current gear: 5th gear>

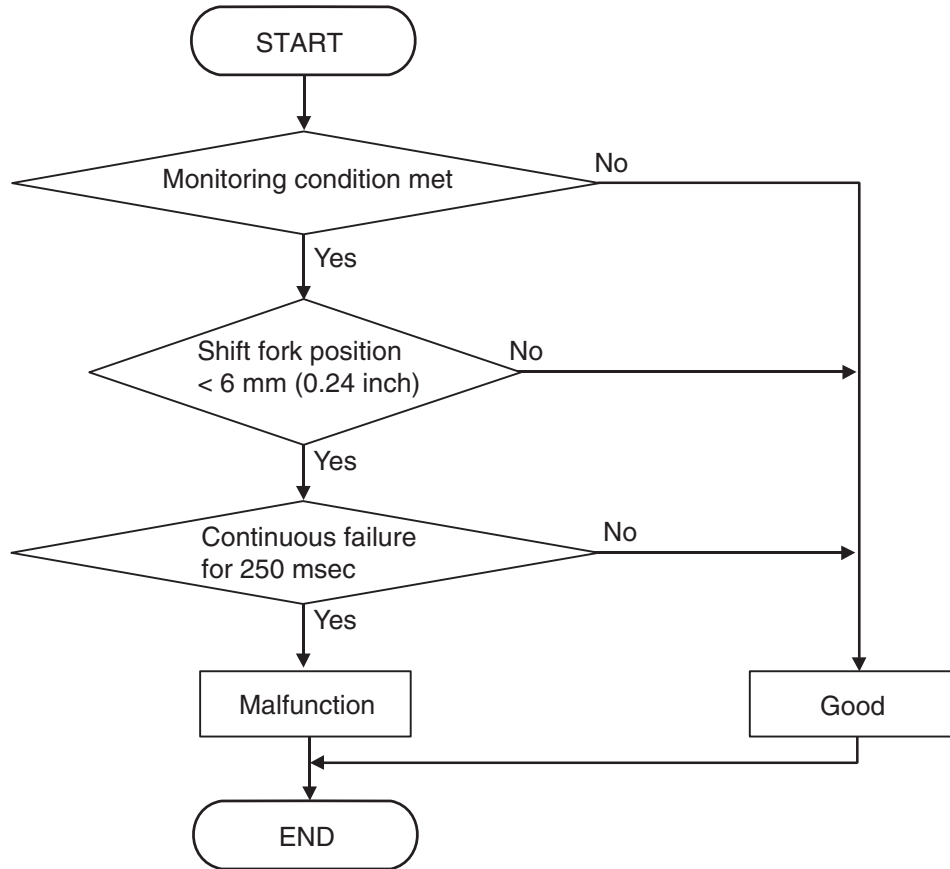

AC710682

**DTC SET CONDITIONS <SHIFT FORK 2
CURRENT GEAR: 5TH GEAR>**

Check Conditions

- Voltage of battery: 8 V or more.
- Voltage of battery: 16.5 V or less.
- Engine speed: 650 r/min or more.
- Time since above engine condition: 1.5 seconds or more.
- Input shaft 1 (odd) speed: 500 r/min or more.
- Shift fork 2 current gear: 5th gear.

- Clutch 1 (odd) transmit torque: 40 N· m (30 ft-lb) or more.
- Requested shift fork: Not shift fork 2.


JUDGMENT CRITERIA

- Shift fork 2 position: 6 mm (0.24 inch) or less. (250 millisecond)

OBD-II DRIVE CYCLE PATTERN <SHIFT FORK 2 CURRENT GEAR: 5TH GEAR>

The travel distance of the shift fork 2 remains 6 mm (0.24 inch) or more for 250 millisecond.

LOGIC FLOW CHARTS (Monitor Sequence) <Shift fork 2 current gear: 3rd gear>

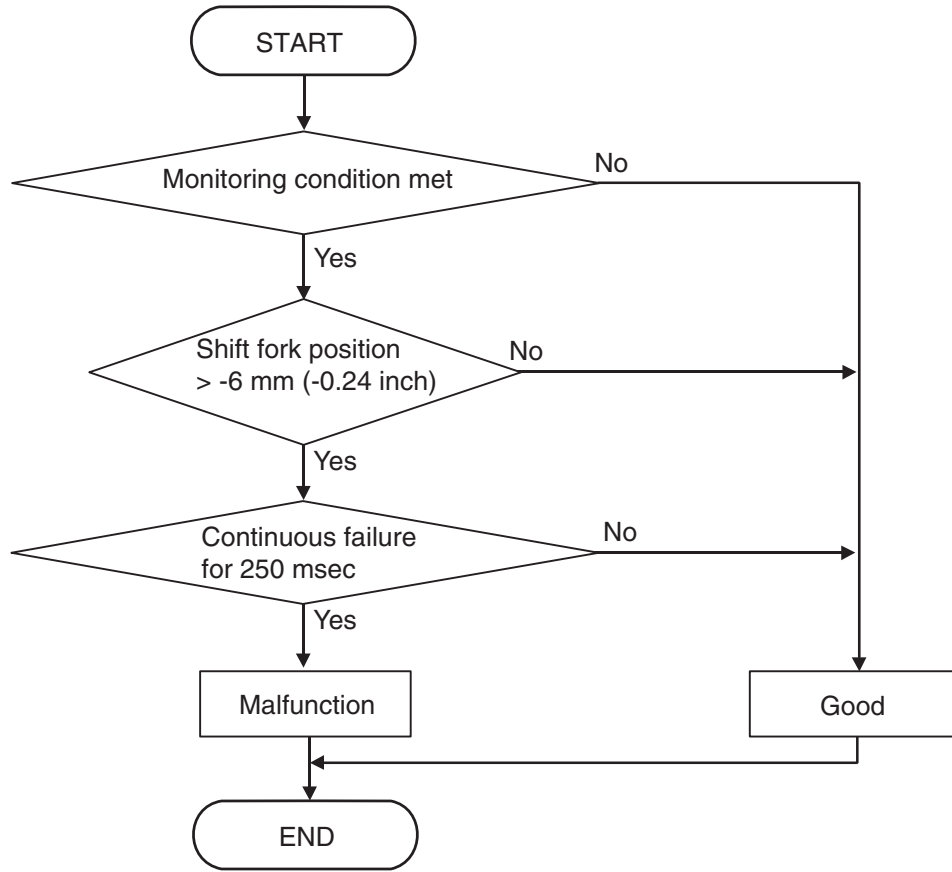

AC710683

DTC SET CONDITIONS <SHIFT FORK 2 CURRENT GEAR: 3RD GEAR>

Check Conditions

- Voltage of battery: 8 V or more.
- Voltage of battery: 16.5 V or less.
- Engine speed: 650 r/min or more.
- Time since above engine condition: 1.5 seconds or more.
- Input shaft 1 (odd) speed: 500 r/min or more.
- Shift fork 2 current gear: 3rd gear.
- Clutch 1 (odd) transmit torque: 40 N·m (30 ft-lb) or more.
- Requested shift fork: Not shift fork 2.

JUDGMENT CRITERIA

- Shift fork 2 position: -6 mm (-0.24 inch) or more. (250 millisecond)

OBD-II DRIVE CYCLE PATTERN <SHIFT FORK 2 CURRENT GEAR: 3RD GEAR>

The travel distance of the shift fork 2 remains -6 mm (-0.24 inch) or less for 250 millisecond.

PROBABLE CAUSES

- Malfunction of TC-SST-ECU
- Malfunction of shift fork position sensor 2

DIAGNOSTIC PROCEDURE

Required Special Tools:

- MB991958 Scan Tool (M.U.T.-III Sub Assembly)
 - MB991824: Vehicle Communication Interface (V.C.I.)
 - MB991827 M.U.T.-III USB Cable
 - MB991910 M.U.T.-III Main Harness A

STEP 1. Scan tool CAN bus diagnostics

Using scan tool MB991958, diagnose the CAN bus lines.

Q: Is the check result normal?

YES : Go to Step 2.

NO : Repair the CAN bus lines. (Refer to GROUP 54C – Troubleshooting [P.54C-16.](#)) After repairing the CAN bus line, go to Step 2.

STEP 2. Check whether the DTC is reset.

After driving in the 5th gear, check that the DTC is reset.

Q: Is DTC No. P1829 set?

YES : Go to Step 3.

NO : Intermittent malfunction. (Refer to GROUP 00 –How to Cope with Intermittent Malfunction [P.00-13.](#))

STEP 3. Scan tool Teach-In

(1) Carry out the Item No. 1: Plausibility check. (Refer to Special Function (Teach-In Reference Table [P.22C-362.](#))

(2) After Teach-In, check which result ("Yes" or "No") is displayed in the Data list No. 101: Normal End. (Refer to Special Function (Teach-In Reference Table [P.22C-362.](#))

Q: Which is displayed, "Yes" or "No"?

"Yes" : Replace the transaxle assembly. (Refer to [P.22C-497.](#))

"No" : Go to Step 4.

STEP 4. Replace the mechatronic assembly, and check if the DTC is reset.

(1) Replace the mechatronic assembly. (Refer to [P.22C-505.](#))

(2) Drive in the 5th gear.

(3) Check the DTC.

Q: Is DTC No.P1829 set?

YES : Replace the transaxle assembly. (Refer to [P.22C-497.](#))

NO : This diagnosis is complete.

DTC P182A: Shift Fork Position Sensor 3 System (Voltage low range out)

⚠ CAUTION

- If there is any problem in the CAN bus lines, an incorrect diagnostic trouble code may be set. Prior to this diagnosis, diagnose the CAN bus lines.
- Whenever the ECU is replaced, ensure that the CAN bus lines are normal.

DIAGNOSTIC FUNCTION

TC-SST-ECU checks that the voltage of the shift fork position sensor 3 is normal.

DESCRIPTIONS OF MONITOR METHODS

The voltage of the shift fork position sensor 3 is too low.

MONITOR EXECUTION

- Continuous

**MONITOR EXECUTION CONDITIONS
(OTHER MONITOR AND SENSOR)**

Other Monitor (There is no temporary DTC stored in memory for the item monitored below)


- P182B: Shift fork position sensor 3 system (Voltage high range out)

- P182C: Shift fork position sensor 3 system (Output range out)
- P182D: Shift fork position sensor 3 system (Neutral)
- P182E: Shift fork position sensor 3 system (Poor performance)
- P1844: Shift fork 3 malfunction
- P1852: Shift fork 1 or 2 opposite direction movement
- P1855: Shift fork 3 or 4 opposite direction movement
- P1858: Even number gear axle interlock
- P1876: Gear block 1st
- P1877: Gear block 2nd
- P1878: Gear block 3rd
- P1879: Gear block 4th
- P187A: Gear block 5th
- P187B: Gear block 6th
- P187C: Gear block reverse

Sensor (The sensor below is determined to be normal)

- Not applicable

LOGIC FLOW CHARTS (Monitor Sequence)

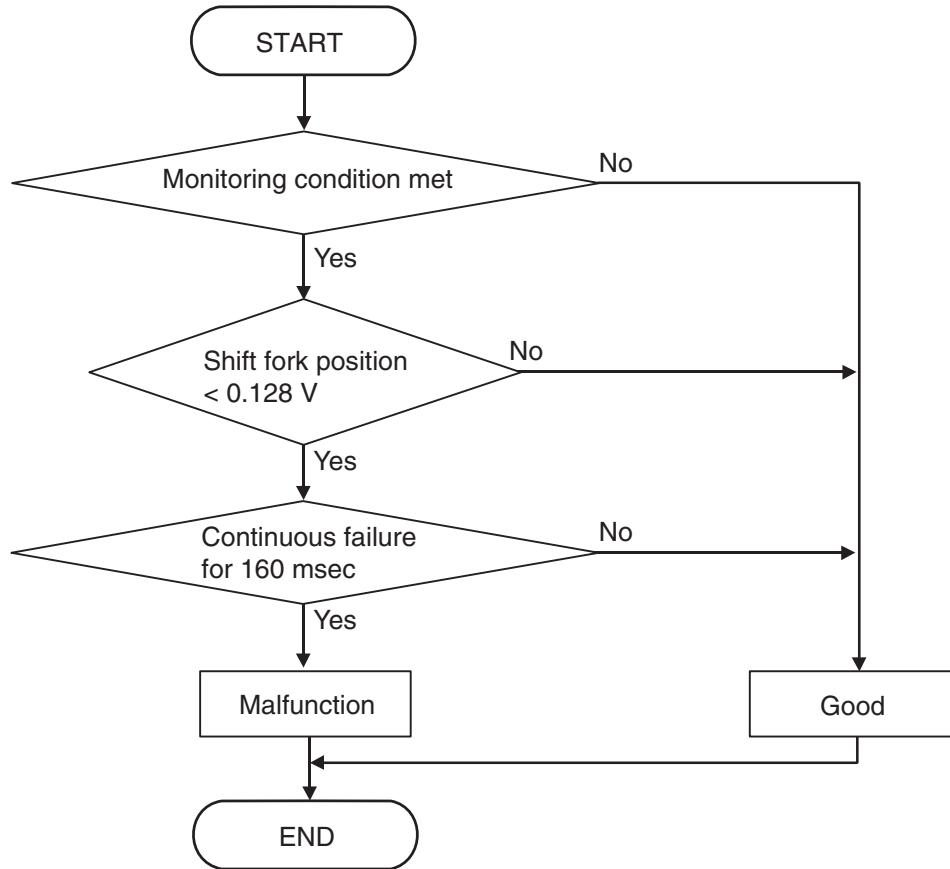

AC710676

DTC SET CONDITIONS

Check Conditions

- Voltage of battery: 8 V or more.
- Voltage of battery: 16.5 V or less.

JUDGMENT CRITERIA

- Position sensor voltage: 0.128 V or less. (160 millisecond)

OBD-II DRIVE CYCLE PATTERN

The position sensor voltage remains 0.128 V or more for 160 milliseconds.

PROBABLE CAUSES

- Malfunction of TC-SST-ECU
- Malfunction of shift fork position sensor 3

DIAGNOSTIC PROCEDURE

Required Special Tools:

- MB991958 Scan Tool (M.U.T.-III Sub Assembly)
 - MB991824: Vehicle Communication Interface (V.C.I.)
 - MB991827 M.U.T.-III USB Cable
 - MB991910 M.U.T.-III Main Harness A

STEP 1. Scan tool CAN bus diagnostics

Using scan tool MB991958, diagnose the CAN bus lines.

Q: Is the check result normal?

YES : Go to Step 2.

NO : Repair the CAN bus lines. (Refer to GROUP 54C – Troubleshooting P.54C-16.) After repairing the CAN bus line, go to Step 2.

STEP 2. Check whether the DTC is reset.**Q: Is DTC No. P182A set?****YES** : Go to Step 3.**NO** : Intermittent malfunction. (Refer to GROUP 00 –How to Cope with Intermittent Malfunction [P.00-13.](#))**STEP 3. Scan tool Teach-In**(1) Carry out the Item No. 1: Plausibility check. (Refer to Special Function (Teach-In Reference Table [P.22C-362.](#))(2) After Teach-In, check which result ("Yes" or "No") is displayed in the Data list No. 101: Normal End. (Refer to Special Function (Teach-In Reference Table [P.22C-362.](#))**Q: Which is displayed, "Yes" or "No"?****"Yes"** : Replace the transaxle assembly. (Refer to [P.22C-497.](#))**"No"** : Go to Step 4.**STEP 4. Replace the mechatronic assembly, and check if the DTC is reset.**(1) Replace the mechatronic assembly. (Refer to [P.22C-505.](#))

(2) Perform a test run of the vehicle.

(3) Check the DTC.

Q: Is DTC No.P182A set?**YES** : Replace the transaxle assembly. (Refer to [P.22C-497.](#))**NO** : This diagnosis is complete.**DTC P182B: Shift Fork Position Sensor 3 System (Voltage high range out)****CAUTION**

- If there is any problem in the CAN bus lines, an incorrect diagnostic trouble code may be set. Prior to this diagnosis, diagnose the CAN bus lines.
- Whenever the ECU is replaced, ensure that the CAN bus lines are normal.

DIAGNOSTIC FUNCTION

TC-SST-ECU checks that the voltage of the shift fork position sensor 3 is normal.

DESCRIPTIONS OF MONITOR METHODS

The voltage of the shift fork position sensor 3 is too high.

MONITOR EXECUTION

- Continuous


**MONITOR EXECUTION CONDITIONS
(OTHER MONITOR AND SENSOR)****Other Monitor (There is no temporary DTC stored in memory for the item monitored below)**

- P182A: Shift fork position sensor 3 system (Voltage low range out)
- P182C: Shift fork position sensor 3 system (Output range out)
- P182D: Shift fork position sensor 3 system (Neutral)
- P182E: Shift fork position sensor 3 system (Poor performance)
- P1844: Shift fork 3 malfunction
- P1852: Shift fork 1 or 2 opposite direction movement
- P1855: Shift fork 3 or 4 opposite direction movement
- P1858: Even number gear axle interlock
- P1876: Gear block 1st
- P1877: Gear block 2nd

- P1878: Gear block 3rd
- P1879: Gear block 4th
- P187A: Gear block 5th
- P187B: Gear block 6th
- P187C: Gear block reverse

- Sensor (The sensor below is determined to be normal)**
- Not applicable

LOGIC FLOW CHARTS (Monitor Sequence)

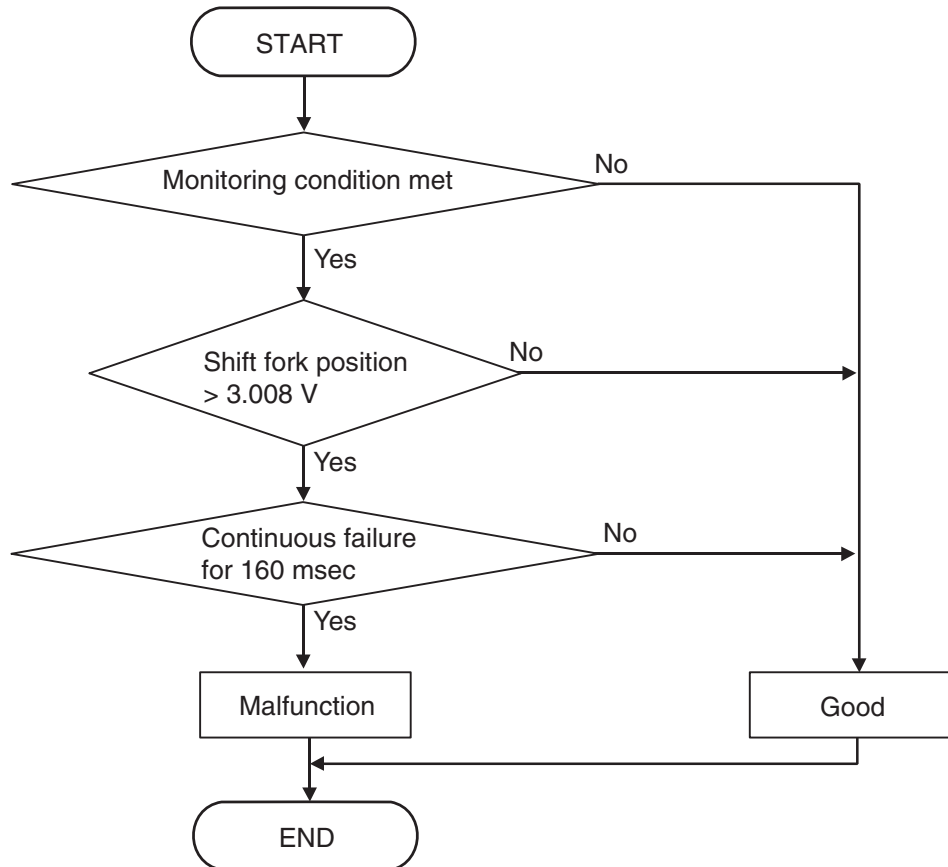

AC710680

DTC SET CONDITIONS

Check Conditions

- Voltage of battery: 8 V or more.
- Voltage of battery: 16.5 V or less.

JUDGMENT CRITERIA

- Position sensor voltage: 3.008 V or more. (160 millisecond)

OBD-II DRIVE CYCLE PATTERN

The position sensor voltage remains 3.008 V or less for 160 millisecond.

PROBABLE CAUSES

- Malfunction of TC-SST-ECU
- Malfunction of shift fork position sensor 3

DIAGNOSTIC PROCEDURE**Required Special Tools:**

- MB991958 Scan Tool (M.U.T.-III Sub Assembly)
 - MB991824: Vehicle Communication Interface (V.C.I.)
 - MB991827 M.U.T.-III USB Cable
 - MB991910 M.U.T.-III Main Harness A

STEP 1. Scan tool CAN bus diagnostics

Using scan tool MB991958, diagnose the CAN bus lines.

Q: Is the check result normal?

YES : Go to Step 2.

NO : Repair the CAN bus lines. (Refer to GROUP 54C – Troubleshooting [P.54C-16.](#)) After repairing the CAN bus line, go to Step 2.

STEP 2. Check whether the DTC is reset.**Q: Is DTC No. P182B set?**

YES : Go to Step 3.

NO : Intermittent malfunction. (Refer to GROUP 00 –How to Cope with Intermittent Malfunction [P.00-13.](#))

STEP 3. Scan tool Teach-In

- (1) Carry out the Item No. 1: Plausibility check. (Refer to Special Function (Teach-In Reference Table [P.22C-362.](#))
- (2) After Teach-In, check which result ("Yes" or "No") is displayed in the Data list No. 101: Normal End. (Refer to Special Function (Teach-In Reference Table [P.22C-362.](#))

Q: Which is displayed, "Yes" or "No"?

"Yes" : Replace the transaxle assembly. (Refer to [P.22C-497.](#))

"No" : Go to Step 4.

STEP 4. Replace the mechatronic assembly, and check if the DTC is reset.

- (1) Replace the mechatronic assembly. (Refer to [P.22C-505.](#))
- (2) Perform a test run of the vehicle.
- (3) Check the DTC.

Q: Is DTC No.P182B set?

YES : Replace the transaxle assembly. (Refer to [P.22C-497.](#))

NO : This diagnosis is complete.

DTC P182C: Shift Fork Position Sensor 3 System (Output range out)

⚠ CAUTION

- If there is any problem in the CAN bus lines, an incorrect diagnostic trouble code may be set. Prior to this diagnosis, diagnose the CAN bus lines.
- Whenever the ECU is replaced, ensure that the CAN bus lines are normal.

DIAGNOSTIC FUNCTION

TC-SST-ECU checks that the output of the shift fork position sensor 3 is normal.

DESCRIPTIONS OF MONITOR METHODS

The output of the shift fork position sensor 3 is determined to be abnormal.

MONITOR EXECUTION

- Continuous

**MONITOR EXECUTION CONDITIONS
(OTHER MONITOR AND SENSOR)**

Other Monitor (There is no temporary DTC stored in memory for the item monitored below)


- P182A: Shift fork position sensor 3 system (Voltage low range out)

- P182B: Shift fork position sensor 3 system (Voltage high range out)
- P182D: Shift fork position sensor 3 system (Neutral)
- P182E: Shift fork position sensor 3 system (Poor performance)
- P1844: Shift fork 3 malfunction
- P1852: Shift fork 1 or 2 opposite direction movement
- P1855: Shift fork 3 or 4 opposite direction movement
- P1858: Even number gear axle interlock
- P1876: Gear block 1st
- P1877: Gear block 2nd
- P1878: Gear block 3rd
- P1879: Gear block 4th
- P187A: Gear block 5th
- P187B: Gear block 6th
- P187C: Gear block reverse

Sensor (The sensor below is determined to be normal)

- Not applicable

LOGIC FLOW CHARTS (Monitor Sequence)

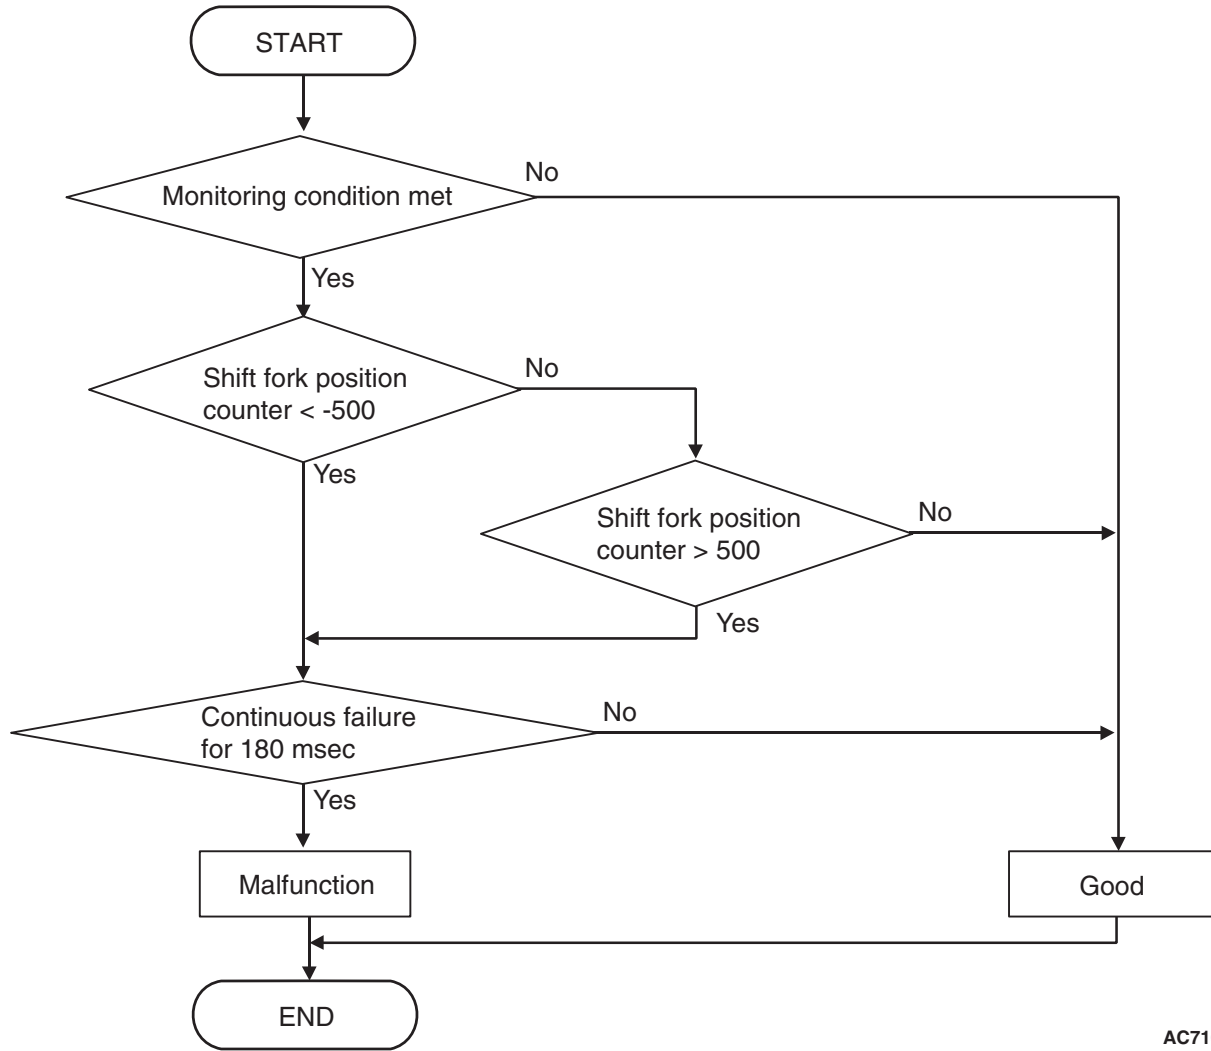

AC710681

DTC SET CONDITIONS

Check Conditions

- Voltage of battery: 8 V or more.
- Voltage of battery: 16.5 V or less.
- Engine speed: 650 r/min or more.
- Time since above engine condition: 1.5 seconds or more.
- Shift system status: Gear change mode (during shift fork moving).

JUDGMENT CRITERIA

- Shift fork 3 position counter (digitized sensor value): -500 counts or less, shift fork 3 position counter (digitized sensor value): 500 counts or more. (180 millisecond)

OBD-II DRIVE CYCLE PATTERN

The status with the shift fork 3 position counter (digitized sensor value) -500 counts or more, or with the shift fork 3 position counter (digitized sensor value) 500 counts or less continues for 180 millisecond.

PROBABLE CAUSES

- Malfunction of TC-SST-ECU
- Malfunction of shift fork position sensor 3

DIAGNOSTIC PROCEDURE

Required Special Tools:

- MB991958 Scan Tool (M.U.T.-III Sub Assembly)
 - MB991824: Vehicle Communication Interface (V.C.I.)
 - MB991827 M.U.T.-III USB Cable
 - MB991910 M.U.T.-III Main Harness A

STEP 1. Scan tool CAN bus diagnostics

Using scan tool MB991958, diagnose the CAN bus lines.

Q: Is the check result normal?

YES : Go to Step 2.

NO : Repair the CAN bus lines. (Refer to GROUP 54C – Troubleshooting P.54C-16.) After repairing the CAN bus line, go to Step 2.

STEP 2. Check whether the DTC is reset.

After driving in the 6th gear, check that the DTC is reset.

Q: Is DTC No. P182C set?

YES : Go to Step 3.

NO : Intermittent malfunction. (Refer to GROUP 00 –How to Cope with Intermittent Malfunction P.00-13.)

STEP 3. Scan tool Teach-In

- (1) Carry out the Item No. 1: Plausibility check. (Refer to Special Function (Teach-In Reference Table P.22C-362).)
- (2) After Teach-In, check which result ("Yes" or "No") is displayed in the Data list No. 101: Normal End. (Refer to Special Function (Teach-In Reference Table P.22C-362).)

Q: Which is displayed, "Yes" or "No"?

"Yes" : Replace the transaxle assembly. (Refer to P.22C-497.)

"No" : Go to Step 4.

STEP 4. Replace the mechatronic assembly, and check if the DTC is reset.

- (1) Replace the mechatronic assembly. (Refer to P.22C-505.)
- (2) Drive in the 6th gear.
- (3) Check the DTC.

Q: Is DTC No.P182C set?

YES : Replace the transaxle assembly. (Refer to P.22C-497.)

NO : This diagnosis is complete.

DTC P182D: Shift Fork Position Sensor 3 System (Neutral)**⚠ CAUTION**

- If there is any problem in the CAN bus lines, an incorrect diagnostic trouble code may be set. Prior to this diagnosis, diagnose the CAN bus lines.
- Whenever the ECU is replaced, ensure that the CAN bus lines are normal.

DIAGNOSTIC FUNCTION

TC-SST-ECU checks that the shift fork position sensor 3 is normal.

DESCRIPTIONS OF MONITOR METHODS

The shift fork position sensor 3 is determined to be abnormal.

MONITOR EXECUTION

- Continuous

**MONITOR EXECUTION CONDITIONS
(OTHER MONITOR AND SENSOR)**

Other Monitor (There is no temporary DTC stored in memory for the item monitored below)


- P182A: Shift fork position sensor 3 system (Voltage low range out)

- P182B: Shift fork position sensor 3 system (Voltage high range out)
- P182C: Shift fork position sensor 3 system (Output range out)
- P182E: Shift fork position sensor 3 system (Poor performance)
- P1844: Shift fork 3 malfunction
- P1852: Shift fork 1 or 2 opposite direction movement
- P1855: Shift fork 3 or 4 opposite direction movement
- P1858: Even number gear axle interlock
- P1876: Gear block 1st
- P1877: Gear block 2nd
- P1878: Gear block 3rd
- P1879: Gear block 4th
- P187A: Gear block 5th
- P187B: Gear block 6th
- P187C: Gear block reverse

Sensor (The sensor below is determined to be normal)

- Not applicable

LOGIC FLOW CHARTS (Monitor Sequence)

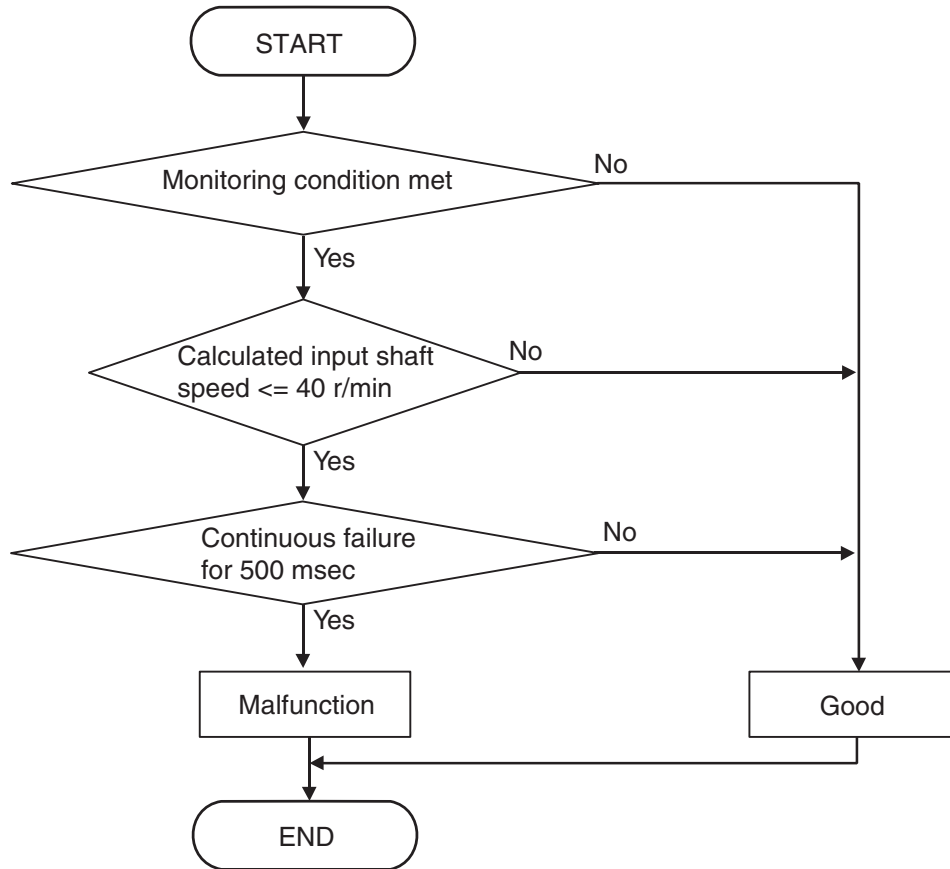

AC711383AC

DTC SET CONDITIONS

Check Conditions

- Voltage of battery: 8 V or more.
- Voltage of battery: 16.5 V or less.
- Engine speed: 650 r/min or more.
- Time since above engine condition: 1.5 seconds or more.
- Input shaft 1 (odd) speed: 500 r/min or more.
- Input shaft 2 (even) speed: 500 r/min or more.
- Shift fork 3 position: Neutral.
- Input shaft 1 (odd) gear: Engaged.
- Engine speed –input shaft 1 speed: 50 r/min or less.

JUDGMENT CRITERIA

- Calculated speed: 40 r/min or less. (500 millisecond)

OBD-II DRIVE CYCLE PATTERN

The calculated speed remains 40 r/min or more for 500 millisecond.

PROBABLE CAUSES

- Malfunction of TC-SST-ECU
- Malfunction of shift fork position sensor 3

DIAGNOSTIC PROCEDURE

Required Special Tools:

- MB991958 Scan Tool (M.U.T.-III Sub Assembly)
 - MB991824: Vehicle Communication Interface (V.C.I.)
 - MB991827 M.U.T.-III USB Cable
 - MB991910 M.U.T.-III Main Harness A

STEP 1. Scan tool CAN bus diagnostics

Using scan tool MB991958, diagnose the CAN bus lines.

Q: Is the check result normal?

YES : Go to Step 2.

NO : Repair the CAN bus lines. (Refer to GROUP 54C – Troubleshooting [P.54C-16.](#)) After repairing the CAN bus line, go to Step 2.

STEP 2. Check whether the DTC is reset.

After driving in the 6th gear, check that the DTC is reset.

Q: Is DTC No. P182D set?

YES : Go to Step 3.

NO : Intermittent malfunction. (Refer to GROUP 00 –How to Cope with Intermittent Malfunction [P.00-13.](#))

STEP 3. Scan tool diagnostic trouble code for other systems

Check if a shift fork and shift fork position sensor-related diagnostic trouble code No. other than P182D is stored.

Q: Is the DTC set?

YES : Go to Step 5.

NO : Go to Step 4.

STEP 4. Scan tool Teach-In

(1) Carry out the Item No. 1: Plausibility check. (Refer to Special Function (Teach-In Reference Table [P.22C-362.](#))

(2) After Teach-In, check which result ("Yes" or "No") is displayed in the Data list No. 101: Normal End. (Refer to Special Function (Teach-In Reference Table [P.22C-362.](#))

Q: Which is displayed, "Yes" or "No"?

"Yes" : Replace the transaxle assembly. (Refer to [P.22C-497.](#))

"No" : Go to Step 5.

STEP 5. Replace the mechatronic assembly, and check if the DTC is reset.

(1) Replace the mechatronic assembly. (Refer to [P.22C-505.](#))

(2) Drive in the 6th gear.

(3) Check the DTC.

Q: Is DTC No.P182D set?

YES : Replace the transaxle assembly. (Refer to [P.22C-497.](#))

NO : This diagnosis is complete.

DTC P182E: Shift Fork Position Sensor 3 System (Poor performance)

⚠ CAUTION

- If there is any problem in the CAN bus lines, an incorrect diagnostic trouble code may be set. Prior to this diagnosis, diagnose the CAN bus lines.
- Whenever the ECU is replaced, ensure that the CAN bus lines are normal.

DIAGNOSTIC FUNCTION

TC-SST-ECU checks that the shift fork position sensor 3 is normal.

DESCRIPTIONS OF MONITOR METHODS

The shift fork position sensor 3 is determined to be abnormal.

MONITOR EXECUTION

- Continuous

**MONITOR EXECUTION CONDITIONS
(OTHER MONITOR AND SENSOR)**

Other Monitor (There is no temporary DTC stored in memory for the item monitored below)


- P182A: Shift fork position sensor 3 system (Voltage low range out)

- P182B: Shift fork position sensor 3 system (Voltage high range out)
- P182C: Shift fork position sensor 3 system (Output range out)
- P182D: Shift fork position sensor 3 system (Neutral)
- P1844: Shift fork 3 malfunction
- P1852: Shift fork 1 or 2 opposite direction movement
- P1855: Shift fork 3 or 4 opposite direction movement
- P1858: Even number gear axle interlock
- P1876: Gear block 1st
- P1877: Gear block 2nd
- P1878: Gear block 3rd
- P1879: Gear block 4th
- P187A: Gear block 5th
- P187B: Gear block 6th
- P187C: Gear block reverse

Sensor (The sensor below is determined to be normal)

- Not applicable

LOGIC FLOW CHARTS (Monitor Sequence)

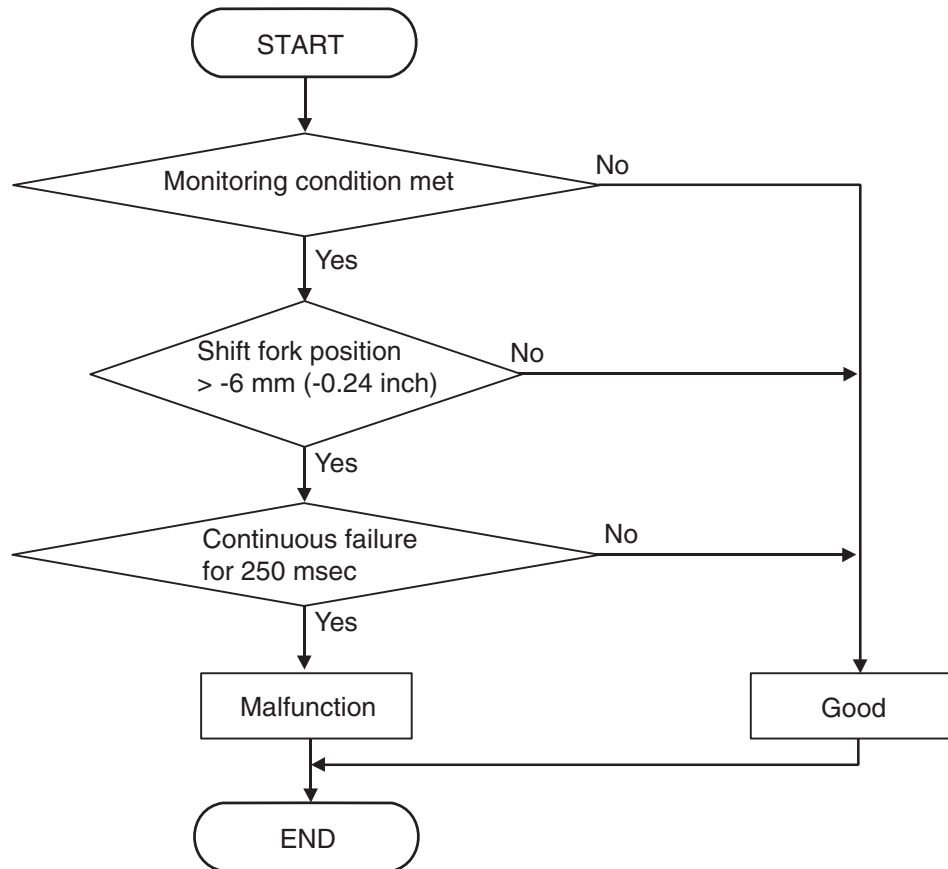

AC710683

DTC SET CONDITIONS

Check Conditions

- Voltage of battery: 8 V or more.
- Voltage of battery: 16.5 V or less.
- Engine speed: 650 r/min or more.
- Time since above engine condition: 1.5 seconds or more.
- Input shaft 2 (even) speed: 500 r/min or more.
- Shift fork 3 current gear: 6th gear.
- Clutch 2 (even) transmit torque: 40 N·m (30 ft-lb) or more.
- Requested shift fork: Not shift fork 3.

JUDGMENT CRITERIA

- Shift fork 3 position: -6 mm (-0.24 inch) or more. (250 millisecond)

OBD-II DRIVE CYCLE PATTERN

The travel distance of the shift fork 3 remains -6 mm (-0.24 inch) or less for 250 millisecond.

PROBABLE CAUSES

- Malfunction of TC-SST-ECU
- Malfunction of shift fork position sensor 3

DIAGNOSTIC PROCEDURE

Required Special Tools:

- MB991958 Scan Tool (M.U.T.-III Sub Assembly)
 - MB991824: Vehicle Communication Interface (V.C.I.)
 - MB991827 M.U.T.-III USB Cable
 - MB991910 M.U.T.-III Main Harness A

STEP 1. Scan tool CAN bus diagnostics

Using scan tool MB991958, diagnose the CAN bus lines.

Q: Is the check result normal?

YES : Go to Step 2.

NO : Repair the CAN bus lines. (Refer to GROUP 54C – Troubleshooting [P.54C-16](#).) After repairing the CAN bus line, go to Step 2.

STEP 2. Check whether the DTC is reset.

After driving in the 6th gear, check that the DTC is reset.

Q: Is DTC No. P182E set?

YES : Go to Step 3.

NO : Intermittent malfunction. (Refer to GROUP 00 –How to Cope with Intermittent Malfunction [P.00-13](#).)

STEP 3. Scan tool Teach-In

- (1) Carry out the Item No. 1: Plausibility check. (Refer to Special Function (Teach-In Reference Table [P.22C-362](#).)
- (2) After Teach-In, check which result ("Yes" or "No") is displayed in the Data list No. 101: Normal End. (Refer to Special Function (Teach-In Reference Table [P.22C-362](#).)

Q: Which is displayed, "Yes" or "No"?

"Yes" : Replace the transaxle assembly. (Refer to [P.22C-497](#).)

"No" : Go to Step 4.

STEP 4. Replace the mechatronic assembly, and check if the DTC is reset.

- (1) Replace the mechatronic assembly. (Refer to [P.22C-505](#).)
- (2) Drive in the 6th gear.
- (3) Check the DTC.

Q: Is DTC No.P182E set?

YES : Replace the transaxle assembly. (Refer to [P.22C-497](#).)

NO : This diagnosis is complete.

DTC P1831: Shift Fork Position Sensor 4 System (Voltage low range out)

⚠ CAUTION

- If there is any problem in the CAN bus lines, an incorrect diagnostic trouble code may be set. Prior to this diagnosis, diagnose the CAN bus lines.
- Whenever the ECU is replaced, ensure that the CAN bus lines are normal.

DIAGNOSTIC FUNCTION

TC-SST-ECU checks that the voltage of the shift fork position sensor 4 is normal.

DESCRIPTIONS OF MONITOR METHODS

The voltage of the shift fork position sensor 4 is too low.

MONITOR EXECUTION

- Continuous

**MONITOR EXECUTION CONDITIONS
(OTHER MONITOR AND SENSOR)**

Other Monitor (There is no temporary DTC stored in memory for the item monitored below)


- P1832: Shift fork position sensor 4 system (Voltage high range out)

- P1833: Shift fork position sensor 4 system (Output range out)
- P1834: Shift fork position sensor 4 system (Neutral)
- P1835: Shift fork position sensor 4 system (Poor performance)
- P184B: Shift fork 4 malfunction
- P1852: Shift fork 1 or 2 opposite direction movement
- P1855: Shift fork 3 or 4 opposite direction movement
- P1858: Even number gear axle interlock
- P1876: Gear block 1st
- P1877: Gear block 2nd
- P1878: Gear block 3rd
- P1879: Gear block 4th
- P187A: Gear block 5th
- P187B: Gear block 6th
- P187C: Gear block reverse

Sensor (The sensor below is determined to be normal)

- Not applicable

LOGIC FLOW CHARTS (Monitor Sequence)

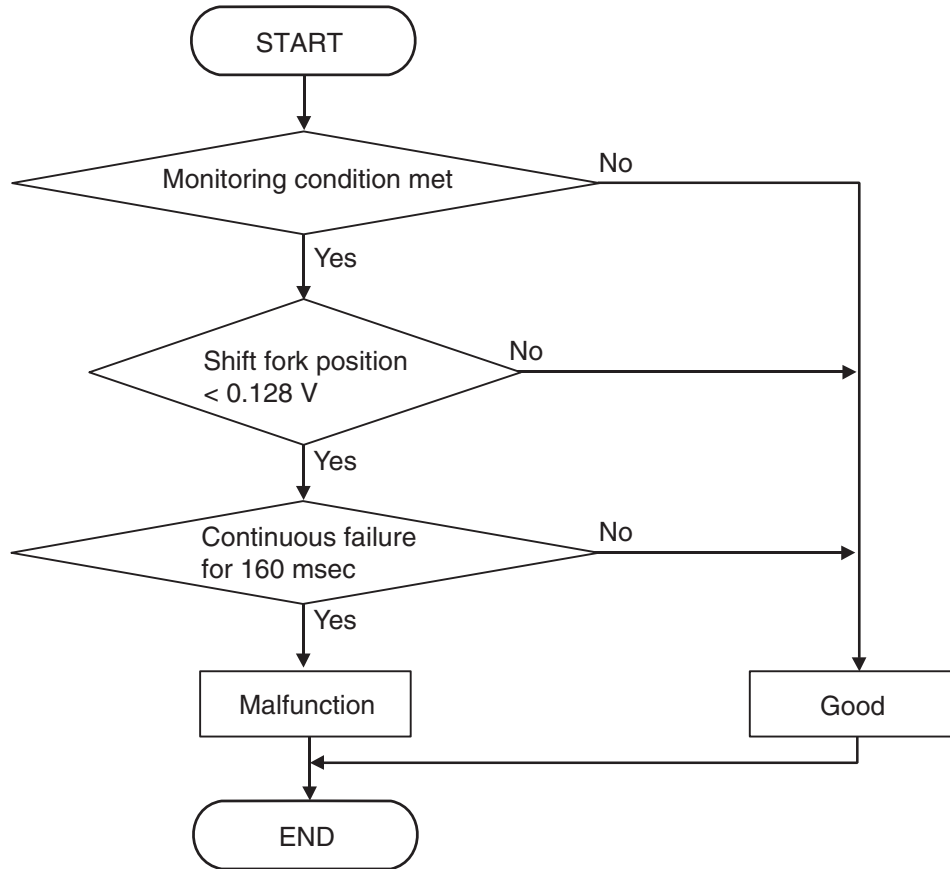

AC710676

DTC SET CONDITIONS

Check Conditions

- Voltage of battery: 8 V or more.
- Voltage of battery: 16.5 V or less.

JUDGMENT CRITERIA

- Position sensor voltage: 0.128 V or less. (160 millisecond)

OBD-II DRIVE CYCLE PATTERN

The position sensor voltage remains 0.128 V or more for 160 milliseconds.

PROBABLE CAUSES

- Malfunction of TC-SST-ECU
- Malfunction of shift fork position sensor 4

DIAGNOSTIC PROCEDURE

Required Special Tools:

- MB991958 Scan Tool (M.U.T.-III Sub Assembly)
 - MB991824: Vehicle Communication Interface (V.C.I.)
 - MB991827 M.U.T.-III USB Cable
 - MB991910 M.U.T.-III Main Harness A

STEP 1. Scan tool CAN bus diagnostics

Using scan tool MB991958, diagnose the CAN bus lines.

Q: Is the check result normal?

YES : Go to Step 2.

NO : Repair the CAN bus lines. (Refer to GROUP 54C – Troubleshooting P.54C-16.) After repairing the CAN bus line, go to Step 2.

STEP 2. Check whether the DTC is reset.**Q: Is DTC No. P1831 set?****YES** : Go to Step 3.**NO** : Intermittent malfunction. (Refer to GROUP 00 –How to Cope with Intermittent Malfunction [P.00-13.](#))**STEP 3. Scan tool Teach-In**(1) Carry out the Item No. 1: Plausibility check. (Refer to Special Function (Teach-In Reference Table [P.22C-362.](#))(2) After Teach-In, check which result ("Yes" or "No") is displayed in the Data list No. 101: Normal End. (Refer to Special Function (Teach-In Reference Table [P.22C-362.](#))**Q: Which is displayed, "Yes" or "No"?****"Yes"** : Replace the transaxle assembly. (Refer to [P.22C-497.](#))**"No"** : Go to Step 4.**STEP 4. Replace the mechatronic assembly, and check if the DTC is reset.**(1) Replace the mechatronic assembly. (Refer to [P.22C-505.](#))

(2) Perform a test run of the vehicle.

(3) Check the DTC.

Q: Is DTC No.P1831 set?**YES** : Replace the transaxle assembly. (Refer to [P.22C-497.](#))**NO** : This diagnosis is complete.**DTC P1832: Shift Fork Position Sensor 4 System (Voltage high range out)****CAUTION**

- If there is any problem in the CAN bus lines, an incorrect diagnostic trouble code may be set. Prior to this diagnosis, diagnose the CAN bus lines.
- Whenever the ECU is replaced, ensure that the CAN bus lines are normal.

DIAGNOSTIC FUNCTION

TC-SST-ECU checks that the voltage of the shift fork position sensor 4 is normal.

DESCRIPTIONS OF MONITOR METHODS

The voltage of the shift fork position sensor 4 is too high.

MONITOR EXECUTION

- Continuous

**MONITOR EXECUTION CONDITIONS
(OTHER MONITOR AND SENSOR)****Other Monitor (There is no temporary DTC stored in memory for the item monitored below)**


- P1831: Shift fork position sensor 4 system (Voltage low range out)
- P1833: Shift fork position sensor 4 system (Output range out)
- P1834: Shift fork position sensor 4 system (Neutral)
- P1835: Shift fork position sensor 4 system (Poor performance)
- P184B: Shift fork 4 malfunction
- P1852: Shift fork 1 or 2 opposite direction movement
- P1855: Shift fork 3 or 4 opposite direction movement
- P1858: Even number gear axle interlock
- P1876: Gear block 1st
- P1877: Gear block 2nd

- P1878: Gear block 3rd
- P1879: Gear block 4th
- P187A: Gear block 5th
- P187B: Gear block 6th
- P187C: Gear block reverse

Sensor (The sensor below is determined to be normal)

- Not applicable

LOGIC FLOW CHARTS (Monitor Sequence)

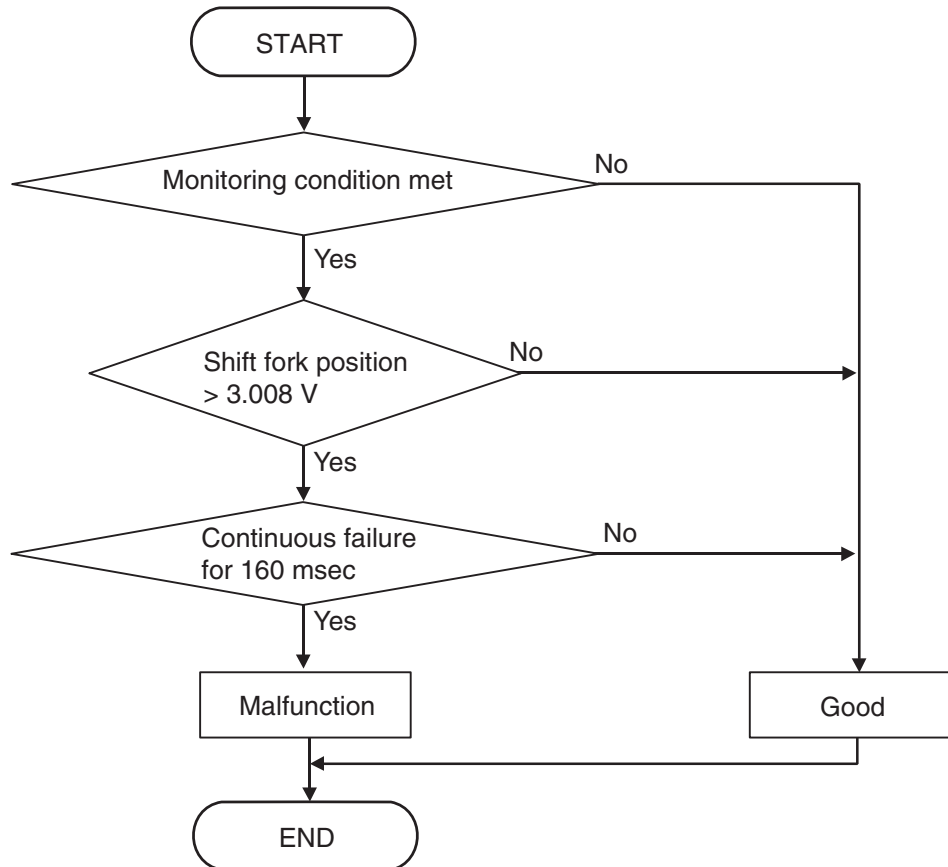

AC710680

DTC SET CONDITIONS

Check Conditions

- Voltage of battery: 8 V or more.
- Voltage of battery: 16.5 V or less.

JUDGMENT CRITERIA

- Position sensor voltage: 3.008 V or more. (160 millisecond)

OBD-II DRIVE CYCLE PATTERN

The position sensor voltage remains 3.008 V or less for 160 milliseconds.

PROBABLE CAUSES

- Malfunction of TC-SST-ECU
- Malfunction of shift fork position sensor 4

DIAGNOSTIC PROCEDURE

Required Special Tools:

- MB991958 Scan Tool (M.U.T.-III Sub Assembly)
 - MB991824: Vehicle Communication Interface (V.C.I.)
 - MB991827 M.U.T.-III USB Cable
 - MB991910 M.U.T.-III Main Harness A

STEP 1. Scan tool CAN bus diagnostics

Using scan tool MB991958, diagnose the CAN bus lines.

Q: Is the check result normal?

YES : Go to Step 2.

NO : Repair the CAN bus lines. (Refer to GROUP 54C – Troubleshooting P.54C-16.) After repairing the CAN bus line, go to Step 2.

STEP 2. Check whether the DTC is reset.**Q: Is DTC No. P1832 set?**

YES : Go to Step 3.

NO : Intermittent malfunction. (Refer to GROUP 00 –How to Cope with Intermittent Malfunction P.00-13.)

STEP 3. Scan tool Teach-In

(1) Carry out the Item No. 1: Plausibility check. (Refer to Special Function (Teach-In Reference Table P.22C-362).)

(2) After Teach-In, check which result ("Yes" or "No") is displayed in the Data list No. 101: Normal End. (Refer to Special Function (Teach-In Reference Table P.22C-362).)

Q: Which is displayed, "Yes" or "No"?

"Yes" : Replace the transaxle assembly. (Refer to P.22C-497.)

"No" : Go to Step 4.

STEP 4. Replace the mechatronic assembly, and check if the DTC is reset.

(1) Replace the mechatronic assembly. (Refer to P.22C-505.)

(2) Perform a test run of the vehicle.

(3) Check the DTC.

Q: Is DTC No.P1832 set?

YES : Replace the transaxle assembly. (Refer to P.22C-497.)

NO : This diagnosis is complete.

DTC P1833: Shift Fork Position Sensor 4 System (Output range out)**⚠ CAUTION**

- If there is any problem in the CAN bus lines, an incorrect diagnostic trouble code may be set. Prior to this diagnosis, diagnose the CAN bus lines.
- Whenever the ECU is replaced, ensure that the CAN bus lines are normal.

DIAGNOSTIC FUNCTION

TC-SST-ECU checks that the output of the shift fork position sensor 4 is normal.

DESCRIPTIONS OF MONITOR METHODS

The output of the shift fork position sensor 4 is determined to be abnormal.

MONITOR EXECUTION

- Continuous

**MONITOR EXECUTION CONDITIONS
 (OTHER MONITOR AND SENSOR)**

Other Monitor (There is no temporary DTC stored in memory for the item monitored below)


- P1831: Shift fork position sensor 4 system (Voltage low range out)
- P1832: Shift fork position sensor 4 system (Voltage high range out)
- P1834: Shift fork position sensor 4 system (Neutral)
- P1835: Shift fork position sensor 4 system (Poor performance)
- P184B: Shift fork 4 malfunction
- P1852: Shift fork 1 or 2 opposite direction movement

- P1855: Shift fork 3 or 4 opposite direction movement
- P1858: Even number gear axle interlock
- P1876: Gear block 1st
- P1877: Gear block 2nd
- P1878: Gear block 3rd
- P1879: Gear block 4th
- P187A: Gear block 5th
- P187B: Gear block 6th
- P187C: Gear block reverse

Sensor (The sensor below is determined to be normal)

- Not applicable

LOGIC FLOW CHARTS (Monitor Sequence)

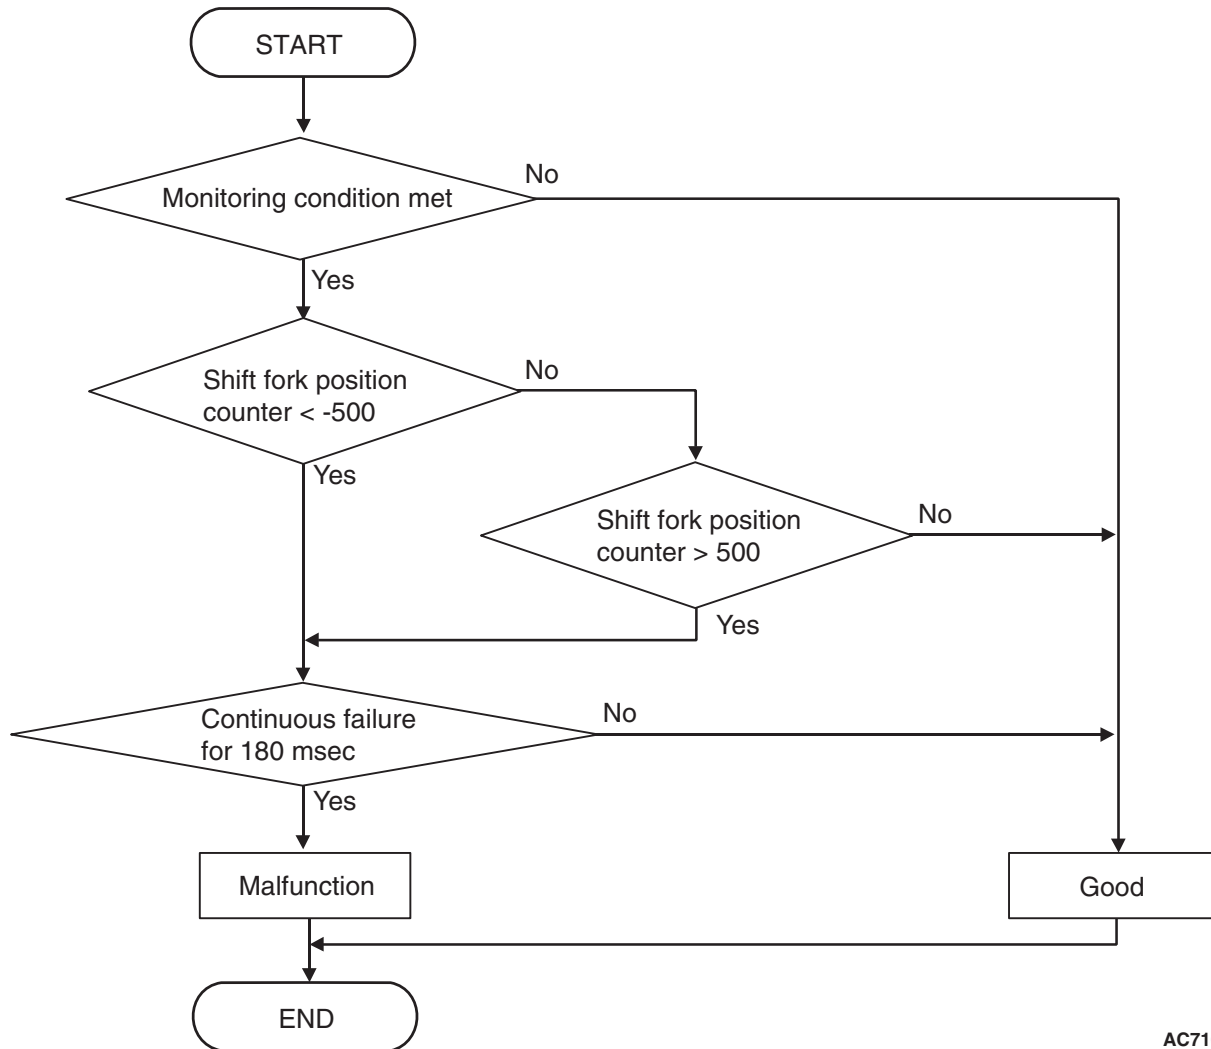

AC710681

DTC SET CONDITIONS**Check Conditions**

- Voltage of battery: 8 V or more.
- Voltage of battery: 16.5 V or less.
- Engine speed: 650 r/min or more.
- Time since above engine condition: 1.5 seconds or more.
- Shift system status: Gear change mode (during shift fork moving).

JUDGMENT CRITERIA

- Shift fork 4 position counter (digitized sensor value): -500 counts or less, or shift fork 4 position counter (digitized sensor value): 500 counts or more. (180 millisecond)

OBD-II DRIVE CYCLE PATTERN

The status with the shift fork 4 position counter (digitized sensor value) -500 counts or more, or with the shift fork 4 position counter (digitized sensor value) 500 counts or less continues for 180 millisecond.

PROBABLE CAUSES

- Malfunction of TC-SST-ECU
- Malfunction of shift fork position sensor 4

DIAGNOSTIC PROCEDURE**Required Special Tools:**

- MB991958 Scan Tool (M.U.T.-III Sub Assembly)
 - MB991824: Vehicle Communication Interface (V.C.I.)
 - MB991827 M.U.T.-III USB Cable
 - MB991910 M.U.T.-III Main Harness A

STEP 1. Scan tool CAN bus diagnostics

Using scan tool MB991958, diagnose the CAN bus lines.

Q: Is the check result normal?

YES : Go to Step 2.

NO : Repair the CAN bus lines. (Refer to GROUP 54C – Troubleshooting [P.54C-16.](#)) After repairing the CAN bus line, go to Step 2.

STEP 2. Check whether the DTC is reset.

After driving in the 4th gear, check that the DTC is reset.

Q: Is DTC No. P1833 set?

YES : Go to Step 3.

NO : Intermittent malfunction. (Refer to GROUP 00 –How to Cope with Intermittent Malfunction [P.00-13.](#))

STEP 3. Scan tool Teach-In

(1) Carry out the Item No. 1: Plausibility check. (Refer to Special Function (Teach-In Reference Table [P.22C-362.](#))

(2) After Teach-In, check which result ("Yes" or "No") is displayed in the Data list No. 101: Normal End. (Refer to Special Function (Teach-In Reference Table [P.22C-362.](#))

Q: Which is displayed, "Yes" or "No"?

"Yes" : Replace the transaxle assembly. (Refer to [P.22C-497.](#))

"No" : Go to Step 4.

STEP 4. Replace the mechatronic assembly, and check if the DTC is reset.

- (1) Replace the mechatronic assembly. (Refer to [P.22C-505.](#))
- (2) Drive in the 4th gear.
- (3) Check the DTC.

Q: Is DTC No.P1833 set?

YES : Replace the transaxle assembly. (Refer to [P.22C-497.](#))

NO : This diagnosis is complete.

DTC P1834: Shift Fork Position Sensor 4 System (Neutral)

⚠ CAUTION

- If there is any problem in the CAN bus lines, an incorrect diagnostic trouble code may be set. Prior to this diagnosis, diagnose the CAN bus lines.
- Whenever the ECU is replaced, ensure that the CAN bus lines are normal.

DIAGNOSTIC FUNCTION

TC-SST-ECU checks that the shift fork position sensor 4 is normal.

DESCRIPTIONS OF MONITOR METHODS

The shift fork position sensor 4 is determined to be abnormal.

MONITOR EXECUTION

- Continuous

**MONITOR EXECUTION CONDITIONS
(OTHER MONITOR AND SENSOR)**

Other Monitor (There is no temporary DTC stored in memory for the item monitored below)


- P1831: Shift fork position sensor 4 system (Voltage low range out)

- P1832: Shift fork position sensor 4 system (Voltage high range out)
- P1833: Shift fork position sensor 4 system (Output range out)
- P1835: Shift fork position sensor 4 system (Poor performance)
- P184B: Shift fork 4 malfunction
- P1852: Shift fork 1 or 2 opposite direction movement
- P1855: Shift fork 3 or 4 opposite direction movement
- P1858: Even number gear axle interlock
- P1876: Gear block 1st
- P1877: Gear block 2nd
- P1878: Gear block 3rd
- P1879: Gear block 4th
- P187A: Gear block 5th
- P187B: Gear block 6th
- P187C: Gear block reverse

Sensor (The sensor below is determined to be normal)

- Not applicable

LOGIC FLOW CHARTS (Monitor Sequence)

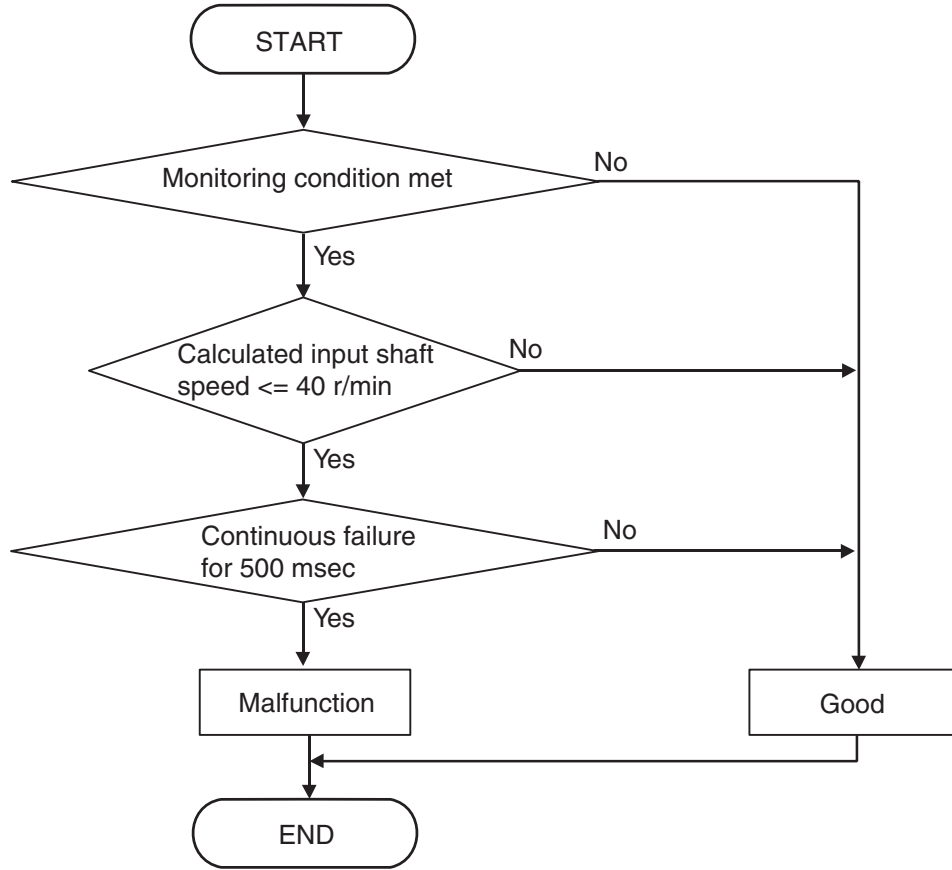

AC711383AC

DTC SET CONDITIONS

Check Conditions

- Voltage of battery: 8 V or more.
- Voltage of battery: 16.5 V or less.
- Engine speed: 650 r/min or more.
- Time since above engine condition: 1.5 seconds or more.
- Input shaft 1 (odd) speed: 500 r/min or more.
- Input shaft 2 (even) speed: 500 r/min or more.
- Shift fork 4 position: Neutral.
- Input shaft 1 (odd) gear: Engaged.
- Engine speed –input shaft 1 speed: 50 r/min or less.

JUDGMENT CRITERIA

- Calculated speed: 40 r/min or less. (500 millisecond)

OBD-II DRIVE CYCLE PATTERN

The calculated speed remains 40 r/min or more for 500 millisecond.

PROBABLE CAUSES

- Malfunction of TC-SST-ECU
- Malfunction of shift fork position sensor 4

DIAGNOSTIC PROCEDURE

Required Special Tools:

- MB991958 Scan Tool (M.U.T.-III Sub Assembly)
 - MB991824: Vehicle Communication Interface (V.C.I.)
 - MB991827 M.U.T.-III USB Cable
 - MB991910 M.U.T.-III Main Harness A

STEP 1. Scan tool CAN bus diagnostics

Using scan tool MB991958, diagnose the CAN bus lines.

Q: Is the check result normal?

YES : Go to Step 2.

NO : Repair the CAN bus lines. (Refer to GROUP 54C – Troubleshooting [P.54C-16.](#)) After repairing the CAN bus line, go to Step 2.

STEP 2. Check whether the DTC is reset.

After driving in the 6th gear, check that the DTC is reset.

Q: Is DTC No. P1834 set?

YES : Go to Step 3.

NO : Intermittent malfunction. (Refer to GROUP 00 –How to Cope with Intermittent Malfunction [P.00-13.](#))

STEP 3. Scan tool diagnostic trouble code for other systems

Check if a shift fork and shift fork position sensor-related diagnostic trouble code No. other than P1834 is stored.

Q: Is the DTC set?

YES : Go to Step 5.

NO : Go to Step 4.

STEP 4. Scan tool Teach-In

(1) Carry out the Item No. 1: Plausibility check. (Refer to Special Function (Teach-In Reference Table [P.22C-362.](#))

(2) After Teach-In, check which result ("Yes" or "No") is displayed in the Data list No. 101: Normal End. (Refer to Special Function (Teach-In Reference Table [P.22C-362.](#))

Q: Which is displayed, "Yes" or "No"?

"Yes" : Replace the transaxle assembly. (Refer to [P.22C-497.](#))

"No" : Go to Step 5.

STEP 5. Replace the mechatronic assembly, and check if the DTC is reset.

(1) Replace the mechatronic assembly. (Refer to [P.22C-505.](#))

(2) Drive in the 6th gear.

(3) Check the DTC.

Q: Is DTC No.P1834 set?

YES : Replace the transaxle assembly. (Refer to [P.22C-497.](#))

NO : This diagnosis is complete.

DTC P1835: Shift Fork Position Sensor 4 System (Poor performance)**⚠ CAUTION**

- If there is any problem in the CAN bus lines, an incorrect diagnostic trouble code may be set. Prior to this diagnosis, diagnose the CAN bus lines.
- Whenever the ECU is replaced, ensure that the CAN bus lines are normal.

DIAGNOSTIC FUNCTION

TC-SST-ECU checks that the shift fork position sensor 4 is normal.

DESCRIPTIONS OF MONITOR METHODS

The shift fork position sensor 4 is determined to be abnormal.

MONITOR EXECUTION

- Continuous

**MONITOR EXECUTION CONDITIONS
(OTHER MONITOR AND SENSOR)**

Other Monitor (There is no temporary DTC stored in memory for the item monitored below)


- P1831: Shift fork position sensor 4 system (Voltage low range out)

- P1832: Shift fork position sensor 4 system (Voltage high range out)
- P1833: Shift fork position sensor 4 system (Output range out)
- P1834: Shift fork position sensor 4 system (Neutral)
- P184B: Shift fork 4 malfunction
- P1852: Shift fork 1 or 2 opposite direction movement
- P1855: Shift fork 3 or 4 opposite direction movement
- P1858: Even number gear axle interlock
- P1876: Gear block 1st
- P1877: Gear block 2nd
- P1878: Gear block 3rd
- P1879: Gear block 4th
- P187A: Gear block 5th
- P187B: Gear block 6th
- P187C: Gear block reverse

Sensor (The sensor below is determined to be normal)

- Not applicable

LOGIC FLOW CHARTS (Monitor Sequence) <Shift fork 4 current gear: 4th gear>

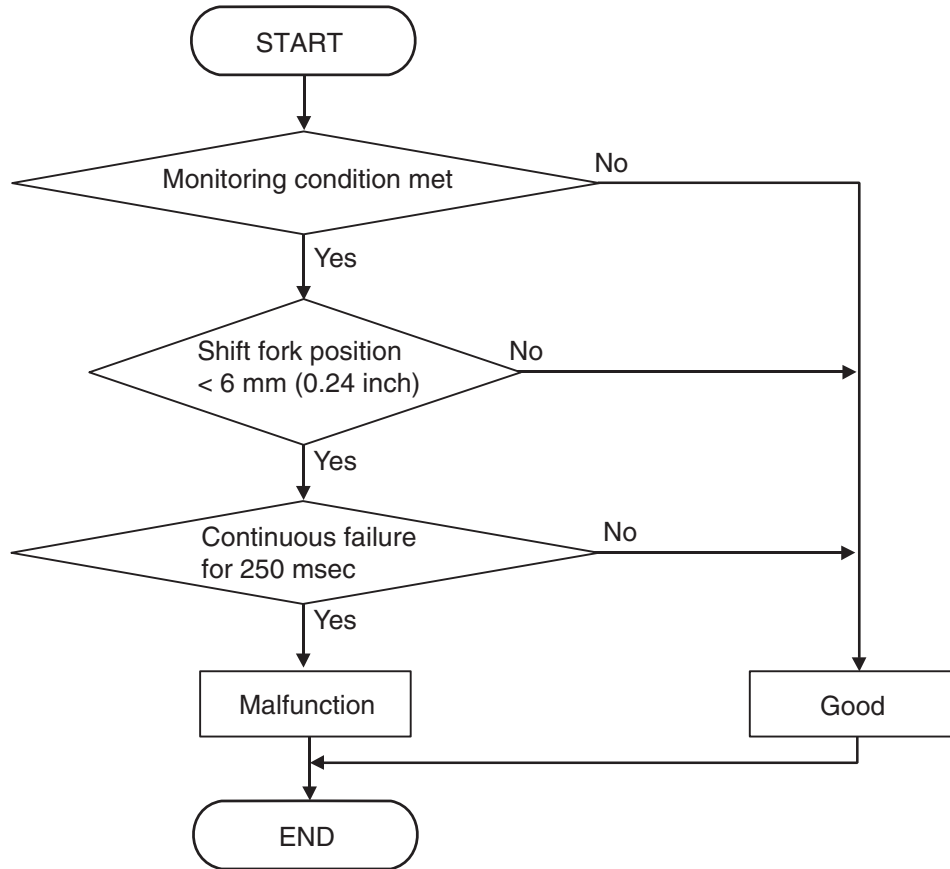

AC710682

**DTC SET CONDITIONS <SHIFT FORK 4
CURRENT GEAR: 4TH GEAR>**

Check Conditions

- Voltage of battery: 8 V or more.
- Voltage of battery: 16.5 V or less.
- Engine speed: 650 r/min or more.
- Time since above engine condition: 1.5 seconds or more.
- Input shaft 2 (even) speed: 500 r/min or more.
- Shift fork 4 current gear: 4th gear.

- Clutch 2 (even) transmit torque: 40 N· m (30 ft-lb) or more.
- Requested shift fork: Not shift fork 4.


JUDGMENT CRITERIA

- Shift fork 4 position: 6 mm (0.24 inch) or less. (250 millisecond)

OBD-II DRIVE CYCLE PATTERN <SHIFT FORK 2 CURRENT GEAR: 4TH GEAR>

The travel distance of the shift fork 4 remains 6 mm (0.24 inch) or more for 250 millisecond.

LOGIC FLOW CHARTS (Monitor Sequence) <Shift fork 4 current gear: 2nd gear>

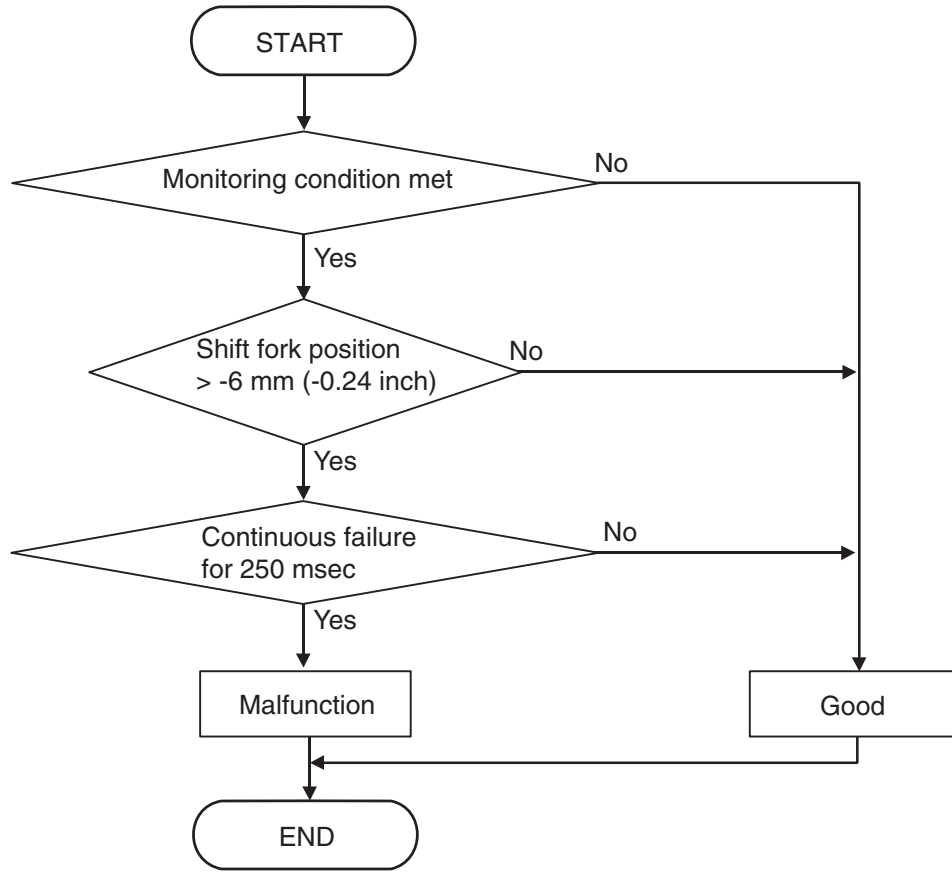

AC710683

DTC SET CONDITIONS <SHIFT FORK 4 CURRENT GEAR: 2ND GEAR>

Check Conditions

- Voltage of battery: 8 volts or more.
- Voltage of battery: 16.5 volts or less.
- Engine speed: 650 r/min or more.
- Time since above engine condition: 1.5 second or more.
- Input shaft 2 (even) speed: 500 r/min or more.
- Shift fork 4 current gear: 2nd gear.
- Clutch 2 (even) transmit torque: 40 N·m (30 ft-lb) or more.
- Requested shift fork: not shift fork 4.

JUDGMENT CRITERIA

- Shift fork 4 position: -6 mm (-0.24 in) or more. (250 millisecond)

OBD-II DRIVE CYCLE PATTERN <SHIFT FORK 2 CURRENT GEAR: 3RD GEAR>

The travel distance of the shift fork 4 remains -6 mm (-0.24 inch) or less for 250 milliseconds.

PROBABLE CAUSES

- Malfunction of TC-SST-ECU
- Malfunction of shift fork position sensor 4

DIAGNOSTIC PROCEDURE

Required Special Tools:

- MB991958 Scan Tool (M.U.T.-III Sub Assembly)
 - MB991824: Vehicle Communication Interface (V.C.I.)
 - MB991827 M.U.T.-III USB Cable
 - MB991910 M.U.T.-III Main Harness A

STEP 1. Scan tool CAN bus diagnostics

Using scan tool MB991958, diagnose the CAN bus lines.

Q: Is the check result normal?

YES : Go to Step 2.

NO : Repair the CAN bus lines. (Refer to GROUP 54C – Troubleshooting [P.54C-16](#).) After repairing the CAN bus line, go to Step 2.

STEP 2. Check whether the DTC is reset.

After driving in the 4th gear, check that the DTC is reset.

Q: Is DTC No. P1835 set?

YES : Go to Step 3.

NO : Intermittent malfunction. (Refer to GROUP 00 –How to Cope with Intermittent Malfunction [P.00-13](#).)

STEP 3. Scan tool Teach-In

- (1) Carry out the Item No. 1: Plausibility check. (Refer to Special Function (Teach-In Reference Table [P.22C-362](#).)
- (2) After Teach-In, check which result ("Yes" or "No") is displayed in the Data list No. 101: Normal End. (Refer to Special Function (Teach-In Reference Table [P.22C-362](#).)

Q: Which is displayed, "Yes" or "No"?

"Yes" : Replace the transaxle assembly. (Refer to [P.22C-497](#).)

"No" : Go to Step 4.

STEP 4. Replace the mechatronic assembly, and check if the DTC is reset.

- (1) Replace the mechatronic assembly. (Refer to [P.22C-505](#).)
- (2) Drive in the 4th gear.
- (3) Check the DTC.

Q: Is DTC No.P1835 set?

YES : Replace the transaxle assembly. (Refer to [P.22C-497](#).)

NO : This diagnosis is complete.

DTC P1836: Shift Fork 1 Malfunction

CAUTION

- If there is any problem in the CAN bus lines, an incorrect diagnostic trouble code may be set. Prior to this diagnosis, diagnose the CAN bus lines.
- Whenever the ECU is replaced, ensure that the CAN bus lines are normal.

DIAGNOSTIC FUNCTION

TC-SST-ECU checks that the movement of the shift fork 1 is normal.

DESCRIPTIONS OF MONITOR METHODS

The movement of the shift fork 1 is determined to be abnormal.

MONITOR EXECUTION

- Continuous

MONITOR EXECUTION CONDITIONS (OTHER MONITOR AND SENSOR)


Other Monitor (There is no temporary DTC stored in memory for the item monitored below)

- P183D: Shift fork 2 malfunction
- P1844: Shift fork 3 malfunction

Sensor (The sensor below is determined to be normal)

- Not applicable

LOGIC FLOW CHARTS (Monitor Sequence) <Functional check - blocked>

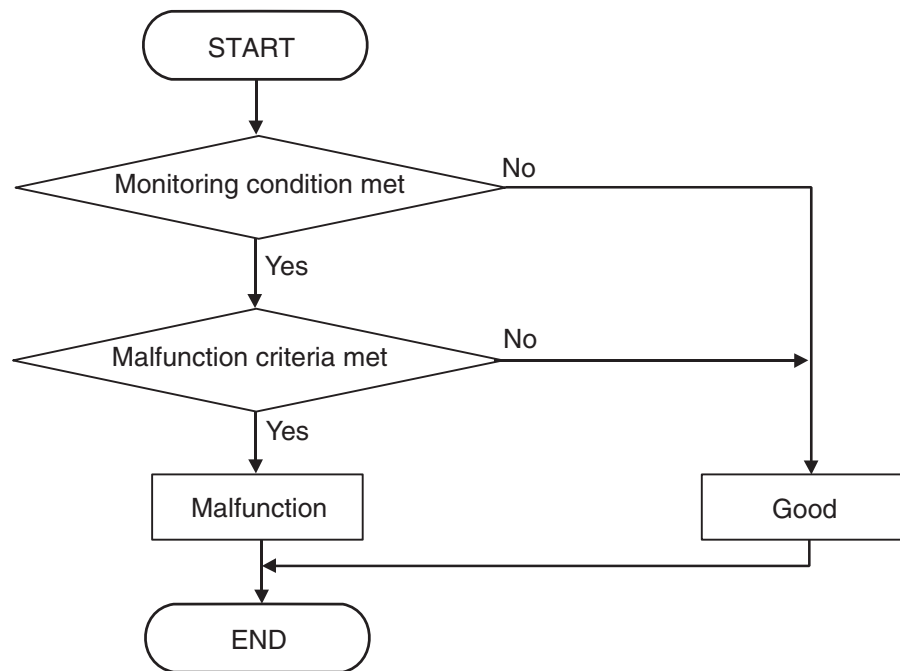


AC710675

DTC SET CONDITIONS <FUNCTIONAL CHECK - BLOCKED>


Check Conditions

- Voltage of battery: 8 V or more.
- Voltage of battery: 16.5 V or less.
- Engine speed: 650 r/min or more.
- Time since above engine condition: 1.5 seconds or more.
- Common high side 1 voltage: 7 V or more.
- Common high side 3 voltage: 7 V or more.

JUDGMENT CRITERIA

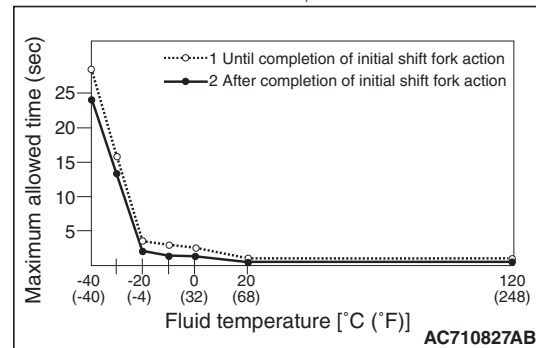

AC710827AB

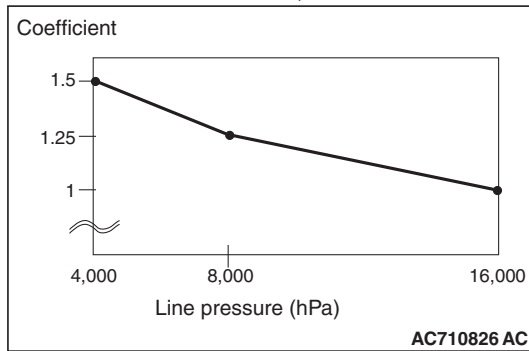


- Shift fork operation time: Shift fork operation time (threshold value) or more. (immediately)
- Shift fork operation time (threshold value): Equal the maximum allowed time x Coefficient. (immediately)

**OBD-II DRIVE CYCLE PATTERN
<FUNCTIONAL CHECK - BLOCKED>**

The shift fork operation time is threshold value or less.

LOGIC FLOW CHARTS (Monitor Sequence) <Functional check - Neutral>

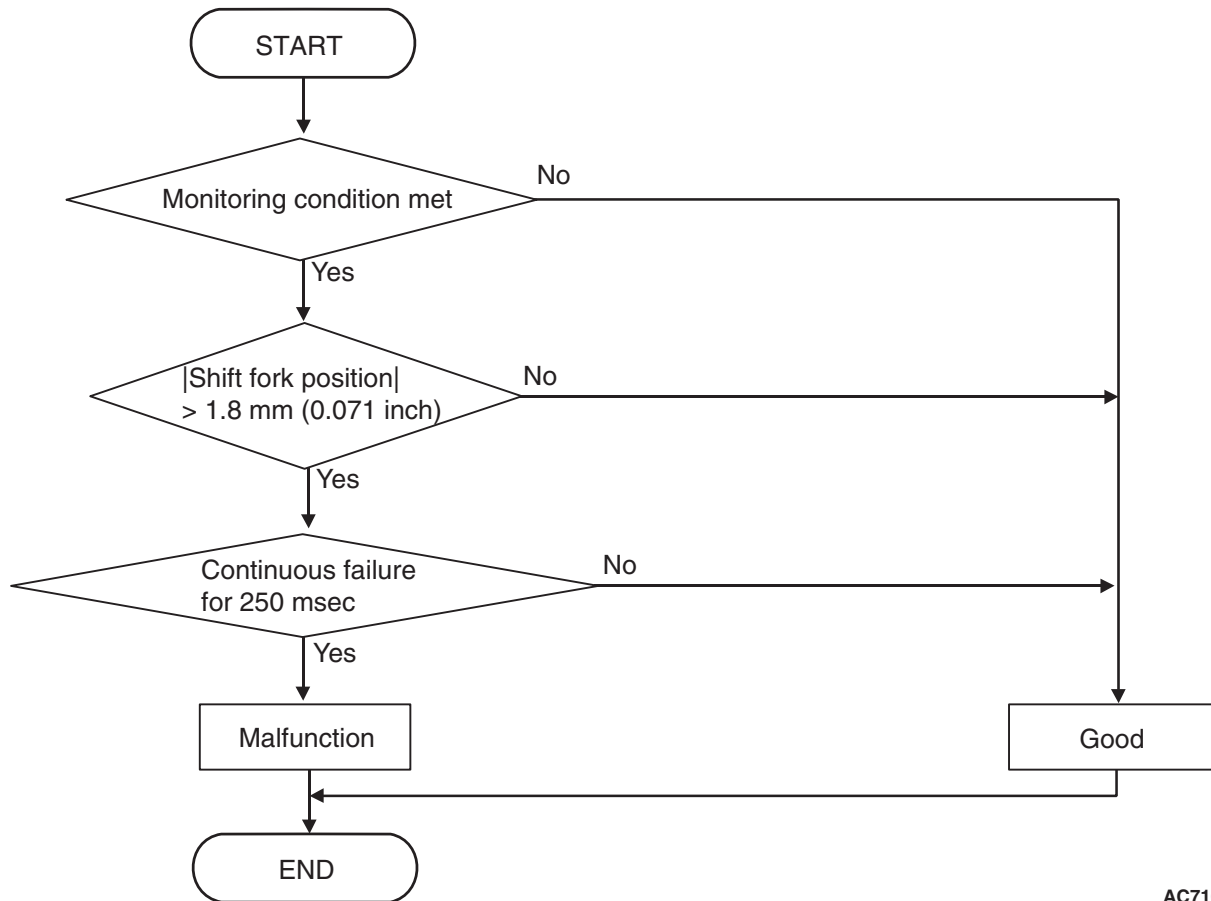

DTC SET CONDITIONS <FUNCTIONAL CHECK - NEUTRAL>

Check Conditions

- Voltage of battery: 8 V or more.
- Voltage of battery: 16.5 V or less.
- Engine speed: 650 r/min or more.
- Time since above engine condition: 1.5 seconds or more.
- Shift fork 1 current gear: Neutral.


JUDGMENT CRITERIA

- Shift fork position: 1.8 mm (0.071 inch) or more. (250 millisecond)

**OBD-II DRIVE CYCLE PATTERN
<FUNCTIONAL CHECK - NEUTRAL>**

The shift fork position remains 1.8 mm (0.071 inch) or less for 250 millisecond.

LOGIC FLOW CHARTS (Monitor Sequence) <Functional check - Shift fork 1 requested but shift fork 3 movement>

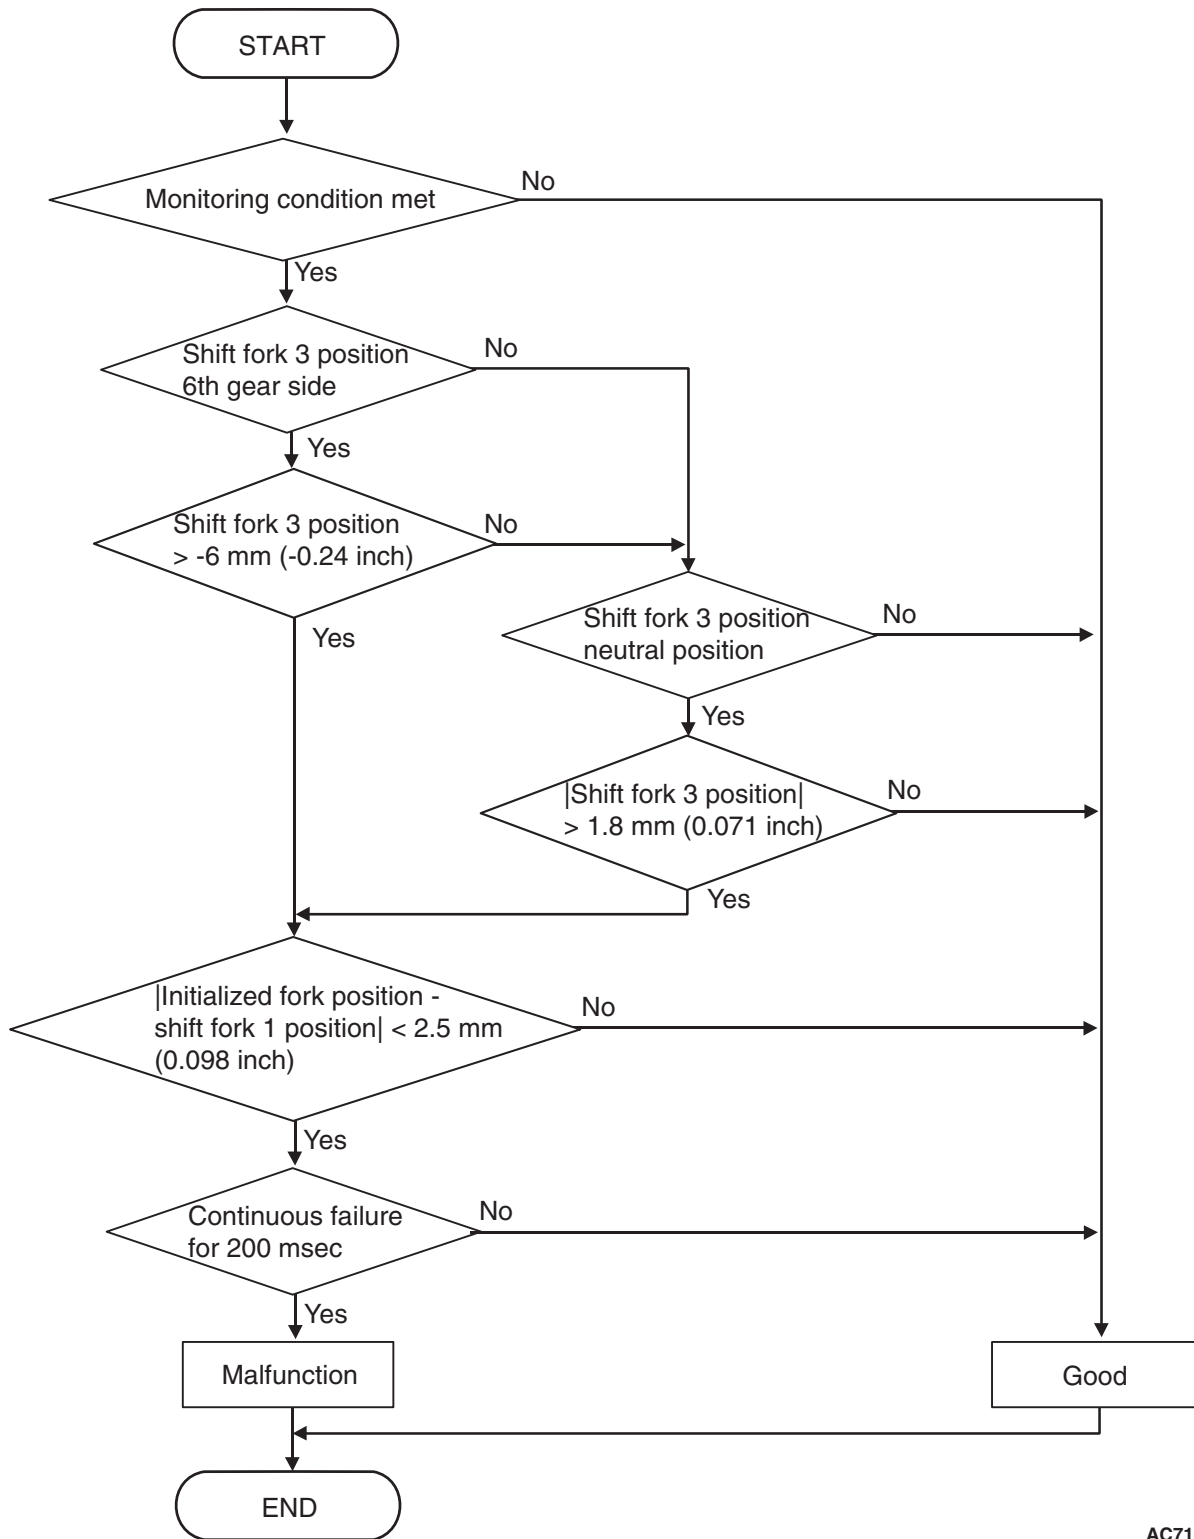

AC710687

**DTC SET CONDITIONS <FUNCTIONAL
CHECK - SHIFT FORK 1 REQUESTED
BUT SHIFT FORK 3 MOVEMENT>**

Check Conditions

- Voltage of battery: 8 V or more.
- Voltage of battery: 16.5 V or less.
- Engine speed: 650 r/min or more.
- Time since above engine condition: 1.5 seconds or more.
- Requested shift fork: Shift fork 1.


JUDGMENT CRITERIA

- Shift fork 3 position: –6 mm (–0.24 inch) [6th gear side] or more, or 1.8 mm (0.071 inch) [neutral position] or more, and initialized fork position – shift fork 1 position: 2.5 mm (0.098 inch) or less. (200 millisecond)

**OBD-II DRIVE CYCLE PATTERN
<FUNCTIONAL CHECK - SHIFT FORK 1
REQUESTED BUT SHIFT FORK 3
MOVEMENT>**

The status with the shift fork position –6 mm (–0.24 inch) [6th gear side] or less, or with 1.8 mm (0.071 inch) [neutral position] or less and with the initialized fork position –shift fork 1 position 2.5 mm (0.098 inch) or more continues for 200 millisecond.

LOGIC FLOW CHARTS (Monitor Sequence) <Functional check - Shift fork 1 requested but shift fork 2 movement>

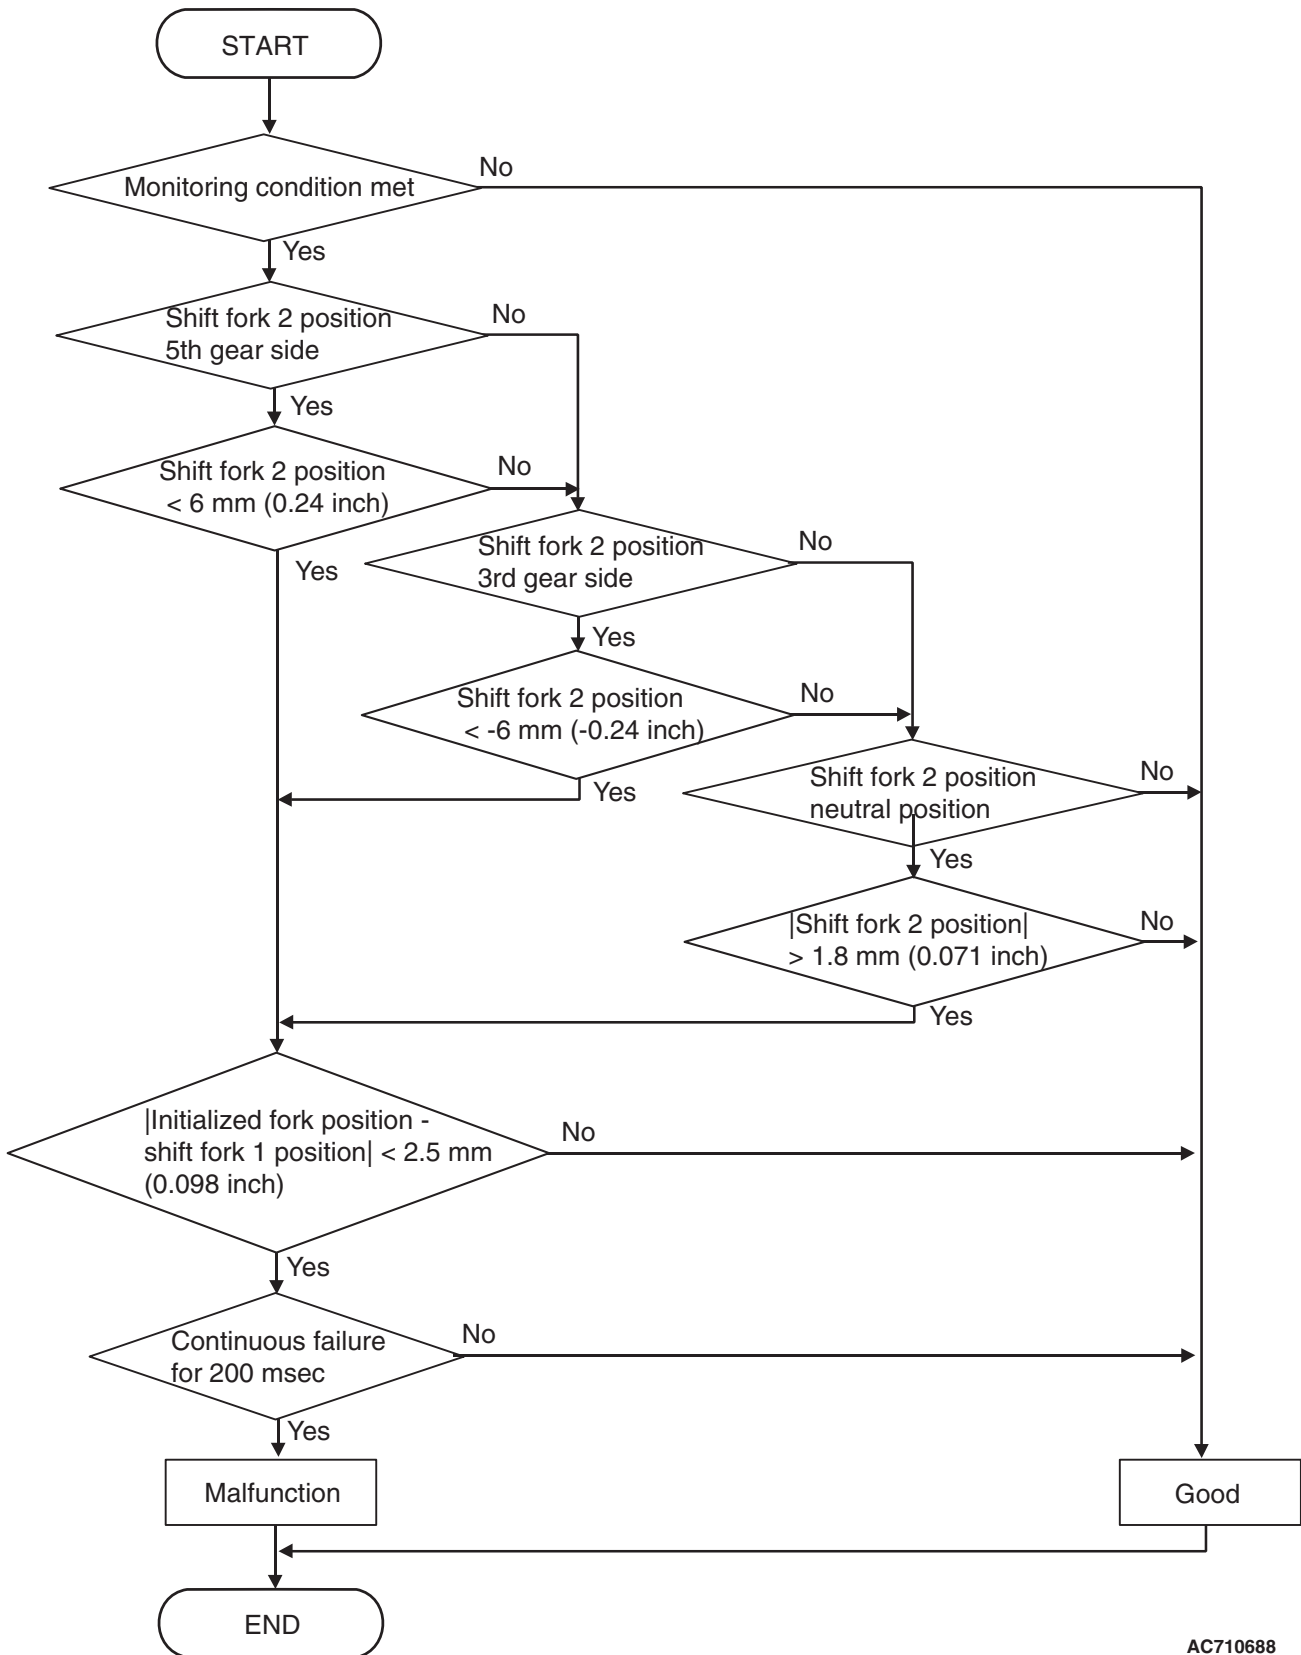

AC710688

DTC SET CONDITIONS <FUNCTIONAL CHECK - SHIFT FORK 1 REQUESTED BUT SHIFT FORK 2 MOVEMENT>

Check Conditions

- Voltage of battery: 8 V or more.
- Voltage of battery: 16.5 V or less.
- Engine speed: 650 r/min or more.
- Time since above engine condition: 1.5 seconds or more.
- Requested shift fork: Shift fork 1.

JUDGMENT CRITERIA

- Shift fork position: 6 mm (0.24 inch) [5th gear side] or less, or -6 mm (-0.24 inch) [3rd gear side] or more, or 1.8 mm (0.071 inch) [neutral position] or more, and initialized fork position –shift fork 1 position: 2.5 mm (0.098 inch) or less. (200 millisecond)

OBD-II DRIVE CYCLE PATTERN <FUNCTIONAL CHECK - SHIFT FORK 1 REQUESTED BUT SHIFT FORK 2 MOVEMENT>

The status with the shift fork position 6 mm (0.24 inch) [5th gear side] or more, or with -6 mm (-0.24 inch) [3rd gear side] or less, or with 1.8 mm (0.071 inch) [neutral position] or less and with the initialized fork position –shift fork 1 position 2.5 mm (0.098 inch) or more continues for 200 millisecond.

PROBABLE CAUSES

- Malfunction of TC-SST-ECU
- Malfunction of TC-SST shift fork

DIAGNOSTIC PROCEDURE

Required Special Tools:

- MB991958 Scan Tool (M.U.T.-III Sub Assembly)
 - MB991824: Vehicle Communication Interface (V.C.I.)
 - MB991827 M.U.T.-III USB Cable
 - MB991910 M.U.T.-III Main Harness A

STEP 1. Scan tool CAN bus diagnostics

Using scan tool MB991958, diagnose the CAN bus lines.

Q: Is the check result normal?

YES : Go to Step 2.

NO : Repair the CAN bus lines. (Refer to GROUP 54C – Troubleshooting [P.54C-16.](#)) After repairing the CAN bus line, go to Step 2.

STEP 2. Monitoring unit No. check

(1) Check the freeze frame data (item No. 30 to No. 37).

(2) Check which monitoring unit (No. 160, No. 172, No. 182, or No. 183) is set.

Q: Which monitoring unit is set, No. 160, No. 172, No. 182, or No. 183?

No. 160 : Go to Step 4

Other than No. 160 : Go to Step 3

STEP 3. Check whether the DTC is reset.

- (1) Erase the DTC.
- (2) Drive with shifting to each gear range.
- (3) Check that the DTC is reset.

Q: Is DTC No.P1836 set?

YES : Replace the mechatronic assembly. (Refer to [P.22C-505.](#))

NO : Intermittent malfunction. (Refer to GROUP 00 –How to Cope with Intermittent Malfunction [P.00-13.](#))

STEP 4. Check whether the DTC is reset.

- (1) Erase the DTC.
- (2) With the engine idle status, operate the shift lever in the following sequence: P →R →D →R →P. (Hold each range for 5 seconds or more.)
- (3) Check that the DTC is reset.

Q: Is DTC No.P1836 set?

YES : Go to Step 5.

NO : Intermittent malfunction. (Refer to GROUP 00 –How to Cope with Intermittent Malfunction [P.00-13.](#))

STEP 5. Scan tool Teach-In

- (1) Carry out the Item No.3: Line pressure Test. (Refer to Special Function (Teach-In Reference Table [P.22C-362.](#)))
- (2) After Teach-In, check which result ("Yes" or "No") is displayed in the Data list No. 101: Normal End. (Refer to Special Function (Teach-In Reference Table [P.22C-362.](#)))

Q: Which is displayed, "Yes" or "No"?

"Yes" : Go to Step 6

"No" : DTC No. P181B: Carry out the troubleshooting for the DTC No. P181B: Clutch 1 (Pressure low range out). (Refer to [P.22C-109.](#))

STEP 6. Scan tool Teach-In

- (1) Carry out the Item No. 1: Plausibility check. (Refer to Special Function (Teach-In Reference Table [P.22C-362.](#)))
- (2) After Teach-In, check which result ("Yes" or "No") is displayed in the Data list No. 101: Normal End. (Refer to Special Function (Teach-In Reference Table [P.22C-362.](#)))

Q: Which is displayed, "Yes" or "No"?

"Yes" : Replace the transaxle assembly. (Refer to [P.22C-497.](#))

"No" : Go to Step 7.

STEP 7. Replace the mechatronic assembly, and check if the DTC is reset.

- (1) Replace the mechatronic assembly. (Refer to [P.22C-505.](#))
- (2) With the engine idle status, operate the shift lever in the following sequence: P →R →D →R →P. (Hold each range for 5 seconds or more.)
- (3) Check the DTC.

Q: Is DTC No.P1836 set?

YES : Replace the transaxle assembly. (Refer to [P.22C-497.](#))

NO : This diagnosis is complete.

DTC P183D: Shift Fork 2 Malfunction

⚠ CAUTION

- If there is any problem in the CAN bus lines, an incorrect diagnostic trouble code may be set. Prior to this diagnosis, diagnose the CAN bus lines.
- Whenever the ECU is replaced, ensure that the CAN bus lines are normal.

DIAGNOSTIC FUNCTION

TC-SST-ECU checks that the movement of the shift fork 2 is normal.

DESCRIPTIONS OF MONITOR METHODS

The movement of the shift fork 2 is determined to be abnormal.

MONITOR EXECUTION

- Continuous

**MONITOR EXECUTION CONDITIONS
(OTHER MONITOR AND SENSOR)**


Other Monitor (There is no temporary DTC stored in memory for the item monitored below)

- P1836: Shift fork 1 malfunction

Sensor (The sensor below is determined to be normal)

- Not applicable

LOGIC FLOW CHARTS (Monitor Sequence) <Functional check - blocked>

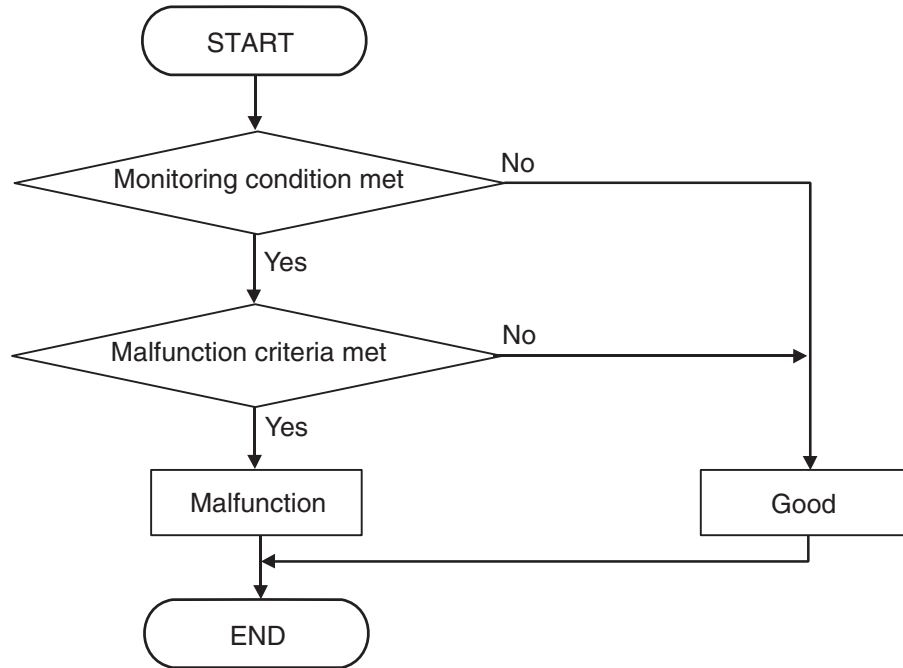


AC710675

DTC SET CONDITIONS <FUNCTIONAL CHECK - BLOCKED>


Check Conditions

- Voltage of battery: 8 V or more.
- Voltage of battery: 16.5 V or less.
- Engine speed: 650 r/min or more.
- Time since above engine condition: 1.5 seconds or more.
- Common high side 1 voltage: 7 V or more.
- Common high side 2 voltage: 7 V or more.

Judgment Criteria

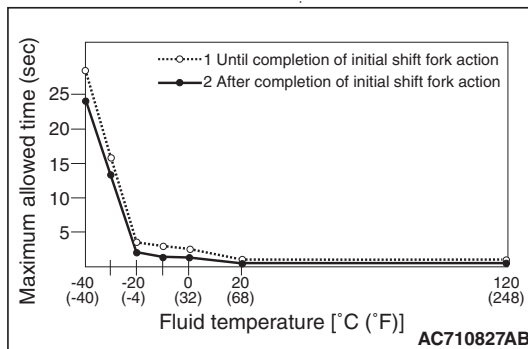

AC710827AB

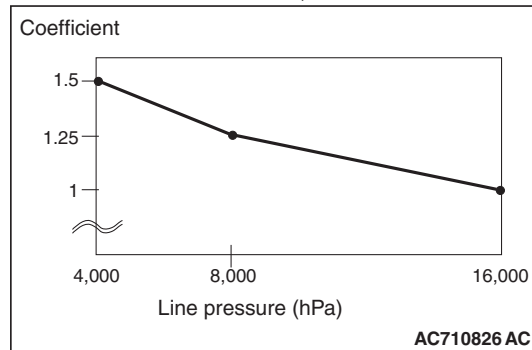


AC710826 AC

- Shift fork operation time: Shift fork operation time (threshold value) or more. (immediately)
- Shift fork operation time (threshold value): Equal the maximum allowed time x Coefficient. (immediately)

OBD-II DRIVE CYCLE PATTERN <FUNCTIONAL CHECK - BLOCKED>

The shift fork operation time is threshold value or less.

LOGIC FLOW CHARTS (Monitor Sequence) <Functional check - Neutral>

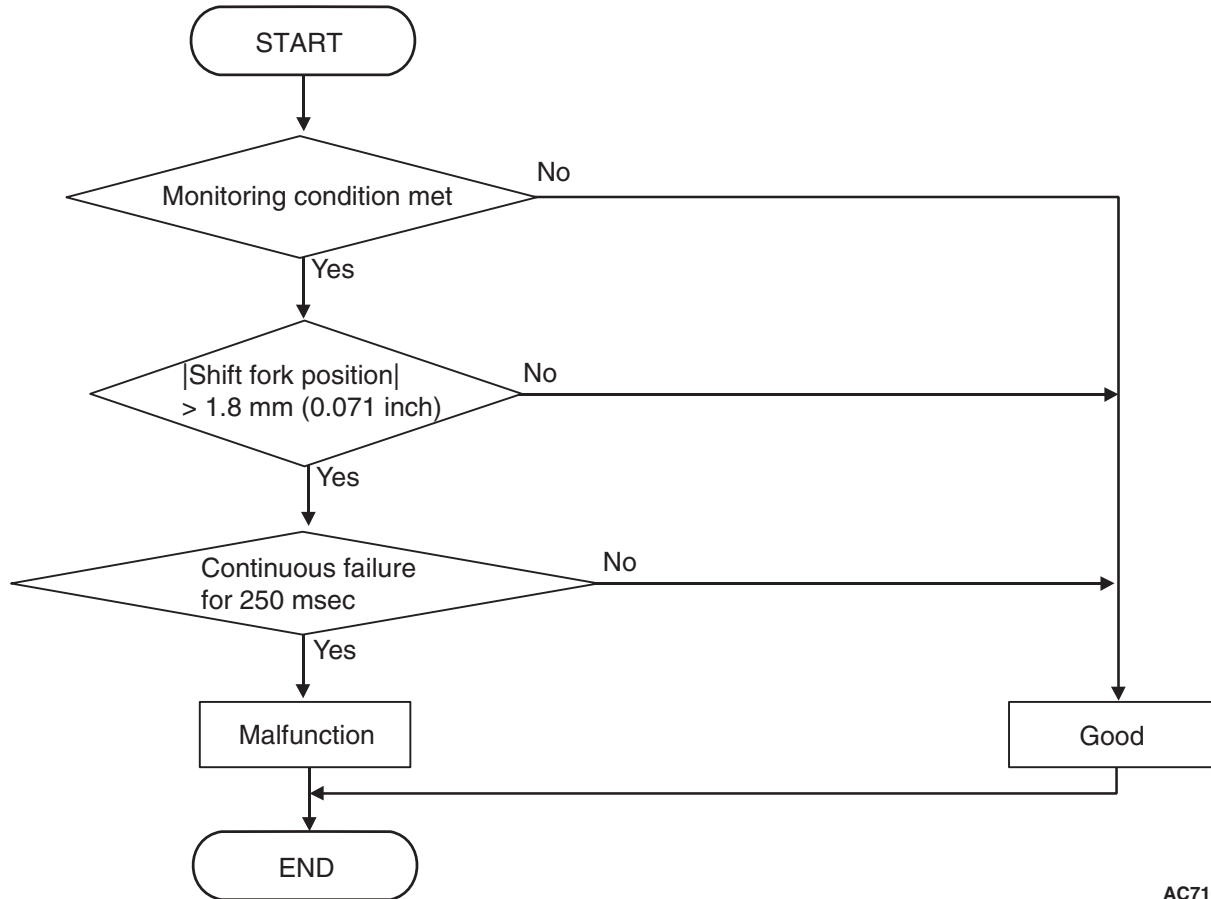

AC710686

DTC SET CONDITIONS <FUNCTIONAL CHECK - NEUTRAL>

Check Conditions

- Voltage of battery: 8 V or more.
- Voltage of battery: 16.5 V or less.
- Engine speed: 650 r/min or more.
- Time since above engine condition: 1.5 seconds or more.
- Shift fork 2 current gear: Neutral.

Judgment Criteria

- Shift fork position: 1.8 mm (0.071 inch) or more. (250 millisecond)

OBD-II DRIVE CYCLE PATTERN <FUNCTIONAL CHECK - NEUTRAL>

The shift fork position remains 1.8 mm (0.071 inch) or less for 250 millisecond.

LOGIC FLOW CHARTS (Monitor Sequence) <Functional check - Shift fork 2 requested but shift fork 4 movement>



AC710709

DTC SET CONDITIONS <FUNCTIONAL CHECK - SHIFT FORK 2 REQUESTED BUT SHIFT FORK 4 MOVEMENT>

Check Conditions

- Voltage of battery: 8 V or more.
- Voltage of battery: 16.5 V or less.
- Engine speed: 650 r/min or more.
- Time since above engine condition: 1.5 seconds or more.
- Requested shift fork: Shift fork 2.

Judgment Criteria

- Shift fork position: 6 mm (0.24 inch) [4th gear side] or less, or -6 mm (-0.24 inch) [2nd gear side] or more, or 1.8 mm (0.071 inch) [neutral position] or more, and Initialized fork position - shift fork 2 position: 2.5 mm (0.098 inch) or less. (200 millisecond)

OBD-II DRIVE CYCLE PATTERN <FUNCTIONAL CHECK - SHIFT FORK 2 REQUESTED BUT SHIFT FORK 4 MOVEMENT>

The status with the shift fork position 6 mm (0.24 inch) or more, or with -6 mm (-0.24 inch) or less, or with 1.8 mm (0.071 inch) or less and with the initialized fork position -shift fork 1 position 2.5 mm (0.098 inch) or more continues for 200 millisecond.

LOGIC FLOW CHARTS (Monitor Sequence) <Functional check - Shift fork 2 requested but shift fork 1 movement>



AC710710

DTC SET CONDITIONS <FUNCTIONAL CHECK - SHIFT FORK 2 REQUESTED BUT SHIFT FORK 1 MOVEMENT>

Check Conditions

- Voltage of battery: 8 V or more.
- Voltage of battery: 16.5 V or less.
- Engine speed: 650 r/min or more.
- Time since above engine condition: 1.5 seconds or more.
- Requested shift fork: Shift fork 2.

Judgment Criteria

- Shift fork position: 6 mm (0.24 inch) [1st gear side] or less, or -6 mm (-0.24 inch) [reverse gear side] or more, or 1.8 mm (0.071 inch) [neutral position] or more, and initialized fork position - shift fork 2 position: 2.5 mm (0.098 inch) or less. (200 millisecond)

OBD-II DRIVE CYCLE PATTERN <FUNCTIONAL CHECK - SHIFT FORK 2 REQUESTED BUT SHIFT FORK 1 MOVEMENT>

The status with the shift fork position 6 mm (0.24 inch) [1st gear side] or more, or with -6 mm (-0.24 inch) [reverse gear side] or less, or with 1.8 mm (0.071 inch) [neutral position] or less and with the initialized fork position -shift fork 2 position 2.5 mm (0.098 inch) or more continues for 200 millisecond.

PROBABLE CAUSES

- Malfunction of TC-SST-ECU
- Malfunction of TC-SST shift fork

DIAGNOSTIC PROCEDURE

Required Special Tools:

- MB991958 Scan Tool (M.U.T.-III Sub Assembly)
 - MB991824: Vehicle Communication Interface (V.C.I.)
 - MB991827 M.U.T.-III USB Cable
 - MB991910 M.U.T.-III Main Harness A

STEP 1. Scan tool CAN bus diagnostics

Using scan tool MB991958, diagnose the CAN bus lines.

Q: Is the check result normal?

YES : Go to Step 2.

NO : Repair the CAN bus lines. (Refer to GROUP 54C - Troubleshooting [P.54C-16.](#)) After repairing the CAN bus line, go to Step 2.

STEP 2. Monitoring unit No. check

(1) Check the freeze frame data (item No. 30 to No. 37).

(2) Check which monitoring unit (No. 161, No. 174, No. 184, or No. 185) is set.

Q: Which monitoring unit is set, No. 161, No. 174, No. 184, or No. 185?

No. 161 : Go to Step 4

Other than No. 161 : Go to Step 3

STEP 3. Check whether the DTC is reset.

- (1) Erase the DTC.
- (2) Drive with shifting to each gear range.
- (3) Check that the DTC is reset.

Q: Is DTC No.P183D set?

YES : Replace the mechatronic assembly. (Refer to [P.22C-505.](#))

NO : Intermittent malfunction. (Refer to GROUP 00 –How to Cope with Intermittent Malfunction [P.00-13.](#))

STEP 4. Check whether the DTC is reset.

- (1) Erase the DTC.
- (2) Drive in the 3rd gear.
- (3) Check that the DTC is reset.

Q: Is DTC No.P183D set?

YES : Go to Step 5.

NO : Intermittent malfunction. (Refer to GROUP 00 –How to Cope with Intermittent Malfunction [P.00-13.](#))

STEP 5. Scan tool Teach-In

- (1) Carry out the Item No.3: Line pressure Test. (Refer to Special Function (Teach-In Reference Table [P.22C-362.](#)))
- (2) After Teach-In, check which result ("Yes" or "No") is displayed in the Data list No. 101: Normal End. (Refer to Special Function (Teach-In Reference Table [P.22C-362.](#)))

Q: Which is displayed, "Yes" or "No"?

"Yes" : Go to Step 6

"No" : DTC No. P181B: Carry out the troubleshooting for the DTC No. P181B: Clutch 1 (Pressure low range out). (Refer to [P.22C-109.](#))

STEP 6. Scan tool Teach-In

- (1) Carry out the Item No. 1: Plausibility check. (Refer to Special Function (Teach-In Reference Table [P.22C-362.](#)))
- (2) After Teach-In, check which result ("Yes" or "No") is displayed in the Data list No. 101: Normal End. (Refer to Special Function (Teach-In Reference Table [P.22C-362.](#)))

Q: Which is displayed, "Yes" or "No"?

"Yes" : Replace the transaxle assembly. (Refer to [P.22C-497.](#))

"No" : Go to Step 7.

STEP 7. Replace the mechatronic assembly, and check if the DTC is reset.

- (1) Replace the mechatronic assembly. (Refer to [P.22C-505.](#))
- (2) Drive in the 3rd gear.
- (3) Check the DTC.

Q: Is DTC No.P183D set?

YES : Replace the transaxle assembly. (Refer to [P.22C-497.](#))

NO : This diagnosis is complete.

DTC P1844: Shift Fork 3 Malfunction

⚠ CAUTION

- If there is any problem in the CAN bus lines, an incorrect diagnostic trouble code may be set. Prior to this diagnosis, diagnose the CAN bus lines.
- Whenever the ECU is replaced, ensure that the CAN bus lines are normal.

DIAGNOSTIC FUNCTION

TC-SST-ECU checks that the movement of the shift fork 3 is normal.

DESCRIPTIONS OF MONITOR METHODS

The movement of the shift fork 3 is determined to be abnormal.

MONITOR EXECUTION

- Continuous

**MONITOR EXECUTION CONDITIONS
(OTHER MONITOR AND SENSOR)**


Other Monitor (There is no temporary DTC stored in memory for the item monitored below)

- P1836: Shift fork 1 malfunction
- P184B: Shift fork 4 malfunction

Sensor (The sensor below is determined to be normal)

- Not applicable

LOGIC FLOW CHARTS (Monitor Sequence) <Functional check - blocked>

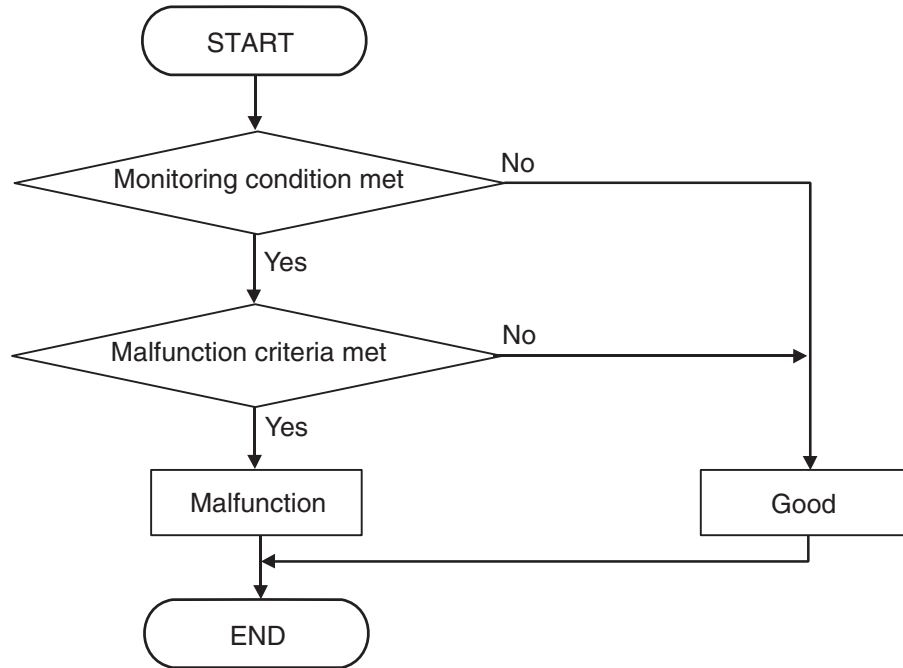


AC710675

DTC SET CONDITIONS <FUNCTIONAL CHECK - BLOCKED>


Check Conditions

- Voltage of battery: 8 V or more.
- Voltage of battery: 16.5 V or less.
- Engine speed: 650 r/min or more.
- Time since above engine condition: 1.5 seconds or more.
- Common high side 1 voltage: 7 V or more.
- Common high side 2 voltage: 7 V or more.

JUDGMENT CRITERIA

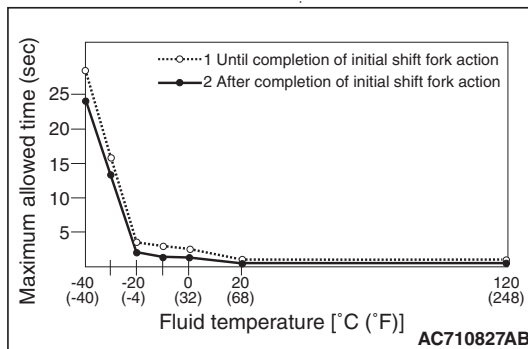

TSB Revision

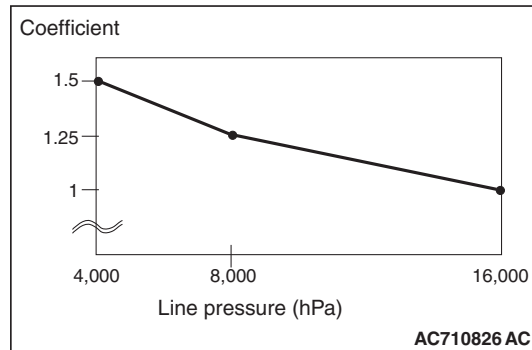


AC710826 AC

- Shift fork operation time: Shift fork operation time (threshold value) or more. (immediately)
- Shift fork operation time (threshold value): Equal the maximum allowed time x Coefficient. (immediately)

OBD-II DRIVE CYCLE PATTERN <FUNCTIONAL CHECK - BLOCKED>

The shift fork operation time is threshold value or less.

LOGIC FLOW CHARTS (Monitor Sequence) <Functional check - Shift fork 3 requested but shift fork 1 movement>

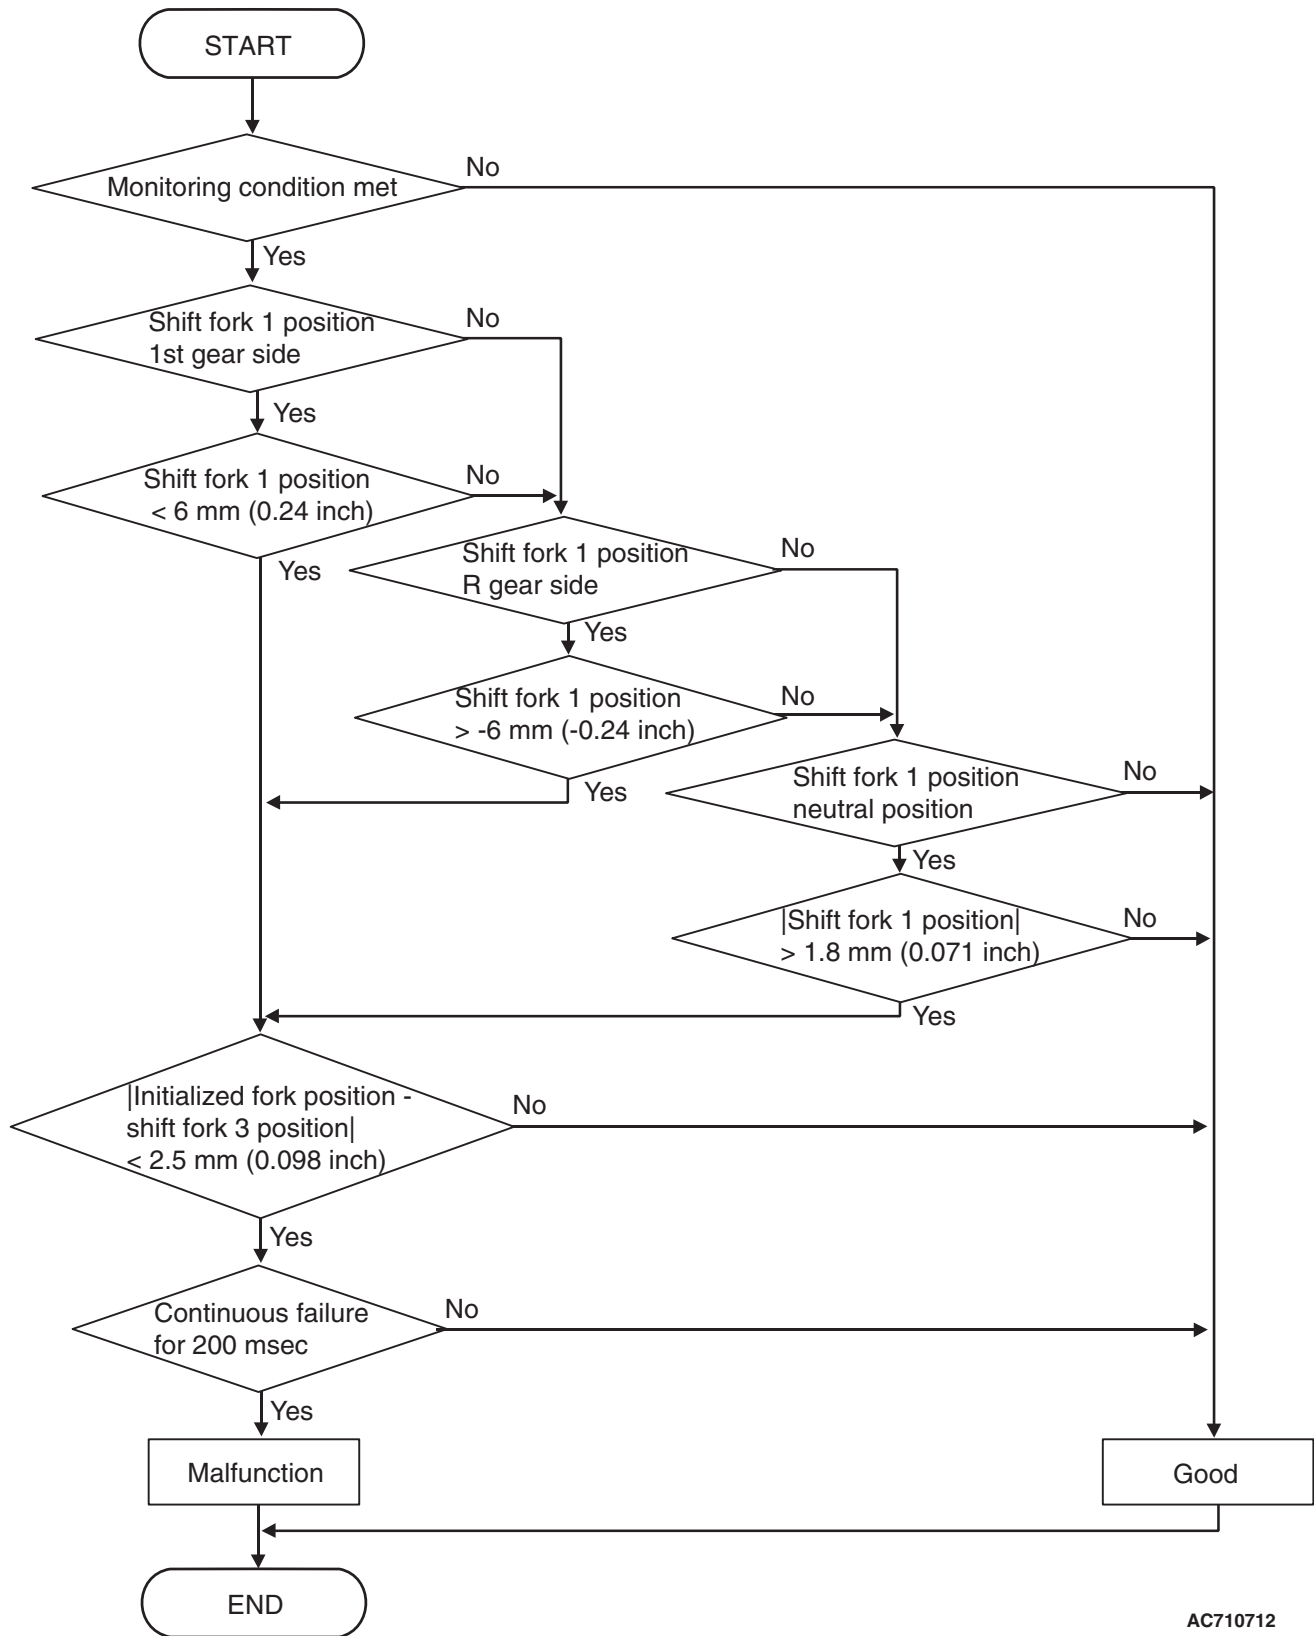

AC710712

**DTC SET CONDITIONS <FUNCTIONAL
CHECK - SHIFT FORK 3 REQUESTED
BUT SHIFT FORK 1 MOVEMENT>****Check Conditions**

- Voltage of battery: 8 V or more.
- Voltage of battery: 16.5 V or less.
- Engine speed: 650 r/min or more.
- Time since above engine condition: 1.5 seconds or more.
- Requested shift fork: Shift fork 3.


JUDGMENT CRITERIA

- Shift fork position: 6 mm (0.24 inch) [1st gear side] or less, or -6 mm (-0.24 inch) [reverse gear side] or more, or 1.8 mm (0.071 inch) [neutral position] or more and initialized fork position - shift fork 3 position: 2.5 mm (0.098 inch) or less. (200 millisecond)

**OBD-II DRIVE CYCLE PATTERN
<FUNCTIONAL CHECK - SHIFT FORK 3
REQUESTED BUT SHIFT FORK 1
MOVEMENT>**

The status with the shift fork position 6 mm (0.24 inch) [1st gear side] or more, or with -6 mm (-0.24 inch) [reverse gear side] or less, or with 1.8 mm (0.071 inch) [neutral position] or less and with the initialized fork position -shift fork 3 position 2.5 mm (0.098 inch) or more continues for 200 millisecond.

LOGIC FLOW CHARTS (Monitor Sequence) <Functional check - shift fork 3 requested but shift fork 4 movement>

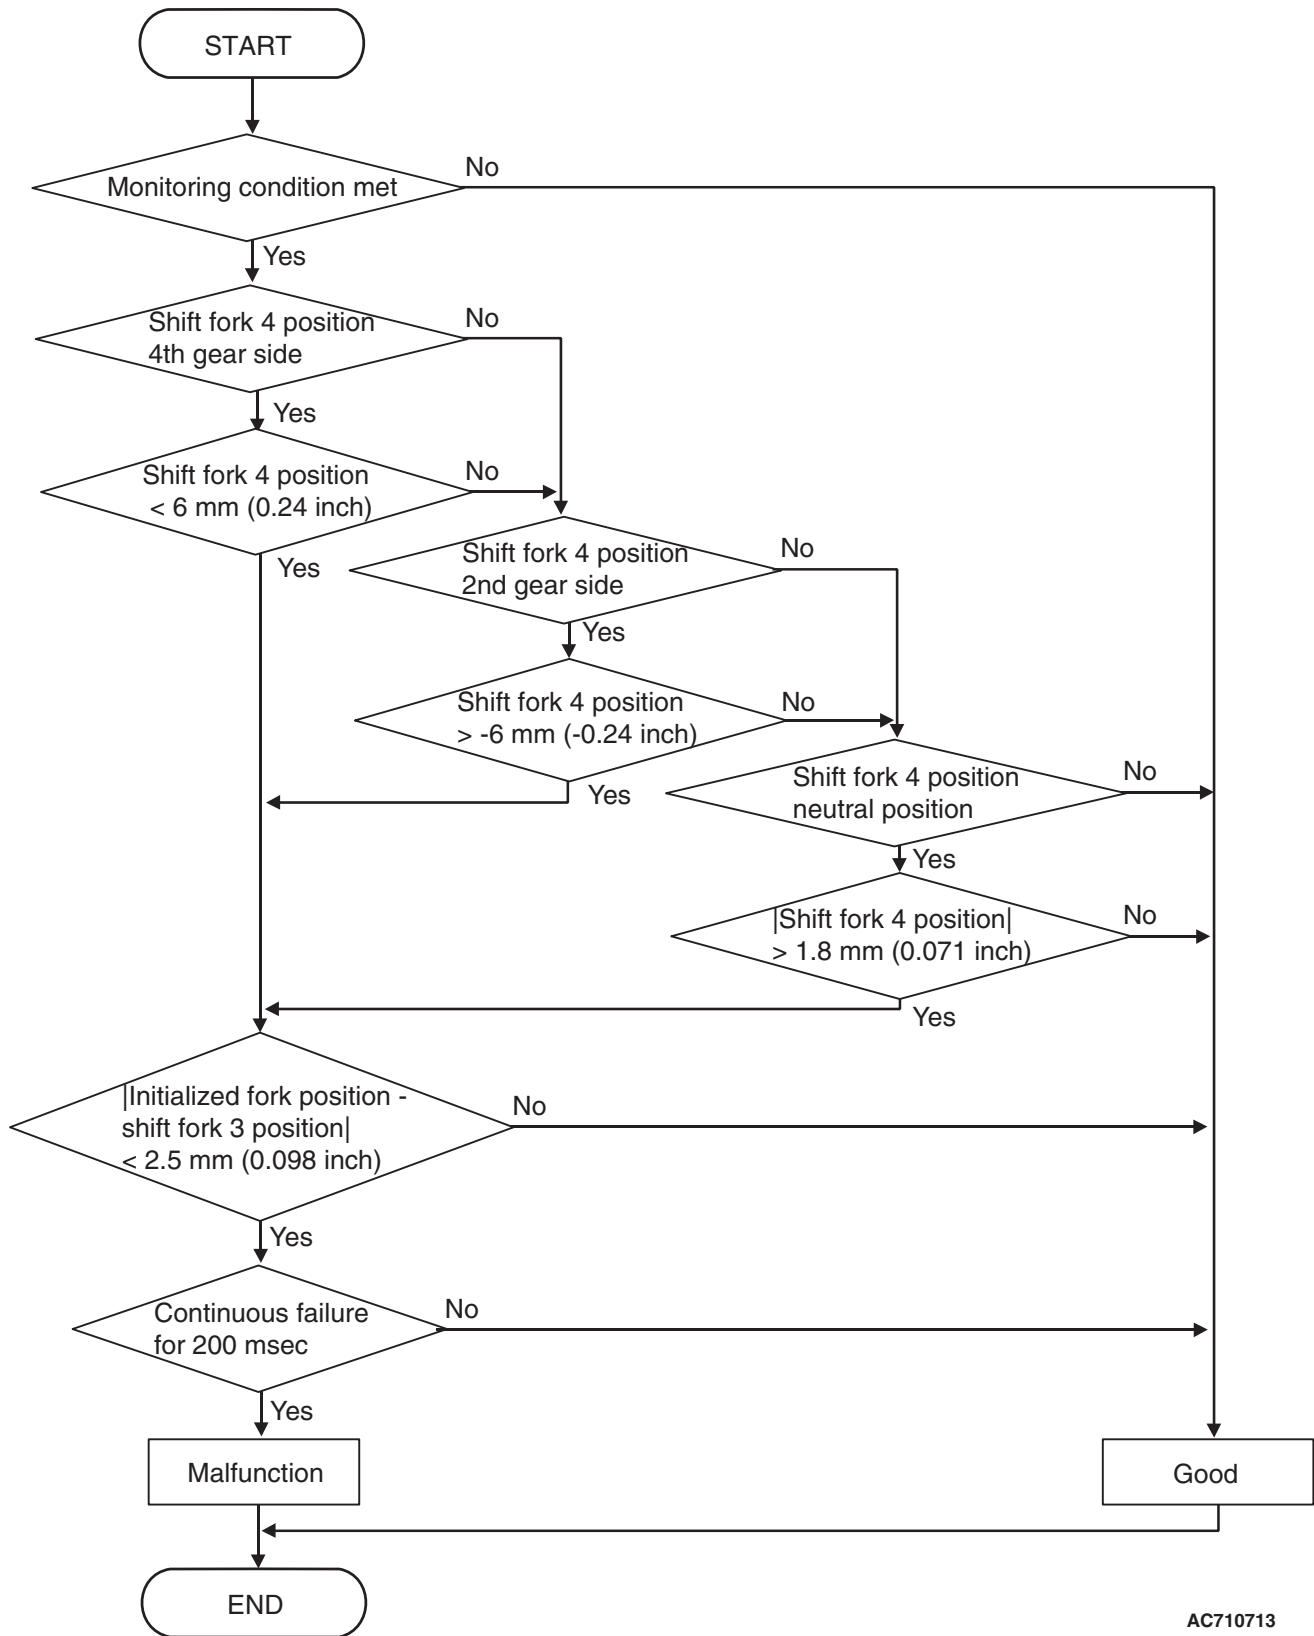

AC710713

DTC SET CONDITIONS <FUNCTIONAL CHECK - SHIFT FORK 3 REQUESTED BUT SHIFT FORK 4 MOVEMENT>**Check Conditions**

- Voltage of battery: 8 V or more.
- Voltage of battery: 16.5 V or less.
- Engine speed: 650 r/min or more.
- Time since above engine condition: 1.5 seconds or more.
- Requested shift fork: Shift fork 3.

JUDGMENT CRITERIA

- Shift fork position: 6 mm (0.24 inch) [4th gear side] or less, or -6 mm (-0.24 inch) [2nd gear side] or more, or 1.8 mm (0.071 inch) [neutral position] or more, and initialized fork position - shift fork 3 position: 2.5 mm (0.098 inch) or less. (200 millisecond)

OBD-II DRIVE CYCLE PATTERN <FUNCTIONAL CHECK - SHIFT FORK 3 REQUESTED BUT SHIFT FORK 4 MOVEMENT>

The status with the shift fork position 6 mm (0.24 inch) [4th gear side] or more, or with -6 mm (-0.24 inch) [2nd gear side] or less, or with 1.8 mm (0.071 inch) [neutral position] or less and with the initialized fork position -shift fork 3 position 2.5 mm (0.098 inch) or more continues for 200 millisecond.

PROBABLE CAUSES

- Malfunction of TC-SST-ECU
- Malfunction of TC-SST shift fork

DIAGNOSTIC PROCEDURE**Required Special Tools:**

- MB991958 Scan Tool (M.U.T.-III Sub Assembly)
 - MB991824: Vehicle Communication Interface (V.C.I.)
 - MB991827 M.U.T.-III USB Cable
 - MB991910 M.U.T.-III Main Harness A

STEP 1. Scan tool CAN bus diagnostics

Using scan tool MB991958, diagnose the CAN bus lines.

Q: Is the check result normal?

YES : Go to Step 2.

NO : Repair the CAN bus lines. (Refer to GROUP 54C - Troubleshooting [P.54C-16.](#)) After repairing the CAN bus line, go to Step 2.

STEP 2. Monitoring unit No. check

(1) Check the freeze frame data (item No. 30 to No. 37).

(2) Check which monitoring unit (No. 162, No. 178, No. 186, or No. 187) is set.

Q: Which monitoring unit is set, No. 162, No. 178, No. 186, or No. 187?

No. 162 : Go to Step 4

Other than No. 162 : Go to Step 3

STEP 3. Check whether the DTC is reset.

- (1) Erase the DTC.
- (2) Drive with shifting to each gear range.
- (3) Check that the DTC is reset.

Q: Is DTC No.P1844 set?

YES : Replace the mechatronic assembly. (Refer to [P.22C-505.](#))

NO : Intermittent malfunction. (Refer to GROUP 00 –How to Cope with Intermittent Malfunction [P.00-13.](#))

STEP 4. Check whether the DTC is reset.

- (1) Erase the DTC.
- (2) Drive in the 6th gear.
- (3) Check that the DTC is reset.

Q: Is DTC No.P1844 set?

YES : Go to Step 5.

NO : Intermittent malfunction. (Refer to GROUP 00 –How to Cope with Intermittent Malfunction [P.00-13.](#))

STEP 5. Scan tool Teach-In

- (1) Carry out the Item No.3: Line pressure Test. (Refer to Special Function (Teach-In Reference Table [P.22C-362.](#)))
- (2) After Teach-In, check which result ("Yes" or "No") is displayed in the Data list No. 101: Normal End. (Refer to Special Function (Teach-In Reference Table [P.22C-362.](#)))

Q: Which is displayed, "Yes" or "No"?

"Yes" : Go to Step 6

"No" : DTC No. P181B: Carry out the troubleshooting for the DTC No. P181B: Clutch 1 (Pressure low range out). (Refer to [P.22C-109.](#))

STEP 6. Scan tool Teach-In

- (1) Carry out the Item No. 1: Plausibility check. (Refer to Special Function (Teach-In Reference Table [P.22C-362.](#)))
- (2) After Teach-In, check which result ("Yes" or "No") is displayed in the Data list No. 101: Normal End. (Refer to Special Function (Teach-In Reference Table [P.22C-362.](#)))

Q: Which is displayed, "Yes" or "No"?

"Yes" : Replace the transaxle assembly. (Refer to [P.22C-497.](#))

"No" : Go to Step 7.

STEP 7. Replace the mechatronic assembly, and check if the DTC is reset.

- (1) Replace the mechatronic assembly. (Refer to [P.22C-505.](#))
- (2) Drive in the 6th gear.
- (3) Check the DTC.

Q: Is DTC No.P1844 set?

YES : Replace the transaxle assembly. (Refer to [P.22C-497.](#))

NO : This diagnosis is complete.

DTC P184B: Shift Fork 4 Malfunction

⚠ CAUTION

- If there is any problem in the CAN bus lines, an incorrect diagnostic trouble code may be set. Prior to this diagnosis, diagnose the CAN bus lines.
- Whenever the ECU is replaced, ensure that the CAN bus lines are normal.

DIAGNOSTIC FUNCTION

TC-SST-ECU checks that the movement of the shift fork 4 is normal.

DESCRIPTIONS OF MONITOR METHODS

The movement of the shift fork 4 is determined to be abnormal.

MONITOR EXECUTION

- Continuous

MONITOR EXECUTION CONDITIONS (OTHER MONITOR AND SENSOR)


Other Monitor (There is no temporary DTC stored in memory for the item monitored below)

- P1844: Shift fork 3 malfunction

Sensor (The sensor below is determined to be normal)

- Not applicable

LOGIC FLOW CHARTS (Monitor Sequence) <Functional check - blocked>

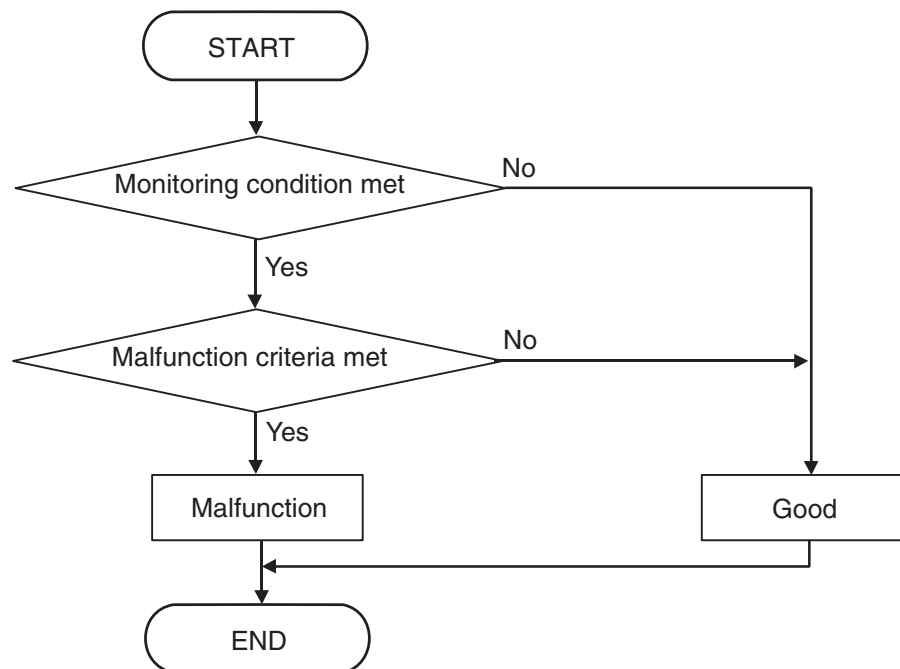



AC710675

DTC SET CONDITIONS <FUNCTIONAL CHECK - BLOCKED>

Check Conditions

- Voltage of battery: 8 V or more.
- Voltage of battery: 16.5 V or less.
- Engine speed: 650 r/min or more.
- Time since above engine condition: 1.5 seconds or more.
- Common high side 1 voltage: 7 V or more.
- Common high side 3 voltage: 7 V or more.

JUDGMENT CRITERIA

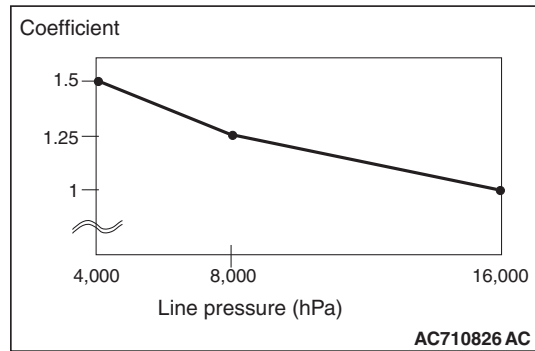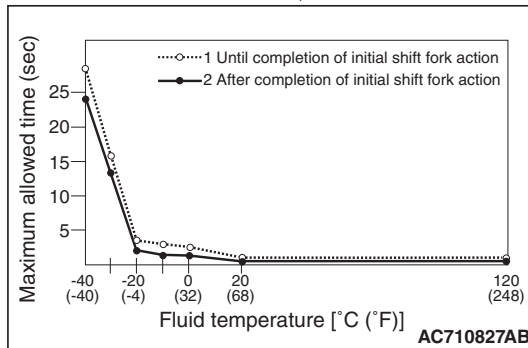


- Shift fork operation time: Shift fork operation time (threshold value) or more. (immediately)
- Shift fork operation time (threshold value): Equal the maximum allowed time x Coefficient. (immediately)

OBD-II DRIVE CYCLE PATTERN <FUNCTIONAL CHECK - BLOCKED>

The shift fork operation time is threshold value or less.

LOGIC FLOW CHARTS (Monitor Sequence) <Functional check - Neutral>

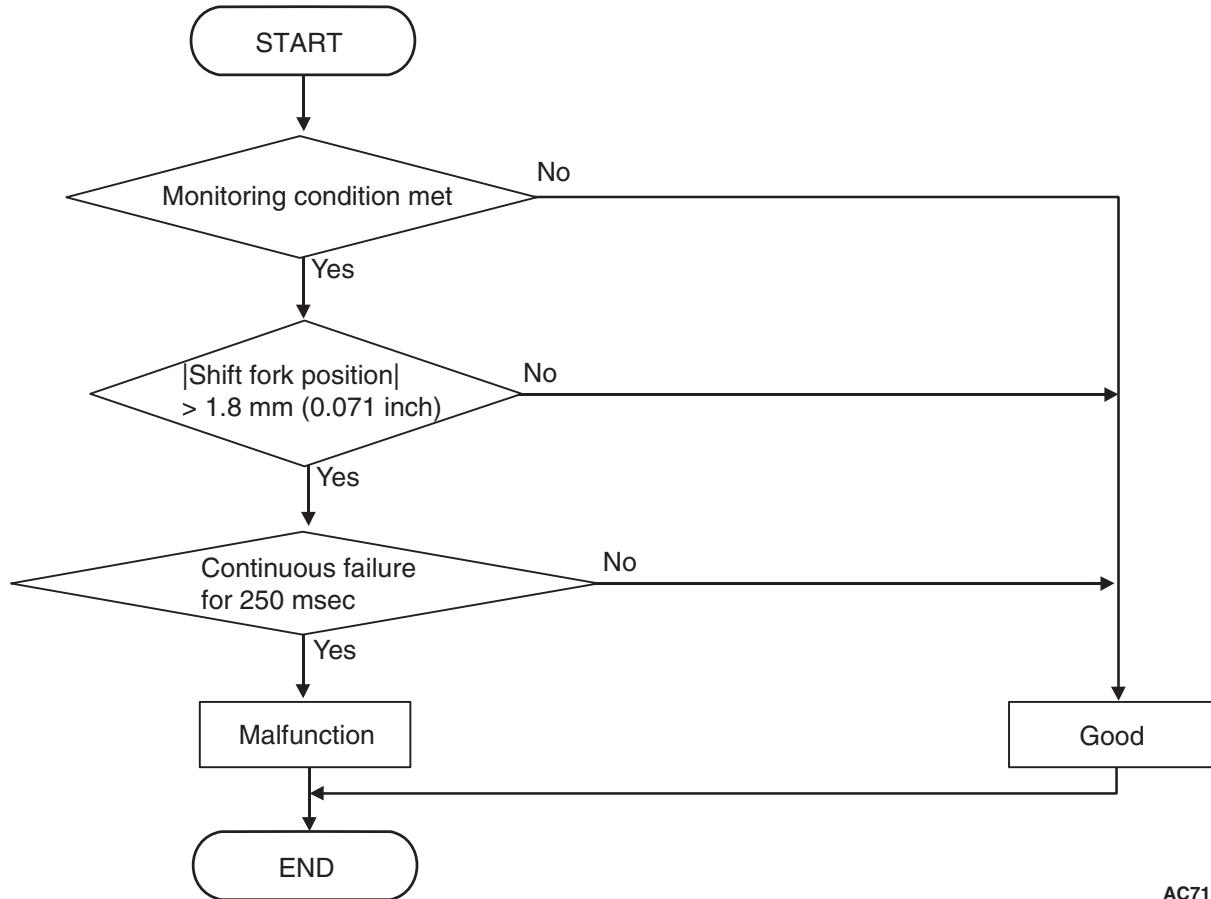

AC710686

DTC SET CONDITIONS <FUNCTIONAL CHECK - NEUTRAL>

Check Conditions

- Voltage of battery: 8 V or more.
- Voltage of battery: 16.5 V or less.
- Engine speed: 650 r/min or more.
- Time since above engine condition: 1.5 seconds or more.
- Shift fork 4 current gear: Neutral.


JUDGMENT CRITERIA

- Shift fork position: 1.8 mm (0.071 inch) or more. (250 millisecond)

OBD-II DRIVE CYCLE PATTERN <FUNCTIONAL CHECK - NEUTRAL>

The shift fork position remains 1.8 mm (0.071 inch) or less for 250 millisecond.

LOGIC FLOW CHARTS (Monitor Sequence) <Functional check - Shift fork 4 requested but shift fork 2 movement>

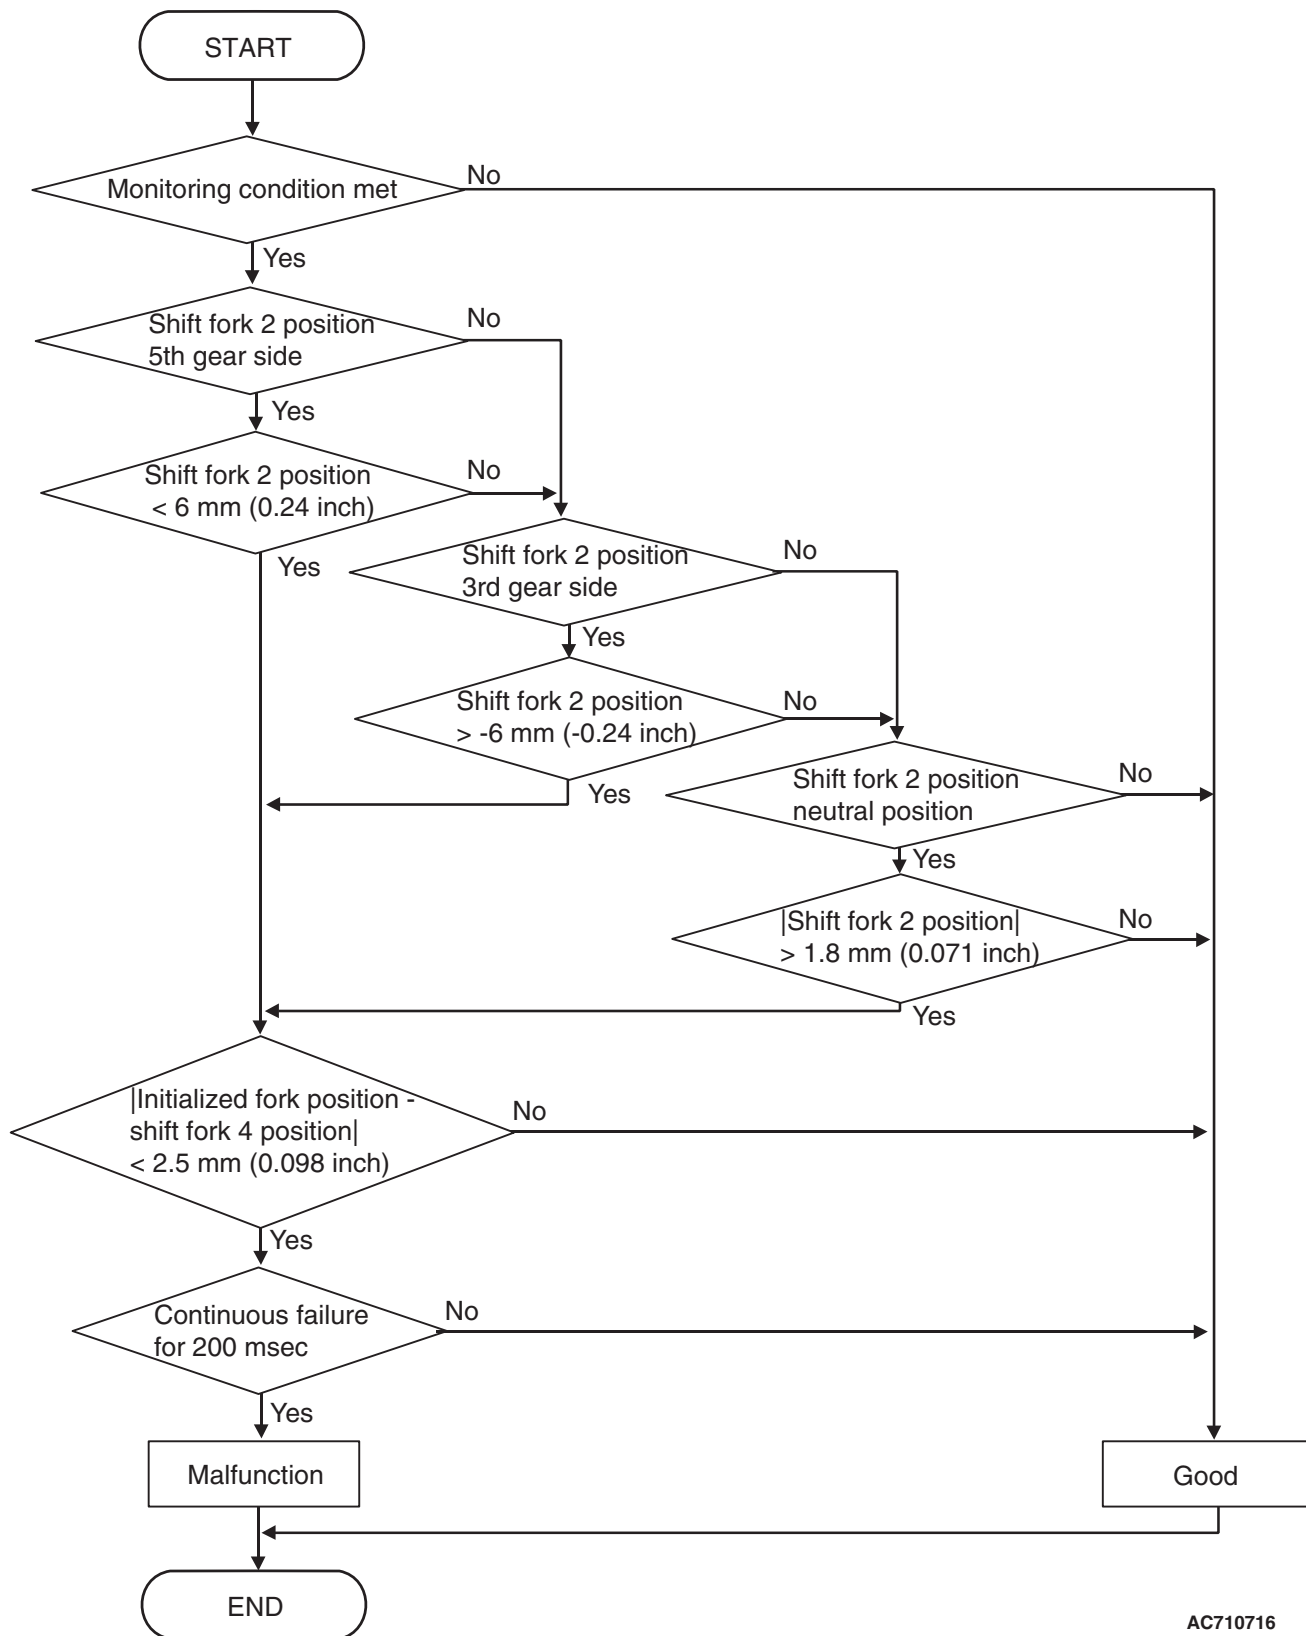

AC710716

**DTC SET CONDITIONS <FUNCTIONAL
CHECK - SHIFT FORK 4 REQUESTED
BUT SHIFT FORK 2 MOVEMENT>****Check Conditions**

- Voltage of battery: 8 V or more.
- Voltage of battery: 16.5 V or less.
- Engine speed: 650 r/min or more.
- Time since above engine condition: 1.5 seconds or more.
- Requested shift fork: Shift fork 4.


JUDGMENT CRITERIA

- Shift fork position: 6 mm (0.24 inch) [5th gear side] or less, or -6 mm (-0.24 inch) [3rd gear side] or more, or 1.8 mm (0.071 inch) [neutral position] or more, and Initialized fork position - shift fork 4 position: 2.5 mm (0.098 inch) or less. (200 millisecond)

**OBD-II DRIVE CYCLE PATTERN
<FUNCTIONAL CHECK - SHIFT FORK 4
REQUESTED BUT SHIFT FORK 2
MOVEMENT>**

The status with the shift fork position 6 mm (0.24 inch) [5th gear side] or more, or with -6 mm (-0.24 inch) [3rd gear side] or less, or with 1.8 mm (0.071 inch) [neutral position] or less and with the initialized fork position -shift fork 4 position 2.5 mm (0.098 inch) or more continues for 200 millisecond.

LOGIC FLOW CHARTS (Monitor Sequence) <Functional check - shift fork 4 requested but shift fork 3 movement>

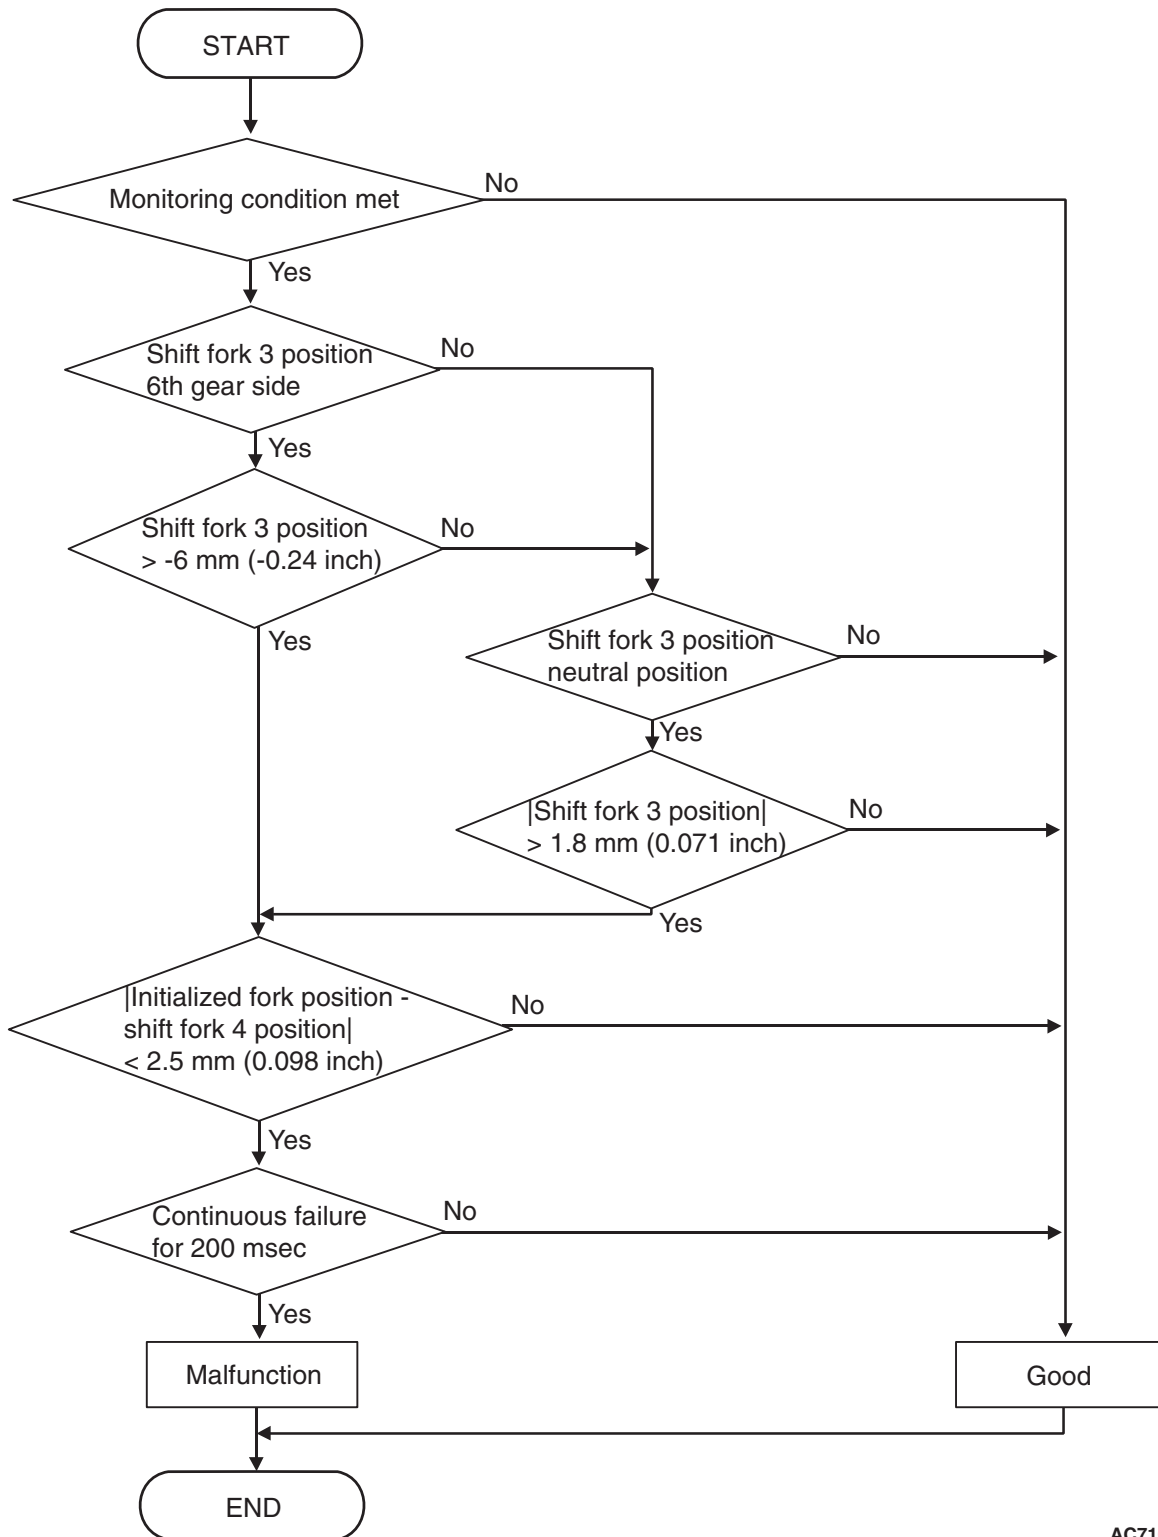

AC710717

DTC SET CONDITIONS <FUNCTIONAL CHECK - SHIFT FORK 4 REQUESTED BUT SHIFT FORK 3 MOVEMENT>**Check Conditions**

- Voltage of battery: 8 V or more.
- Voltage of battery: 16.5 V or less.
- Engine speed: 650 r/min or more.
- Time since above engine condition: 1.5 seconds or more.
- Requested shift fork: Shift fork 4.

JUDGMENT CRITERIA

- Shift fork position: –6 mm (–0.24 inch) [6th gear side] or more, or 1.8 mm (0.071 inch) [neutral position] or more, and initialized fork position – shift fork 4 position: 2.5mm (0.098 inch) or less. (200 millisecond)

OBD-II DRIVE CYCLE PATTERN <FUNCTIONAL CHECK - SHIFT FORK 3 REQUESTED BUT SHIFT FORK 4 MOVEMENT>

The status of the shift fork position –6 mm (–0.24 inch) [6th gear side] or less, or with 1.8 mm (0.071 inch) [neutral position] or less and with the initialized fork position –shift fork 3 position 2.5 mm (0.098 inch) or more continues for 200 millisecond.

PROBABLE CAUSES

- Malfunction of TC-SST-ECU
- Malfunction of TC-SST shift fork

DIAGNOSTIC PROCEDURE**Required Special Tools:**

- MB991958 Scan Tool (M.U.T.-III Sub Assembly)
 - MB991824: Vehicle Communication Interface (V.C.I.)
 - MB991827 M.U.T.-III USB Cable
 - MB991910 M.U.T.-III Main Harness A

STEP 1. Scan tool CAN bus diagnostics

Using scan tool MB991958, diagnose the CAN bus lines.

Q: Is the check result normal?

YES : Go to Step 2.

NO : Repair the CAN bus lines. (Refer to GROUP 54C – Troubleshooting [P.54C-16.](#)) After repairing the CAN bus line, go to Step 2.

STEP 2. Monitoring unit No. check

- (1) Check the freeze frame data (item No. 30 to No. 37).
- (2) Check which monitoring unit (No. 163, No. 180, No. 188, or No. 189) is set.

Q: Which monitoring unit is set, No. 163, No. 180, No. 188, or No. 189?

No. 163 : Go to Step 4

Other than No. 163 : Go to Step 3

STEP 3. Check whether the DTC is reset.

- (1) Erase the DTC.
- (2) Drive with shifting to each gear range.
- (3) Check that the DTC is reset.

Q: Is DTC No.P184B set?

YES : Replace the mechatronic assembly. (Refer to [P.22C-505.](#))

NO : Intermittent malfunction. (Refer to GROUP 00 –How to Cope with Intermittent Malfunction [P.00-13.](#))

STEP 4. Check whether the DTC is reset.

- (1) Erase the DTC.
- (2) Drive in the 4th gear.
- (3) Check that the DTC is reset.

Q: Is DTC No.P184B set?

YES : Go to Step 5.

NO : Intermittent malfunction. (Refer to GROUP 00 –How to Cope with Intermittent Malfunction [P.00-13.](#))

STEP 5. Scan tool Teach-In

- (1) Carry out the Item No.3: Line pressure Test. (Refer to Special Function (Teach-In Reference Table [P.22C-362.](#))
- (2) After Teach-In, check which result ("Yes" or "No") is displayed in the Data list No. 101: Normal End. (Refer to Special Function (Teach-In Reference Table [P.22C-362.](#))

Q: Which is displayed, "Yes" or "No"?

"Yes" : Go to Step 6

"No" : DTC No. P181B: Carry out the troubleshooting for the DTC No. P181B: Clutch 1 (Pressure low range out). (Refer to [P.22C-109.](#))

STEP 6. Scan tool Teach-In

- (1) Carry out the Item No. 1: Plausibility check. (Refer to Special Function (Teach-In Reference Table [P.22C-362.](#))
- (2) After Teach-In, check which result ("Yes" or "No") is displayed in the Data list No. 101: Normal End. (Refer to Special Function (Teach-In Reference Table [P.22C-362.](#))

Q: Which is displayed, "Yes" or "No"?

"Yes" : Replace the transaxle assembly. (Refer to [P.22C-497.](#))

"No" : Go to Step 7.

STEP 7. Replace the mechatronic assembly, and check if the DTC is reset.

- (1) Replace the mechatronic assembly. (Refer to [P.22C-505.](#))
- (2) Drive in the 4th gear.
- (3) Check the DTC.

Q: Is DTC No. P184B set?

YES : Replace the transaxle assembly. (Refer to [P.22C-497.](#))

NO : This diagnosis is complete.

DTC P1852: Shift Fork 1 or 2 opposite direction movement

CAUTION

- If there is any problem in the CAN bus lines, an incorrect diagnostic trouble code may be set. Prior to this diagnosis, diagnose the CAN bus lines.
- Whenever the ECU is replaced, ensure that the CAN bus lines are normal.

DIAGNOSTIC FUNCTION

TC-SST-ECU checks that the movement of the shift fork is normal.

DESCRIPTIONS OF MONITOR METHODS

The movements of the shift fork 1 and 2 are determined to be abnormal.

MONITOR EXECUTION

- Continuous

MONITOR EXECUTION CONDITIONS (OTHER MONITOR AND SENSOR)


Other Monitor (There is no temporary DTC stored in memory for the item monitored below)

- P1836: Shift fork 1 malfunction
- P183D: Shift fork 2 malfunction
- P1844: Shift fork 3 malfunction
- P184B: Shift fork 4 malfunction

Sensor (The sensor below is determined to be normal)

- Not applicable

LOGIC FLOW CHARTS (Monitor Sequence) <Functional check - move opposite direction right side>

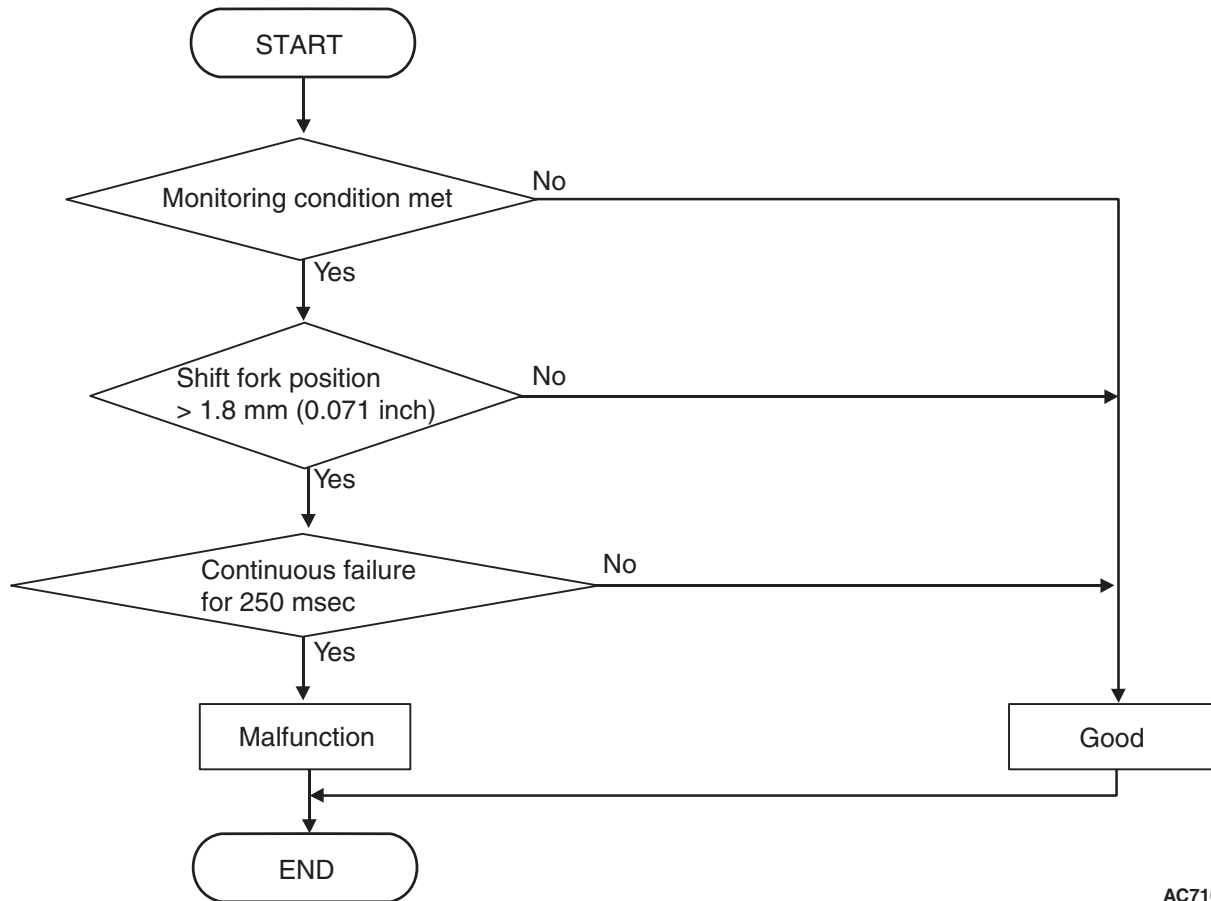

AC710720

DTC SET CONDITIONS <FUNCTIONAL CHECK - MOVE OPPOSITE DIRECTION RIGHT SIDE>

Check Conditions

- Voltage of battery: 8 V or more.
- Voltage of battery: 16.5 V or less.
- Engine speed: 650 r/min or more.
- Time since above engine condition: 1.5 seconds or more.
- Shift fork 1 and 2 current gear: Neutral.
- Shift fork 1 and 2 target direction: 0 mm (0 inch) or less.


JUDGMENT CRITERIA

- Shift fork 1 and 2 position: 1.8 mm (0.071 inch) or more. (250 millisecond)

OBD-II DRIVE CYCLE PATTERN <FUNCTIONAL CHECK - MOVE OPPOSITE DIRECTION RIGHT SIDE>

The shift fork 1 and 2 positions remain 1.8 mm (0.071 inch) or less for 250 millisecond.

LOGIC FLOW CHARTS (Monitor Sequence) <Functional check - move opposite direction left side>

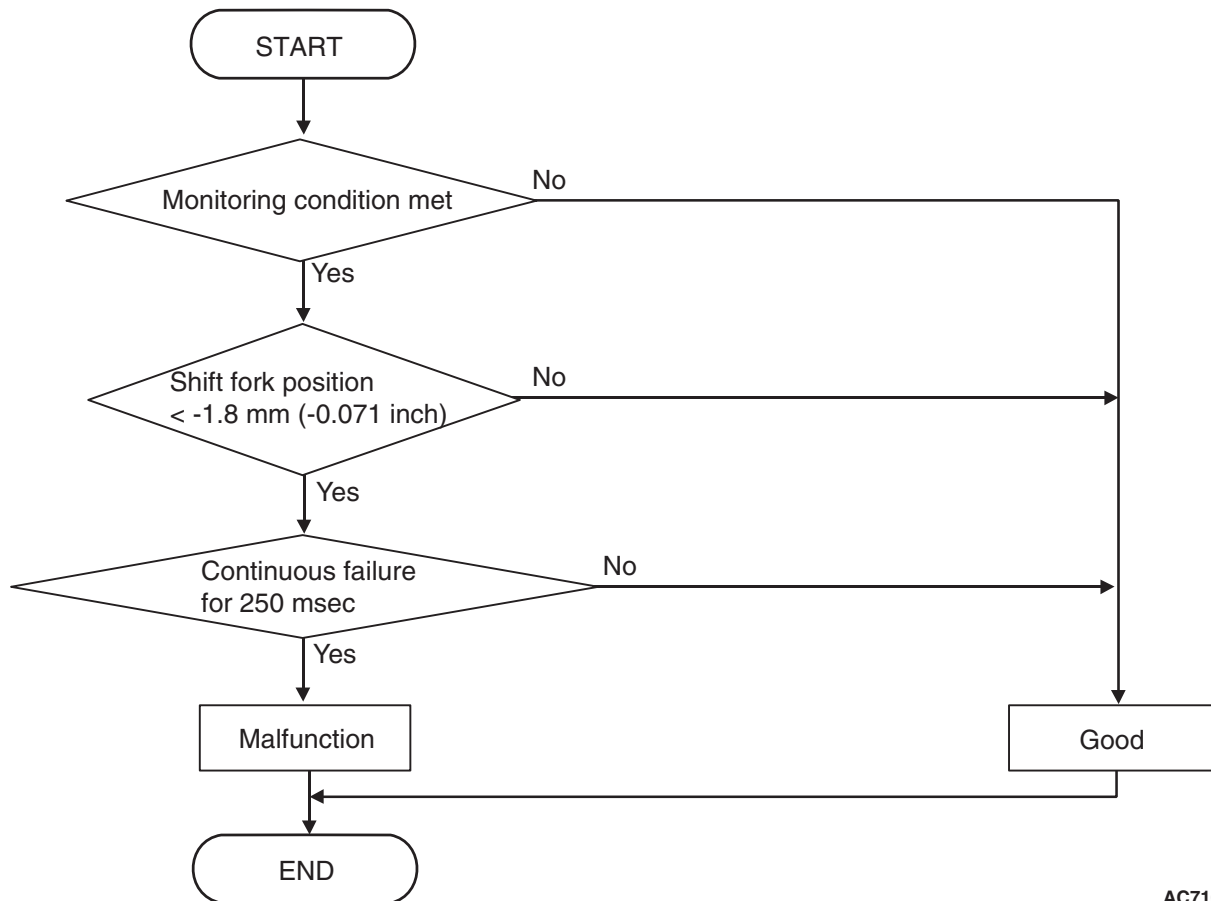

AC710721

DTC SET CONDITIONS <FUNCTIONAL CHECK - MOVE OPPOSITE DIRECTION LEFT SIDE>

Check Conditions

- Voltage of battery: 8 V or more.
- Voltage of battery: 16.5 V or less.
- Engine speed: 650 r/min or more.

- Time since above engine condition: 1.5 seconds or more.
- Shift fork 1 and 2 current gear: Neutral.
- Shift fork 1 and 2 target direction: 0 mm (0 inch) or more.

JUDGMENT CRITERIA

- Shift fork 1 and 2 position: -1.8 mm (-0.071 inch) or less. (250 millisecond)

**OBD-II DRIVE CYCLE PATTERN
<FUNCTIONAL CHECK - MOVE
OPPOSITE DIRECTION LEFT SIDE>**

The shift fork 1 and 2 positions remain –1.8 mm (–0.071 inch) or more for 250 millisecond.

PROBABLE CAUSES

- Malfunction of TC-SST-ECU
- Malfunction of valve body

DIAGNOSTIC PROCEDURE**Required Special Tools:**

- MB991958 Scan Tool (M.U.T.-III Sub Assembly)
 - MB991824: Vehicle Communication Interface (V.C.I.)
 - MB991827 M.U.T.-III USB Cable
 - MB991910 M.U.T.-III Main Harness A

STEP 1. Scan tool CAN bus diagnostics

Using scan tool MB991958, diagnose the CAN bus lines.

Q: Is the check result normal?

YES : Go to Step 2.

NO : Repair the CAN bus lines. (Refer to GROUP 54C – Troubleshooting [P.54C-16.](#)) After repairing the CAN bus line, go to Step 2.

STEP 2. Check whether the DTC is reset.

- (1) Erase the DTC.
- (2) With the engine idle status, operate the shift lever in the following sequence: P →R →D →R →P. (Hold each range for 1 second or more.)
- (3) Check that the DTC is reset.

Q: Is the DTC No. P1852 set?

YES : Replace the mechatronic assembly. (Refer to [P.22C-505.](#))

NO : Intermittent malfunction. (Refer to GROUP 00 –How to Cope with Intermittent Malfunction [P.00-13.](#))

DTC P1855: Shift Fork 3 or 4 opposite direction movement**⚠ CAUTION**

- If there is any problem in the CAN bus lines, an incorrect diagnostic trouble code may be set. Prior to this diagnosis, diagnose the CAN bus lines.
- Whenever the ECU is replaced, ensure that the CAN bus lines are normal.

DIAGNOSTIC FUNCTION

TC-SST-ECU checks that the movement of the shift fork is normal.

DESCRIPTIONS OF MONITOR METHODS

The movements of the shift fork 3 and 4 are determined to be abnormal.

MONITOR EXECUTION

- Continuous

**MONITOR EXECUTION CONDITIONS
(OTHER MONITOR AND SENSOR)**


Other Monitor (There is no temporary DTC stored in memory for the item monitored below)

- P1836: Shift fork 1 malfunction
- P183D: Shift fork 2 malfunction
- P1844: Shift fork 3 malfunction
- P184B: Shift fork 4 malfunction

Sensor (The sensor below is determined to be normal)

- Not applicable

LOGIC FLOW CHARTS (Monitor Sequence) <Functional check - move opposite direction right side>

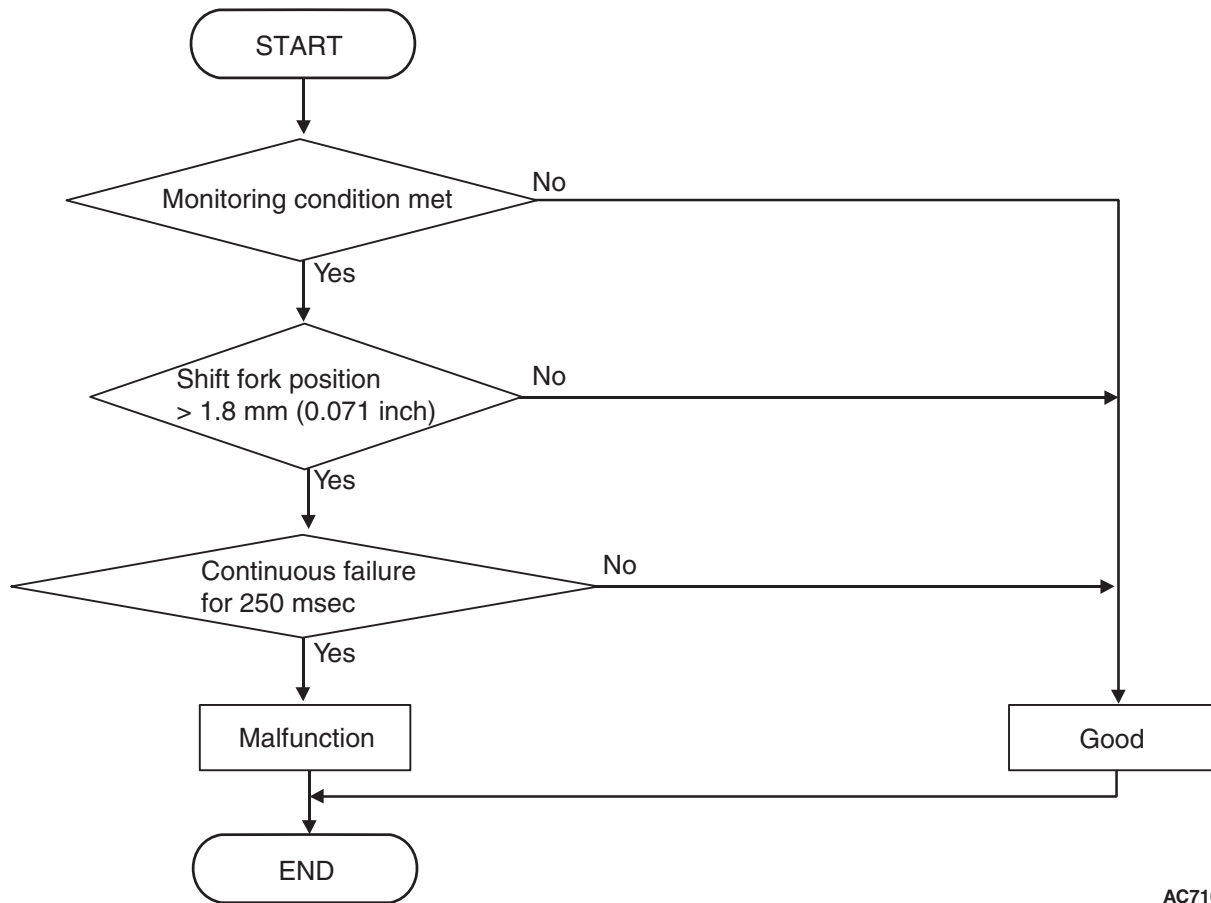

AC710720

DTC SET CONDITIONS <FUNCTIONAL CHECK - MOVE OPPOSITE DIRECTION RIGHT SIDE>

Check Conditions

- Voltage of battery: 8 V or more.
- Voltage of battery: 16.5 V or less.
- Engine speed: 650 r/min or more.
- Time since above engine condition: 1.5 seconds or more.
- Shift fork 3 and 4 current gear: Neutral.

- Shift fork 3 and 4 target direction: 0 mm (0 inch) or less.


JUDGMENT CRITERIA

- Shift fork 3 and 4 position: 1.8 mm (0.071 inch) or more. (250 millisecond)

OBD-II DRIVE CYCLE PATTERN <FUNCTIONAL CHECK - MOVE OPPOSITE DIRECTION RIGHT SIDE>

The shift fork 3 and 4 positions remain 1.8 mm (0.071 inch) or less for 250 millisecond.

LOGIC FLOW CHARTS (Monitor Sequence) <Functional check - move opposite direction left side>

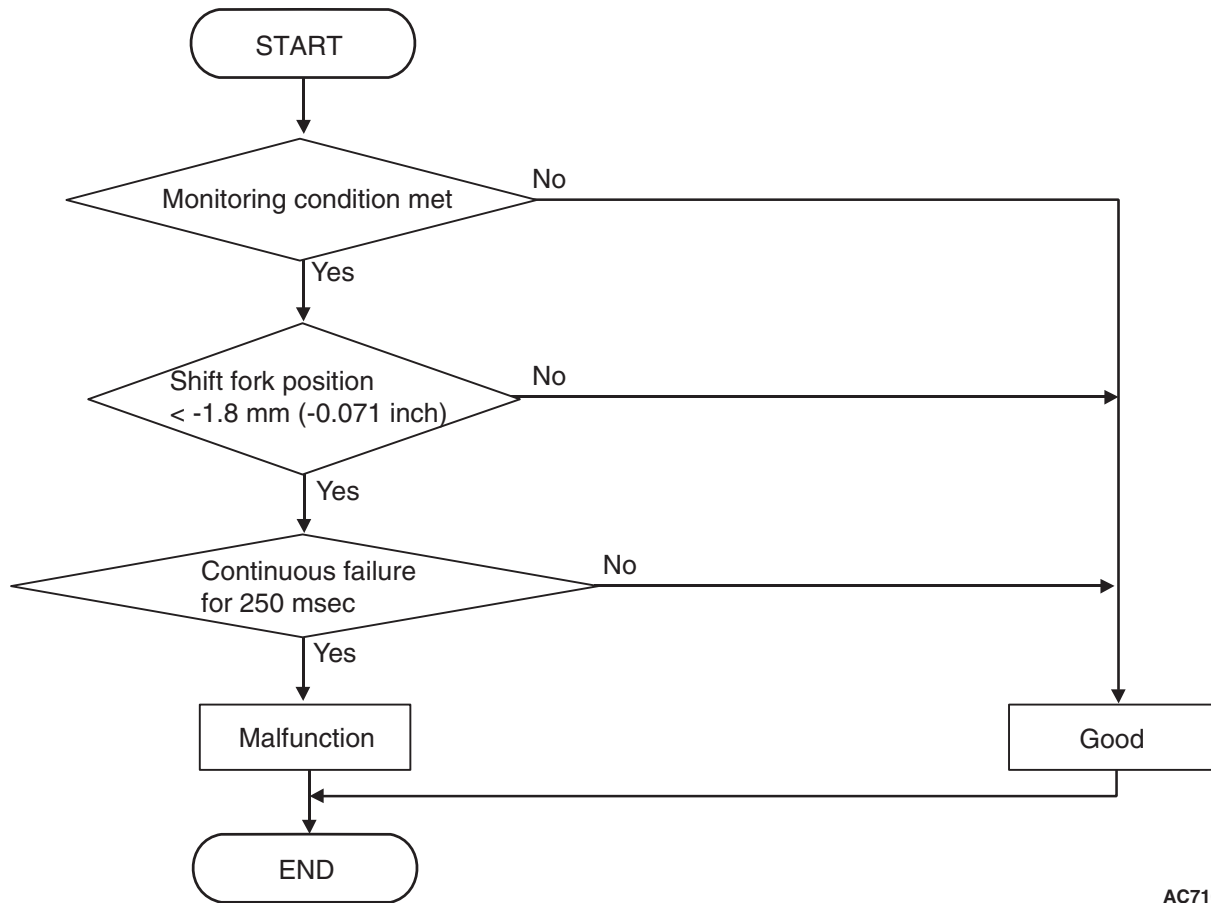

AC710721

DTC SET CONDITIONS <FUNCTIONAL CHECK - MOVE OPPOSITE DIRECTION LEFT SIDE>

Check Conditions

- Voltage of battery: 8 V or more.
- Voltage of battery: 16.5 V or less.
- Engine speed: 650 r/min or more.
- Time since above engine condition: 1.5 seconds or more.
- Shift fork 3 and 4 current gear: Neutral.
- Shift fork 3 and 4 target direction: 0 mm (0 inch) or more.

JUDGMENT CRITERIA

- Shift fork 3 and 4 position: -1.8 mm (-0.071 inch) or less. (250 millisecond)

OBD-II DRIVE CYCLE PATTERN <FUNCTIONAL CHECK - MOVE OPPOSITE DIRECTION LEFT SIDE>

The shift fork 3 and 4 positions remain -1.8 mm (-0.071 inch) or more for 250 millisecond.

PROBABLE CAUSES

- Malfunction of TC-SST-ECU
- Malfunction of valve body

DIAGNOSTIC PROCEDURE

Required Special Tools:

- MB991958 Scan Tool (M.U.T.-III Sub Assembly)
 - MB991824: Vehicle Communication Interface (V.C.I.)
 - MB991827 M.U.T.-III USB Cable
 - MB991910 M.U.T.-III Main Harness A

STEP 1. Scan tool CAN bus diagnostics

Using scan tool MB991958, diagnose the CAN bus lines.

Q: Is the check result normal?

YES : Go to Step 2.

NO : Repair the CAN bus lines. (Refer to GROUP 54C – Troubleshooting [P.54C-16.](#)) After repairing the CAN bus line, go to Step 2.

STEP 2. Check whether the DTC is reset.

After driving in the 4th gear, check that the DTC is reset.

Q: Is the DTC No. P1855 set?

YES : Replace the mechatronic assembly. (Refer to [P.22C-505.](#))

NO : Intermittent malfunction. (Refer to GROUP 00 –How to Cope with Intermittent Malfunction [P.00-13.](#))

DTC P1857: Odd number gear axle interlock

⚠ CAUTION

- If there is any problem in the CAN bus lines, an incorrect diagnostic trouble code may be set. Prior to this diagnosis, diagnose the CAN bus lines.
- Whenever the ECU is replaced, ensure that the CAN bus lines are normal.

DIAGNOSTIC FUNCTION

TC-SST-ECU checks that the gear engagement is normal.

DESCRIPTIONS OF MONITOR METHODS

The two gears are determined to be engaged in the odd number gear range.

MONITOR EXECUTION

- Continuous

**MONITOR EXECUTION CONDITIONS
(OTHER MONITOR AND SENSOR)**


Other Monitor (There is no temporary DTC stored in memory for the item monitored below)

- Not applicable

Sensor (The sensor below is determined to be normal)

- Not applicable

LOGIC FLOW CHARTS (Monitor Sequence)

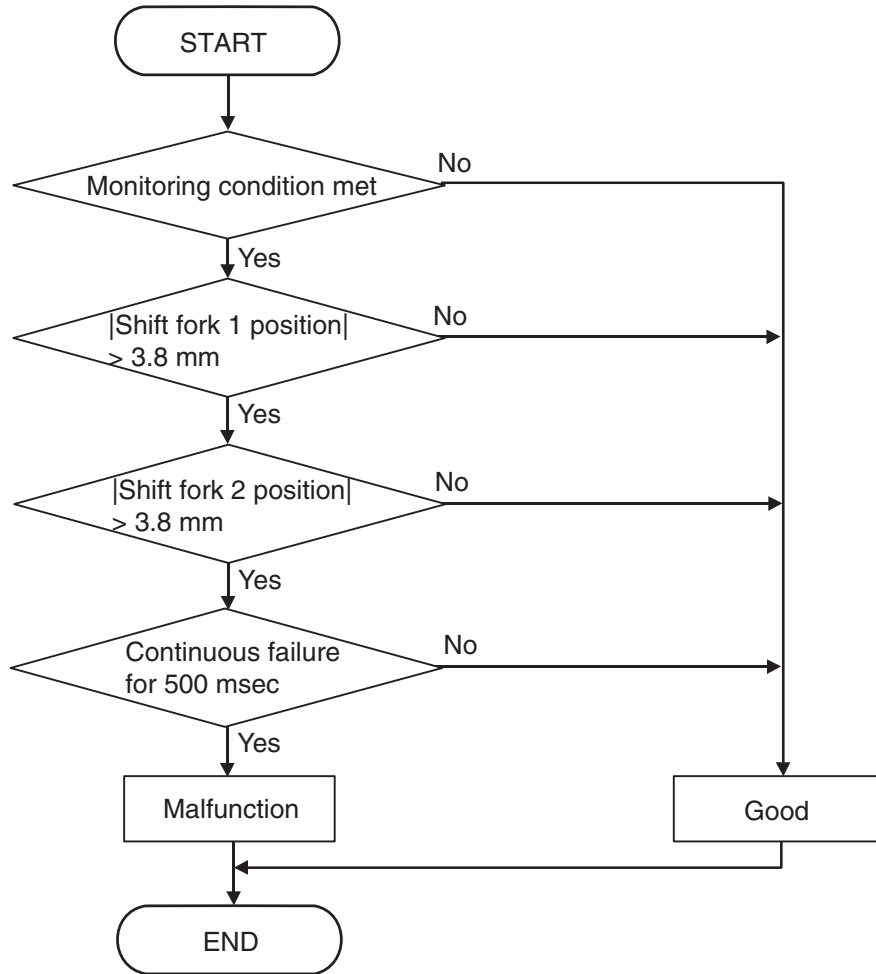

AC710722

DTC SET CONDITIONS

Check Conditions

- Voltage of battery: 8 V or more.
- Voltage of battery: 16.5 V or less.
- Engine speed: 650 r/min or more.
- Time since above engine condition: 1.5 seconds or more.

JUDGMENT CRITERIA

- Shift fork 1 and 2 position: 3.8 mm (0.15 inch) or more. (500 millisecond)

OBD-II DRIVE CYCLE PATTERN

The shift fork 1 and 2 positions remain 3.8 mm (0.15 inch) or less for 500 millisecond.

PROBABLE CAUSES

- Malfunction of TC-SST-ECU
- Malfunction of TC-SST gear

DIAGNOSTIC PROCEDURE

Required Special Tools:

- MB991958 Scan Tool (M.U.T.-III Sub Assembly)
 - MB991824: Vehicle Communication Interface (V.C.I.)
 - MB991827 M.U.T.-III USB Cable
 - MB991910 M.U.T.-III Main Harness A

STEP 1. Scan tool CAN bus diagnostics

Using scan tool MB991958, diagnose the CAN bus lines.

Q: Is the check result normal?

YES : Go to Step 2.

NO : Repair the CAN bus lines. (Refer to GROUP 54C – Troubleshooting [P.54C-16](#).) After repairing the CAN bus line, go to Step 2.

STEP 2. Check whether the DTC is reset.

(1) Erase the DTC.

(2) With the ignition switch ON, operate the shift lever in the following sequence: P →R →D →R →P. (Hold each range for 5 seconds or more.)

(3) Check that the DTC is reset.

Q: Is DTC No. P1857 set?

YES : Go to Step 4.

NO : Go to Step 3.

STEP 3. Check whether the DTC is reset.

(1) Drive with shifting to each gear range. (Hold each gear range for 5 seconds or more.)

(2) Check that the DTC is reset.

Q: Is DTC No.P1857 set?

YES : Go to Step 4.

NO : Intermittent malfunction. (Refer to GROUP 00 –How to Cope with Intermittent Malfunction [P.00-13](#).)

STEP 4. Scan tool diagnostic trouble code.

Check if any code from P1836, P183D, P1844, or P184B is set in addition to the diagnostic trouble code No. P1857.

Q: Check if any code from P1836, P183D, P1844, or P184B is set in addition to the diagnostic trouble code No. P1857.

YES : Replace the mechatronic assembly. (Refer to [P.22C-505](#).)

NO : Replace the transaxle assembly. (Refer to [P.22C-497](#).)

DTC P1858: Even number gear axle interlock

CAUTION

- If there is any problem in the CAN bus lines, an incorrect diagnostic trouble code may be set. Prior to this diagnosis, diagnose the CAN bus lines.
- Whenever the ECU is replaced, ensure that the CAN bus lines are normal.


DIAGNOSTIC FUNCTION

TC-SST-ECU checks that the gear engagement is normal.

DESCRIPTIONS OF MONITOR METHODS

The two gears are determined to be engaged in the even number gear range.

LOGIC FLOW CHARTS (Monitor Sequence)

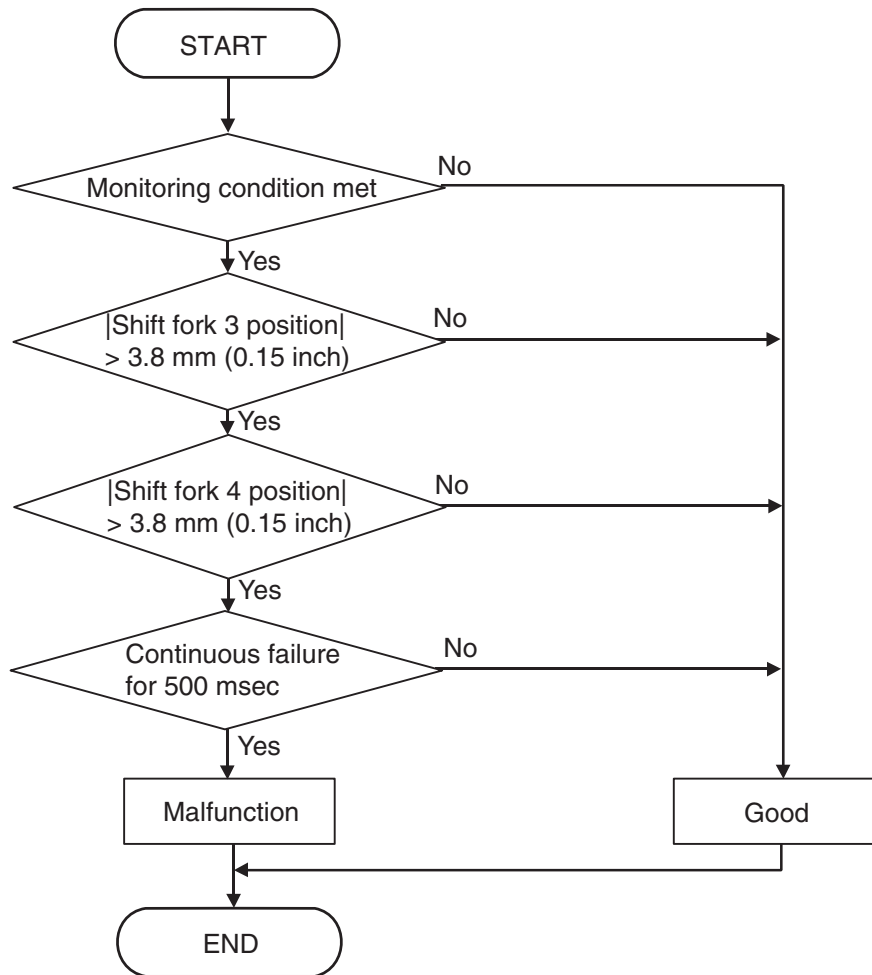

AC710723

DTC SET CONDITIONS

Check Conditions

- Voltage of battery: 8 V or more.
- Voltage of battery: 16.5 V or less.
- Engine speed: 650 r/min or more.
- Time since above engine condition: 1.5 seconds or more.

JUDGMENT CRITERIA

- Shift fork 3 and 4 position: 3.8 mm (0.15 inch) or more. (500 millisecond)

OBD-II DRIVE CYCLE PATTERN

The shift fork 3 and 4 positions remain 3.8 mm (0.15 inch) or less for 500 millisecond.

PROBABLE CAUSES

- Malfunction of TC-SST-ECU
- Malfunction of TC-SST gear

DIAGNOSTIC PROCEDURE

Required Special Tools:

- MB991958 Scan Tool (M.U.T.-III Sub Assembly)
 - MB991824: Vehicle Communication Interface (V.C.I.)
 - MB991827 M.U.T.-III USB Cable
 - MB991910 M.U.T.-III Main Harness A

STEP 1. Scan tool CAN bus diagnostics

Using scan tool MB991958, diagnose the CAN bus lines.

Q: Is the check result normal?

YES : Go to Step 2.

NO : Repair the CAN bus lines. (Refer to GROUP 54C – Troubleshooting [P.54C-16.](#)) After repairing the CAN bus line, go to Step 2.

STEP 2. Check whether the DTC is reset.

(1) Erase the DTC.

(2) Drive with shifting to each gear range. (Hold each gear range for 5 seconds or more.)

(3) Check that the DTC is reset.

Q: Is DTC No.P1858 set?

YES : Go to Step 3.

NO : Intermittent malfunction. (Refer to GROUP 00 –How to Cope with Intermittent Malfunction [P.00-13.](#))

STEP 3. Scan tool diagnostic trouble code.

Check if any code from P1836, P183D, P1844, or P184B is set in addition to the diagnostic trouble code No. P1858.

Q: Check if any code from P1836, P183D, P1844, or P184B is set in addition to the diagnostic trouble code No. P1858.

YES : Replace the mechatronic assembly. (Refer to [P.22C-505.](#))

NO : Replace the transaxle assembly. (Refer to [P.22C-497.](#))

DTC P185D: Clutch open not possible**⚠ CAUTION**

- If there is any problem in the CAN bus lines, an incorrect diagnostic trouble code may be set. Prior to this diagnosis, diagnose the CAN bus lines.
- Whenever the ECU is replaced, ensure that the CAN bus lines are normal.

DIAGNOSTIC FUNCTION

TC-SST-ECU checks that the clutch 1 and 2 are normal.

DESCRIPTIONS OF MONITOR METHODS

The disengagement of the clutch 1 and 2 are determined to be impossible.

PROBABLE CAUSES

- Malfunction of clutch assembly

DIAGNOSTIC PROCEDURE**Required Special Tools:**

- MB991958 Scan Tool (M.U.T.-III Sub Assembly)
 - MB991824: Vehicle Communication Interface (V.C.I.)
 - MB991827 M.U.T.-III USB Cable
 - MB991910 M.U.T.-III Main Harness A

STEP 1. Scan tool CAN bus diagnostics

Using scan tool MB991958, diagnose the CAN bus lines.

Q: Is the check result normal?

YES : Go to Step 2.

NO : Repair the CAN bus lines. (Refer to GROUP 54C – Troubleshooting [P.54C-16.](#)) After repairing the CAN bus line, go to Step 2.

STEP 2. Check whether the DTC is reset.

After 15 seconds with the engine idle status, check that the DTC is reset.

Q: Is DTC No. P185D set?

YES : Replace the clutch assembly. (Refer to GROUP 22D – Transaxle [P.22D-6.](#))

NO : Intermittent malfunction. (Refer to GROUP 00 –How to Cope with Intermittent Malfunction [P.00-13.](#))

DTC P1862: High side 1 system (Overcurrent)**⚠ CAUTION**

- If there is any problem in the CAN bus lines, an incorrect diagnostic trouble code may be set. Prior to this diagnosis, diagnose the CAN bus lines.
- Whenever the ECU is replaced, ensure that the CAN bus lines are normal.

DIAGNOSTIC FUNCTION

TC-SST-ECU checks that the high side 1 circuit is normal.

DESCRIPTIONS OF MONITOR METHODS

The supply current to the high side 1 is determined to be overcurrent.

MONITOR EXECUTION

- Continuous

**MONITOR EXECUTION CONDITIONS
(OTHER MONITOR AND SENSOR)**

Other Monitor (There is no temporary DTC stored in memory for the item monitored below)


- P0758: Shift select solenoid 2 system (Open circuit)
- P0976: Shift select solenoid 2 system (Short to ground)
- P0977: Shift select solenoid 2 system (Short to power supply)
- P0746: Line pressure solenoid system (Drive current range out)
- P0960: Line pressure solenoid system (Open circuit)

- P0961: Line pressure solenoid system (Overvoltage)
- P0962: Line pressure solenoid system (Short to ground)
- P0963: Line pressure solenoid system (Short to power supply)
- P0968: Shift/cooling switching solenoid system (Open circuit)
- P0970: Shift/cooling switching solenoid system (Short to ground)
- P0971: Shift/cooling switching solenoid system (Short to power supply)

Sensor (The sensor below is determined to be normal)

- Shift select solenoid 2
- Line pressure solenoid
- Shift/cooling switching solenoid

LOGIC FLOW CHARTS (Monitor Sequence)

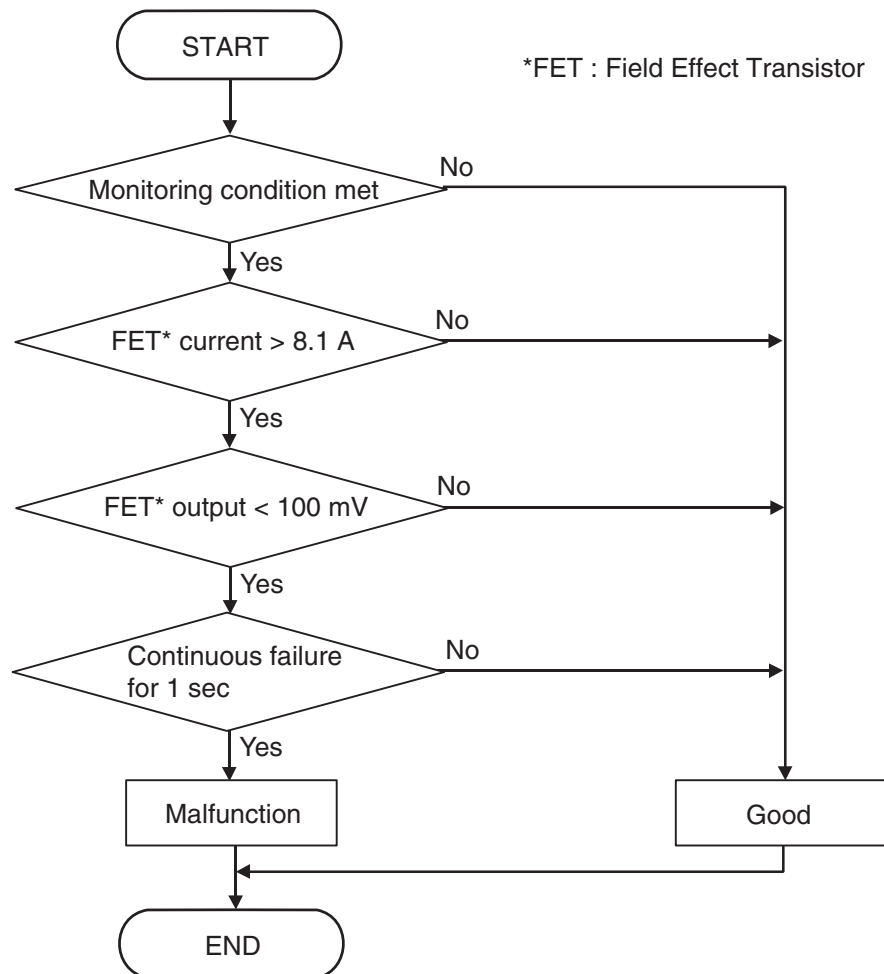

AC710725

DTC SET CONDITIONS**Check Conditions**

- Voltage of battery: 8 V or more.
- Voltage of battery: 16.5 V or less.
- High side 1 switch: ON.

JUDGMENT CRITERIA

- FET (Field Effect Transistor) current: 8.1 A or more, and FET (Field Effect Transistor) output: 100 mV or less (1 second).

OBD-II DRIVE CYCLE PATTERN

The status with the current of the FET channel shunt 8.1 A or less and with the FET channel output 100 mV or more continues for 1 second.

PROBABLE CAUSES

- Malfunction of TC-SST-ECU

DIAGNOSTIC PROCEDURE**Required Special Tools:**

- MB991958 Scan Tool (M.U.T.-III Sub Assembly)
 - MB991824: Vehicle Communication Interface (V.C.I.)
 - MB991827 M.U.T.-III USB Cable
 - MB991910 M.U.T.-III Main Harness A

STEP 1. Scan tool CAN bus diagnostics

Using scan tool MB991958, diagnose the CAN bus lines.

Q: Is the check result normal?

YES : Go to Step 2.

NO : Repair the CAN bus lines. (Refer to GROUP 54C – Troubleshooting [P.54C-16.](#)) After repairing the CAN bus line, go to Step 2.

STEP 2. Check whether the DTC is reset.

After 5 or more seconds have passed with the engine idle status, check that the DTC is reset.

Q: Is DTC No. P1862 set?

YES : Replace the mechatronic assembly. (Refer to [P.22C-505.](#))

NO : Intermittent malfunction. (Refer to GROUP 00 –How to Cope with Intermittent Malfunction [P.00-13.](#))

DTC P1863: High side 1 system (Open circuit)**⚠ CAUTION**

- If there is any problem in the CAN bus lines, an incorrect diagnostic trouble code may be set. Prior to this diagnosis, diagnose the CAN bus lines.
- Whenever the ECU is replaced, ensure that the CAN bus lines are normal.

DIAGNOSTIC FUNCTION

TC-SST-ECU checks that the high side 1 circuit is normal.

DESCRIPTIONS OF MONITOR METHODS

The high side 1 circuit is determined to be open.

MONITOR EXECUTION

- Continuous

MONITOR EXECUTION CONDITIONS (OTHER MONITOR AND SENSOR)

Other Monitor (There is no temporary DTC stored in memory for the item monitored below)

- P0758: Shift select solenoid 2 system (Open circuit)


- P0976: Shift select solenoid 2 system (Short to ground)
- P0977: Shift select solenoid 2 system (Short to power supply)
- P0746: Line pressure solenoid system (Drive current range out)
- P0960: Line pressure solenoid system (Open circuit)
- P0961: Line pressure solenoid system (Overvoltage)
- P0962: Line pressure solenoid system (Short to ground)
- P0963: Line pressure solenoid system (Short to power supply)

- P0968: Shift/cooling switching solenoid system (Open circuit)
- P0970: Shift/cooling switching solenoid system (Short to ground)
- P0971: Shift/cooling switching solenoid system (Short to power supply)

Sensor (The sensor below is determined to be normal)

- Shift select solenoid 2
- Line pressure solenoid
- Shift/cooling switching solenoid

LOGIC FLOW CHARTS (Monitor Sequence)

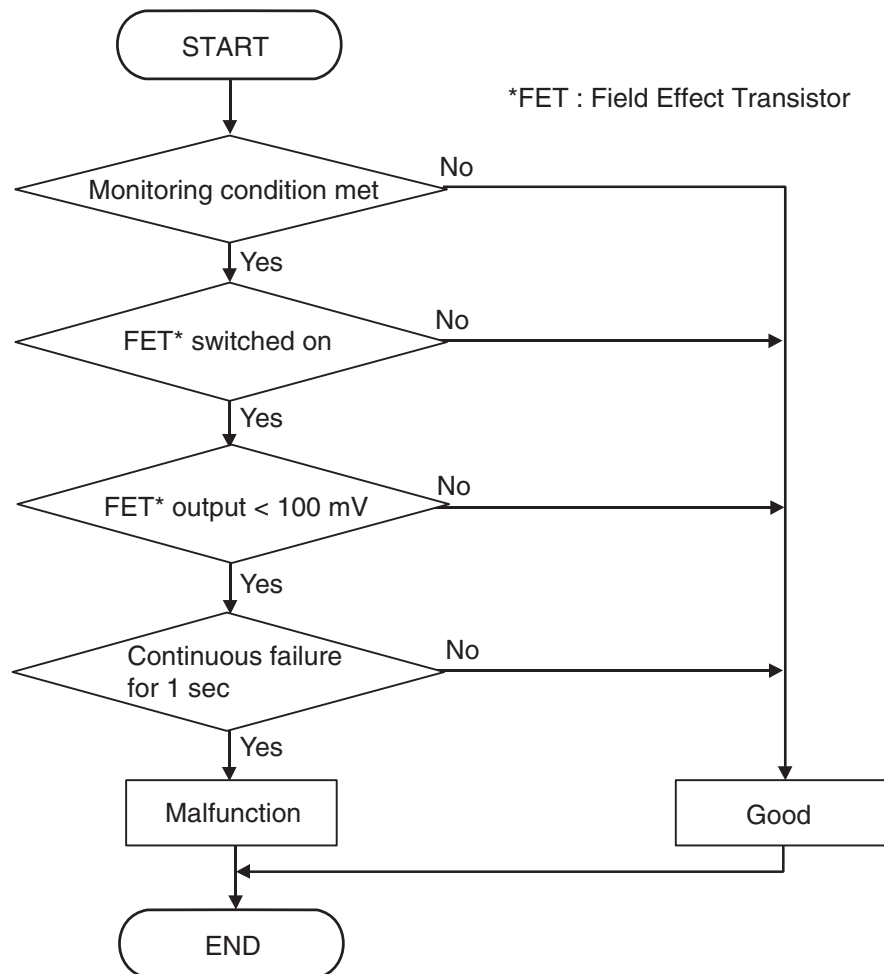

AC710726AB

DTC SET CONDITIONS

Check Conditions

- Voltage of battery: 8 V or more.
- Voltage of battery: 16.5 V or less.
- High side 1 switch: ON.

JUDGMENT CRITERIA

- FET (Field Effect Transistor): Can't be switched on, and FET (Field Effect Transistor) output: 100 mV or less. (1 second)

OBD-II DRIVE CYCLE PATTERN

The status with the FET switch ON and with the FET channel output 100 mV or more continues for 1 second.

PROBABLE CAUSES

- Malfunction of TC-SST-ECU

DIAGNOSTIC PROCEDURE**Required Special Tools:**

- MB991958 Scan Tool (M.U.T.-III Sub Assembly)
 - MB991824: Vehicle Communication Interface (V.C.I.)
 - MB991827 M.U.T.-III USB Cable
 - MB991910 M.U.T.-III Main Harness A

STEP 1. Scan tool CAN bus diagnostics

Using scan tool MB991958, diagnose the CAN bus lines.

Q: Is the check result normal?

YES : Go to Step 2.

NO : Repair the CAN bus lines. (Refer to GROUP 54C – Troubleshooting [P.54C-16.](#)) After repairing the CAN bus line, go to Step 2.

STEP 2. Check whether the DTC is reset.

After 5 or more seconds have passed with the engine idle status, check that the DTC is reset.

Q: Is DTC No. P1863 set?

YES : Replace the mechatronic assembly. (Refer to [P.22C-505.](#))

NO : Intermittent malfunction. (Refer to GROUP 00 –How to Cope with Intermittent Malfunction [P.00-13.](#))

DTC P1864: High side 1 system (Short to power supply)**CAUTION**

- If there is any problem in the CAN bus lines, an incorrect diagnostic trouble code may be set. Prior to this diagnosis, diagnose the CAN bus lines.
- Whenever the ECU is replaced, ensure that the CAN bus lines are normal.

DIAGNOSTIC FUNCTION

TC-SST-ECU checks that the high side 1 circuit is normal.

DESCRIPTIONS OF MONITOR METHODS

The high side 1 circuit is determined to be short to power supply.

MONITOR EXECUTION

- Continuous

MONITOR EXECUTION CONDITIONS (OTHER MONITOR AND SENSOR)

Other Monitor (There is no temporary DTC stored in memory for the item monitored below)


- P0758: Shift select solenoid 2 system (Open circuit)
- P0976: Shift select solenoid 2 system (Short to ground)
- P0977: Shift select solenoid 2 system (Short to power supply)
- P0746: Line pressure solenoid system (Drive current range out)
- P0960: Line pressure solenoid system (Open circuit)
- P0961: Line pressure solenoid system (Overvoltage)
- P0962: Line pressure solenoid system (Short to ground)

- P0963: Line pressure solenoid system (Short to power supply)
- P0968: Shift/cooling switching solenoid system (Open circuit)
- P0970: Shift/cooling switching solenoid system (Short to ground)
- P0971: Shift/cooling switching solenoid system (Short to power supply)

Sensor (The sensor below is determined to be normal)

- Shift select solenoid 2
- Line pressure solenoid
- Shift/cooling switching solenoid

LOGIC FLOW CHARTS (Monitor Sequence)

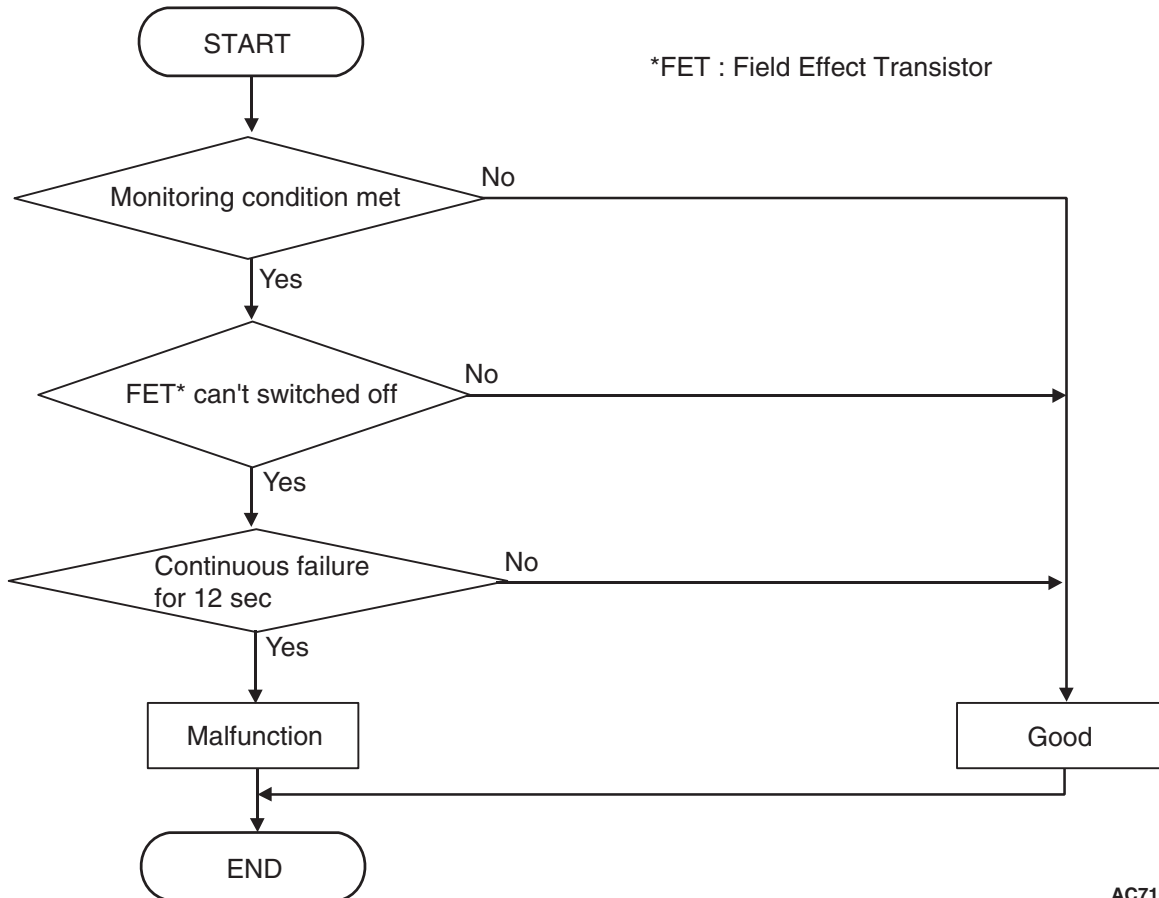

AC710727

DTC SET CONDITIONS

Check Conditions

- Voltage of battery: 8 V or more.
- Voltage of battery: 16.5 V or less.
- High side 1 switch: OFF.

JUDGMENT CRITERIA

- FET (Field Effect Transistor): Can't be switched off. (12 seconds)

OBD-II DRIVE CYCLE PATTERN

The FET switch remains OFF for 12 seconds.

PROBABLE CAUSES

- Malfunction of TC-SST-ECU

DIAGNOSTIC PROCEDURE

Required Special Tools:

- MB991958 Scan Tool (M.U.T.-III Sub Assembly)
 - MB991824: Vehicle Communication Interface (V.C.I.)
 - MB991827 M.U.T.-III USB Cable
 - MB991910 M.U.T.-III Main Harness A

STEP 1. Scan tool CAN bus diagnostics

Using scan tool MB991958, diagnose the CAN bus lines.

Q: Is the check result normal?

YES : Go to Step 2.

NO : Repair the CAN bus lines. (Refer to GROUP 54C – Troubleshooting [P.54C-16.](#)) After repairing the CAN bus line, go to Step 2.

STEP 2. Check whether the DTC is reset.

After 15 seconds with the engine idle status, check that the DTC is reset.

Q: Is DTC No. P1864 set?

YES : Replace the mechatronic assembly. (Refer to [P.22C-505.](#))

NO : Intermittent malfunction. (Refer to GROUP 00 –How to Cope with Intermittent Malfunction [P.00-13.](#))

DTC P1866: High side 2 system (Overcurrent)**⚠ CAUTION**

- If there is any problem in the CAN bus lines, an incorrect diagnostic trouble code may be set. Prior to this diagnosis, diagnose the CAN bus lines.
- Whenever the ECU is replaced, ensure that the CAN bus lines are normal.

DIAGNOSTIC FUNCTION

TC-SST-ECU checks that the high side 2 circuit is normal.

DESCRIPTIONS OF MONITOR METHODS

The supply current to the high side 2 is determined to be overcurrent.

MONITOR EXECUTION

- Continuous

**MONITOR EXECUTION CONDITIONS
(OTHER MONITOR AND SENSOR)**

Other Monitor (There is no temporary DTC stored in memory for the item monitored below)


- P0776: Clutch cooling flow solenoid system (Drive current range out)
- P0777: Clutch cooling flow solenoid system (Stuck)
- P0964: Clutch cooling flow solenoid system (Open circuit)

- P0965: Clutch cooling flow solenoid system (Overvoltage)
- P0966: Clutch cooling flow solenoid system (Short to ground)
- P0967: Clutch cooling flow solenoid system (Short to power supply)
- P2718: Clutch/shift pressure solenoid 1 system (Open circuit)
- P2719: Clutch/shift pressure solenoid 1 system (Overcurrent)
- P2720: Clutch/shift pressure solenoid 1 system (Short to ground)
- P2721: Clutch/shift pressure solenoid 1 system (Short to power supply)
- P2733: Clutch/shift switching solenoid 1, spool stuck
- P2736: Clutch/shift switching solenoid 1 system (Open circuit)
- P2738: Clutch/shift switching solenoid 1 system (Short to ground)
- P2739: Clutch/shift switching solenoid 1 system (Short to power supply)
- P181B: Clutch 1 (Pressure low range out)
- P181C: Clutch 1 (Pressure high range out)

Sensor (The sensor below is determined to be normal)

- Clutch cooling flow solenoid
- Clutch/shift pressure solenoid 1
- Clutch/shift switching solenoid 1

LOGIC FLOW CHARTS (Monitor Sequence)

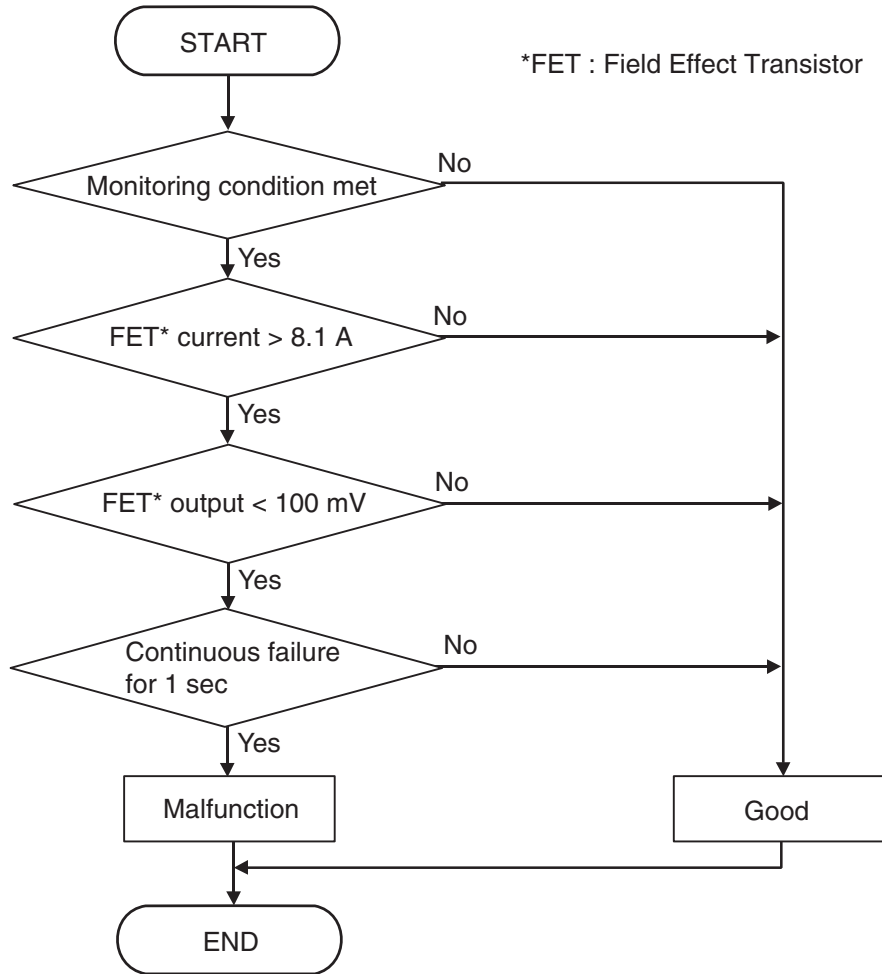

AC710725

DTC SET CONDITIONS

Check Conditions

- Voltage of battery: 8 V or more.
- Voltage of battery: 16.5 V or less.
- High side 2 switch: ON.

JUDGMENT CRITERIA

- FET (Field Effect Transistor) current: 8.1 A or more, and FET (Field Effect Transistor) output: 100 mV or less. (1 second)

OBD-II DRIVE CYCLE PATTERN

The status with the current of the FET channel shunt 8.1 A or less and with the FET channel output 100 mV or more continues for 1 second.

PROBABLE CAUSES

- Malfunction of TC-SST-ECU

DIAGNOSTIC PROCEDURE

Required Special Tools:

- MB991958 Scan Tool (M.U.T.-III Sub Assembly)
 - MB991824: Vehicle Communication Interface (V.C.I.)
 - MB991827 M.U.T.-III USB Cable
 - MB991910 M.U.T.-III Main Harness A

STEP 1. Scan tool CAN bus diagnostics

Using scan tool MB991958, diagnose the CAN bus lines.

Q: Is the check result normal?

YES : Go to Step 2.

NO : Repair the CAN bus lines. (Refer to GROUP 54C – Troubleshooting [P.54C-16.](#)) After repairing the CAN bus line, go to Step 2.

STEP 2. Check whether the DTC is reset.

After 5 or more seconds have passed with the engine idle status, check that the DTC is reset.

Q: Is DTC No. P1866 set?

YES : Replace the mechatronic assembly. (Refer to [P.22C-505.](#))

NO : Intermittent malfunction. (Refer to GROUP 00 –How to Cope with Intermittent Malfunction [P.00-13.](#))

DTC P1867: High side 2 system (Open circuit)**⚠ CAUTION**

- If there is any problem in the CAN bus lines, an incorrect diagnostic trouble code may be set. Prior to this diagnosis, diagnose the CAN bus lines.
- Whenever the ECU is replaced, ensure that the CAN bus lines are normal.

DIAGNOSTIC FUNCTION

TC-SST-ECU checks that the high side 2 circuit is normal.

DESCRIPTIONS OF MONITOR METHODS

The high side 2 circuit is determined to be open.

MONITOR EXECUTION

- Continuous

**MONITOR EXECUTION CONDITIONS
(OTHER MONITOR AND SENSOR)**

Other Monitor (There is no temporary DTC stored in memory for the item monitored below)


- P0776: Clutch cooling flow solenoid system (Drive current range out)
- P0777: Clutch cooling flow solenoid system (Stuck)
- P0964: Clutch cooling flow solenoid system (Open circuit)

- P0965: Clutch cooling flow solenoid system (Overvoltage)
- P0966: Clutch cooling flow solenoid system (Short to ground)
- P0967: Clutch cooling flow solenoid system (Short to power supply)
- P2718: Clutch/shift pressure solenoid 1 system (Open circuit)
- P2719: Clutch/shift pressure solenoid 1 system (Overcurrent)
- P2720: Clutch/shift pressure solenoid 1 system (Short to ground)
- P2721: Clutch/shift pressure solenoid 1 system (Short to power supply)
- P2733: Clutch/shift switching solenoid 1, spool stuck
- P2736: Clutch/shift switching solenoid 1 system (Open circuit)
- P2738: Clutch/shift switching solenoid 1 system (Short to ground)
- P2739: Clutch/shift switching solenoid 1 system (Short to power supply)
- P181B: Clutch 1 (Pressure low range out)
- P181C: Clutch 1 (Pressure high range out)

Sensor (The sensor below is determined to be normal)

- Clutch cooling flow solenoid
- Clutch/shift pressure solenoid 1
- Clutch/shift switching solenoid 1

LOGIC FLOW CHARTS (Monitor Sequence)

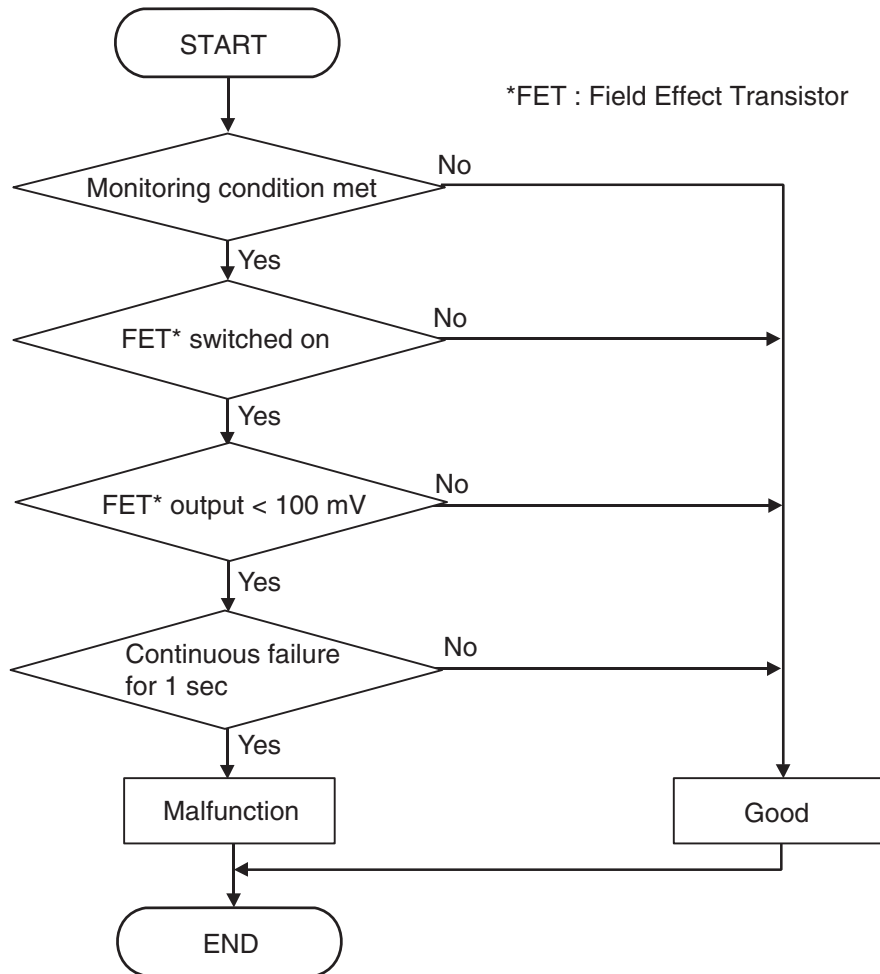

AC710726AB

DTC SET CONDITIONS

Check Conditions

- Voltage of battery: 8 V or more.
- Voltage of battery: 16.5 V or less.
- High side 2 switch: ON.

JUDGMENT CRITERIA

- FET (Field Effect Transistor): Can't be switched on, and FET (Field Effect Transistor) output: 100 mV or less. (1 second)

OBD-II DRIVE CYCLE PATTERN

The status with the FET switch ON and with the FET channel output 100 mV or more continues for 1 second.

PROBABLE CAUSES

- Malfunction of TC-SST-ECU

DIAGNOSTIC PROCEDURE

Required Special Tools:

- MB991958 Scan Tool (M.U.T.-III Sub Assembly)
 - MB991824: Vehicle Communication Interface (V.C.I.)
 - MB991827 M.U.T.-III USB Cable
 - MB991910 M.U.T.-III Main Harness A

STEP 1. Scan tool CAN bus diagnostics

Using scan tool MB991958, diagnose the CAN bus lines.

Q: Is the check result normal?

YES : Go to Step 2.

NO : Repair the CAN bus lines. (Refer to GROUP 54C – Troubleshooting P.54C-16.) After repairing the CAN bus line, go to Step 2.

STEP 2. Check whether the DTC is reset.

After 5 or more seconds have passed with the engine idle status, check that the DTC is reset.

Q: Is DTC No. P1867 set?

YES : Replace the mechatronic assembly. (Refer to P.22C-505.)

NO : Intermittent malfunction. (Refer to GROUP 00 –How to Cope with Intermittent Malfunction P.00-13.)

DTC P1868: High side 2 system (Short to power supply)**⚠ CAUTION**

- If there is any problem in the CAN bus lines, an incorrect diagnostic trouble code may be set. Prior to this diagnosis, diagnose the CAN bus lines.
- Whenever the ECU is replaced, ensure that the CAN bus lines are normal.

DIAGNOSTIC FUNCTION

TC-SST-ECU checks that the high side 2 circuit is normal.

DESCRIPTIONS OF MONITOR METHODS

The high side 2 circuit is determined to be short to power supply.

MONITOR EXECUTION

- Continuous

**MONITOR EXECUTION CONDITIONS
(OTHER MONITOR AND SENSOR)**

Other Monitor (There is no temporary DTC stored in memory for the item monitored below)


- P0776: Clutch cooling flow solenoid system (Drive current range out)
- P0777: Clutch cooling flow solenoid system (Stuck)
- P0964: Clutch cooling flow solenoid system (Open circuit)

- P0965: Clutch cooling flow solenoid system (Overvoltage)
- P0966: Clutch cooling flow solenoid system (Short to ground)
- P0967: Clutch cooling flow solenoid system (Short to power supply)
- P2718: Clutch/shift pressure solenoid 1 system (Open circuit)
- P2719: Clutch/shift pressure solenoid 1 system (Overcurrent)
- P2720: Clutch/shift pressure solenoid 1 system (Short to ground)
- P2721: Clutch/shift pressure solenoid 1 system (Short to power supply)
- P2733: Clutch/shift switching solenoid 1, spool stuck
- P2736: Clutch/shift switching solenoid 1 system (Open circuit)
- P2738: Clutch/shift switching solenoid 1 system (Short to ground)
- P2739: Clutch/shift switching solenoid 1 system (Short to power supply)
- P181B: Clutch 1 (Pressure low range out)
- P181C: Clutch 1 (Pressure high range out)

Sensor (The sensor below is determined to be normal)

- Clutch cooling flow solenoid
- Clutch/shift pressure solenoid 1
- Clutch/shift switching solenoid 1

LOGIC FLOW CHARTS (Monitor Sequence)

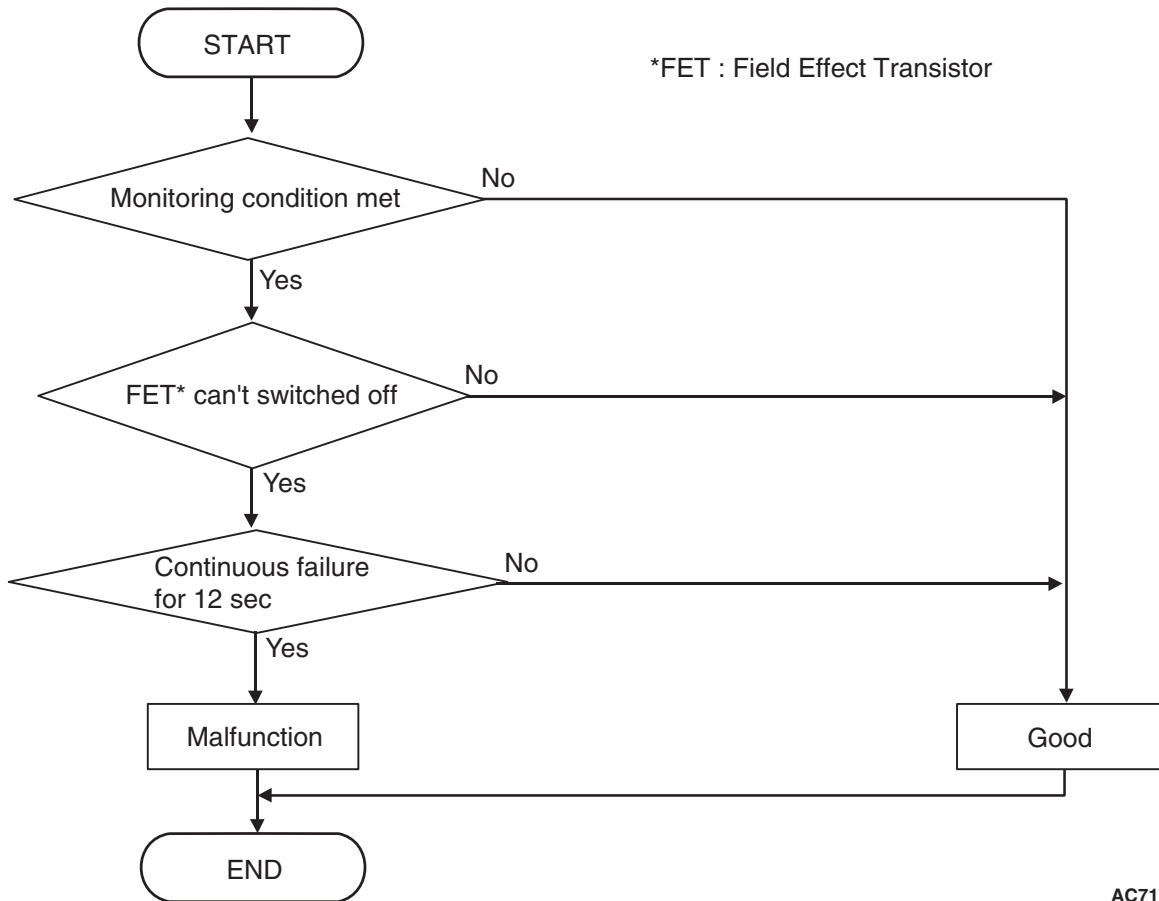

AC710727

DTC SET CONDITIONS

Check Conditions

- Voltage of battery: 8 V or more.
- Voltage of battery: 16.5 V or less.
- High side 2 switch: OFF.

JUDGMENT CRITERIA

- FET (Field Effect Transistor): Can't be switched off. (12 seconds)

OBD-II DRIVE CYCLE PATTERN

The FET switch remains OFF for 12 seconds.

PROBABLE CAUSES

- Malfunction of TC-SST-ECU

DIAGNOSTIC PROCEDURE

Required Special Tools:

- MB991958 Scan Tool (M.U.T.-III Sub Assembly)
 - MB991824: Vehicle Communication Interface (V.C.I.)
 - MB991827 M.U.T.-III USB Cable
 - MB991910 M.U.T.-III Main Harness A

STEP 1. Scan tool CAN bus diagnostics

Using scan tool MB991958, diagnose the CAN bus lines.

Q: Is the check result normal?

YES : Go to Step 2.

NO : Repair the CAN bus lines. (Refer to GROUP 54C – Troubleshooting P.54C-16.) After repairing the CAN bus line, go to Step 2.

STEP 2. Check whether the DTC is reset.

After 15 seconds with the engine idle status, check that the DTC is reset.

Q: Is DTC No. P1868 set?

YES : Replace the mechatronic assembly. (Refer to P.22C-505.)

NO : Intermittent malfunction. (Refer to GROUP 00 –How to Cope with Intermittent Malfunction P.00-13.)

DTC P186A: High side 3 system (Overcurrent)**⚠ CAUTION**

- If there is any problem in the CAN bus lines, an incorrect diagnostic trouble code may be set. Prior to this diagnosis, diagnose the CAN bus lines.
- Whenever the ECU is replaced, ensure that the CAN bus lines are normal.

DIAGNOSTIC FUNCTION

TC-SST-ECU checks that the high side 3 circuit is normal.

DESCRIPTIONS OF MONITOR METHODS

The supply current to the high side 3 is determined to be overcurrent.

MONITOR EXECUTION

- Continuous

**MONITOR EXECUTION CONDITIONS
(OTHER MONITOR AND SENSOR)**

Other Monitor (There is no temporary DTC stored in memory for the item monitored below)


- P0753: Shift select solenoid 1 system (Open circuit)
- P0973: Shift select solenoid 1 system (Short to ground)

- P0974: Shift select solenoid 1 system (Short to power supply)
- P2727: Clutch/shift pressure solenoid 2 system (Open circuit)
- P2728: Clutch/shift pressure solenoid 2 system (Overcurrent)
- P2729: Clutch/shift pressure solenoid 2 system (Short to ground)
- P2730: Clutch/shift pressure solenoid 2 system (Short to power supply)
- P2809: Clutch/shift switching solenoid 2, spool stuck
- P2812: Clutch/shift switching solenoid 2 system (Open circuit)
- P2814: Clutch/shift switching solenoid 2 system (Short to ground)
- P2815: Clutch/shift switching solenoid 2 system (Short to power supply)
- P181B: Clutch 1 (Pressure low range out)
- P181C: Clutch 1 (Pressure high range out)
- P181E: Clutch 2 (Pressure low range out)
- P181F: Clutch 2 (Pressure high range out)

Sensor (The sensor below is determined to be normal)

- Shift select solenoid 1
- Clutch/shift pressure solenoid 2
- Clutch/shift switching solenoid 2

LOGIC FLOW CHARTS (Monitor Sequence)

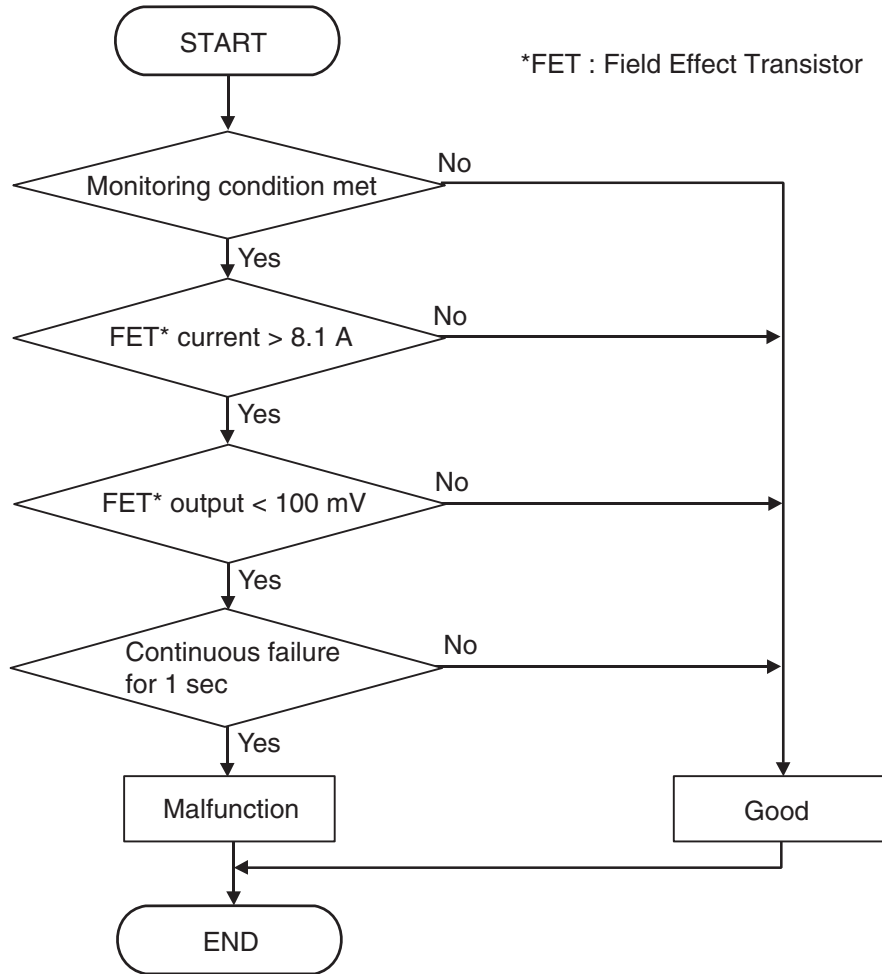

AC710725

DTC SET CONDITIONS

Check Conditions

- Voltage of battery: 8 V or more.
- Voltage of battery: 16.5 V or less.
- High side 3 switch: ON.

JUDGMENT CRITERIA

- FET (Field Effect Transistor) current: 8.1 A or more, and FET (Field Effect Transistor) output: 100 mV or less. (1 second)

OBD-II DRIVE CYCLE PATTERN

The status with the current of the FET channel shunt 8.1 A or less and with the FET channel output 100 mV or more continues for 1 second.

PROBABLE CAUSES

- Malfunction of TC-SST-ECU

DIAGNOSTIC PROCEDURE

Required Special Tools:

- MB991958 Scan Tool (M.U.T.-III Sub Assembly)
 - MB991824: Vehicle Communication Interface (V.C.I.)
 - MB991827 M.U.T.-III USB Cable
 - MB991910 M.U.T.-III Main Harness A

STEP 1. Scan tool CAN bus diagnostics

Using scan tool MB991958, diagnose the CAN bus lines.

Q: Is the check result normal?

YES : Go to Step 2.

NO : Repair the CAN bus lines. (Refer to GROUP 54C – Troubleshooting P.54C-16.) After repairing the CAN bus line, go to Step 2.

STEP 2. Check whether the DTC is reset.

After 5 seconds with the engine idle status, check that the DTC is reset.

Q: Is DTC No. P186A set?

YES : Replace the mechatronic assembly. (Refer to P.22C-505.)

NO : Intermittent malfunction. (Refer to GROUP 00 –How to Cope with Intermittent Malfunction P.00-13.)

DTC P186B: High side 3 system (Open circuit)**⚠ CAUTION**

- If there is any problem in the CAN bus lines, an incorrect diagnostic trouble code may be set. Prior to this diagnosis, diagnose the CAN bus lines.
- Whenever the ECU is replaced, ensure that the CAN bus lines are normal.

DIAGNOSTIC FUNCTION

TC-SST-ECU checks that the high side 3 circuit is normal.

DESCRIPTIONS OF MONITOR METHODS

The high side 3 circuit is determined to be open.

MONITOR EXECUTION

- Continuous

**MONITOR EXECUTION CONDITIONS
(OTHER MONITOR AND SENSOR)**

Other Monitor (There is no temporary DTC stored in memory for the item monitored below)


- P0753: Shift select solenoid 1 system (Open circuit)
- P0973: Shift select solenoid 1 system (Short to ground)

- P0974: Shift select solenoid 1 system (Short to power supply)
- P2727: Clutch/shift pressure solenoid 2 system (Open circuit)
- P2728: Clutch/shift pressure solenoid 2 system (Overcurrent)
- P2729: Clutch/shift pressure solenoid 2 system (Short to ground)
- P2730: Clutch/shift pressure solenoid 2 system (Short to power supply)
- P2809: Clutch/shift switching solenoid 2, spool stuck
- P2812: Clutch/shift switching solenoid 2 system (Open circuit)
- P2814: Clutch/shift switching solenoid 2 system (Short to ground)
- P2815: Clutch/shift switching solenoid 2 system (Short to power supply)
- P181B: Clutch 1 (Pressure low range out)
- P181C: Clutch 1 (Pressure high range out)
- P181E: Clutch 2 (Pressure low range out)
- P181F: Clutch 2 (Pressure high range out)

Sensor (The sensor below is determined to be normal)

- Shift select solenoid 1
- Clutch/shift pressure solenoid 2
- Clutch/shift switching solenoid 2

LOGIC FLOW CHARTS (Monitor Sequence)

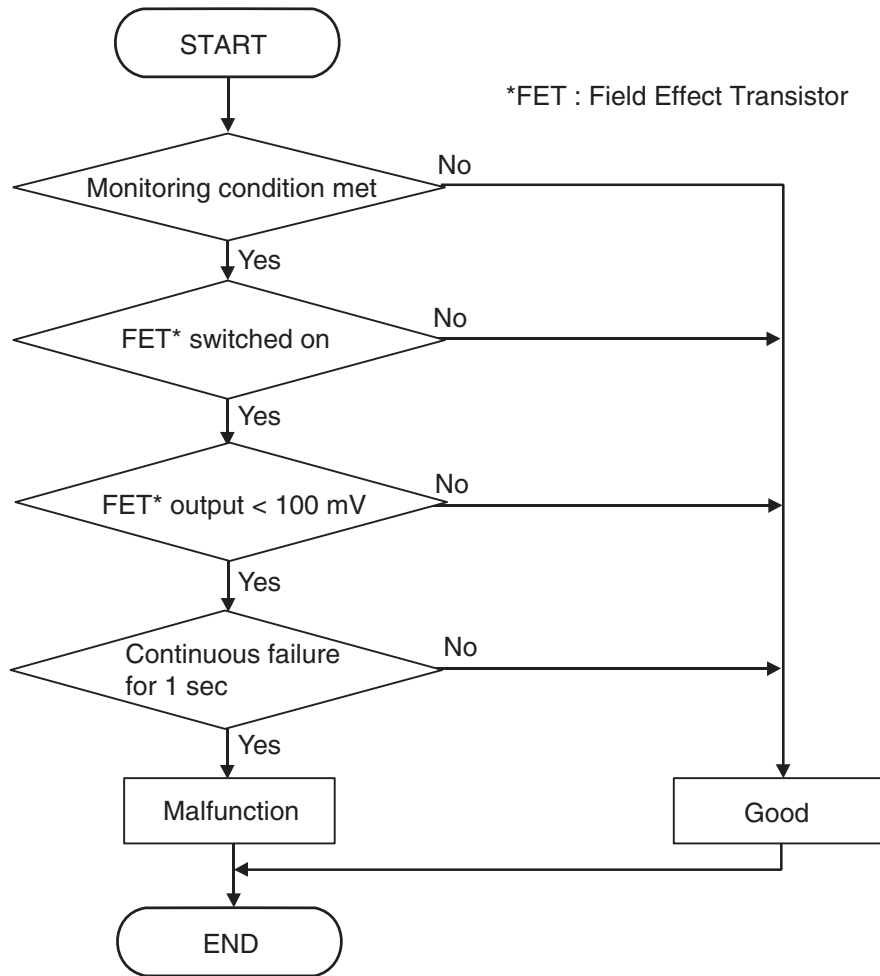

AC710726AB

DTC SET CONDITIONS

Check Conditions

- Voltage of battery: 8 V or more.
- Voltage of battery: 16.5 V or less.
- High side 3 switch: ON.

JUDGMENT CRITERIA

- FET (Field Effect Transistor): Can't be switched on, and FET (Field Effect Transistor) output: 100 mV or less. (1 second)

OBD-II DRIVE CYCLE PATTERN

The status with the FET switch ON and with the FET channel output 100 mV or more continues for 1 second.

PROBABLE CAUSES

- Malfunction of TC-SST-ECU

DIAGNOSTIC PROCEDURE

Required Special Tools:

- MB991958 Scan Tool (M.U.T.-III Sub Assembly)
 - MB991824: Vehicle Communication Interface (V.C.I.)
 - MB991827 M.U.T.-III USB Cable
 - MB991910 M.U.T.-III Main Harness A

STEP 1. Scan tool CAN bus diagnostics

Using scan tool MB991958, diagnose the CAN bus lines.

Q: Is the check result normal?

YES : Go to Step 2.

NO : Repair the CAN bus lines. (Refer to GROUP 54C – Troubleshooting P.54C-16.) After repairing the CAN bus line, go to Step 2.

STEP 2. Check whether the DTC is reset.

After 5 or more seconds have passed with the engine idle status, check that the DTC is reset.

Q: Is DTC No. P186B set?

YES : Replace the mechatronic assembly. (Refer to P.22C-505.)

NO : Intermittent malfunction. (Refer to GROUP 00 –How to Cope with Intermittent Malfunction P.00-13.)

DTC P186C: High side 3 system (Short to power supply)**⚠ CAUTION**

- If there is any problem in the CAN bus lines, an incorrect diagnostic trouble code may be set. Prior to this diagnosis, diagnose the CAN bus lines.
- Whenever the ECU is replaced, ensure that the CAN bus lines are normal.

DIAGNOSTIC FUNCTION

TC-SST-ECU checks that the high side 3 circuit is normal.

DESCRIPTIONS OF MONITOR METHODS

The high side 3 circuit is determined to be short to power supply.

MONITOR EXECUTION

- Continuous

**MONITOR EXECUTION CONDITIONS
(OTHER MONITOR AND SENSOR)**

Other Monitor (There is no temporary DTC stored in memory for the item monitored below)


- P0753: Shift select solenoid 1 system (Open circuit)
- P0973: Shift select solenoid 1 system (Short to ground)

- P0974: Shift select solenoid 1 system (Short to power supply)
- P2727: Clutch/shift pressure solenoid 2 system (Open circuit)
- P2728: Clutch/shift pressure solenoid 2 system (Overcurrent)
- P2729: Clutch/shift pressure solenoid 2 system (Short to ground)
- P2730: Clutch/shift pressure solenoid 2 system (Short to power supply)
- P2809: Clutch/shift switching solenoid 2, spool stuck
- P2812: Clutch/shift switching solenoid 2 system (Open circuit)
- P2814: Clutch/shift switching solenoid 2 system (Short to ground)
- P2815: Clutch/shift switching solenoid 2 system (Short to power supply)
- P181B: Clutch 1 (Pressure low range out)
- P181C: Clutch 1 (Pressure high range out)
- P181E: Clutch 2 (Pressure low range out)
- P181F: Clutch 2 (Pressure high range out)

Sensor (The sensor below is determined to be normal)

- Shift select solenoid 1
- Clutch/shift pressure solenoid 2
- Clutch/shift switching solenoid 2

LOGIC FLOW CHARTS (Monitor Sequence)

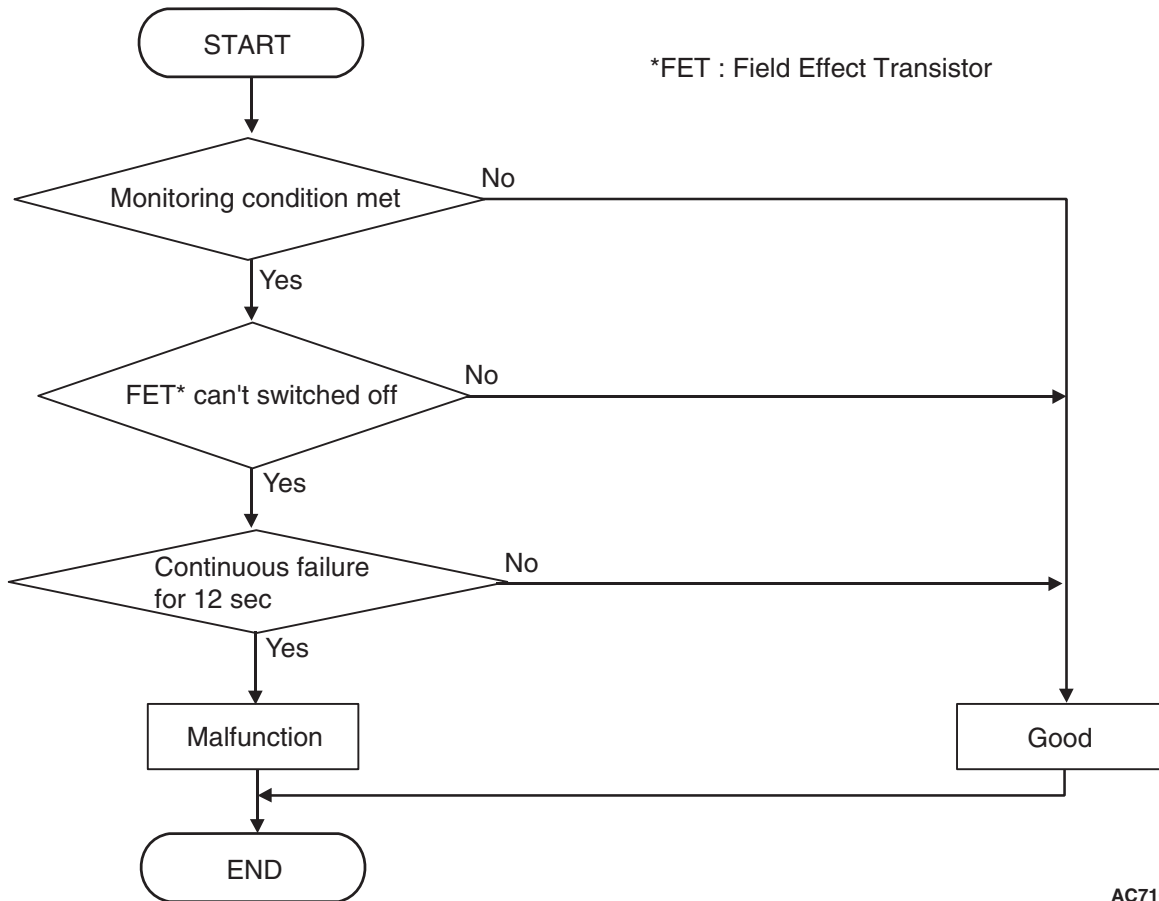

AC710727

DTC SET CONDITIONS

Check Conditions

- Voltage of battery: 8 V or more.
- Voltage of battery: 16.5 V or less.
- High side 3 switch: OFF.

JUDGMENT CRITERIA

- FET (Field Effect Transistor): Can't be switched off. (12 seconds)

OBD-II DRIVE CYCLE PATTERN

The FET switch remains OFF for 12 seconds.

PROBABLE CAUSES

- Malfunction of TC-SST-ECU

DIAGNOSTIC PROCEDURE

Required Special Tools:

- MB991958 Scan Tool (M.U.T.-III Sub Assembly)
 - MB991824: Vehicle Communication Interface (V.C.I.)
 - MB991827 M.U.T.-III USB Cable
 - MB991910 M.U.T.-III Main Harness A

STEP 1. Scan tool CAN bus diagnostics

Using scan tool MB991958, diagnose the CAN bus lines.

Q: Is the check result normal?

YES : Go to Step 2.

NO : Repair the CAN bus lines. (Refer to GROUP 54C – Troubleshooting P.54C-16.) After repairing the CAN bus line, go to Step 2.

STEP 2. Check whether the DTC is reset.

After 15 seconds with the engine idle status, check that the DTC is reset.

Q: Is DTC No. P186C set?

YES : Replace the mechatronic assembly. (Refer to P.22C-505.)

NO : Intermittent malfunction. (Refer to GROUP 00 –How to Cope with Intermittent Malfunction P.00-13.)

DTC P186D: High side 1 system (Voltage low range out)**⚠ CAUTION**

- If there is any problem in the CAN bus lines, an incorrect diagnostic trouble code may be set. Prior to this diagnosis, diagnose the CAN bus lines.
- Whenever the ECU is replaced, ensure that the CAN bus lines are normal.

DIAGNOSTIC FUNCTION

TC-SST-ECU checks that the high side 1 circuit is normal.

DESCRIPTIONS OF MONITOR METHODS

The voltage of the high side 1 circuit is determined to be too low.

MONITOR EXECUTION

- Continuous

**MONITOR EXECUTION CONDITIONS
(OTHER MONITOR AND SENSOR)**

Other Monitor (There is no temporary DTC stored in memory for the item monitored below)


- P0758: Shift select solenoid 2 system (Open circuit)

- P0976: Shift select solenoid 2 system (Short to ground)
- P0977: Shift select solenoid 2 system (Short to power supply)
- P0746: Line pressure solenoid system (Drive current range out)
- P0960: Line pressure solenoid system (Open circuit)
- P0961: Line pressure solenoid system (Overvoltage)
- P0962: Line pressure solenoid system (Short to ground)
- P0963: Line pressure solenoid system (Short to power supply)
- P0968: Shift/cooling switching solenoid system (Open circuit)
- P0970: Shift/cooling switching solenoid system (Short to ground)
- P0971: Shift/cooling switching solenoid system (Short to power supply)

Sensor (The sensor below is determined to be normal)

- Shift select solenoid 2
- Line pressure solenoid
- Shift/cooling switching solenoid

LOGIC FLOW CHARTS (Monitor Sequence)

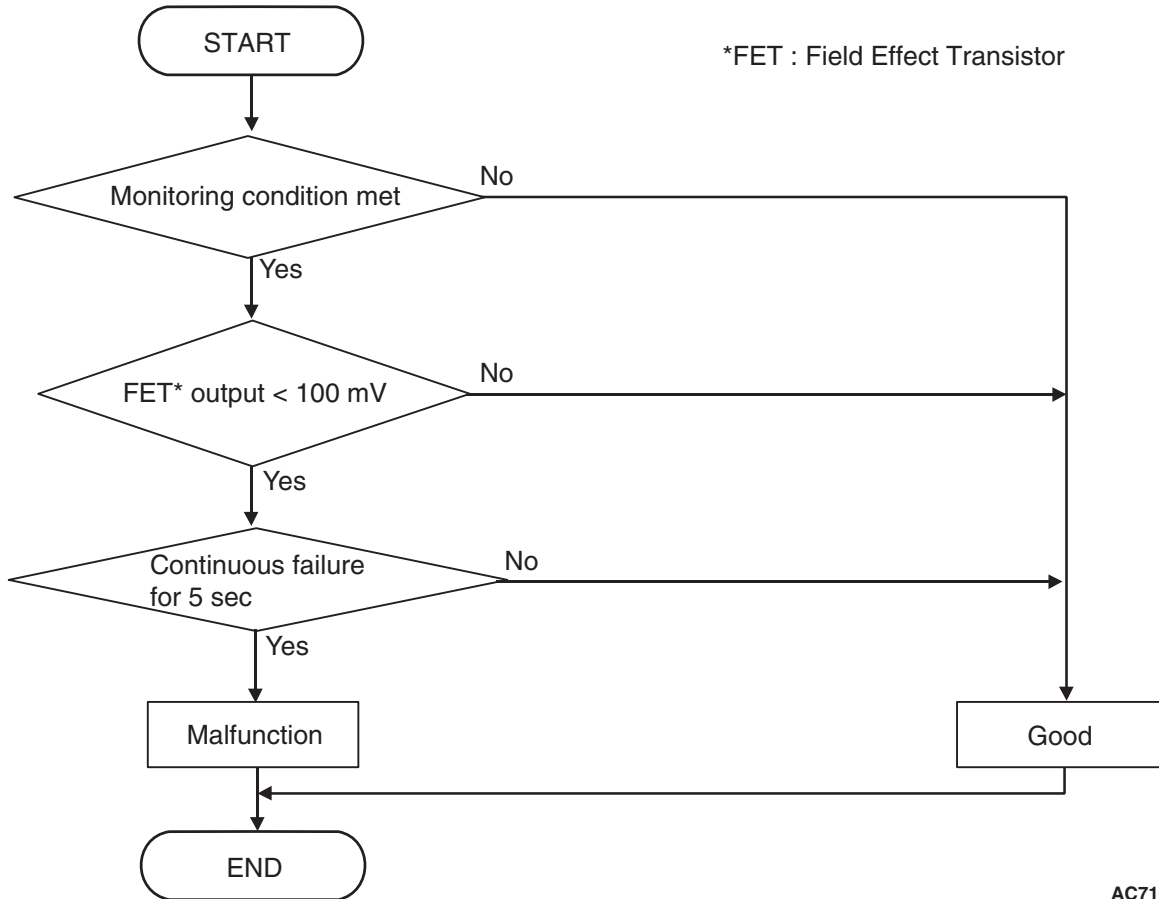

AC710728

DTC SET CONDITIONS

Check Conditions

- Voltage of battery: 8 V or more.
- Voltage of battery: 16.5 V or less.
- Engine speed: 650 r/min or more.
- Time since above engine condition: 1.5 seconds or more.
- FET (Field Effect Transistor) of high side 1: Switched off.

JUDGMENT CRITERIA

- FET output: 100 mV or less. (5 seconds)

OBD-II DRIVE CYCLE PATTERN

The FET channel output remains 100 mV or more for 5 seconds.

PROBABLE CAUSES

- Malfunction of TC-SST-ECU
- Malfunction of power supply circuit (open circuit)

DIAGNOSTIC PROCEDURE

Required Special Tools:

- MB991958 Scan Tool (M.U.T.-III Sub Assembly)
 - MB991824: Vehicle Communication Interface (V.C.I.)
 - MB991827 M.U.T.-III USB Cable
 - MB991910 M.U.T.-III Main Harness A

STEP 1. Scan tool CAN bus diagnostics

Using scan tool MB991958, diagnose the CAN bus lines.

Q: Is the check result normal?

YES : Go to Step 2.

NO : Repair the CAN bus lines. (Refer to GROUP 54C – Troubleshooting P.54C-16.) After repairing the CAN bus line, go to Step 2.

STEP 2. Check the TC-SST-ECU power supply circuit

Refer to P.22C-338.

Q: Is the check result normal?

YES : Go to Step 3.

NO : Repair the TC-SST-ECU power supply circuit. (Refer to P.22C-338.) After repairing the power supply circuit, go to Step 3.

STEP 3. Check whether the DTC is reset.

After 10 or more seconds have passed with the engine idle status, check that the DTC is reset.

Q: Is DTC No. P186D set?

YES : Replace the mechatronic assembly. (Refer to P.22C-505.)

NO : Intermittent malfunction. (Refer to GROUP 00 –How to Cope with Intermittent Malfunction P.00-13.)

DTC P186E: High side 2 system (Voltage low range out)**⚠ CAUTION**

- If there is any problem in the CAN bus lines, an incorrect diagnostic trouble code may be set. Prior to this diagnosis, diagnose the CAN bus lines.
- Whenever the ECU is replaced, ensure that the CAN bus lines are normal.

DIAGNOSTIC FUNCTION

TC-SST-ECU checks that the high side 2 circuit is normal.

DESCRIPTIONS OF MONITOR METHODS

The voltage of the high side 2 circuit is determined to be too low.

MONITOR EXECUTION

- Continuous

**MONITOR EXECUTION CONDITIONS
(OTHER MONITOR AND SENSOR)**

Other Monitor (There is no temporary DTC stored in memory for the item monitored below)

- P0776: Clutch cooling flow solenoid system (Drive current range out)
- P0777: Clutch cooling flow solenoid system (Stuck)
- P0964: Clutch cooling flow solenoid system (Open circuit)
- P0965: Clutch cooling flow solenoid system (Overvoltage)
- P0966: Clutch cooling flow solenoid system (Short to ground)
- P0967: Clutch cooling flow solenoid system (Short to power supply)
- P2718: Clutch/shift pressure solenoid 1 system (Open circuit)
- P2719: Clutch/shift pressure solenoid 1 system (Overcurrent)
- P2720: Clutch/shift pressure solenoid 1 system (Short to ground)


- P2721: Clutch/shift pressure solenoid 1 system (Short to power supply)
- P2733: Clutch/shift switching solenoid 1, spool stuck
- P2736: Clutch/shift switching solenoid 1 system (Open circuit)
- P2738: Clutch/shift switching solenoid 1 system (Short to ground)
- P2739: Clutch/shift switching solenoid 1 system (Short to power supply)

- P181B: Clutch 1 (Pressure low range out)
- P181C: Clutch 1 (Pressure high range out)

Sensor (The sensor below is determined to be normal)

- Clutch cooling flow solenoid
- Clutch/shift pressure solenoid 1
- Clutch/shift switching solenoid 1

LOGIC FLOW CHARTS (Monitor Sequence)

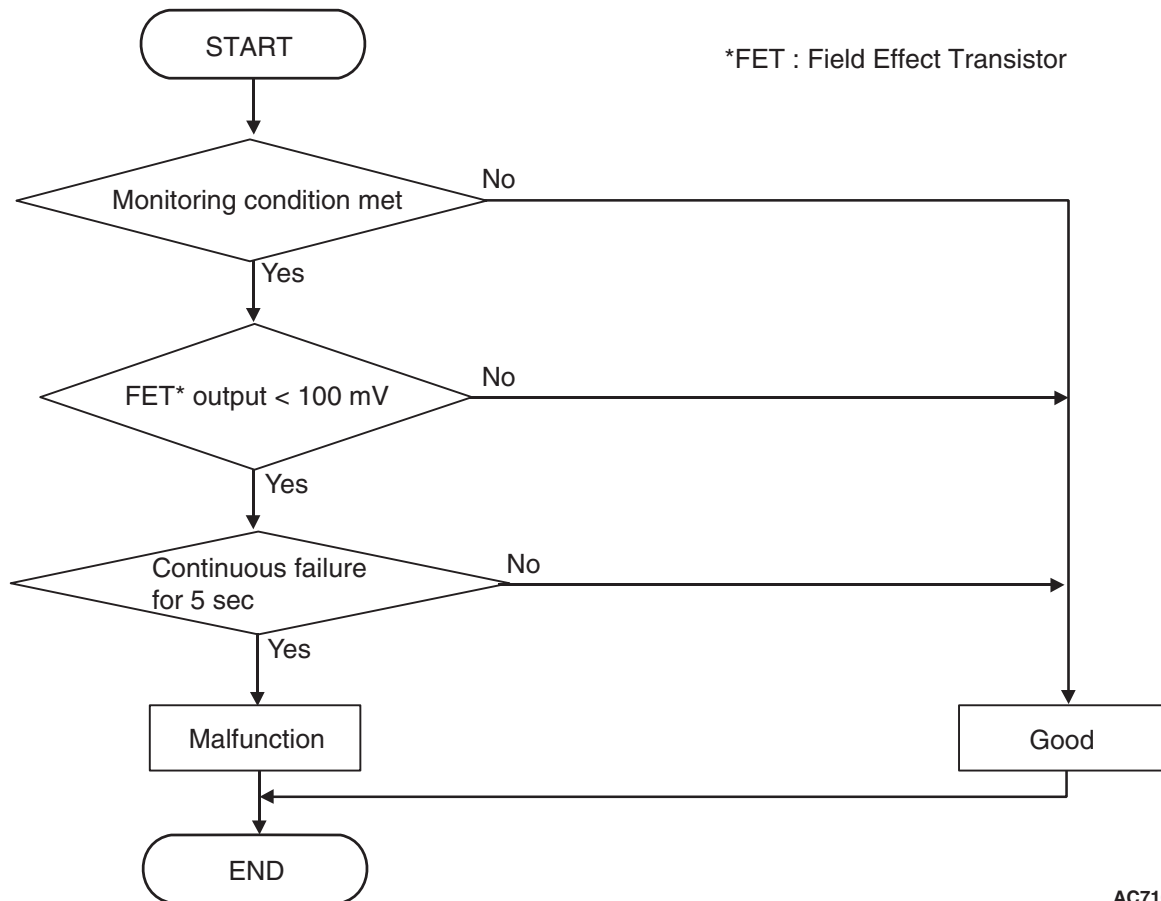

AC710728

DTC SET CONDITIONS

Check Conditions

- Voltage of battery: 8 V or more.
- Voltage of battery: 16.5 V or less.
- Engine speed: 650 r/min or more.
- Time since above engine condition: 1.5 seconds or more.
- FET (Field Effect Transistor) of high side 2: Switched off.

JUDGMENT CRITERIA

- FET output: 100 mV or less. (5 seconds)

OBD-II DRIVE CYCLE PATTERN

The FET channel output remains 100 mV or more for 5 seconds.

PROBABLE CAUSES

- Malfunction of TC-SST-ECU
- Malfunction of power supply circuit (open circuit)

DIAGNOSTIC PROCEDURE**Required Special Tools:**

- MB991958 Scan Tool (M.U.T.-III Sub Assembly)
 - MB991824: Vehicle Communication Interface (V.C.I.)
 - MB991827 M.U.T.-III USB Cable
 - MB991910 M.U.T.-III Main Harness A

STEP 1. Scan tool CAN bus diagnostics

Using scan tool MB991958, diagnose the CAN bus lines.

Q: Is the check result normal?

YES : Go to Step 2.

NO : Repair the CAN bus lines. (Refer to GROUP 54C – Troubleshooting P.54C-16.) After repairing the CAN bus line, go to Step 2.

STEP 2. Check the TC-SST-ECU power supply circuit

Refer to P.22C-338.

Q: Is the check result normal?

YES : Go to Step 3.

NO : Repair the TC-SST-ECU power supply circuit. (Refer to P.22C-338.) After repairing the power supply circuit, go to Step 3.

STEP 3. Check whether the DTC is reset.

After 10 or more seconds have passed with the engine idle status, check that the DTC is reset.

Q: Is DTC No. P186E set?

YES : Replace the mechatronic assembly. (Refer to P.22C-505.)

NO : Intermittent malfunction. (Refer to GROUP 00 –How to Cope with Intermittent Malfunction P.00-13.)

DTC P186F: High side 3 system (Voltage low range out)**CAUTION**

- If there is any problem in the CAN bus lines, an incorrect diagnostic trouble code may be set. Prior to this diagnosis, diagnose the CAN bus lines.
- Whenever the ECU is replaced, ensure that the CAN bus lines are normal.

DIAGNOSTIC FUNCTION

TC-SST-ECU checks that the high side 3 circuit is normal.

DESCRIPTIONS OF MONITOR METHODS

The voltage of the high side 3 circuit is determined to be too low.

MONITOR EXECUTION

- Continuous

MONITOR EXECUTION CONDITIONS (OTHER MONITOR AND SENSOR)

Other Monitor (There is no temporary DTC stored in memory for the item monitored below)

- P0753: Shift select solenoid 1 system (Open circuit)
- P0973: Shift select solenoid 1 system (Short to ground)
- P0974: Shift select solenoid 1 system (Short to power supply)
- P2727: Clutch/shift pressure solenoid 2 system (Open circuit)


- P2728: Clutch/shift pressure solenoid 2 system (Overcurrent)
- P2729: Clutch/shift pressure solenoid 2 system (Short to ground)
- P2730: Clutch/shift pressure solenoid 2 system (Short to power supply)
- P2809: Clutch/shift switching solenoid 2, spool stuck
- P2812: Clutch/shift switching solenoid 2 system (Open circuit)
- P2814: Clutch/shift switching solenoid 2 system (Short to ground)

- P2815: Clutch/shift switching solenoid 2 system (Short to power supply)
- P181B: Clutch 1 (Pressure low range out)
- P181C: Clutch 1 (Pressure high range out)
- P181E: Clutch 2 (Pressure low range out)
- P181F: Clutch 2 (Pressure high range out)

Sensor (The sensor below is determined to be normal)

- Shift select solenoid 1
- Clutch/shift pressure solenoid 2
- Clutch/shift switching solenoid 2

LOGIC FLOW CHARTS (Monitor Sequence)

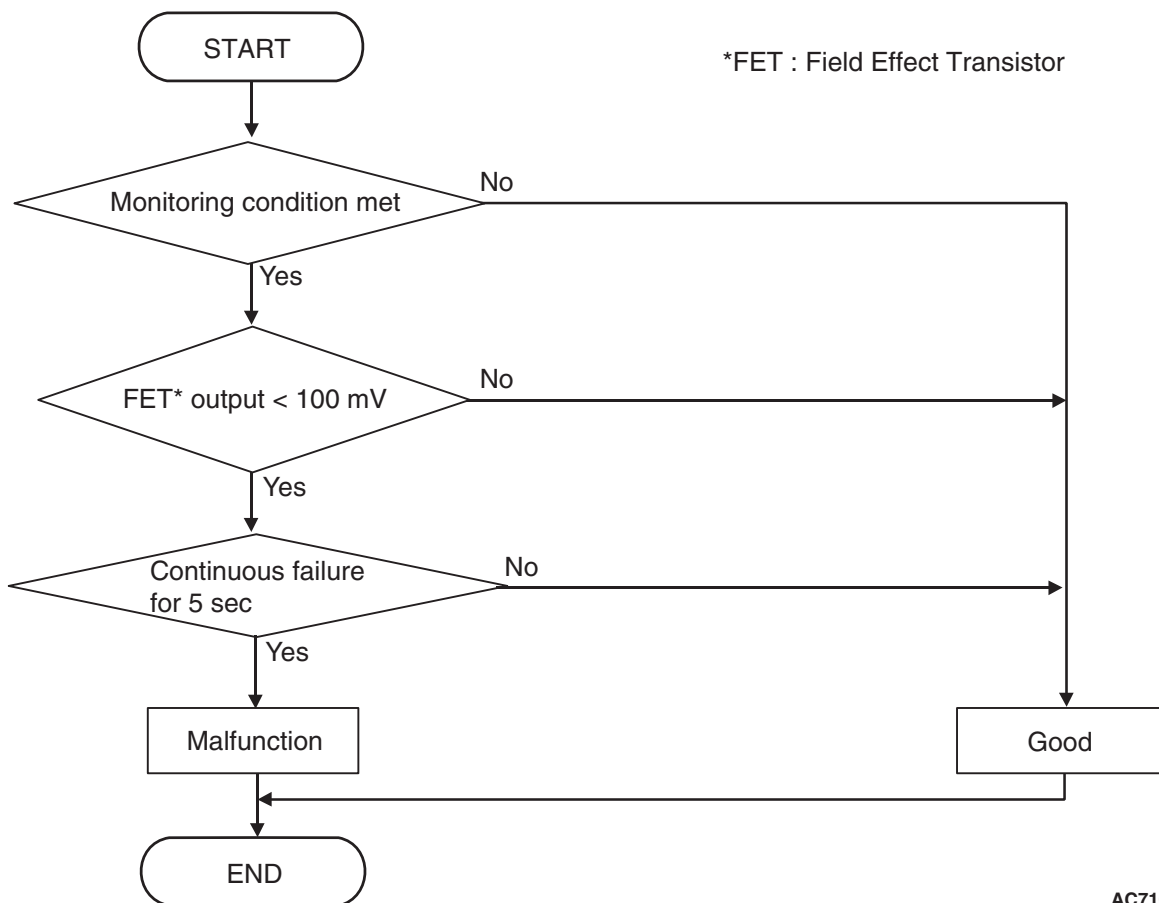

AC710728

DTC SET CONDITIONS

Check Conditions

- Voltage of battery: 8 V or more.
- Voltage of battery: 16.5 V or less.
- Engine speed: 650 r/min or more.
- Time since above engine condition: 1.5 seconds or more.
- FET (Field Effect Transistor) of high side 3: Switched off.

JUDGMENT CRITERIA

- FET output: 100 mV or less. (5 seconds)

OBD-II DRIVE CYCLE PATTERN

The FET channel output remains 100 mV or more for 5 seconds.

PROBABLE CAUSES

- Malfunction of TC-SST-ECU
- Malfunction of power supply circuit (open circuit)

DIAGNOSTIC PROCEDURE**Required Special Tools:**

- MB991958 Scan Tool (M.U.T.-III Sub Assembly)
 - MB991824: Vehicle Communication Interface (V.C.I.)
 - MB991827 M.U.T.-III USB Cable
 - MB991910 M.U.T.-III Main Harness A

STEP 1. Scan tool CAN bus diagnostics

Using scan tool MB991958, diagnose the CAN bus lines.

Q: Is the check result normal?

YES : Go to Step 2.

NO : Repair the CAN bus lines. (Refer to GROUP 54C – Troubleshooting P.54C-16.) After repairing the CAN bus line, go to Step 2.

STEP 2. Check the TC-SST-ECU power supply circuit

Refer to P.22C-338.

Q: Is the check result normal?

YES : Go to Step 3.

NO : Repair the TC-SST-ECU power supply circuit. (Refer to P.22C-338.) After repairing the power supply circuit, go to Step 3.

STEP 3. Check whether the DTC is reset.

After 10 or more seconds have passed with the engine idle status, check that the DTC is reset.

Q: Is DTC No. P186F set?

YES : Replace the mechatronic assembly. (Refer to P.22C-505.)

NO : Intermittent malfunction. (Refer to GROUP 00 –How to Cope with Intermittent Malfunction P.00-13.)

DTC P1870: Engine torque signal abnormality**CAUTION**

- If there is any problem in the CAN bus lines, an incorrect diagnostic trouble code may be set. Prior to this diagnosis, diagnose the CAN bus lines.
- Whenever the ECU is replaced, ensure that the CAN bus lines are normal.

DIAGNOSTIC FUNCTION

TC-SST-ECU receives the periodic communication data from the engine control module via the CAN bus lines, and checks the data for abnormality.

DESCRIPTIONS OF MONITOR METHODS

The engine torque signal from the engine control module is determined to be abnormal.

MONITOR EXECUTION

- Continuous

MONITOR EXECUTION CONDITIONS (OTHER MONITOR AND SENSOR)

Other Monitor (There is no temporary DTC stored in memory for the item monitored below)

- P0841: Clutch 1 pressure sensor system (Poor performance)
- P0842: Clutch 1 pressure sensor system (Output low range out)
- P0843: Clutch 1 pressure sensor system (Output high range out)
- P0846: Clutch 2 pressure sensor system (Poor performance)


- P0847: Clutch 2 pressure sensor system (Output low range out)
- P0848: Clutch 2 pressure sensor system (Output high range out)
- P185D: Clutch open not possible
- U0001: Bus off
- U0100: Engine time-out error
- P1803: Shift lever system (CAN or LIN time-out error)
- P1871: APS system (Signal abnormality)

- P1872: Between shift lever and TC-SST system (Q-A function abnormality)

Sensor (The sensor below is determined to be normal)

- Clutch 1 pressure sensor
- Clutch 2 pressure sensor
- APS
- Shift lever-ECU

LOGIC FLOW CHARTS (Monitor Sequence)

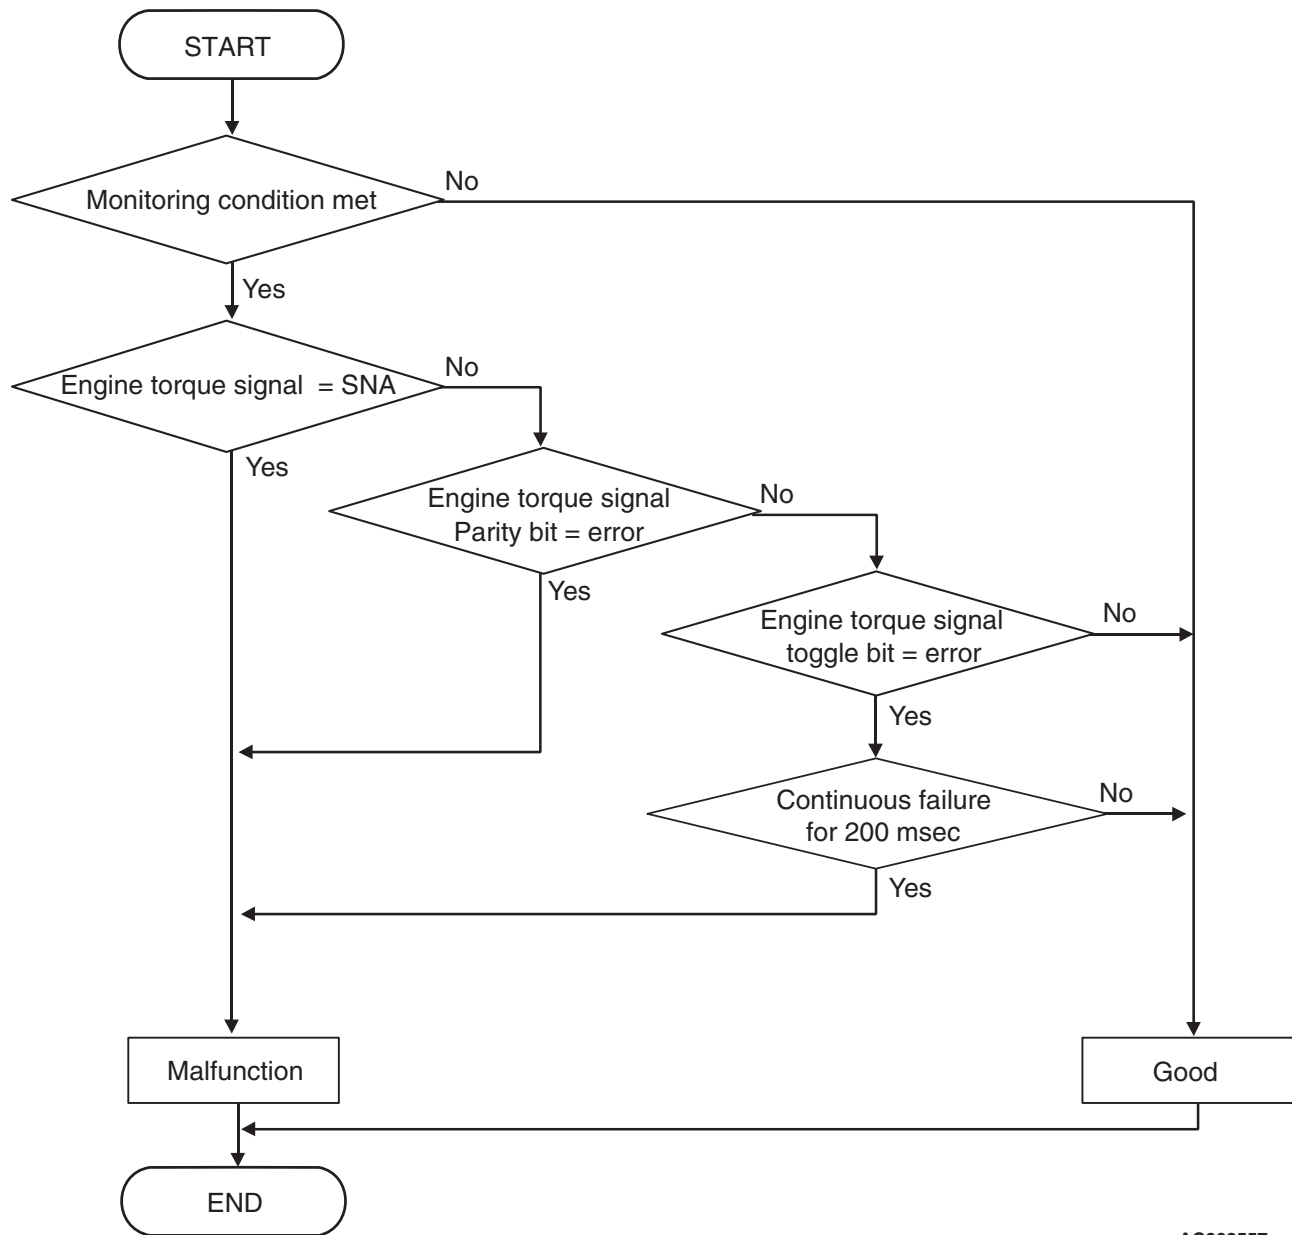

AC902557

DTC SET CONDITIONS

Check Conditions

- Voltage of battery: 8 V or more.

- Voltage of battery: 16.5 V or less.
- Time after TC-SST-ECU start: 5 seconds or more.

JUDGMENT CRITERIA

- Engine torque signal: SNA, or parity/toggle error. (immediately)

OBD-II DRIVE CYCLE PATTERN

Receives the normal value of the engine torque signal, or the parity/toggle are normal.

PROBABLE CAUSES

- The CAN bus line is defective.
- Malfunction of engine control module
- Malfunction of TC-SST-ECU

DIAGNOSTIC PROCEDURE**Required Special Tools:**

- MB991958 Scan Tool (M.U.T.-III Sub Assembly)
 - MB991824: Vehicle Communication Interface (V.C.I.)
 - MB991827 M.U.T.-III USB Cable
 - MB991910 M.U.T.-III Main Harness A

STEP 1. Scan tool CAN bus diagnostics

Using the scan tool, diagnose the CAN bus lines.

Q: Is the check result normal?

YES : Go to Step 2.

NO : Repair the CAN bus lines. (Refer to GROUP 54C – Troubleshooting [P.54C-16.](#)) After repairing the CAN bus line, go to Step 2.

STEP 2. Scan tool diagnostic trouble code.

Check if the diagnostic trouble code is set to the system other than TC-SST.

Q: Is the DTC set?

YES : Perform the relevant troubleshooting.

NO : Go to Step 3.

STEP 3. Scan tool diagnostic trouble code.

After 15 seconds with the engine idle status, check that the diagnostic trouble code for engine is set. (Refer to GROUP 13A –Troubleshooting [P.13A-50.](#))

Q: Is the DTC set?

YES : Perform the relevant troubleshooting.

NO : Go to Step 4.

STEP 4. Check whether the DTC is reset.

After 15 seconds with the engine idle status, check that the DTC is reset.

Q: Is DTC No.P1870 set?

YES : Replace the mechatronic assembly. (Refer to [P.22C-505.](#))

NO : Intermittent malfunction. (Refer to GROUP 00 –How to Cope with Intermittent Malfunction [P.00-13.](#))

DTC P1871: APS system (Signal abnormality)

⚠ CAUTION

- If there is any problem in the CAN bus lines, an incorrect diagnostic trouble code may be set. Prior to this diagnosis, diagnose the CAN bus lines.
- Whenever the ECU is replaced, ensure that the CAN bus lines are normal.

DIAGNOSTIC FUNCTION

TC-SST-ECU receives the periodic communication data from the engine control module via the CAN bus lines, and checks the data for abnormality.

DESCRIPTIONS OF MONITOR METHODS

The APS signal from the engine control module is determined to be abnormal.

MONITOR EXECUTION

- Continuous

**MONITOR EXECUTION CONDITIONS
(OTHER MONITOR AND SENSOR)**

Other Monitor (There is no temporary DTC stored in memory for the item monitored below)


- P0841: Clutch 1 pressure sensor system (Poor performance)

- P0842: Clutch 1 pressure sensor system (Output low range out)
- P0843: Clutch 1 pressure sensor system (Output high range out)
- P0846: Clutch 2 pressure sensor system (Poor performance)
- P0847: Clutch 2 pressure sensor system (Output low range out)
- P0848: Clutch 2 pressure sensor system (Output high range out)
- P185D: Clutch open not possible
- U0001: Bus off
- U0100: Engine time-out error
- P1803: Shift lever system (CAN or LIN time-out error)
- P1870: Engine torque signal abnormality
- P1872: Between shift lever and TC-SST system (Q-A function abnormality)

Sensor (The sensor below is determined to be normal)

- Clutch 1 pressure sensor
- Clutch 2 pressure sensor
- APS
- Shift lever-ECU

LOGIC FLOW CHARTS (Monitor Sequence)

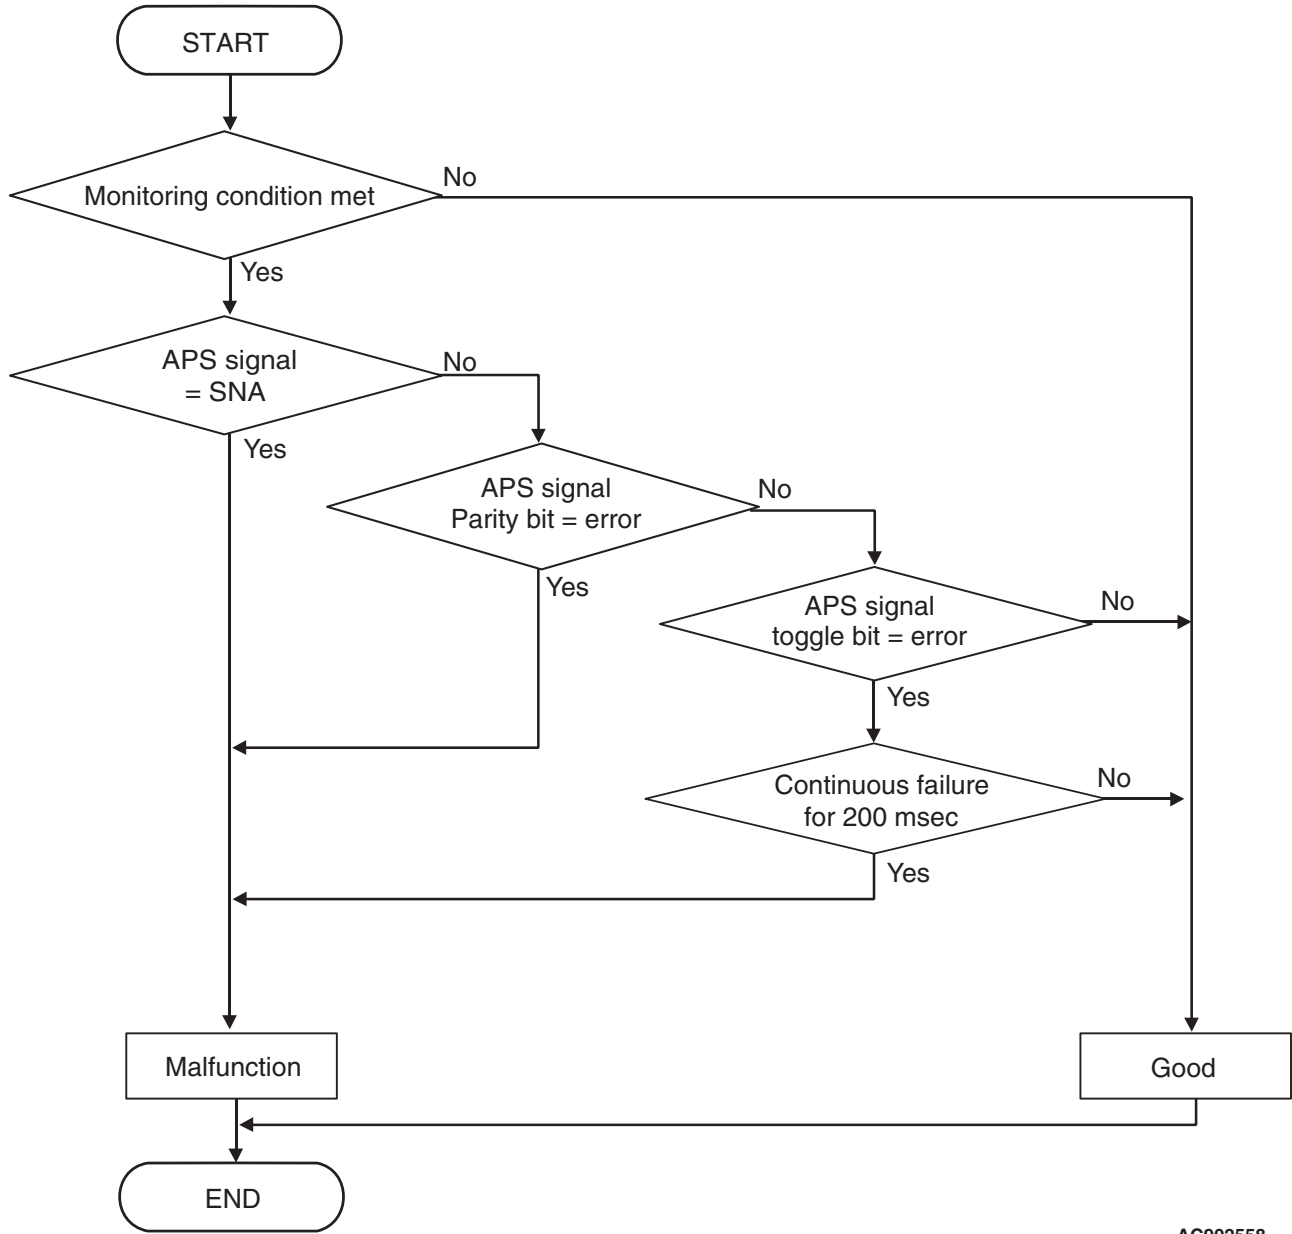

AC902558

DTC SET CONDITIONS

Check Conditions

- Voltage of battery: 8 V or more.
- Voltage of battery: 16.5 V or less.
- Time after TC-SST-ECU start: 5 seconds or more.

JUDGMENT CRITERIA

- APS signal: SNA, or parity/toggle error.

OBD-II DRIVE CYCLE PATTERN

Receives the normal value of the APS signal, or the parity/toggle are normal.

PROBABLE CAUSES

- The CAN bus line is defective.
- APS malfunction
- Malfunction of engine control module
- Malfunction of TC-SST-ECU

DIAGNOSTIC PROCEDURE

Required Special Tools:

- MB991958 Scan Tool (M.U.T.-III Sub Assembly)
 - MB991824: Vehicle Communication Interface (V.C.I.)
 - MB991827 M.U.T.-III USB Cable
 - MB991910 M.U.T.-III Main Harness A

STEP 1. Scan tool CAN bus diagnostics

Using the scan tool, diagnose the CAN bus lines.

Q: Is the check result normal?

YES : Go to Step 2.

NO : Repair the CAN bus lines. (Refer to GROUP 54C – Troubleshooting [P.54C-16.](#)) After repairing the CAN bus line, go to Step 2.

STEP 2. Scan tool diagnostic trouble code.

Check if the diagnostic trouble code is set to the system other than TC-SST.

Q: Is the DTC set?

YES : Perform the relevant troubleshooting.

NO : Go to Step 3.

STEP 3. Scan tool diagnostic trouble code.

After 15 seconds with the engine idle status, check that the diagnostic trouble code for engine is set. (Refer to GROUP 13A –Troubleshooting [P.13A-50.](#))

Q: Is the DTC set?

YES : Perform the relevant troubleshooting.

NO : Go to Step 4.

STEP 4. Check whether the DTC is reset.

After 15 seconds with the engine idle status, check that the DTC is reset.

Q: Is DTC No.P1871 set?

YES : Replace the mechatronic assembly. (Refer to [P.22C-505.](#))

NO : Intermittent malfunction. (Refer to GROUP 00 –How to Cope with Intermittent Malfunction [P.00-13.](#))

DTC P1872: Between shift lever and TC-SST system (Q-A function abnormality)**⚠ CAUTION**

- If there is any problem in the CAN bus lines, an incorrect diagnostic trouble code may be set. Prior to this diagnosis, diagnose the CAN bus lines.
- Whenever the ECU is replaced, ensure that the CAN bus lines are normal.

DIAGNOSTIC FUNCTION

TC-SST-ECU checks that the shift lever-ECU is normal.

DESCRIPTIONS OF MONITOR METHODS

The shift lever-ECU is determined to be abnormal.

PROBABLE CAUSES

- Malfunction of the shift lever-ECU
- Malfunction of TC-SST-ECU

DIAGNOSTIC PROCEDURE**Required Special Tools:**

- MB991958 Scan Tool (M.U.T.-III Sub Assembly)
 - MB991824: Vehicle Communication Interface (V.C.I.)
 - MB991827 M.U.T.-III USB Cable
 - MB991910 M.U.T.-III Main Harness A

STEP 1. Scan tool CAN bus diagnostics

Using scan tool MB991958, diagnose the CAN bus lines.

Q: Is the check result normal?

YES : Go to Step 2.

NO : Repair the CAN bus lines. (Refer to GROUP 54C – Troubleshooting [P.54C-16.](#)) After repairing the CAN bus line, go to Step 2.

STEP 2. Scan tool diagnostic trouble code

Check the shift lever diagnostic trouble code. (Refer to [P.22C-366.](#))

Q: Is the DTC set?

YES : Perform the relevant troubleshooting.

NO : Go to Step 3.

STEP 3. Replace the shift lever assembly, and check if the diagnostic trouble code is reset.

(1) Replace the shift lever assembly. (Refer to [P.22C-488.](#))

(2) Check the DTC.

Q: Is DTC No. P1872 set?

YES : Replace the mechatronic assembly. (Refer to [P.22C-505.](#))

NO : Intermittent malfunction. (Refer to GROUP 00 –How to Cope with Intermittent Malfunction [P.00-13.](#))

DTC P1873: Clutch 1 System (Pressure abnormality)

⚠ CAUTION

- If there is any problem in the CAN bus lines, an incorrect diagnostic trouble code may be set. Prior to this diagnosis, diagnose the CAN bus lines.
- Whenever the ECU is replaced, ensure that the CAN bus lines are normal.

DIAGNOSTIC FUNCTION

TC-SST-ECU checks that the clutch 1 pressure is normal.

DESCRIPTIONS OF MONITOR METHODS

The clutch 1 pressure is determined to be abnormal.

PROBABLE CAUSES

- Malfunction of TC-SST-ECU
- Malfunction of clutch assembly
- Malfunction of engine system

DIAGNOSTIC PROCEDURE

Required Special Tools:

- MB991958 Scan Tool (M.U.T.-III Sub Assembly)
 - MB991824: Vehicle Communication Interface (V.C.I.)
 - MB991827 M.U.T.-III USB Cable
 - MB991910 M.U.T.-III Main Harness A

STEP 1. Scan tool CAN bus diagnostics

Using scan tool MB991958, diagnose the CAN bus lines.

Q: Is the check result normal?

YES : Go to Step 2.

NO : Repair the CAN bus lines. (Refer to GROUP 54C – Troubleshooting [P.54C-16.](#)) After repairing the CAN bus line, go to Step 2.

STEP 2. Scan tool diagnostic trouble code.

Check the engine diagnostic trouble code. (Refer to GROUP 13A –Troubleshooting [P.13A-50.](#))

Q: Is the DTC set?

YES : Perform the relevant troubleshooting.

NO : Go to Step 3.

STEP 3. Check whether the DTC is reset.

After 30 seconds with the engine idle status, check that the DTC is reset.

Q: Is DTC No.P1873 set?

YES : Replace the clutch assembly. (Refer to GROUP 22D –transaxle [P.22D-6.](#)) After replacing the clutch assembly, go to Step 4.

NO : Intermittent malfunction. (Refer to GROUP 00 –How to Cope with Intermittent Malfunction [P.00-13.](#))

STEP 4. Check whether the DTC is reset.

After 30 seconds with the engine idle status, check that the DTC is reset.

Q: Is DTC No.P1873 set?

YES : Replace the mechatronic assembly. (Refer to [P.22C-505.](#))

NO : Intermittent malfunction. (Refer to GROUP 00 –How to Cope with Intermittent Malfunction [P.00-13.](#))

DTC P1874: Clutch 2 System (Pressure abnormality)**⚠ CAUTION**

- If there is any problem in the CAN bus lines, an incorrect diagnostic trouble code may be set. Prior to this diagnosis, diagnose the CAN bus lines.
- Whenever the ECU is replaced, ensure that the CAN bus lines are normal.

DIAGNOSTIC FUNCTION

TC-SST-ECU checks that the clutch 2 pressure is normal.

DESCRIPTIONS OF MONITOR METHODS

The clutch 2 pressure is determined to be abnormal.

PROBABLE CAUSES

- Malfunction of TC-SST-ECU
- Malfunction of clutch assembly
- Malfunction of engine system

DIAGNOSTIC PROCEDURE**Required Special Tools:**

- MB991958 Scan Tool (M.U.T.-III Sub Assembly)
 - MB991824: Vehicle Communication Interface (V.C.I.)
 - MB991827 M.U.T.-III USB Cable
 - MB991910 M.U.T.-III Main Harness A

STEP 1. Scan tool CAN bus diagnostics

Using scan tool MB991958, diagnose the CAN bus lines.

Q: Is the check result normal?

YES : Go to Step 2.

NO : Repair the CAN bus lines. (Refer to GROUP 54C – Troubleshooting [P.54C-16.](#)) After repairing the CAN bus line, go to Step 2.

STEP 2. Scan tool diagnostic trouble code.

Check the engine diagnostic trouble code. (Refer to GROUP 13A –Troubleshooting [P.13A-50.](#))

Q: Is the DTC set?

YES : Perform the relevant troubleshooting.

NO : Go to Step 3.

STEP 3. Check whether the DTC is reset.

After 30 seconds with the engine idle status, check that the DTC is reset.

Q: Is DTC No.P1874 set?

YES : Replace the clutch assembly. (Refer to GROUP 22D –Transaxle P.22D-6.) After replacing the clutch assembly, go to Step 4.

NO : Intermittent malfunction. (Refer to GROUP 00 –How to Cope with Intermittent Malfunction P.00-13.)

STEP 4. Check whether the DTC is reset.

After 30 seconds with the engine idle status, check that the DTC is reset.

Q: Is DTC No.P1874 set?

YES : Replace the mechatronic assembly. (Refer to P.22C-505.)

NO : Intermittent malfunction. (Refer to GROUP 00 –How to Cope with Intermittent Malfunction P.00-13.)

DTC P1875: Damper Speed Sensor System (Poor performance)

⚠ CAUTION

- If there is any problem in the CAN bus lines, an incorrect diagnostic trouble code may be set. Prior to this diagnosis, diagnose the CAN bus lines.
- Whenever the ECU is replaced, ensure that the CAN bus lines are normal.

DIAGNOSTIC FUNCTION

TC-SST-ECU checks that the damper (closer to the engine than input shaft) is normal.

DESCRIPTIONS OF MONITOR METHODS

The damper speed sensor is determined to be abnormal.

MONITOR EXECUTION

- Continuous

**MONITOR EXECUTION CONDITIONS
(OTHER MONITOR AND SENSOR)**


Other Monitor (There is no temporary DTC stored in memory for the item monitored below)

- P0715: Input shaft 1 (odd number gear axle) speed sensor system (Output high range out)
- P0716: Input shaft 1 (odd number gear axle) speed sensor system (Poor performance)
- P0717: Input shaft 1 (odd number gear axle) speed sensor system (Output low range out)
- P2766: Input shaft 2 (even number gear axle) speed sensor system (Poor performance)

Sensor (The sensor below is determined to be normal)


- Input shaft 1 (odd number gear axle) speed sensor
- Input shaft 2 (even number gear axle) speed sensor

LOGIC FLOW CHARTS (Monitor Sequence)

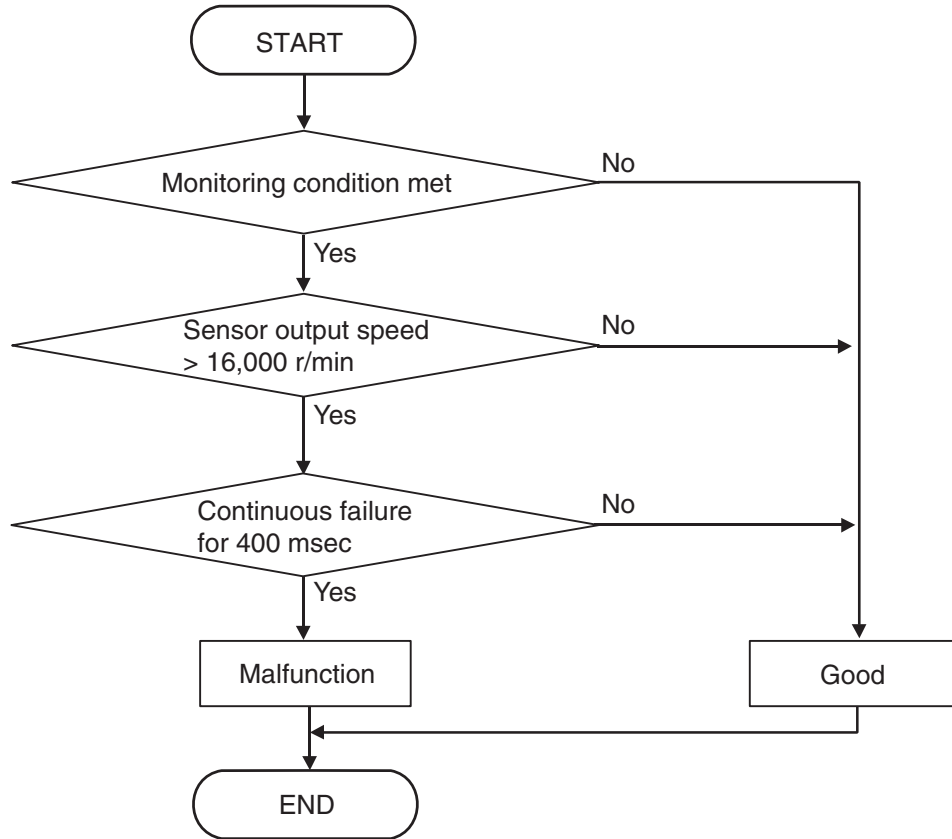

AC710617

LOGIC FLOW CHARTS (Monitor Sequence)

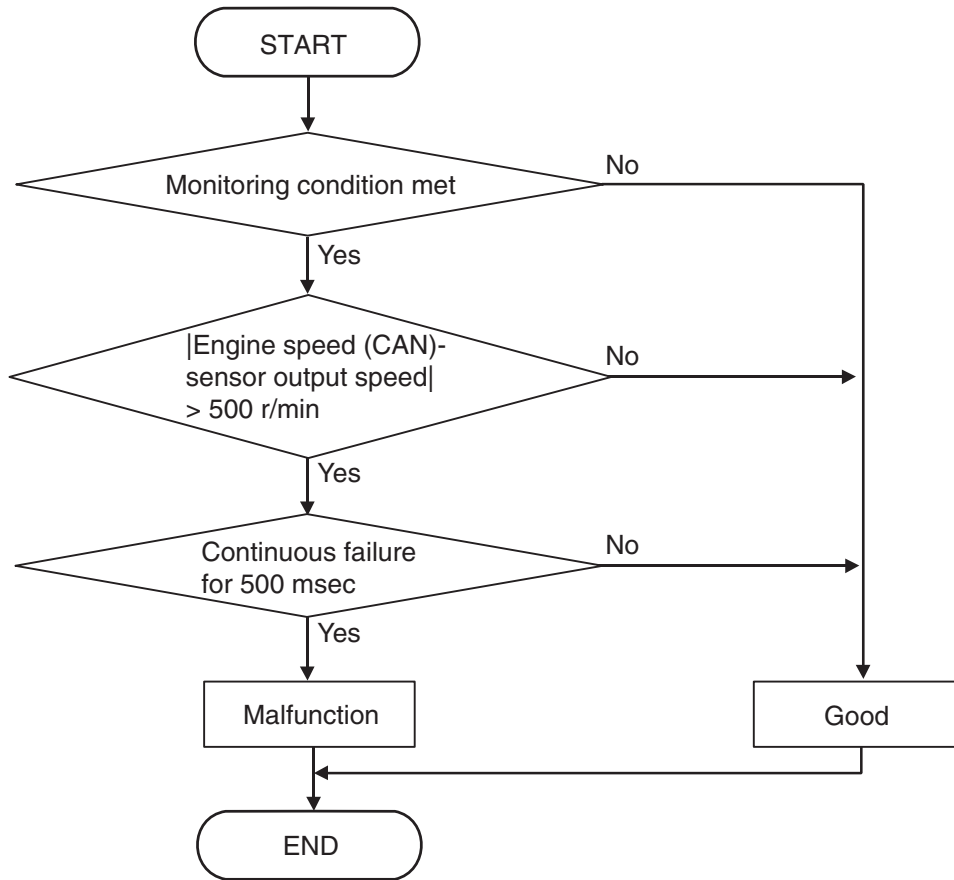

AC710618

DTC SET CONDITIONS

Check Conditions

- Voltage of battery: 8 V or more.
- Voltage of battery: 16.5 V or less.
- Engine speed: 650 r/min or more.
- Time since above engine condition: 1.5 seconds.

JUDGMENT CRITERIA

- Sensor output speed: 16,000 r/min or more. (400 millisecond)
- The absolute value of the "Engine speed via CAN" –"Sensor output speed" remains 500 r/min or more. (500 millisecond)

OBD-II DRIVE CYCLE PATTERN

- The output of the sensor remains 16,000 r/min or less for 400 millisecond.
- The absolute value of the "Engine speed via CAN" –"Sensor output speed" remains 500 r/min or less for 500 millisecond.

PROBABLE CAUSES

- Malfunction of damper speed sensor
- Malfunction of TC-SST-ECU

DIAGNOSTIC PROCEDURE

Required Special Tools:

- MB991958 Scan Tool (M.U.T.-III Sub Assembly)
 - MB991824: Vehicle Communication Interface (V.C.I.)
 - MB991827 M.U.T.-III USB Cable
 - MB991910 M.U.T.-III Main Harness A

STEP 1. Scan tool CAN bus diagnostics

Using scan tool MB991958, diagnose the CAN bus lines.

Q: Is the check result normal?

YES : Go to Step 2.

NO : Repair the CAN bus lines. (Refer to GROUP 54C – Troubleshooting [P.54C-16.](#)) After repairing the CAN bus line, go to Step 2.

STEP 2. Check whether the DTC is reset.

With the vehicle stopped, hold a specific accelerator pedal angle for 20 seconds, and check that the DTC is reset.

Q: Is DTC No.P1875 set?

YES : Replace the transaxle assembly. (Refer to [P.22C-497.](#))

NO : Intermittent malfunction. (Refer to GROUP 00 –How to Cope with Intermittent Malfunction [P.00-13.](#))

DTC P1876: Gear Block 1st**CAUTION**

- If there is any problem in the CAN bus lines, an incorrect diagnostic trouble code may be set. Prior to this diagnosis, diagnose the CAN bus lines.
- Whenever the ECU is replaced, ensure that the CAN bus lines are normal.

DIAGNOSTIC FUNCTION

TC-SST-ECU checks that the gear engagement is normal.

DESCRIPTIONS OF MONITOR METHODS

The engagement of the 1st gear is determined to be impossible.

PROBABLE CAUSES

- Malfunction of TC-SST-ECU
- Malfunction of TC-SST gear
- Malfunction of clutch assembly

DIAGNOSTIC PROCEDURE**Required Special Tools:**

- MB991958 Scan Tool (M.U.T.-III Sub Assembly)
 - MB991824: Vehicle Communication Interface (V.C.I.)
 - MB991827 M.U.T.-III USB Cable
 - MB991910 M.U.T.-III Main Harness A

STEP 1. Scan tool CAN bus diagnostics

Using scan tool MB991958, diagnose the CAN bus lines.

Q: Is the check result normal?

YES : Go to Step 2.

NO : Repair the CAN bus lines. (Refer to GROUP 54C – Troubleshooting [P.54C-16.](#)) After repairing the CAN bus line, go to Step 2.

STEP 2. Check whether the DTC is reset.

- (1) Erase the DTC.
- (2) With the engine idle status, operate the shift lever in the following sequence: P →R →D →R →P. (Hold each range for 5 seconds or more.)
- (3) Check that the DTC is reset.

Q: Is DTC No.P1876 set?

YES : Go to Step 3.

NO : Intermittent malfunction. (Refer to GROUP 00 –How to Cope with Intermittent Malfunction [P.00-13](#).)

STEP 3. Scan tool Teach-In

- (1) Carry out the Item No.3: Line pressure Test. (Refer to Special Function (Teach-In Reference Table [P.22C-362](#).)
- (2) After Teach-In, check which result ("Yes" or "No") is displayed in the Data list No. 101: Normal End. (Refer to Special Function (Teach-In Reference Table [P.22C-362](#).)

Q: Which is displayed, "Yes" or "No"?

"Yes" : Go to Step 4

"No" : DTC No. P181B: Carry out the troubleshooting for the DTC No. P181B: Clutch 1 (Pressure low range out). (Refer to [P.22C-109](#).)

STEP 4. Replace the clutch assembly, and check if the DTC is reset.

- (1) Replace the clutch assembly. (Refer to GROUP 22D –Transaxle [P.22D-6](#).)
- (2) With the engine idle status, operate the shift lever in the following sequence: P →R →D →R →P. (Hold each range for 5 seconds or more.)
- (3) Check the DTC.

Q: Is DTC No.P1876 set?

YES : Replace the transaxle assembly. (Refer to [P.22C-497](#).)

NO : This diagnosis is complete.

DTC P1877: Gear Block 2nd

CAUTION

- If there is any problem in the CAN bus lines, an incorrect diagnostic trouble code may be set. Prior to this diagnosis, diagnose the CAN bus lines.
- Whenever the ECU is replaced, ensure that the CAN bus lines are normal.


DIAGNOSTIC FUNCTION

TC-SST-ECU checks that the gear engagement is normal.

DESCRIPTIONS OF MONITOR METHODS

The engagement of the 2nd gear is determined to be impossible.

LOGIC FLOW CHARTS (Monitor Sequence)

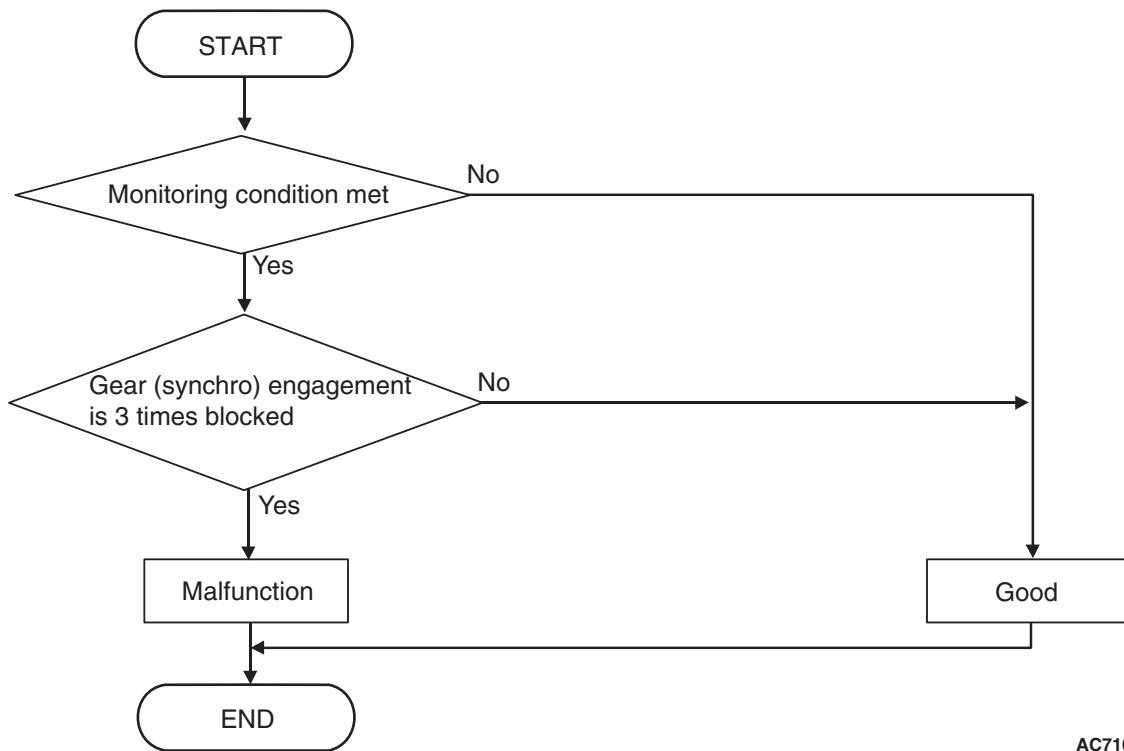

AC710729

DTC SET CONDITIONS

Check Conditions

- Engine speed: 650 r/min or more.
- Time since above engine condition: 1.5 seconds or more.
- Target gear: 2nd gear.

JUDGMENT CRITERIA

- Gear (synchro) engagement: 3 times blocked. (immediately)

MONITOR EXECUTION

- Continuous

MONITOR EXECUTION CONDITIONS (OTHER MONITOR AND SENSOR)

Other Monitor (There is no temporary DTC stored in memory for the item monitored below)

- Not applicable

Sensor (The sensor below is determined to be normal)

- Not applicable

OBD-II DRIVE CYCLE PATTERN

The 2nd gear is engaged.

PROBABLE CAUSES

- Malfunction of TC-SST-ECU
- Malfunction of TC-SST gear
- Malfunction of clutch assembly

DIAGNOSTIC PROCEDURE

Required Special Tools:

- MB991958 Scan Tool (M.U.T.-III Sub Assembly)
 - MB991824: Vehicle Communication Interface (V.C.I.)
 - MB991827 M.U.T.-III USB Cable
 - MB991910 M.U.T.-III Main Harness A

STEP 1. Scan tool CAN bus diagnostics

Using scan tool MB991958, diagnose the CAN bus lines.

Q: Is the check result normal?

YES : Go to Step 2.

NO : Repair the CAN bus lines. (Refer to GROUP 54C – Troubleshooting [P.54C-16.](#)) After repairing the CAN bus line, go to Step 2.

STEP 2. Check whether the DTC is reset.

- (1) Erase the DTC.
- (2) Drive with shifted in the 2nd gear.
- (3) Check that the DTC is reset.

Q: Is DTC No.P1877 set?

YES : Go to Step 3.

NO : Intermittent malfunction. (Refer to GROUP 00 –How to Cope with Intermittent Malfunction [P.00-13.](#))

STEP 3. Scan tool Teach-In

- (1) Carry out the Item No.3: Line pressure Test. (Refer to Special Function (Teach-In Reference Table [P.22C-362.](#)))
- (2) After Teach-In, check which result ("Yes" or "No") is displayed in the Data list No. 101: Normal End. (Refer to Special Function (Teach-In Reference Table [P.22C-362.](#)))

Q: Which is displayed, "Yes" or "No"?

"Yes" : Go to Step 4

"No" : DTC No. P181B: Carry out the troubleshooting for the DTC No. P181B: Clutch 1 (Pressure low range out). (Refer to [P.22C-109.](#))

STEP 4. Replace the clutch assembly, and check if the DTC is reset.

- (1) Replace the clutch assembly. (Refer to GROUP 22D –Transaxle [P.22D-6.](#))
- (2) Drive with shifted in the 2nd gear.
- (3) Check the DTC.

Q: Is DTC No.P1877 set?

YES : Replace the transaxle assembly. (Refer to [P.22C-497.](#))

NO : This diagnosis is complete.

DTC P1878: Gear Block 3rd

CAUTION

- If there is any problem in the CAN bus lines, an incorrect diagnostic trouble code may be set. Prior to this diagnosis, diagnose the CAN bus lines.
- Whenever the ECU is replaced, ensure that the CAN bus lines are normal.


DIAGNOSTIC FUNCTION

TC-SST-ECU checks that the gear engagement is normal.

DESCRIPTIONS OF MONITOR METHODS

The engagement of the 3rd gear is determined to be impossible.

LOGIC FLOW CHARTS (Monitor Sequence)

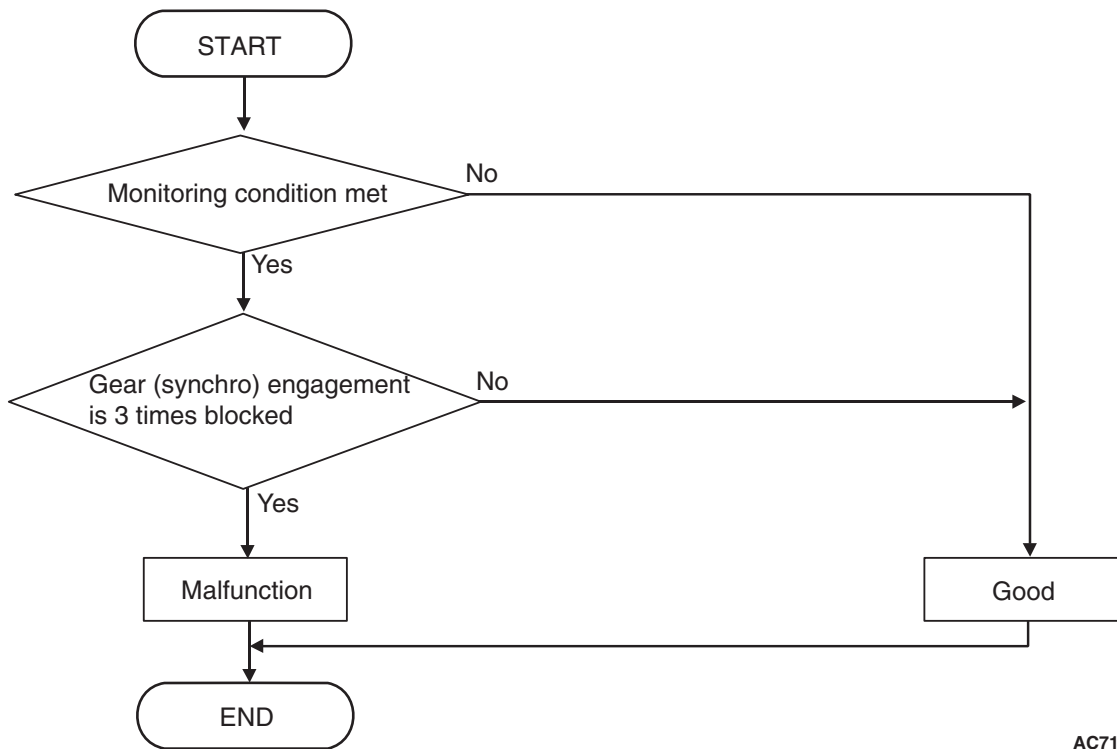

AC710729

DTC SET CONDITIONS

Check Conditions

- Engine speed: 650 r/min or more.
- Time since above engine condition: 1.5 seconds or more.
- Target gear: 3rd gear.

JUDGMENT CRITERIA

- Gear (synchro) engagement: 3 times blocked. (immediately)

MONITOR EXECUTION

- Continuous

MONITOR EXECUTION CONDITIONS (OTHER MONITOR AND SENSOR)

Other Monitor (There is no temporary DTC stored in memory for the item monitored below)

- Not applicable

Sensor (The sensor below is determined to be normal)

- Not applicable

OBD-II DRIVE CYCLE PATTERN

The 3rd gear is engaged.

PROBABLE CAUSES

- Malfunction of TC-SST-ECU
- Malfunction of TC-SST gear
- Malfunction of clutch assembly

DIAGNOSTIC PROCEDURE

Required Special Tools:

- MB991958 Scan Tool (M.U.T.-III Sub Assembly)
 - MB991824: Vehicle Communication Interface (V.C.I.)
 - MB991827 M.U.T.-III USB Cable
 - MB991910 M.U.T.-III Main Harness A

STEP 1. Scan tool CAN bus diagnostics

Using scan tool MB991958, diagnose the CAN bus lines.

Q: Is the check result normal?

YES : Go to Step 2.

NO : Repair the CAN bus lines. (Refer to GROUP 54C – Troubleshooting [P.54C-16.](#)) After repairing the CAN bus line, go to Step 2.

STEP 2. Check whether the DTC is reset.

- (1) Erase the DTC.
- (2) Drive with shifted in the 3rd gear.
- (3) Check that the DTC is reset.

Q: Is DTC No.P1878 set?

YES : Go to Step 3.

NO : Intermittent malfunction. (Refer to GROUP 00 –How to Cope with Intermittent Malfunction [P.00-13.](#))

STEP 3. Scan tool Teach-In

- (1) Carry out the Item No.3: Line pressure Test. (Refer to Special Function (Teach-In Reference Table [P.22C-362.](#)))
- (2) After Teach-In, check which result ("Yes" or "No") is displayed in the Data list No. 101: Normal End. (Refer to Special Function (Teach-In Reference Table [P.22C-362.](#)))

Q: Which is displayed, "Yes" or "No"?

"Yes" : Go to Step 4

"No" : DTC No. P181B: Carry out the troubleshooting for the DTC No. P181B: Clutch 1 (Pressure low range out). (Refer to [P.22C-109.](#))

STEP 4. Replace the clutch assembly, and check if the DTC is reset.

- (1) Replace the clutch assembly. (Refer to GROUP 22D –Transaxle [P.22D-6.](#))
- (2) Drive with shifted in the 3rd gear.
- (3) Check the DTC.

Q: Is DTC No.P1878 set?

YES : Replace the transaxle assembly. (Refer to [P.22C-497.](#))

NO : This diagnosis is complete.

DTC P1879: Gear Block 4th

CAUTION

- If there is any problem in the CAN bus lines, an incorrect diagnostic trouble code may be set. Prior to this diagnosis, diagnose the CAN bus lines.
- Whenever the ECU is replaced, ensure that the CAN bus lines are normal.


DIAGNOSTIC FUNCTION

TC-SST-ECU checks that the gear engagement is normal.

DESCRIPTIONS OF MONITOR METHODS

The engagement of the 4th gear is determined to be impossible.

LOGIC FLOW CHARTS (Monitor Sequence)

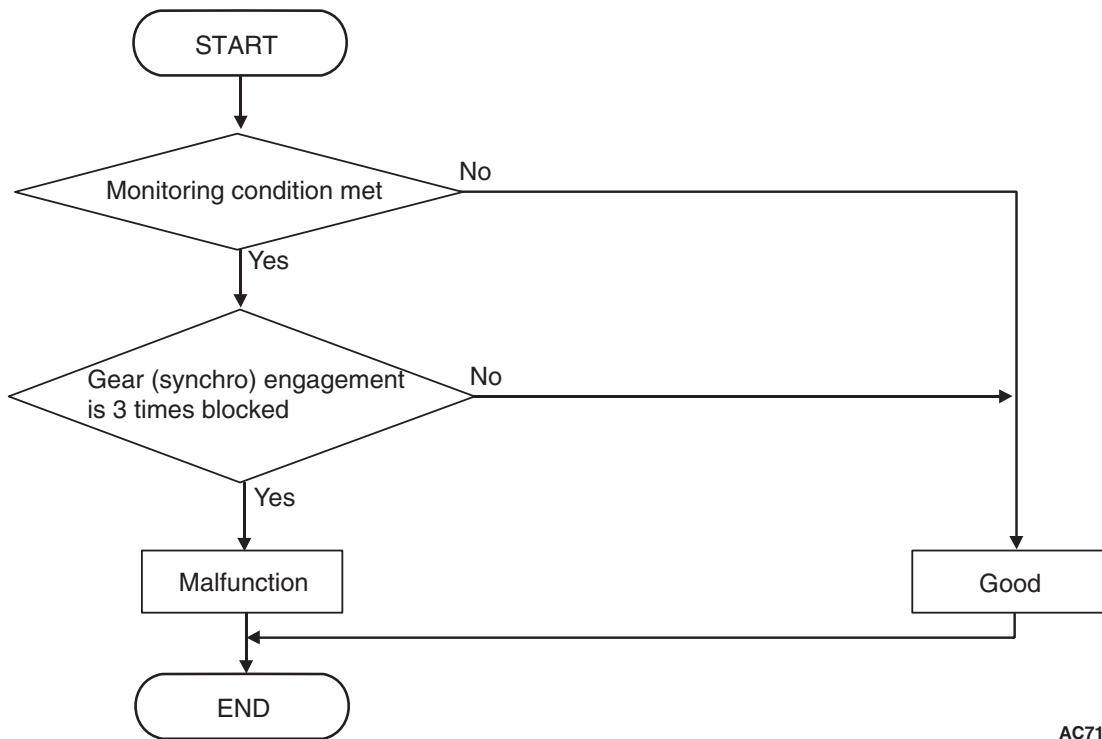

AC710729

DTC SET CONDITIONS

Check Conditions

- Engine speed: 650 r/min or more.
- Time since above engine condition: 1.5 seconds or more.
- Target gear: 4th gear.

JUDGMENT CRITERIA

- Gear (synchro) engagement: 3 times blocked. (immediately)

MONITOR EXECUTION

- Continuous

MONITOR EXECUTION CONDITIONS (OTHER MONITOR AND SENSOR)

Other Monitor (There is no temporary DTC stored in memory for the item monitored below)

- Not applicable

Sensor (The sensor below is determined to be normal)

- Not applicable

OBD-II DRIVE CYCLE PATTERN

The 4th gear is engaged.

PROBABLE CAUSES

- Malfunction of TC-SST-ECU
- Malfunction of TC-SST gear
- Malfunction of clutch assembly

DIAGNOSTIC PROCEDURE

Required Special Tools:

- MB991958 Scan Tool (M.U.T.-III Sub Assembly)
 - MB991824: Vehicle Communication Interface (V.C.I.)
 - MB991827 M.U.T.-III USB Cable
 - MB991910 M.U.T.-III Main Harness A

STEP 1. Scan tool CAN bus diagnostics

Using scan tool MB991958, diagnose the CAN bus lines.

Q: Is the check result normal?

YES : Go to Step 2.

NO : Repair the CAN bus lines. (Refer to GROUP 54C – Troubleshooting [P.54C-16.](#)) After repairing the CAN bus line, go to Step 2.

STEP 2. Check whether the DTC is reset.

- (1) Erase the DTC.
- (2) Drive with shifted in the 4th gear.
- (3) Check that the DTC is reset.

Q: Is DTC No.P1879 set?

YES : Go to Step 3.

NO : Intermittent malfunction. (Refer to GROUP 00 –How to Cope with Intermittent Malfunction [P.00-13.](#))

STEP 3. Scan tool Teach-In

- (1) Carry out the Item No.3: Line pressure Test. (Refer to Special Function (Teach-In Reference Table [P.22C-362.](#))
- (2) After Teach-In, check which result ("Yes" or "No") is displayed in the Data list No. 101: Normal End. (Refer to Special Function (Teach-In Reference Table [P.22C-362.](#))

Q: Which is displayed, "Yes" or "No"?

"Yes" : Go to Step 4

"No" : DTC No. P181B: Carry out the troubleshooting for the DTC No. P181B: Clutch 1 (Pressure low range out). (Refer to [P.22C-109.](#))

STEP 4. Replace the clutch assembly, and check if the DTC is reset.

- (1) Replace the clutch assembly. (Refer to GROUP 22D –Transaxle [P.22D-6.](#))
- (2) Drive with shifted in the 4th gear.
- (3) Check the DTC.

Q: Is DTC No.P1879 set?

YES : Replace the transaxle assembly. (Refer to [P.22C-497.](#))

NO : This diagnosis is complete.

DTC P187A: Gear Block 5th

CAUTION

- If there is any problem in the CAN bus lines, an incorrect diagnostic trouble code may be set. Prior to this diagnosis, diagnose the CAN bus lines.
- Whenever the ECU is replaced, ensure that the CAN bus lines are normal.


DIAGNOSTIC FUNCTION

TC-SST-ECU checks that the gear engagement is normal.

DESCRIPTIONS OF MONITOR METHODS

The engagement of the 5th gear is determined to be impossible.

LOGIC FLOW CHARTS (Monitor Sequence)

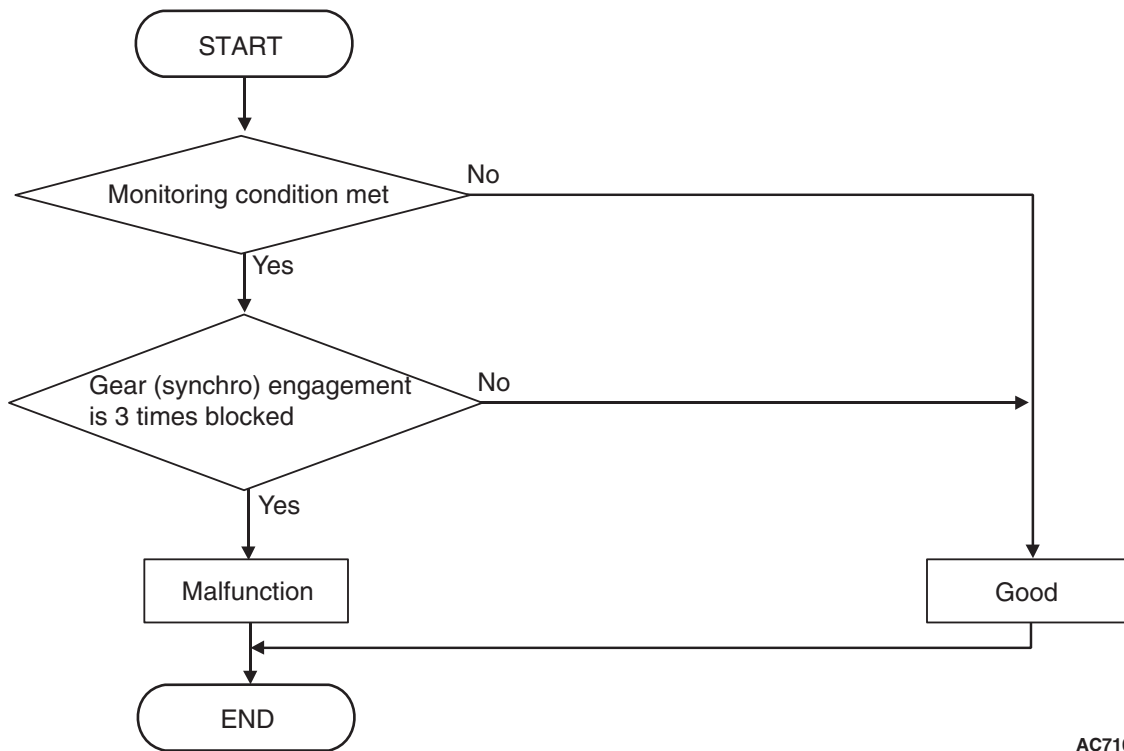

AC710729

DTC SET CONDITIONS

Check Conditions

- Engine speed: 650 r/min or more.
- Time since above engine condition: 1.5 seconds or more.
- Target gear: 5th gear.

JUDGMENT CRITERIA

- Gear (synchro) engagement: 3 times blocked. (immediately)

MONITOR EXECUTION

- Continuous

MONITOR EXECUTION CONDITIONS (OTHER MONITOR AND SENSOR)

Other Monitor (There is no temporary DTC stored in memory for the item monitored below)

- Not applicable

Sensor (The sensor below is determined to be normal)

- Not applicable

OBD-II DRIVE CYCLE PATTERN

The 5th gear is engaged.

PROBABLE CAUSES

- Malfunction of TC-SST-ECU
- Malfunction of TC-SST gear
- Malfunction of clutch assembly

DIAGNOSTIC PROCEDURE

Required Special Tools:

- MB991958 Scan Tool (M.U.T.-III Sub Assembly)
 - MB991824: Vehicle Communication Interface (V.C.I.)
 - MB991827 M.U.T.-III USB Cable
 - MB991910 M.U.T.-III Main Harness A

STEP 1. Scan tool CAN bus diagnostics

Using scan tool MB991958, diagnose the CAN bus lines.

Q: Is the check result normal?

YES : Go to Step 2.

NO : Repair the CAN bus lines. (Refer to GROUP 54C – Troubleshooting [P.54C-16.](#)) After repairing the CAN bus line, go to Step 2.

STEP 2. Check whether the DTC is reset.

- (1) Erase the DTC.
- (2) Drive with shifted in the 5th gear.
- (3) Check that the DTC is reset.

Q: Is DTC No.P187A set?

YES : Go to Step 3.

NO : Intermittent malfunction. (Refer to GROUP 00 –How to Cope with Intermittent Malfunction [P.00-13.](#))

STEP 3. Scan tool Teach-In

- (1) Carry out the Item No.3: Line pressure Test. (Refer to Special Function (Teach-In Reference Table [P.22C-362.](#))
- (2) After Teach-In, check which result ("Yes" or "No") is displayed in the Data list No. 101: Normal End. (Refer to Special Function (Teach-In Reference Table [P.22C-362.](#))

Q: Which is displayed, "Yes" or "No"?

"Yes" : Go to Step 4

"No" : DTC No. P181B: Carry out the troubleshooting for the DTC No. P181B: Clutch 1 (Pressure low range out). (Refer to [P.22C-109.](#))

STEP 4. Replace the clutch assembly, and check if the DTC is reset.

- (1) Replace the clutch assembly. (Refer to GROUP 22D –Transaxle [P.22D-6.](#))
- (2) Drive with shifted in the 5th gear.
- (3) Check the DTC.

Q: Is DTC No.P187A set?

YES : Replace the transaxle assembly. (Refer to [P.22C-497.](#))

NO : This diagnosis is complete.

DTC P187B: Gear Block 6th

CAUTION

- If there is any problem in the CAN bus lines, an incorrect diagnostic trouble code may be set. Prior to this diagnosis, diagnose the CAN bus lines.
- Whenever the ECU is replaced, ensure that the CAN bus lines are normal.


DIAGNOSTIC FUNCTION

TC-SST-ECU checks that the gear engagement is normal.

DESCRIPTIONS OF MONITOR METHODS

The engagement of the 6th gear is determined to be impossible.

LOGIC FLOW CHARTS (Monitor Sequence)

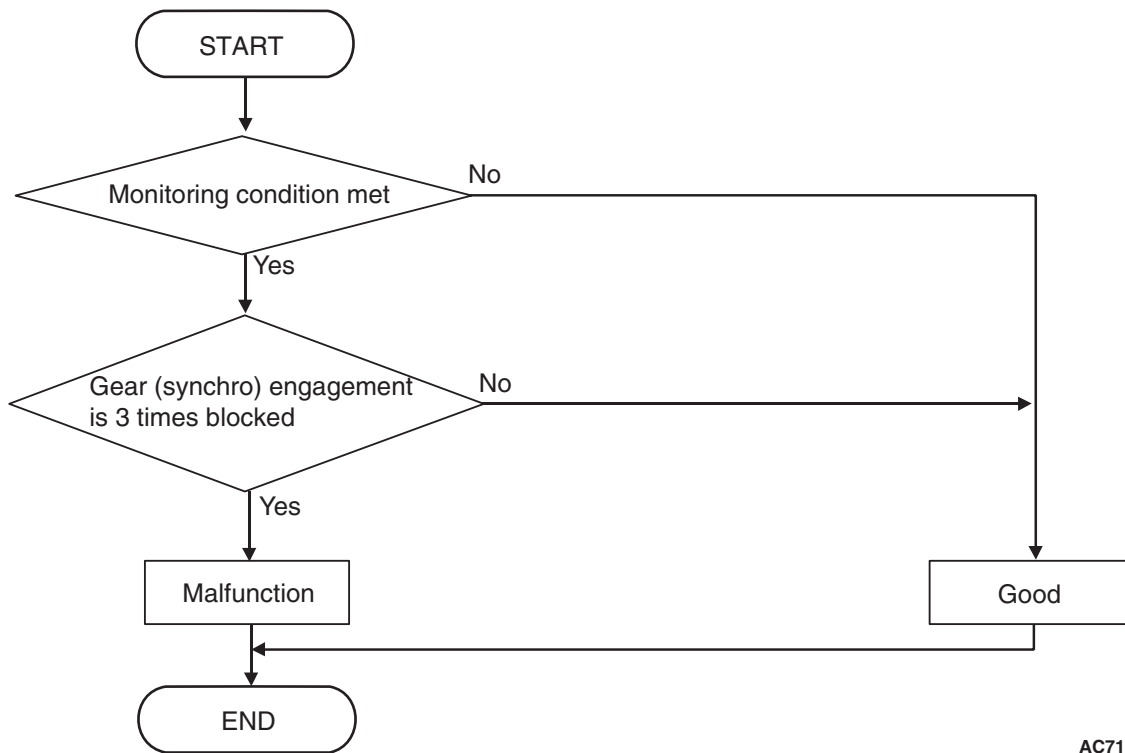

AC710729

DTC SET CONDITIONS

Check Conditions

- Engine speed: 650 r/min or more.
- Time since above engine condition: 1.5 seconds or more.
- Target gear: 6th gear.

JUDGMENT CRITERIA

- Gear (synchro) engagement: 3 times blocked. (immediately)

MONITOR EXECUTION

- Continuous

MONITOR EXECUTION CONDITIONS (OTHER MONITOR AND SENSOR)

Other Monitor (There is no temporary DTC stored in memory for the item monitored below)

- Not applicable

Sensor (The sensor below is determined to be normal)

- Not applicable

OBD-II DRIVE CYCLE PATTERN

The 6th gear is engaged.

PROBABLE CAUSES

- Malfunction of TC-SST-ECU
- Malfunction of TC-SST gear
- Malfunction of clutch assembly

DIAGNOSTIC PROCEDURE

Required Special Tools:

- MB991958 Scan Tool (M.U.T.-III Sub Assembly)
 - MB991824: Vehicle Communication Interface (V.C.I.)
 - MB991827 M.U.T.-III USB Cable
 - MB991910 M.U.T.-III Main Harness A

STEP 1. Scan tool CAN bus diagnostics

Using scan tool MB991958, diagnose the CAN bus lines.

Q: Is the check result normal?

YES : Go to Step 2.

NO : Repair the CAN bus lines. (Refer to GROUP 54C – Troubleshooting [P.54C-16.](#)) After repairing the CAN bus line, go to Step 2.

STEP 2. Check whether the DTC is reset.

- (1) Erase the DTC.
- (2) Drive with shifted in the 6th gear.
- (3) Check that the DTC is reset.

Q: Is DTC No.P187B set?

YES : Go to Step 3.

NO : Intermittent malfunction. (Refer to GROUP 00 –How to Cope with Intermittent Malfunction [P.00-13.](#))

STEP 3. Scan tool Teach-In

- (1) Carry out the Item No.3: Line pressure Test. (Refer to Special Function (Teach-In Reference Table [P.22C-362.](#)))
- (2) After Teach-In, check which result ("Yes" or "No") is displayed in the Data list No. 101: Normal End. (Refer to Special Function (Teach-In Reference Table [P.22C-362.](#)))

Q: Which is displayed, "Yes" or "No"?

"Yes" : Go to Step 4

"No" : DTC No. P181B: Carry out the troubleshooting for the DTC No. P181B: Clutch 1 (Pressure low range out). (Refer to [P.22C-109.](#))

STEP 4. Replace the clutch assembly, and check if the DTC is reset.

- (1) Replace the clutch assembly. (Refer to GROUP 22D –Transaxle [P.22D-6.](#))
- (2) Drive with shifted in the 6th gear.
- (3) Check the DTC.

Q: Is DTC No.P187B set?

YES : Replace the transaxle assembly. (Refer to [P.22C-497.](#))

NO : This diagnosis is complete.

DTC P187C: Gear Block Reverse**⚠ CAUTION**

- If there is any problem in the CAN bus lines, an incorrect diagnostic trouble code may be set. Prior to this diagnosis, diagnose the CAN bus lines.
- Whenever the ECU is replaced, ensure that the CAN bus lines are normal.

DIAGNOSTIC FUNCTION

TC-SST-ECU checks that the gear engagement is normal.

DESCRIPTIONS OF MONITOR METHODS

The engagement of the reverse gear is determined to be impossible.

PROBABLE CAUSES

- Malfunction of TC-SST-ECU
- Malfunction of TC-SST gear
- Malfunction of clutch assembly

DIAGNOSTIC PROCEDURE**Required Special Tools:**

- MB991958 Scan Tool (M.U.T.-III Sub Assembly)
 - MB991824: Vehicle Communication Interface (V.C.I.)
 - MB991827 M.U.T.-III USB Cable
 - MB991910 M.U.T.-III Main Harness A

STEP 1. Scan tool CAN bus diagnostics

Using scan tool MB991958, diagnose the CAN bus lines.

Q: Is the check result normal?

YES : Go to Step 2.

NO : Repair the CAN bus lines. (Refer to GROUP 54C – Troubleshooting [P.54C-16](#).) After repairing the CAN bus line, go to Step 2.

STEP 2. Check whether the DTC is reset.

(1) Erase the DTC.

(2) With the engine idle status, operate the shift lever in the following sequence: P →R →D →R →P. (Hold each range for 5 seconds or more.)

(3) Check that the DTC is reset.

Q: Is DTC No.P187C set?

YES : Go to Step 3.

NO : Intermittent malfunction. (Refer to GROUP 00 –How to Cope with Intermittent Malfunction [P.00-13](#).)

STEP 3. Scan tool Teach-In

(1) Carry out the Item No.3: Line pressure Test. (Refer to Special Function (Teach-In Reference Table [P.22C-362](#).)

(2) After Teach-In, check which result ("Yes" or "No") is displayed in the Data list No. 101: Normal End. (Refer to Special Function (Teach-In Reference Table [P.22C-362](#).)

Q: Which is displayed, "Yes" or "No"?

"Yes" : Go to Step 4

"No" : DTC No. P181B: Carry out the troubleshooting for the DTC No. P181B: Clutch 1 (Pressure low range out). (Refer to [P.22C-109](#).)

STEP 4. Replace the clutch assembly, and check if the DTC is reset.

- (1) Replace the clutch assembly. (Refer to GROUP 22D –Transaxle [P.22D-6.](#))
- (2) With the engine idle status, operate the shift lever in the following sequence: P →R →D →R →P. (Hold each range for 5 seconds or more.)
- (3) Check the DTC.

Q: Is DTC No.P187C set?

YES : Replace the transaxle assembly. (Refer to [P.22C-497.](#))

NO : This diagnosis is complete.

DTC P1880: EOL Mode Active

⚠ CAUTION

- If there is any problem in the CAN bus lines, an incorrect diagnostic trouble code may be set. Prior to this diagnosis, diagnose the CAN bus lines.
- Whenever the ECU is replaced, ensure that the CAN bus lines are normal.

DIAGNOSTIC FUNCTION

TC-SST-ECU checks that the TC-SST setting mode is normal.

DESCRIPTIONS OF MONITOR METHODS

The TC-SST setting mode is determined to be EOL (end of line) mode.

PROBABLE CAUSES

- The setting mode changeover mistake when TC-SST is shipped.
- Malfunction of TC-SST-ECU

DIAGNOSTIC PROCEDURE

Required Special Tools:

- MB991958 Scan Tool (M.U.T.-III Sub Assembly)
 - MB991824: Vehicle Communication Interface (V.C.I.)
 - MB991827 M.U.T.-III USB Cable
 - MB991910 M.U.T.-III Main Harness A

STEP 1. Scan tool CAN bus diagnostics

Using scan tool MB991958, diagnose the CAN bus lines.

Q: Is the check result normal?

YES : Go to Step 2.

NO : Repair the CAN bus lines. (Refer to GROUP 54C – Troubleshooting [P.54C-16.](#)) After repairing the CAN bus line, go to Step 2.

STEP 2. Check whether the DTC is reset.

Q: Is DTC No. P1880 set?

YES : Replace the mechatronic assembly. (Refer to [P.22C-505.](#))

NO : Intermittent malfunction. (Refer to GROUP 00 –How to Cope with Intermittent Malfunction [P.00-13.](#))

DTC P1881: Twin clutch SST control mode switch system (Malfunction)

⚠ CAUTION

- If there is any problem in the CAN bus lines, an incorrect diagnostic trouble code may be set. Prior to this diagnosis, diagnose the CAN bus lines.
- Whenever the ECU is replaced, ensure that the CAN bus lines are normal.

DIAGNOSTIC FUNCTION

TC-SST-ECU checks that the twin clutch SST control mode switch is normal.

DESCRIPTIONS OF MONITOR METHODS

"+" and "-" signals of the twin clutch SST control mode switch is determined to be stuck on.

PROBABLE CAUSES

- Twin clutch SST control mode switch malfunction
- Malfunction of TC-SST-ECU

DIAGNOSTIC PROCEDURE**Required Special Tools:**

- MB991958 Scan Tool (M.U.T.-III Sub Assembly)
 - MB991824: Vehicle Communication Interface (V.C.I.)
 - MB991827 M.U.T.-III USB Cable
 - MB991910 M.U.T.-III Main Harness A

STEP 1. Scan tool CAN bus diagnostics

Using scan tool MB991958, diagnose the CAN bus lines.

Q: Is the check result normal?

YES : Go to Step 2.

NO : Repair the CAN bus lines. (Refer to GROUP 54C – Troubleshooting [P.54C-16.](#)) After repairing the CAN bus line, go to Step 2.

STEP 2. Check whether the DTC is reset.

After 5 or more seconds have passed with the engine idle status, check that the DTC is reset.

Q: Is DTC No. P1881 set?

YES : Go to Step 3.

NO : Intermittent malfunction. (Refer to GROUP 00 –How to Cope with Intermittent Malfunction [P.00-13.](#))

STEP 3. Twin clutch SST control mode switch check

Refer to [P.22C-519.](#)

Q: Is the check result normal?

YES : Go to Step 4.

NO : Replace the twin clutch SST control mode switch.(Refer to [P.22C-519.](#))

STEP 4. Shift lever assembly replacement

- (1) Replace the shift lever assembly. (Refer to [P.22C-488.](#))
- (2) Check if the DTC is set.

Q: Is DTC No. P1881 set?

YES : Replace the mechatronic assembly. (Refer to [P.22C-505.](#))

NO : Intermittent malfunction. (Refer to GROUP 00 –How to Cope with Intermittent Malfunction [P.00-13.](#))

DTC P1885: SHIFT FORK 1 JUMP OUT

⚠ CAUTION

- If there is any problem in the CAN bus lines, an incorrect diagnostic trouble code may be set. Prior to this diagnosis, diagnose the CAN bus lines.
- Whenever the ECU is replaced, ensure that the CAN bus lines are normal.

DIAGNOSTIC FUNCTION

TC-SST-ECU checks that the movement of the shift fork 1 is normal.

DESCRIPTIONS OF MONITOR METHODS

The movement of the shift fork 1 is determined to be abnormal.

PROBABLE CAUSES

- Malfunction of TC-SST-ECU
- Malfunction of TC-SST shift fork
- Malfunction of valve body

DIAGNOSTIC PROCEDURE**Required Special Tools:**

- MB991958 Scan Tool (M.U.T.-III Sub Assembly)
 - MB991824: Vehicle Communication Interface (V.C.I.)
 - MB991827 M.U.T.-III USB Cable
 - MB991910 M.U.T.-III Main Harness A

STEP 1. Scan tool CAN bus diagnostics

Using scan tool MB991958, diagnose the CAN bus lines.

Q: Is the check result normal?

YES : Go to Step 2.

NO : Repair the CAN bus lines. (Refer to GROUP 54C – Troubleshooting [P.54C-16.](#)) After repairing the CAN bus line, go to Step 2.

STEP 2. Check whether the DTC is reset.

- (1) Erase the DTC.
- (2) Drive with shifted in the 1st gear and reverse.
- (3) Check that the DTC is reset.

Q: Is DTC No.P1885 set?

YES : Go to Step 3.

NO : Intermittent malfunction. (Refer to GROUP 00 –How to Cope with Intermittent Malfunction [P.00-13.](#))

STEP 3. Replace the mechatronic assembly, and check if the DTC is reset.

- (1) Replace the mechatronic assembly. (Refer to [P.22C-505.](#))
- (2) Drive with shifted in the 1st gear and reverse.
- (3) Check the DTC.

Q: Is DTC No.P1885 set?

YES : Replace the transaxle assembly. (Refer to [P.22C-497.](#))

NO : This diagnosis is complete.

DTC P1886: SHIFT FORK 2 JUMP OUT**CAUTION**

- If there is any problem in the CAN bus lines, an incorrect diagnostic trouble code may be set. Prior to this diagnosis, diagnose the CAN bus lines.
- Whenever the ECU is replaced, ensure that the CAN bus lines are normal.

DIAGNOSTIC FUNCTION

TC-SST-ECU checks that the movement of the shift fork 2 is normal.

DESCRIPTIONS OF MONITOR METHODS

The movement of the shift fork 2 is determined to be abnormal.

PROBABLE CAUSES

- Malfunction of TC-SST-ECU
- Malfunction of TC-SST shift fork
- Malfunction of valve body

DIAGNOSTIC PROCEDURE**Required Special Tools:**

- MB991958 Scan Tool (M.U.T.-III Sub Assembly)
 - MB991824: Vehicle Communication Interface (V.C.I.)
 - MB991827 M.U.T.-III USB Cable
 - MB991910 M.U.T.-III Main Harness A

STEP 1. Scan tool CAN bus diagnostics

Using scan tool MB991958, diagnose the CAN bus lines.

Q: Is the check result normal?

YES : Go to Step 2.

NO : Repair the CAN bus lines. (Refer to GROUP 54C – Troubleshooting [P.54C-16.](#)) After repairing the CAN bus line, go to Step 2.

STEP 2. Check whether the DTC is reset.

- (1) Erase the DTC.
- (2) Drive with shifted in the 3rd gear and 5th gear.
- (3) Check that the DTC is reset.

Q: Is DTC No.P1886 set?

YES : Go to Step 3.

NO : Intermittent malfunction. (Refer to GROUP 00 –How to Cope with Intermittent Malfunction [P.00-13.](#))

STEP 3. Replace the mechatronic assembly, and check if the DTC is reset.

- (1) Replace the mechatronic assembly. (Refer to [P.22C-505.](#))
- (2) Drive with shifted in the 3rd gear and 5th gear.
- (3) Check the DTC.

Q: Is DTC No.P1886 set?

YES : Replace the transaxle assembly. (Refer to [P.22C-497.](#))

NO : This diagnosis is complete.

DTC P1887: SHIFT FORK 3 JUMP OUT

⚠ CAUTION

- If there is any problem in the CAN bus lines, an incorrect diagnostic trouble code may be set. Prior to this diagnosis, diagnose the CAN bus lines.
- Whenever the ECU is replaced, ensure that the CAN bus lines are normal.

DIAGNOSTIC FUNCTION

TC-SST-ECU checks that the movement of the shift fork 3 is normal.

DESCRIPTIONS OF MONITOR METHODS

The movement of the shift fork 3 is determined to be abnormal.

PROBABLE CAUSES

- Malfunction of TC-SST-ECU
- Malfunction of TC-SST shift fork
- Malfunction of valve body

DIAGNOSTIC PROCEDURE

Required Special Tools:

- MB991958 Scan Tool (M.U.T.-III Sub Assembly)
 - MB991824: Vehicle Communication Interface (V.C.I.)
 - MB991827 M.U.T.-III USB Cable
 - MB991910 M.U.T.-III Main Harness A

STEP 1. Scan tool CAN bus diagnostics

Using scan tool MB991958, diagnose the CAN bus lines.

Q: Is the check result normal?

YES : Go to Step 2.

NO : Repair the CAN bus lines. (Refer to GROUP 54C – Troubleshooting [P.54C-16.](#)) After repairing the CAN bus line, go to Step 2.

STEP 2. Check whether the DTC is reset.

- (1) Erase the DTC.
- (2) Drive with shifted in the 6th gear.
- (3) Check that the DTC is reset.

Q: Is DTC No.P1887 set?

YES : Go to Step 3.

NO : Intermittent malfunction. (Refer to GROUP 00 –How to Cope with Intermittent Malfunction [P.00-13.](#))

STEP 3. Replace the mechatronic assembly, and check if the DTC is reset.

- (1) Replace the mechatronic assembly. (Refer to [P.22C-505.](#))
- (2) Drive with shifted in the 6th gear.
- (3) Check the DTC.

Q: Is DTC No.P1887 set?

YES : Replace the transaxle assembly. (Refer to [P.22C-497.](#))

NO : This diagnosis is complete.

DTC P1888: SHIFT FORK 4 JUMP OUT**CAUTION**

- If there is any problem in the CAN bus lines, an incorrect diagnostic trouble code may be set. Prior to this diagnosis, diagnose the CAN bus lines.
- Whenever the ECU is replaced, ensure that the CAN bus lines are normal.

DIAGNOSTIC FUNCTION

TC-SST-ECU checks that the movement of the shift fork 4 is normal.

DESCRIPTIONS OF MONITOR METHODS

The movement of the shift fork 4 is determined to be abnormal.

PROBABLE CAUSES

- Malfunction of TC-SST-ECU
- Malfunction of TC-SST shift fork
- Malfunction of valve body

DIAGNOSTIC PROCEDURE**Required Special Tools:**

- MB991958 Scan Tool (M.U.T.-III Sub Assembly)
 - MB991824: Vehicle Communication Interface (V.C.I.)
 - MB991827 M.U.T.-III USB Cable
 - MB991910 M.U.T.-III Main Harness A

STEP 1. Scan tool CAN bus diagnostics

Using scan tool MB991958, diagnose the CAN bus lines.

Q: Is the check result normal?

YES : Go to Step 2.

NO : Repair the CAN bus lines. (Refer to GROUP 54C – Troubleshooting [P.54C-16.](#)) After repairing the CAN bus line, go to Step 2.

STEP 2. Check whether the DTC is reset.

- (1) Erase the DTC.
- (2) Drive with shifted in the 2nd gear and 4th gear.
- (3) Check that the DTC is reset.

Q: Is DTC No.P1888 set?

YES : Go to Step 3.

NO : Intermittent malfunction. (Refer to GROUP 00 –How to Cope with Intermittent Malfunction [P.00-13.](#))

STEP 3. Replace the mechatronic assembly, and check if the DTC is reset.

- (1) Replace the mechatronic assembly. (Refer to [P.22C-505.](#))
- (2) Drive with shifted in the 2nd gear and 4th gear.
- (3) Check the DTC.

Q: Is DTC No.P1888 set?

YES : Replace the transaxle assembly. (Refer to [P.22C-497.](#))

NO : This diagnosis is complete.

DTC P1890 TEACH-IN NOT COMPLETED

CAUTION

- If there is any problem in the CAN bus lines, an incorrect diagnostic trouble code may be set. Prior to this diagnosis, diagnose the CAN bus lines.
- Whenever the ECU is replaced, ensure that the CAN bus lines are normal.

DIAGNOSTIC FUNCTION

TC-SST-ECU checks that Teach-In is completed normally.

DESCRIPTIONS OF MONITOR METHODS

It is judged that Teach-In is not completed normally.

PROBABLE CAUSES

- Teach-In not completed
- Malfunction of TC-SST-ECU
- Malfunction of clutch assembly

DIAGNOSTIC PROCEDURE

Required Special Tools:

- MB991958 Scan Tool (M.U.T.-III Sub Assembly)
 - MB991824: Vehicle Communication Interface (V.C.I.)
 - MB991827 M.U.T.-III USB Cable
 - MB991910 M.U.T.-III Main Harness A

STEP 1. Scan tool CAN bus diagnostics

Using scan tool MB991958, diagnose the CAN bus lines.

Q: Is the check result normal?

YES : Go to Step 2.

NO : Repair the CAN bus lines. (Refer to GROUP 54C – Troubleshooting [P.54C-16.](#)) After repairing the CAN bus line, go to Step 2.

STEP 2. Check whether the DTC is reset.

- (1) Erase the DTC.
- (2) After 10 or more seconds have passed with the ignition switch ON position, check that the DTC is reset.

Q: Is DTC No.P1890 set?

YES : Go to Step 3.

NO : Intermittent malfunction. (Refer to GROUP 00 –How to Cope with Intermittent Malfunction [P.00-13.](#))

STEP 3. Scan tool Teach-In

- (1) Perform Teach-In (the same item as the mechatronic assembly replacement).(Refer to [P.22C-8.](#))
- (2) After 10 or more seconds have passed with the ignition switch ON position, check that the DTC is reset.

Q: Is DTC No.P1890 set?**YES** : Go to Step 4.**NO** : This diagnosis is complete.**STEP 4. Replace the mechatronic assembly, and check if the DTC is reset.**

- (1) Replace the mechatronic assembly. (Refer to [P.22C-505.](#))
- (2) After 10 or more seconds have passed with the ignition switch ON position, check that the DTC is reset.

Q: Is DTC No.P1890 set?**YES** : Go to Step 5.**NO** : This diagnosis is complete.**STEP 5. Replace the clutch assembly, and check if the DTC is reset.**

- (1) Replace the clutch assembly. (Refer to GROUP 22D – Transaxle [P.22D-6.](#))
- (2) After 10 or more seconds have passed with the ignition switch ON position, check that the DTC is reset.

Q: Is DTC No. P1890 set?**YES** : Replace the transaxle assembly. (Refer to [P.22C-497.](#))**NO** : This diagnosis is complete.**DTC P2718: Clutch/Shift Pressure Solenoid 1 System (Open circuit)****⚠ CAUTION**

- If there is any problem in the CAN bus lines, an incorrect diagnostic trouble code may be set. Prior to this diagnosis, diagnose the CAN bus lines.
- Whenever the ECU is replaced, ensure that the CAN bus lines are normal.

DIAGNOSTIC FUNCTION

TC-SST-ECU checks that the clutch/shift pressure solenoid 1 circuit is normal.

DESCRIPTIONS OF MONITOR METHODS

The clutch/shift pressure solenoid 1 circuit is determined to be open.

MONITOR EXECUTION

- Continuous

MONITOR EXECUTION CONDITIONS (OTHER MONITOR AND SENSOR)


Other Monitor (There is no temporary DTC stored in memory for the item monitored below)

- P0841: Clutch 1 pressure sensor system (Poor performance)
- P0842: Clutch 1 pressure sensor system (Output low range out)
- P0843: Clutch 1 pressure sensor system (Output high range out)
- P2733: Clutch/shift switching solenoid 1, spool stuck
- P2736: Clutch/shift switching solenoid 1 system (Open circuit)
- P2738: Clutch/shift switching solenoid 1 system (Short to ground)
- P2739: Clutch/shift switching solenoid 1 system (Short to power supply)
- P181B: Clutch 1 (Pressure low range out)
- P181C: Clutch 1 (Pressure high range out)

Sensor (The sensor below is determined to be normal)

- Clutch 1 pressure sensor
- Clutch/shift switching solenoid 1

LOGIC FLOW CHARTS (Monitor Sequence)

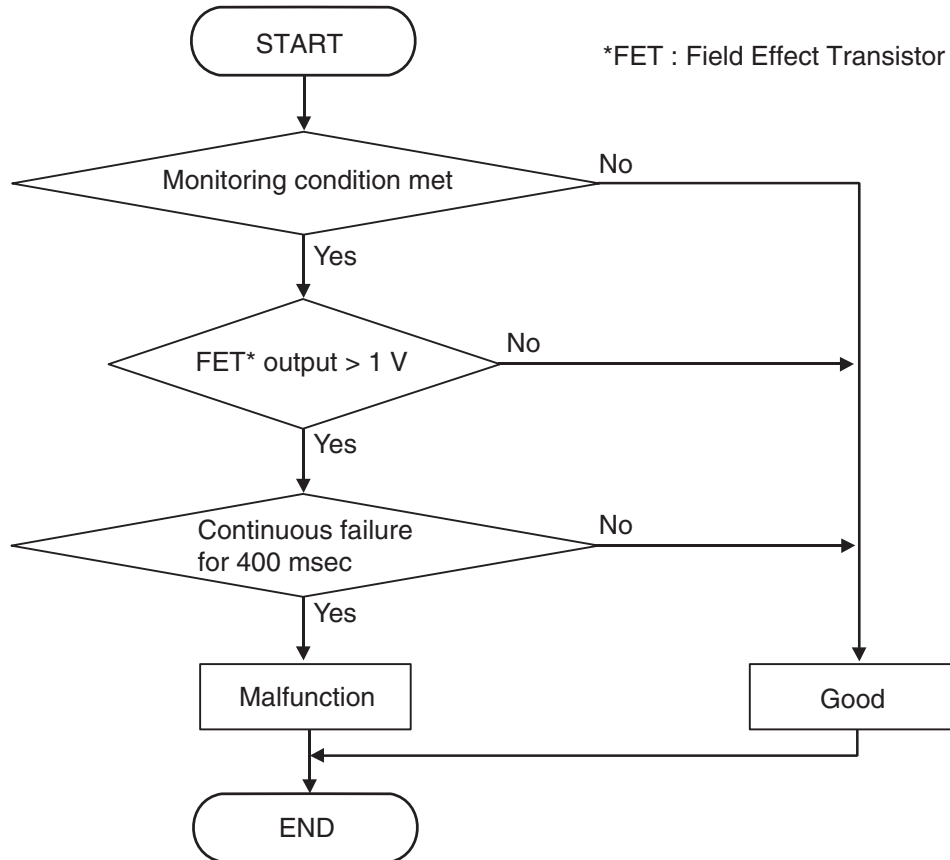

AC710656

DTC SET CONDITIONS

Check Conditions

- Voltage of battery: 8 V or more.
- Voltage of battery: 16.5 V or less.

JUDGMENT CRITERIA

- FET (Field Effect Transistor) output: 1 V or more. (400 millisecond)

OBD-II DRIVE CYCLE PATTERN

The FET channel output remains 1 V or less for 400 milliseconds.

PROBABLE CAUSES

- Malfunction of TC-SST-ECU
- Malfunction of clutch/shift pressure solenoid 1

DIAGNOSTIC PROCEDURE

Required Special Tools:

- MB991958 Scan Tool (M.U.T.-III Sub Assembly)
 - MB991824: Vehicle Communication Interface (V.C.I.)
 - MB991827 M.U.T.-III USB Cable
 - MB991910 M.U.T.-III Main Harness A

STEP 1. Scan tool CAN bus diagnostics

Using scan tool MB991958, diagnose the CAN bus lines.

Q: Is the check result normal?

YES : Go to Step 2.

NO : Repair the CAN bus lines. (Refer to GROUP 54C – Troubleshooting [P.54C-16.](#)) After repairing the CAN bus line, go to Step 2.

STEP 2. Check whether the DTC is reset.**Q: Is DTC No. P2718 set?**

YES : Replace the mechatronic assembly. (Refer to [P.22C-505.](#))

NO : Intermittent malfunction. (Refer to GROUP 00 –How to Cope with Intermittent Malfunction [P.00-13.](#))

DTC P2719: Clutch/Shift Pressure Solenoid 1 System (Overcurrent)**⚠ CAUTION**

- If there is any problem in the CAN bus lines, an incorrect diagnostic trouble code may be set. Prior to this diagnosis, diagnose the CAN bus lines.
- Whenever the ECU is replaced, ensure that the CAN bus lines are normal.

DIAGNOSTIC FUNCTION

TC-SST-ECU checks that the clutch/shift pressure solenoid 1 circuit is normal.

DESCRIPTIONS OF MONITOR METHODS

The supply current to the clutch/shift pressure solenoid 1 is determined to be overcurrent.

MONITOR EXECUTION

- Continuous

**MONITOR EXECUTION CONDITIONS
(OTHER MONITOR AND SENSOR)**


Other Monitor (There is no temporary DTC stored in memory for the item monitored below)

- P0841: Clutch 1 pressure sensor system (Poor performance)
- P0842: Clutch 1 pressure sensor system (Output low range out)
- P0843: Clutch 1 pressure sensor system (Output high range out)
- P2733: Clutch/shift switching solenoid 1, spool stuck
- P2736: Clutch/shift switching solenoid 1 system (Open circuit)
- P2738: Clutch/shift switching solenoid 1 system (Short to ground)
- P2739: Clutch/shift switching solenoid 1 system (Short to power supply)
- P181B: Clutch 1 (Pressure low range out)
- P181C: Clutch 1 (Pressure high range out)

Sensor (The sensor below is determined to be normal)

- Clutch 1 pressure sensor
- Clutch/shift switching solenoid 1

LOGIC FLOW CHARTS (Monitor Sequence)

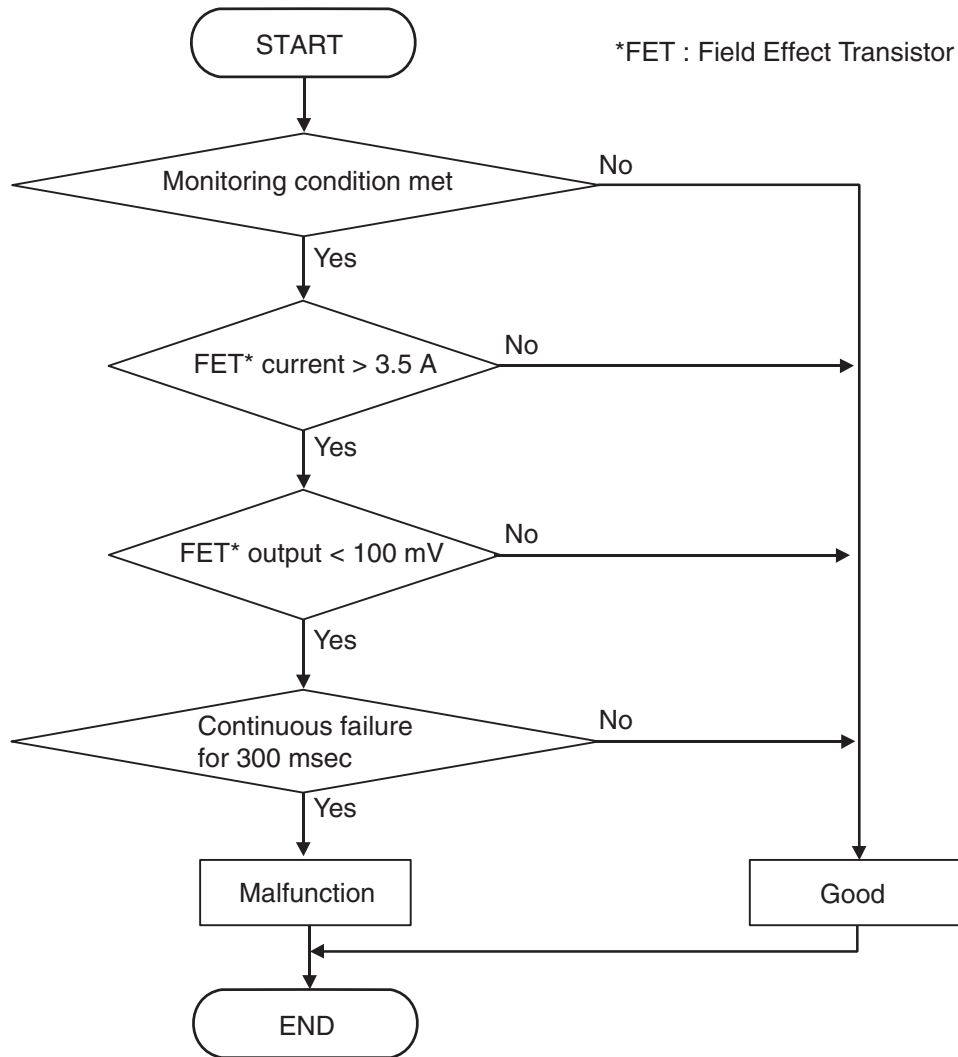

AC710657

DTC SET CONDITIONS

Check Conditions

- Voltage of battery: 8 V or more.
- Voltage of battery: 16.5 V or less.

JUDGMENT CRITERIA

- FET (Field Effect Transistor) current: 3.5 A or more, and FET (Field Effect Transistor) output: 100 mV or less. (300 millisecond)

OBD-II DRIVE CYCLE PATTERN

The status with the current of the FET channel shunt 3.5 A or less and with the FET channel output 100 mV or more continues for 300 milliseconds.

PROBABLE CAUSES

- Malfunction of TC-SST-ECU
- Malfunction of clutch/shift pressure solenoid 1

DIAGNOSTIC PROCEDURE

Required Special Tools:

- MB991958 Scan Tool (M.U.T.-III Sub Assembly)
 - MB991824: Vehicle Communication Interface (V.C.I.)
 - MB991827 M.U.T.-III USB Cable
 - MB991910 M.U.T.-III Main Harness A

STEP 1. Scan tool CAN bus diagnostics

Using scan tool MB991958, diagnose the CAN bus lines.

Q: Is the check result normal?

YES : Go to Step 2.

NO : Repair the CAN bus lines. (Refer to GROUP 54C – Troubleshooting [P.54C-16.](#)) After repairing the CAN bus line, go to Step 2.

STEP 2. Check whether the DTC is reset.

After 5 or more seconds have passed with the engine idle status, check that the DTC is reset.

Q: Is DTC No. P2719 set?

YES : Replace the mechatronic assembly. (Refer to [P.22C-505.](#))

NO : Intermittent malfunction. (Refer to GROUP 00 –How to Cope with Intermittent Malfunction [P.00-13.](#))

DTC P2720: Clutch/Shift Pressure Solenoid 1 System (Short to ground)**CAUTION**

- If there is any problem in the CAN bus lines, an incorrect diagnostic trouble code may be set. Prior to this diagnosis, diagnose the CAN bus lines.
- Whenever the ECU is replaced, ensure that the CAN bus lines are normal.

DIAGNOSTIC FUNCTION

TC-SST-ECU checks that the clutch/shift pressure solenoid 1 circuit is normal.

DESCRIPTIONS OF MONITOR METHODS

The clutch/shift pressure solenoid 1 circuit is determined to be short to ground.

MONITOR EXECUTION

- Continuous

**MONITOR EXECUTION CONDITIONS
(OTHER MONITOR AND SENSOR)**


Other Monitor (There is no temporary DTC stored in memory for the item monitored below)

- P0841: Clutch 1 pressure sensor system (Poor performance)
- P0842: Clutch 1 pressure sensor system (Output low range out)
- P0843: Clutch 1 pressure sensor system (Output high range out)
- P2733: Clutch/shift switching solenoid 1, spool stuck
- P2736: Clutch/shift switching solenoid 1 system (Open circuit)
- P2738: Clutch/shift switching solenoid 1 system (Short to ground)
- P2739: Clutch/shift switching solenoid 1 system (Short to power supply)
- P181B: Clutch 1 (Pressure low range out)
- P181C: Clutch 1 (Pressure high range out)

Sensor (The sensor below is determined to be normal)

- Clutch 1 pressure sensor
- Clutch/shift switching solenoid 1

LOGIC FLOW CHARTS (Monitor Sequence)

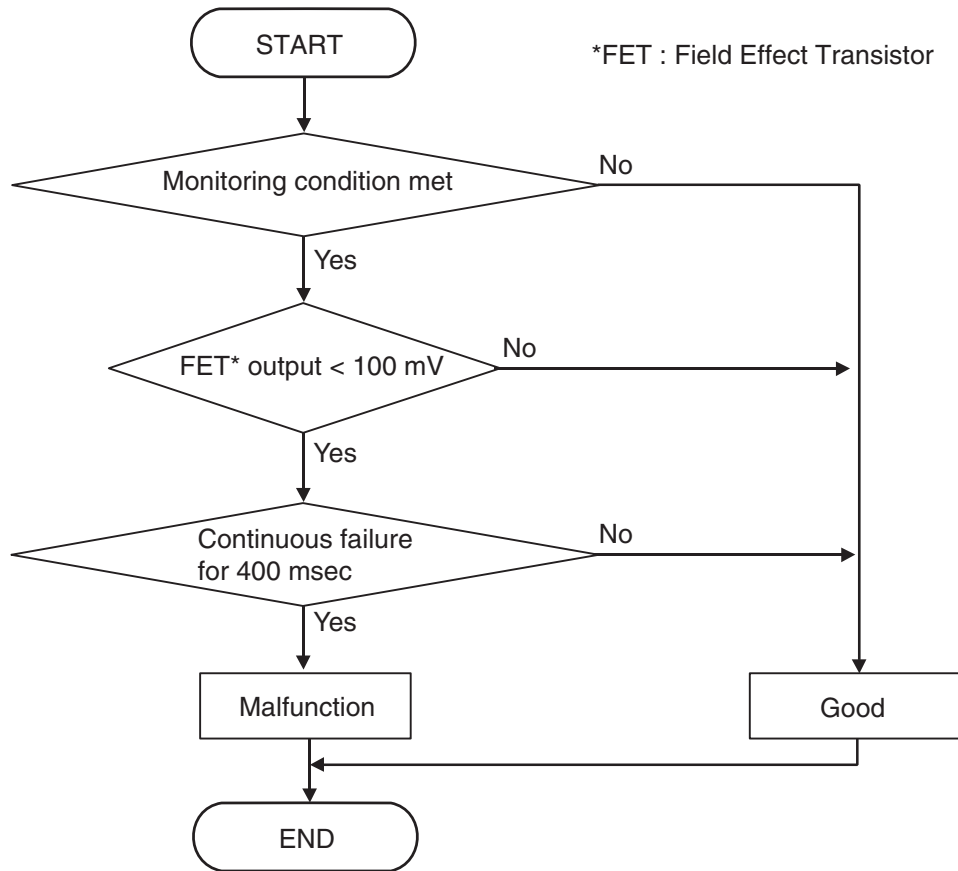

AC710658

DTC SET CONDITIONS

Check Conditions

- Voltage of battery: 8 V or more.
- Voltage of battery: 16.5 V or less.

JUDGMENT CRITERIA

- FET (Field Effect Transistor) output: 100 mV or less. (400 millisecond)

OBD-II DRIVE CYCLE PATTERN

The FET channel output remains 100 mV or more for 400 milliseconds.

PROBABLE CAUSES

- Malfunction of TC-SST-ECU
- Malfunction of clutch/shift pressure solenoid 1

DIAGNOSTIC PROCEDURE

Required Special Tools:

- MB991958 Scan Tool (M.U.T.-III Sub Assembly)
 - MB991824: Vehicle Communication Interface (V.C.I.)
 - MB991827 M.U.T.-III USB Cable
 - MB991910 M.U.T.-III Main Harness A

STEP 1. Scan tool CAN bus diagnostics

Using scan tool MB991958, diagnose the CAN bus lines.

Q: Is the check result normal?

YES : Go to Step 2.

NO : Repair the CAN bus lines. (Refer to GROUP 54C – Troubleshooting P.54C-16.) After repairing the CAN bus line, go to Step 2.

STEP 2. Check whether the DTC is reset.**Q: Is DTC No. P2720 set?**

YES : Replace the mechatronic assembly. (Refer to [P.22C-505.](#))

NO : Intermittent malfunction. (Refer to GROUP 00 –How to Cope with Intermittent Malfunction [P.00-13.](#))

DTC P2721: Clutch/Shift Pressure Solenoid 1 System (Short to power supply)**⚠ CAUTION**

- If there is any problem in the CAN bus lines, an incorrect diagnostic trouble code may be set. Prior to this diagnosis, diagnose the CAN bus lines.
- Whenever the ECU is replaced, ensure that the CAN bus lines are normal.

DIAGNOSTIC FUNCTION

TC-SST-ECU checks that the clutch/shift pressure solenoid 1 circuit is normal.

DESCRIPTIONS OF MONITOR METHODS

The clutch/shift pressure solenoid 1 circuit is determined to be short to power supply.

MONITOR EXECUTION

- Continuous

**MONITOR EXECUTION CONDITIONS
(OTHER MONITOR AND SENSOR)**


Other Monitor (There is no temporary DTC stored in memory for the item monitored below)

- P0841: Clutch 1 pressure sensor system (Poor performance)
- P0842: Clutch 1 pressure sensor system (Output low range out)
- P0843: Clutch 1 pressure sensor system (Output high range out)
- P2733: Clutch/shift switching solenoid 1, spool stuck
- P2736: Clutch/shift switching solenoid 1 system (Open circuit)
- P2738: Clutch/shift switching solenoid 1 system (Short to ground)
- P2739: Clutch/shift switching solenoid 1 system (Short to power supply)
- P181B: Clutch 1 (Pressure low range out)
- P181C: Clutch 1 (Pressure high range out)

Sensor (The sensor below is determined to be normal)

- Clutch 1 pressure sensor
- Clutch/shift switching solenoid 1

LOGIC FLOW CHARTS (Monitor Sequence)

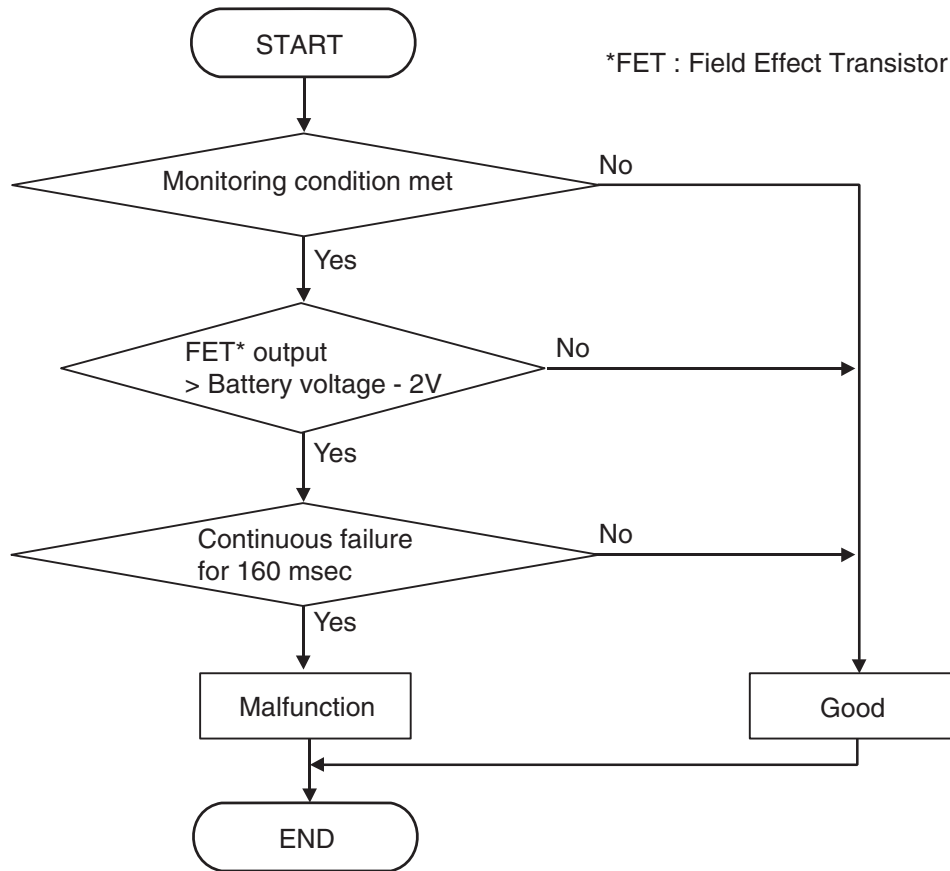

AC710659

DTC SET CONDITIONS

Check Conditions

- Voltage of battery: 8 V or more.
- Voltage of battery: 16.5 V or less.
- Clutch/shift pressure solenoid 1: OFF.

JUDGMENT CRITERIA

- FET (Field Effect Transistor) output: (Battery voltage -2 V) or more. (160 millisecond)

OBD-II DRIVE CYCLE PATTERN

The FET channel output remains the battery voltage -2 V or less for 160 milliseconds.

PROBABLE CAUSES

- Malfunction of TC-SST-ECU
- Malfunction of clutch/shift pressure solenoid 1

DIAGNOSTIC PROCEDURE

Required Special Tools:

- MB991958 Scan Tool (M.U.T.-III Sub Assembly)
 - MB991824: Vehicle Communication Interface (V.C.I.)
 - MB991827 M.U.T.-III USB Cable
 - MB991910 M.U.T.-III Main Harness A

STEP 1. Scan tool CAN bus diagnostics

Using scan tool MB991958, diagnose the CAN bus lines.

Q: Is the check result normal?

YES : Go to Step 2.

NO : Repair the CAN bus lines. (Refer to GROUP 54C – Troubleshooting P.54C-16.) After repairing the CAN bus line, go to Step 2.

STEP 2. Check whether the DTC is reset.**Q: Is DTC No. P2721 set?**

YES : Replace the mechatronic assembly. (Refer to [P.22C-505.](#))

NO : Intermittent malfunction. (Refer to GROUP 00 –How to Cope with Intermittent Malfunction [P.00-13.](#))

DTC P2727: Clutch/Shift Pressure Solenoid 2 System (Open circuit)**⚠ CAUTION**

- If there is any problem in the CAN bus lines, an incorrect diagnostic trouble code may be set. Prior to this diagnosis, diagnose the CAN bus lines.
- Whenever the ECU is replaced, ensure that the CAN bus lines are normal.

DIAGNOSTIC FUNCTION

TC-SST-ECU checks that the clutch/shift pressure solenoid 2 circuit is normal.

DESCRIPTIONS OF MONITOR METHODS

The clutch/shift pressure solenoid 2 circuit is determined to be open.

MONITOR EXECUTION

- Continuous

**MONITOR EXECUTION CONDITIONS
(OTHER MONITOR AND SENSOR)**

Other Monitor (There is no temporary DTC stored in memory for the item monitored below)


- P0846: Clutch 2 pressure sensor system (Poor performance)

- P0847: Clutch 2 pressure sensor system (Output low range out)
- P0848: Clutch 2 pressure sensor system (Output high range out)
- P2809: Clutch/shift switching solenoid 2, spool stuck
- P2812: Clutch/shift switching solenoid 2 system (Open circuit)
- P2814: Clutch/shift switching solenoid 2 system (Short to ground)
- P2815: Clutch/shift switching solenoid 2 system (Short to power supply)
- P181B: Clutch 1 (Pressure low range out)
- P181C: Clutch 1 (Pressure high range out)
- P181E: Clutch 2 (Pressure low range out)
- P181F: Clutch 2 (Pressure high range out)

Sensor (The sensor below is determined to be normal)

- Clutch 2 pressure sensor
- Clutch/shift switching solenoid 2

LOGIC FLOW CHARTS (Monitor Sequence)

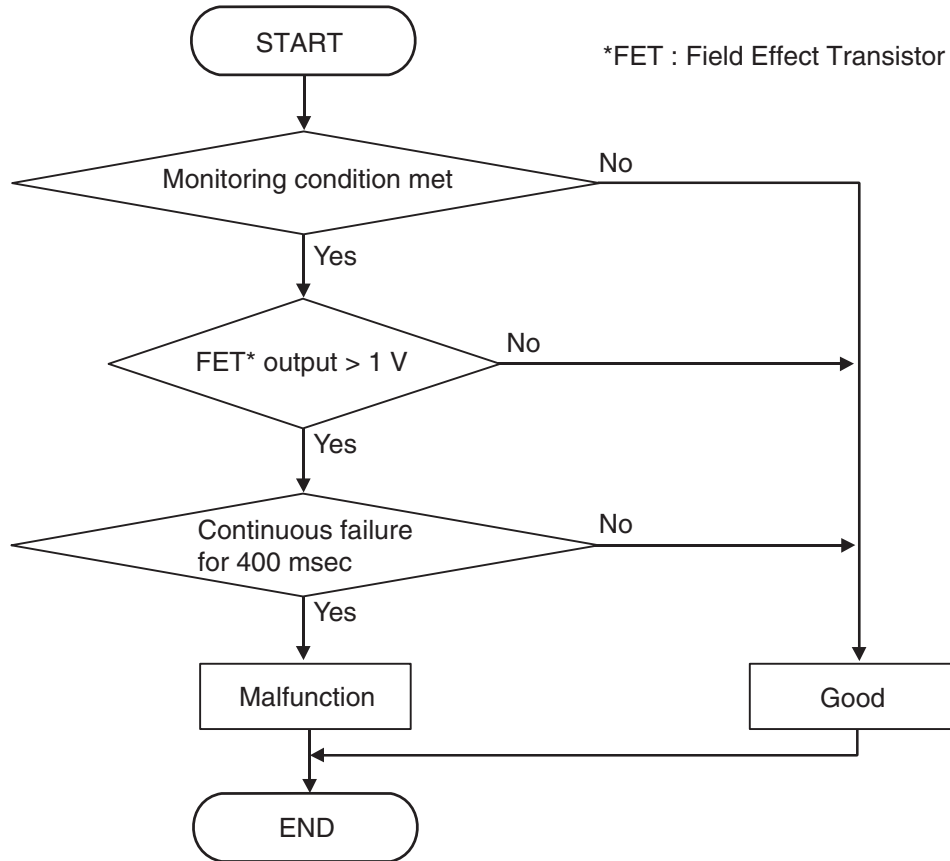

AC710656

DTC SET CONDITIONS

Check Conditions

- Voltage of battery: 8 V or more.
- Voltage of battery: 16.5 V or less.

JUDGMENT CRITERIA

- FET (Field Effect Transistor) output: 1 V or more. (400 millisecond)

OBD-II DRIVE CYCLE PATTERN

The FET channel output remains 1 V or less for 400 milliseconds.

PROBABLE CAUSES

- Malfunction of TC-SST-ECU
- Malfunction of clutch/shift pressure solenoid 2

DIAGNOSTIC PROCEDURE

Required Special Tools:

- MB991958 Scan Tool (M.U.T.-III Sub Assembly)
 - MB991824: Vehicle Communication Interface (V.C.I.)
 - MB991827 M.U.T.-III USB Cable
 - MB991910 M.U.T.-III Main Harness A

STEP 1. Scan tool CAN bus diagnostics

Using scan tool MB991958, diagnose the CAN bus lines.

Q: Is the check result normal?

YES : Go to Step 2.

NO : Repair the CAN bus lines. (Refer to GROUP 54C – Troubleshooting P.54C-16.) After repairing the CAN bus line, go to Step 2.

STEP 2. Check whether the DTC is reset.**Q: Is DTC No. P2727 set?**

YES : Replace the mechatronic assembly. (Refer to [P.22C-505.](#))

NO : Intermittent malfunction. (Refer to GROUP 00 –How to Cope with Intermittent Malfunction [P.00-13.](#))

DTC P2728: Clutch/Shift Pressure Solenoid 2 System (Overcurrent)**⚠ CAUTION**

- If there is any problem in the CAN bus lines, an incorrect diagnostic trouble code may be set. Prior to this diagnosis, diagnose the CAN bus lines.
- Whenever the ECU is replaced, ensure that the CAN bus lines are normal.

DIAGNOSTIC FUNCTION

TC-SST-ECU checks that the clutch/shift pressure solenoid 2 circuit is normal.

DESCRIPTIONS OF MONITOR METHODS

The supply current to the clutch/shift pressure solenoid 2 is determined to be overcurrent.

MONITOR EXECUTION

- Continuous

**MONITOR EXECUTION CONDITIONS
(OTHER MONITOR AND SENSOR)**

Other Monitor (There is no temporary DTC stored in memory for the item monitored below)


- P0846: Clutch 2 pressure sensor system (Poor performance)

- P0847: Clutch 2 pressure sensor system (Output low range out)
- P0848: Clutch 2 pressure sensor system (Output high range out)
- P2809: Clutch/shift switching solenoid 2, spool stuck
- P2812: Clutch/shift switching solenoid 2 system (Open circuit)
- P2814: Clutch/shift switching solenoid 2 system (Short to ground)
- P2815: Clutch/shift switching solenoid 2 system (Short to power supply)
- P181B: Clutch 1 (Pressure low range out)
- P181C: Clutch 1 (Pressure high range out)
- P181E: Clutch 2 (Pressure low range out)
- P181F: Clutch 2 (Pressure high range out)

Sensor (The sensor below is determined to be normal)

- Clutch 2 pressure sensor
- Clutch/shift switching solenoid 2

LOGIC FLOW CHARTS (Monitor Sequence)

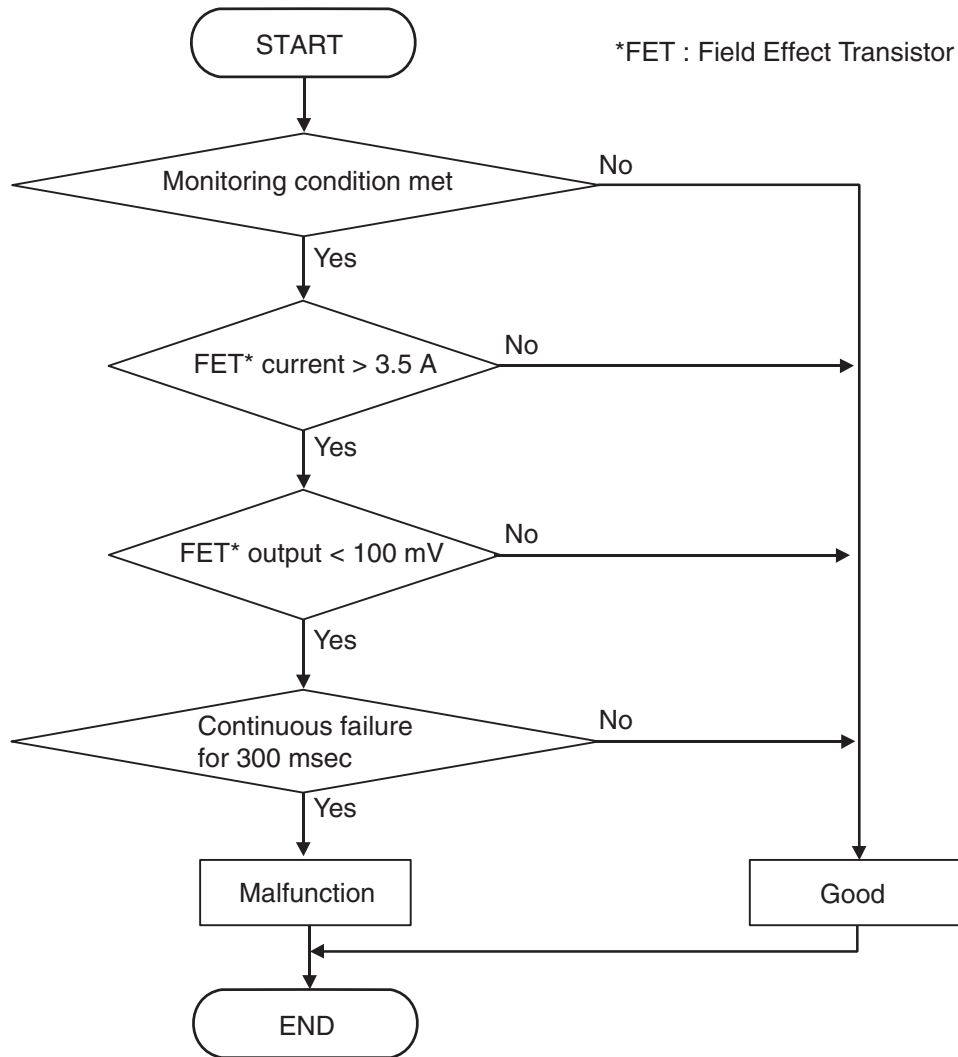

AC710657

DTC SET CONDITIONS

Check Conditions

- Voltage of battery: 8 V or more.
- Voltage of battery: 16.5 V or less.

JUDGMENT CRITERIA

- FET (Field Effect Transistor) current: 3.5 A or more, and FET (Field Effect Transistor) output: 100 mV or less. (300 millisecond)

OBD-II DRIVE CYCLE PATTERN

The status with the current of the FET channel shunt 3.5 A or less and with the FET channel output 100 mV or more continues for 300 milliseconds.

PROBABLE CAUSES

- Malfunction of TC-SST-ECU
- Malfunction of clutch/shift pressure solenoid 2

DIAGNOSTIC PROCEDURE

Required Special Tools:

- MB991958 Scan Tool (M.U.T.-III Sub Assembly)
 - MB991824: Vehicle Communication Interface (V.C.I.)
 - MB991827 M.U.T.-III USB Cable
 - MB991910 M.U.T.-III Main Harness A

STEP 1. Scan tool CAN bus diagnostics

Using scan tool MB991958, diagnose the CAN bus lines.

Q: Is the check result normal?

YES : Go to Step 2.

NO : Repair the CAN bus lines. (Refer to GROUP 54C – Troubleshooting P.54C-16.) After repairing the CAN bus line, go to Step 2.

STEP 2. Check whether the DTC is reset.**Q: Is DTC No. P2728 set?**

YES : Replace the mechatronic assembly. (Refer to P.22C-505.)

NO : Intermittent malfunction. (Refer to GROUP 00 –How to Cope with Intermittent Malfunction P.00-13.)

DTC P2729: Clutch/Shift Pressure Solenoid 2 System (Short to ground)**⚠ CAUTION**

- If there is any problem in the CAN bus lines, an incorrect diagnostic trouble code may be set. Prior to this diagnosis, diagnose the CAN bus lines.
- Whenever the ECU is replaced, ensure that the CAN bus lines are normal.

DIAGNOSTIC FUNCTION

TC-SST-ECU checks that the clutch/shift pressure solenoid 2 circuit is normal.

DESCRIPTIONS OF MONITOR METHODS

The clutch/shift pressure solenoid 2 circuit is determined to be short to ground.

MONITOR EXECUTION

- Continuous

**MONITOR EXECUTION CONDITIONS
(OTHER MONITOR AND SENSOR)**

Other Monitor (There is no temporary DTC stored in memory for the item monitored below)


- P0846: Clutch 2 pressure sensor system (Poor performance)

- P0847: Clutch 2 pressure sensor system (Output low range out)
- P0848: Clutch 2 pressure sensor system (Output high range out)
- P2809: Clutch/shift switching solenoid 2, spool stuck
- P2812: Clutch/shift switching solenoid 2 system (Open circuit)
- P2814: Clutch/shift switching solenoid 2 system (Short to ground)
- P2815: Clutch/shift switching solenoid 2 system (Short to power supply)
- P181B: Clutch 1 (Pressure low range out)
- P181C: Clutch 1 (Pressure high range out)
- P181E: Clutch 2 (Pressure low range out)
- P181F: Clutch 2 (Pressure high range out)

Sensor (The sensor below is determined to be normal)

- Clutch 2 pressure sensor
- Clutch/shift switching solenoid 2

LOGIC FLOW CHARTS (Monitor Sequence)

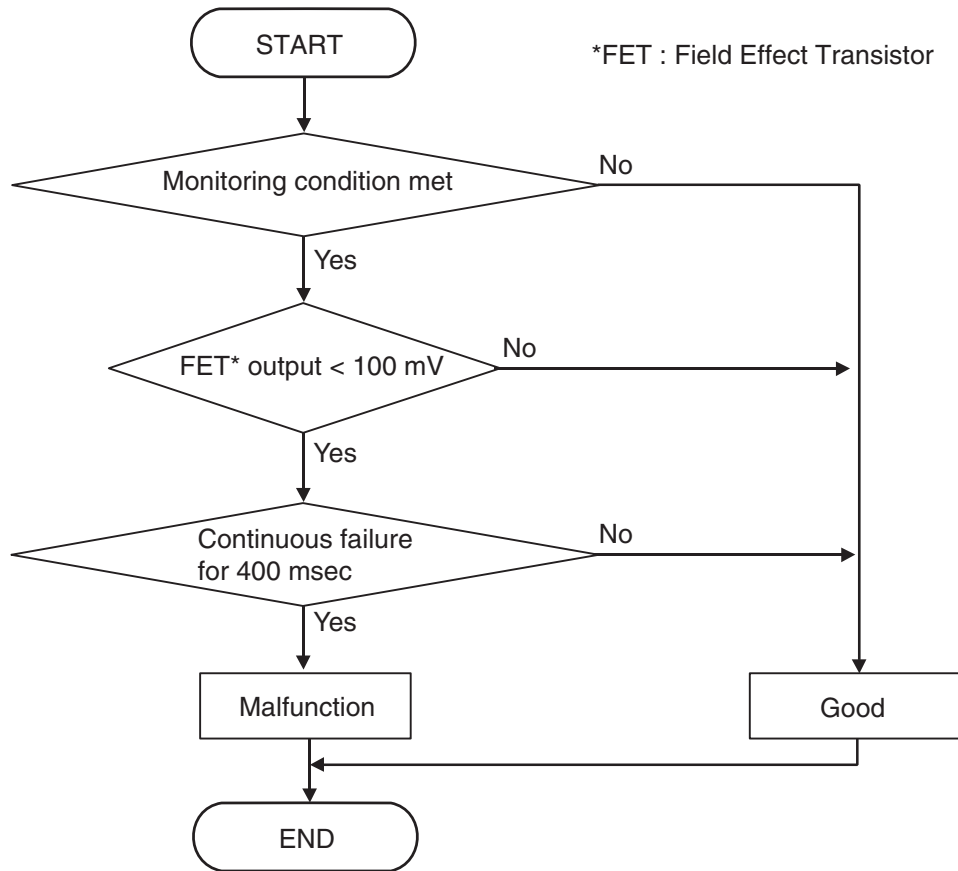

AC710658

DTC SET CONDITIONS

Check Conditions

- Voltage of battery: 8 V or more.
- Voltage of battery: 16.5 V or less.

JUDGMENT CRITERIA

- FET (Field Effect Transistor) output: 100 mV or less. (400 millisecond)

OBD-II DRIVE CYCLE PATTERN

The FET channel output remains 100 mV or more for 400 milliseconds.

PROBABLE CAUSES

- Malfunction of TC-SST-ECU
- Malfunction of clutch/shift pressure solenoid 2

DIAGNOSTIC PROCEDURE

Required Special Tools:

- MB991958 Scan Tool (M.U.T.-III Sub Assembly)
 - MB991824: Vehicle Communication Interface (V.C.I.)
 - MB991827 M.U.T.-III USB Cable
 - MB991910 M.U.T.-III Main Harness A

STEP 1. Scan tool CAN bus diagnostics

Using scan tool MB991958, diagnose the CAN bus lines.

Q: Is the check result normal?

YES : Go to Step 2.

NO : Repair the CAN bus lines. (Refer to GROUP 54C – Troubleshooting P.54C-16.) After repairing the CAN bus line, go to Step 2.

STEP 2. Check whether the DTC is reset.**Q: Is DTC No. P2729 set?**

YES : Replace the mechatronic assembly. (Refer to [P.22C-505.](#))

NO : Intermittent malfunction. (Refer to GROUP 00 –How to Cope with Intermittent Malfunction [P.00-13.](#))

DTC P2730: Clutch/Shift Pressure Solenoid 2 System (Short to power supply)**⚠ CAUTION**

- If there is any problem in the CAN bus lines, an incorrect diagnostic trouble code may be set. Prior to this diagnosis, diagnose the CAN bus lines.
- Whenever the ECU is replaced, ensure that the CAN bus lines are normal.

DIAGNOSTIC FUNCTION

TC-SST-ECU checks that the clutch/shift pressure solenoid 2 circuit is normal.

DESCRIPTIONS OF MONITOR METHODS

The clutch/shift pressure solenoid 2 circuit is determined to be short to power supply.

MONITOR EXECUTION

- Continuous

**MONITOR EXECUTION CONDITIONS
(OTHER MONITOR AND SENSOR)**

Other Monitor (There is no temporary DTC stored in memory for the item monitored below)


- P0846: Clutch 2 pressure sensor system (Poor performance)

- P0847: Clutch 2 pressure sensor system (Output low range out)
- P0848: Clutch 2 pressure sensor system (Output high range out)
- P2809: Clutch/shift switching solenoid 2, spool stuck
- P2812: Clutch/shift switching solenoid 2 system (Open circuit)
- P2814: Clutch/shift switching solenoid 2 system (Short to ground)
- P2815: Clutch/shift switching solenoid 2 system (Short to power supply)
- P181B: Clutch 1 (Pressure low range out)
- P181C: Clutch 1 (Pressure high range out)
- P181E: Clutch 2 (Pressure low range out)
- P181F: Clutch 2 (Pressure high range out)

Sensor (The sensor below is determined to be normal)

- Clutch 2 pressure sensor
- Clutch/shift switching solenoid 2

LOGIC FLOW CHARTS (Monitor Sequence)

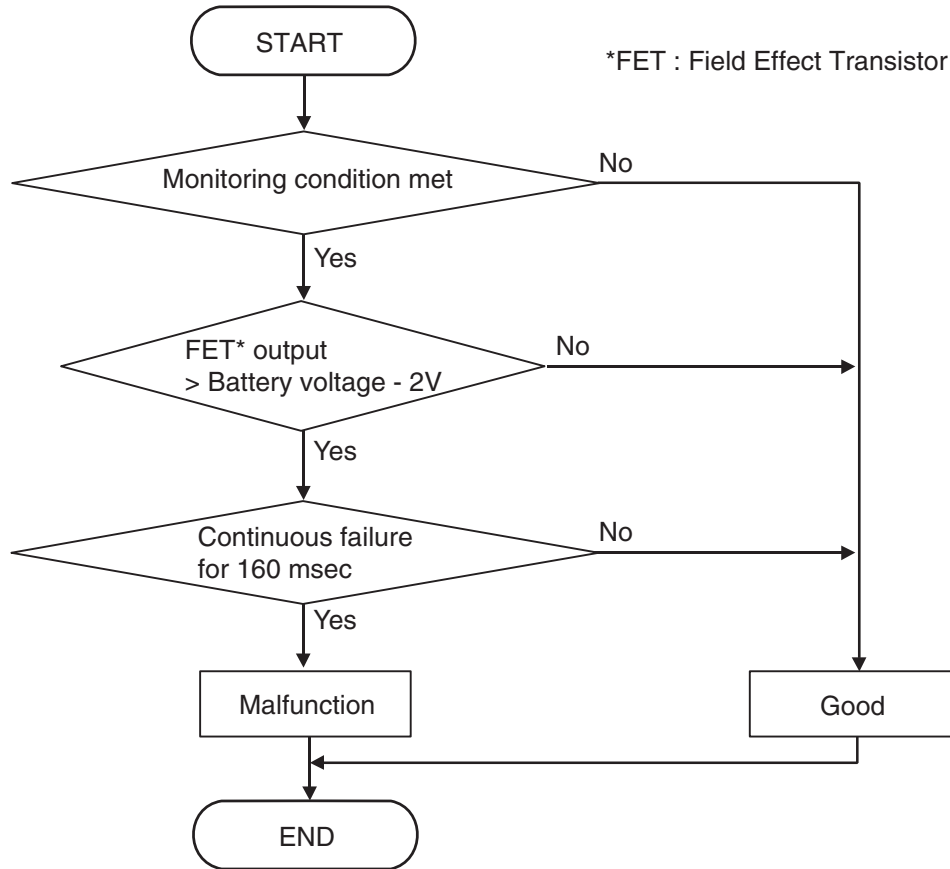

AC710659

DTC SET CONDITIONS

Check Conditions

- Voltage of battery: 8 V or more.
- Voltage of battery: 16.5 V or less.
- Clutch/shift pressure solenoid 2: OFF.

JUDGMENT CRITERIA

- FET (Field Effect Transistor) output: (Battery voltage -2 V) or more. (160 millisecond)

OBD-II DRIVE CYCLE PATTERN

The FET channel output remains (Battery voltage -2 V) or less for 160 milliseconds.

PROBABLE CAUSES

- Malfunction of TC-SST-ECU
- Malfunction of clutch/shift pressure solenoid 2

DIAGNOSTIC PROCEDURE

Required Special Tools:

- MB991958 Scan Tool (M.U.T.-III Sub Assembly)
 - MB991824: Vehicle Communication Interface (V.C.I.)
 - MB991827 M.U.T.-III USB Cable
 - MB991910 M.U.T.-III Main Harness A

STEP 1. Scan tool CAN bus diagnostics

Using scan tool MB991958, diagnose the CAN bus lines.

Q: Is the check result normal?

YES : Go to Step 2.

NO : Repair the CAN bus lines. (Refer to GROUP 54C – Troubleshooting P.54C-16.) After repairing the CAN bus line, go to Step 2.

STEP 2. Check whether the DTC is reset.**Q: Is DTC No. P2730 set?**

YES : Replace the mechatronic assembly. (Refer to [P.22C-505.](#))

NO : Intermittent malfunction. (Refer to GROUP 00 –How to Cope with Intermittent Malfunction [P.00-13.](#))

DTC P2733: Clutch/Shift Switching Solenoid 1, spool stuck**⚠ CAUTION**

- If there is any problem in the CAN bus lines, an incorrect diagnostic trouble code may be set. Prior to this diagnosis, diagnose the CAN bus lines.
- Whenever the ECU is replaced, ensure that the CAN bus lines are normal.

DIAGNOSTIC FUNCTION

TC-SST-ECU checks that the clutch/shift switching solenoid 1 is normal.

DESCRIPTIONS OF MONITOR METHODS

The clutch/shift switching solenoid 1 is determined to be seized.

MONITOR EXECUTION

- Continuous

**MONITOR EXECUTION CONDITIONS
(OTHER MONITOR AND SENSOR)**


Other Monitor (There is no temporary DTC stored in memory for the item monitored below)

- P2736: Clutch/shift switching solenoid 1 system (Open circuit)
- P2738: Clutch/shift switching solenoid 1 system (Short to ground)
- P2739: Clutch/shift switching solenoid 1 system (Short to power supply)
- P181B: Clutch 1 (Pressure low range out)
- P181C: Clutch 1 (Pressure high range out)

Sensor (The sensor below is determined to be normal)

- Not applicable

LOGIC FLOW CHARTS (Monitor Sequence)

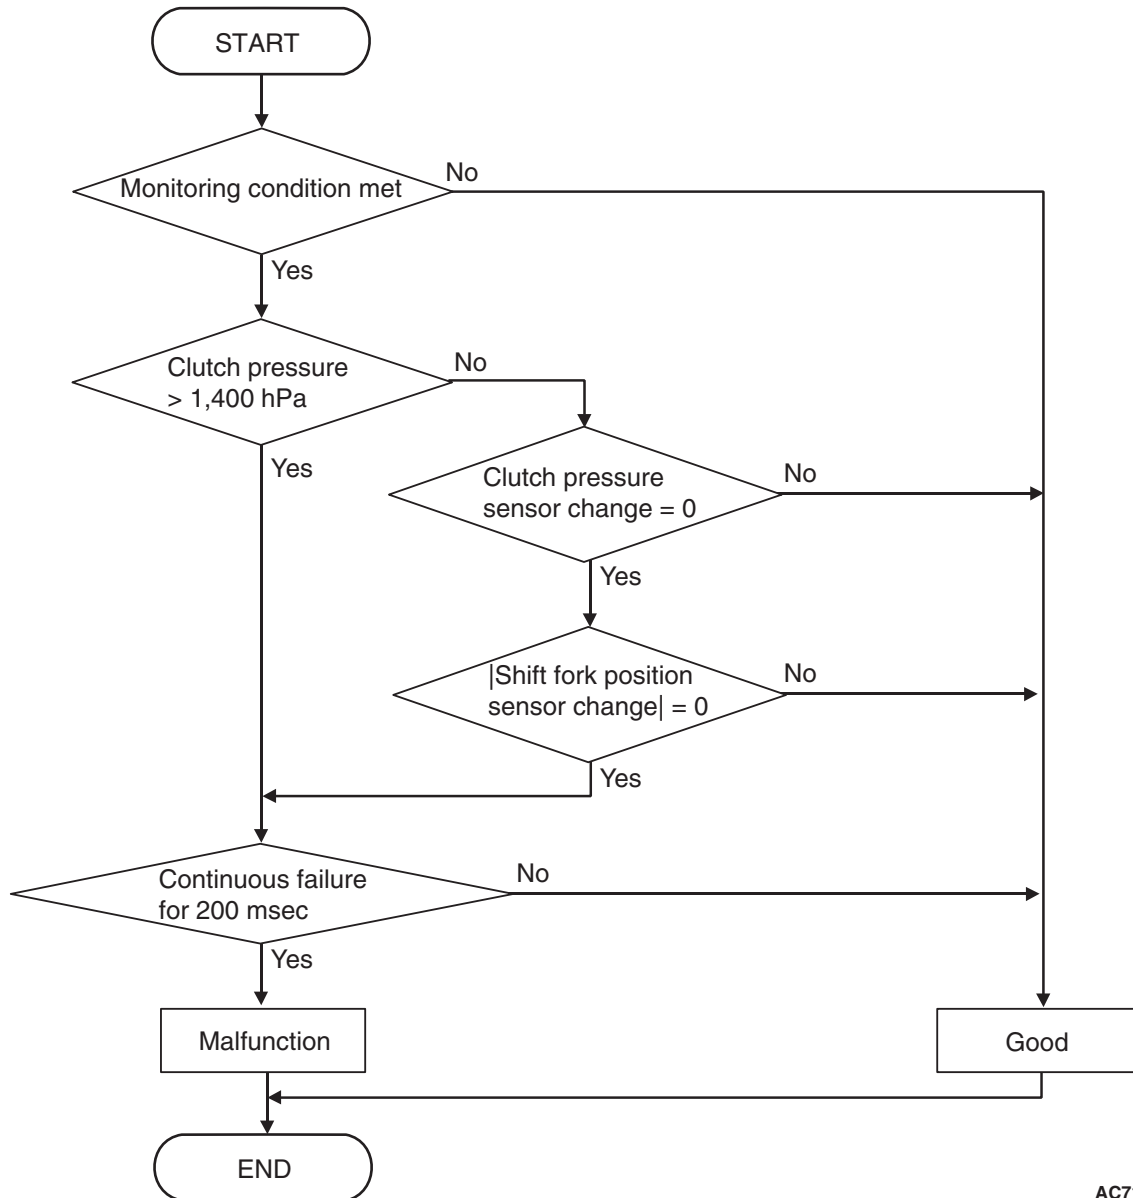

AC710660AB

DTC SET CONDITIONS

Check Conditions

- Voltage of battery: 8 V or more.
- Voltage of battery: 16.5 V or less.
- Engine speed: 650 r/min or more.
- Time since above engine condition: 1.5 seconds or more.
- Clutch/shift switching solenoid 1: ON.
- Clutch/shift switching solenoid 2: OFF.
- Clutch cooling flow solenoid: OFF.
- Clutch/shift pressure solenoid 1: ON.

JUDGMENT CRITERIA

- Clutch 1 (odd) pressure: 1,400 hPa or more, or clutch 1 pressure sensor (odd) change: 0, and shift fork position sensor 1 and 2 change: 0. (200 millisecond)

OBD-II DRIVE CYCLE PATTERN

The status with the clutch 1 pressure 1,400 hPa or less, or with the clutch 1 pressure sensor (odd) and shift fork position sensor 1 and 2 changed continues for 200 millisecond.

PROBABLE CAUSES

- Malfunction of TC-SST-ECU
- Insufficient fluid level
- Malfunction of clutch/shift switching solenoid 1

DIAGNOSTIC PROCEDURE**Required Special Tools:**

- MB991958 Scan Tool (M.U.T.-III Sub Assembly)
 - MB991824: Vehicle Communication Interface (V.C.I.)
 - MB991827 M.U.T.-III USB Cable
 - MB991910 M.U.T.-III Main Harness A

STEP 1. Scan tool CAN bus diagnostics

Using scan tool MB991958, diagnose the CAN bus lines.

Q: Is the check result normal?

YES : Go to Step 2.

NO : Repair the CAN bus lines. (Refer to GROUP 54C – Troubleshooting [P.54C-16.](#)) After repairing the CAN bus line, go to Step 2.

STEP 2. Check whether the DTC is reset.** WARNING**

During inspection, the vehicle might move suddenly or the engine might stop. Be sure to depress the brake pedal securely. In addition, perform the vehicle inspection in a safe place isolated from people or objects.

- (1) With the brake pedal pressed, start the engine.
- (2) With the engine idle status, operate the shift lever in the following sequence: P →R →D. (Hold each range for 1 seconds or more.)
- (3) Check that the DTC is reset.

Q: Is DTC No.P2733 set?

YES : Go to Step 3.

NO : Intermittent malfunction. (Refer to GROUP 00 –How to Cope with Intermittent Malfunction [P.00-13.](#))

STEP 3. Check the fluid.**Q: Is the fluid level proper?**

YES : Go to Step 4

NO : Add the fluid.

STEP 4. Check the installation status of the mechatronic assembly.**Q: Is the mechatronic assembly installed correctly?**

YES : Replace the mechatronic assembly. (Refer to [P.22C-505.](#))

NO : Install the mechatronic assembly correctly. (Refer to [P.22C-505.](#))

DTC P2736: Clutch/Shift Switching Solenoid 1 System (Open circuit)

CAUTION

- If there is any problem in the CAN bus lines, an incorrect diagnostic trouble code may be set. Prior to this diagnosis, diagnose the CAN bus lines.
- Whenever the ECU is replaced, ensure that the CAN bus lines are normal.

DIAGNOSTIC FUNCTION

TC-SST-ECU checks that the clutch/shift switching solenoid 1 circuit is normal.


DESCRIPTIONS OF MONITOR METHODS

The clutch/shift switching solenoid 1 circuit is determined to be open.

MONITOR EXECUTION

- Continuous

LOGIC FLOW CHARTS (Monitor Sequence)

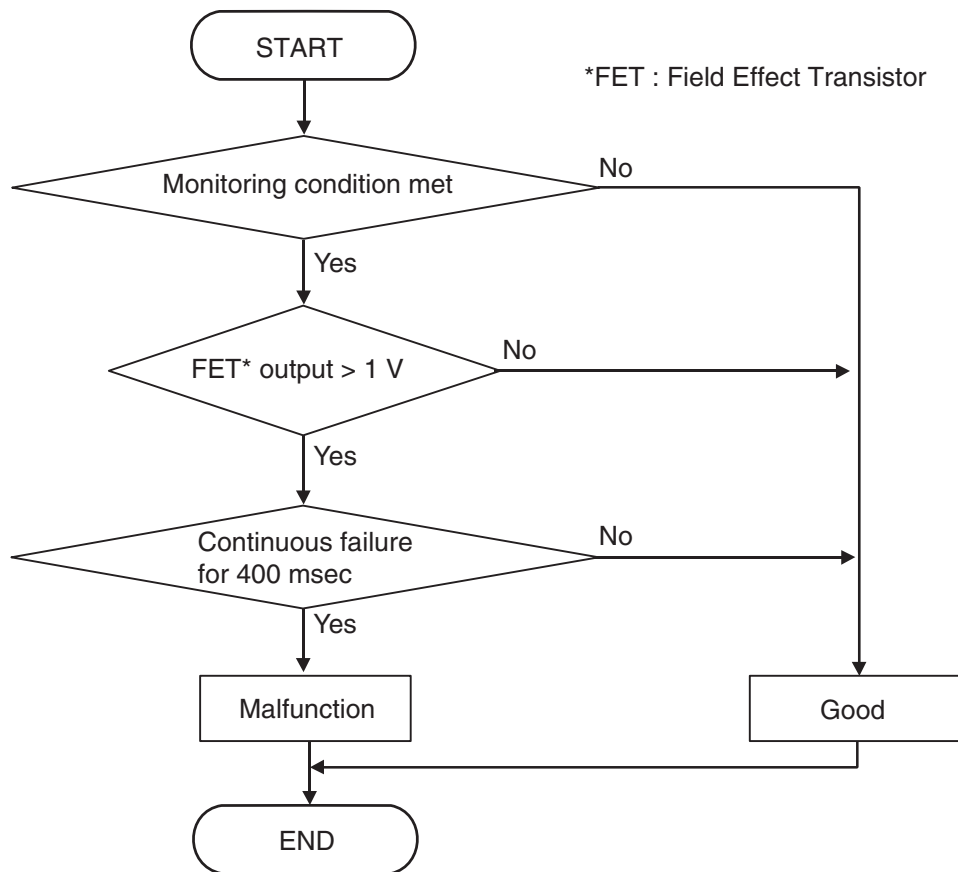

AC710661

DTC SET CONDITIONS**Check Conditions**

- Voltage of battery: 8 V or more.
- Voltage of battery: 16.5 V or less.

JUDGMENT CRITERIA

- FET (Field Effect Transistor) output: 1 V or more. (400 millisecond)

OBD-II DRIVE CYCLE PATTERN

The FET channel output remains 1 V or less for 400 milliseconds.

PROBABLE CAUSES

- Malfunction of TC-SST-ECU
- Malfunction of clutch/shift switching solenoid 1

DIAGNOSTIC PROCEDURE**Required Special Tools:**

- MB991958 Scan Tool (M.U.T.-III Sub Assembly)
 - MB991824: Vehicle Communication Interface (V.C.I.)
 - MB991827 M.U.T.-III USB Cable
 - MB991910 M.U.T.-III Main Harness A

STEP 1. Scan tool CAN bus diagnostics

Using scan tool MB991958, diagnose the CAN bus lines.

Q: Is the check result normal?

YES : Go to Step 2.

NO : Repair the CAN bus lines. (Refer to GROUP 54C – Troubleshooting [P.54C-16.](#)) After repairing the CAN bus line, go to Step 2.

STEP 2. Check whether the DTC is reset.**Q: Is DTC No. P2736 set?**

YES : Replace the mechatronic assembly. (Refer to [P.22C-505.](#))

NO : Intermittent malfunction. (Refer to GROUP 00 –How to Cope with Intermittent Malfunction [P.00-13.](#))

DTC P2738: Clutch/Shift Switching Solenoid 1 System (Short to ground)**CAUTION**

- If there is any problem in the CAN bus lines, an incorrect diagnostic trouble code may be set. Prior to this diagnosis, diagnose the CAN bus lines.
- Whenever the ECU is replaced, ensure that the CAN bus lines are normal.

DIAGNOSTIC FUNCTION

TC-SST-ECU checks that the clutch/shift switching solenoid 1 circuit is normal.

DESCRIPTIONS OF MONITOR METHODS

The clutch/shift switching solenoid 1 circuit is determined to be short to ground.

MONITOR EXECUTION

- Continuous

MONITOR EXECUTION CONDITIONS (OTHER MONITOR AND SENSOR)


Other Monitor (There is no temporary DTC stored in memory for the item monitored below)

- P2733: Clutch/shift switching solenoid 1, spool stuck
- P2736: Clutch/shift switching solenoid 1 system (Open circuit)
- P2739: Clutch/shift switching solenoid 1 system (Short to power supply)
- P181B: Clutch 1 (Pressure low range out)
- P181C: Clutch 1 (Pressure high range out)

Sensor (The sensor below is determined to be normal)

- Not applicable

LOGIC FLOW CHARTS (Monitor Sequence)

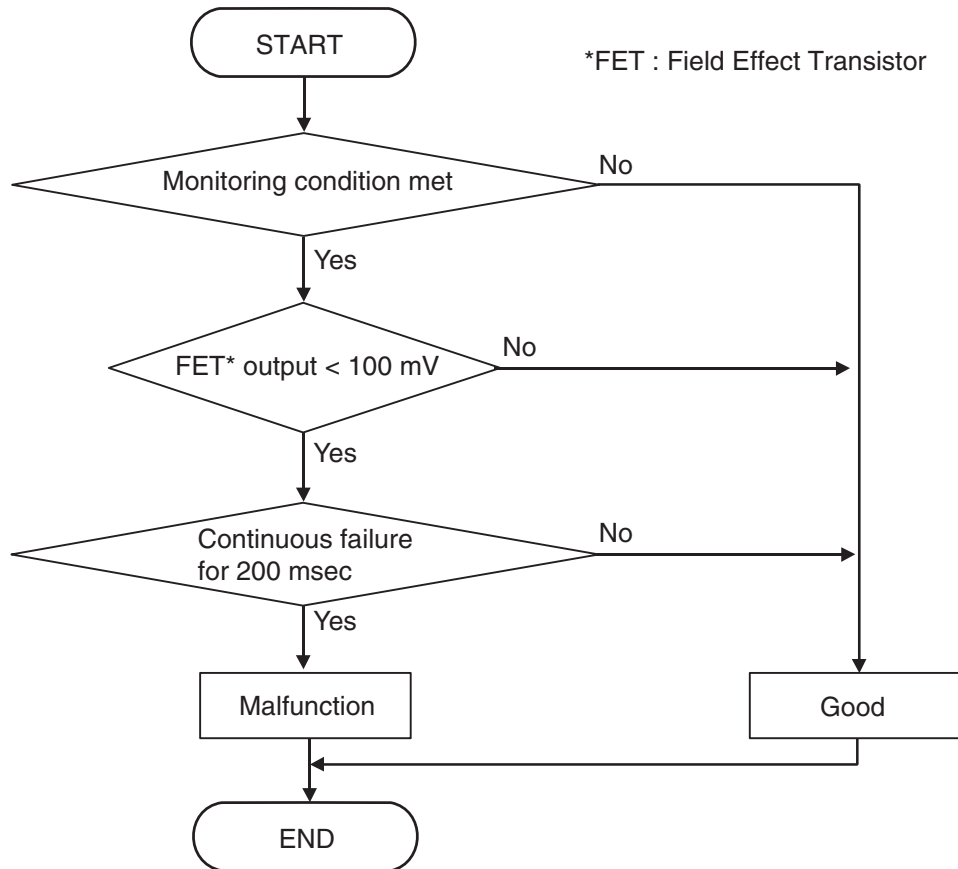

AC710662

DTC SET CONDITIONS

Check Conditions

- Voltage of battery: 8 V or more.
- Voltage of battery: 16.5 V or less.

JUDGMENT CRITERIA

- FET (Field Effect Transistor) output: 100 mV or less. (200 millisecond)

OBD-II DRIVE CYCLE PATTERN

The FET channel output remains 100 mV or more for 200 milliseconds.

PROBABLE CAUSES

- Malfunction of TC-SST-ECU
- Malfunction of clutch/shift switching solenoid 1

DIAGNOSTIC PROCEDURE

Required Special Tools:

- MB991958 Scan Tool (M.U.T.-III Sub Assembly)
 - MB991824: Vehicle Communication Interface (V.C.I.)
 - MB991827 M.U.T.-III USB Cable
 - MB991910 M.U.T.-III Main Harness A

STEP 1. Scan tool CAN bus diagnostics

Using scan tool MB991958, diagnose the CAN bus lines.

Q: Is the check result normal?

YES : Go to Step 2.

NO : Repair the CAN bus lines. (Refer to GROUP 54C – Troubleshooting [P.54C-16.](#)) After repairing the CAN bus line, go to Step 2.

STEP 2. Check whether the DTC is reset.**Q: Is DTC No. P2738 set?**

YES : Replace the mechatronic assembly. (Refer to [P.22C-505.](#))

NO : Intermittent malfunction. (Refer to GROUP 00 –How to Cope with Intermittent Malfunction [P.00-13.](#))

DTC P2739: Clutch/Shift Switching Solenoid 1 System (Short to power supply)**⚠ CAUTION**

- If there is any problem in the CAN bus lines, an incorrect diagnostic trouble code may be set. Prior to this diagnosis, diagnose the CAN bus lines.
- Whenever the ECU is replaced, ensure that the CAN bus lines are normal.

DIAGNOSTIC FUNCTION

TC-SST-ECU checks that the clutch/shift switching solenoid 1 circuit is normal.

DESCRIPTIONS OF MONITOR METHODS

The clutch/shift switching solenoid 1 circuit is determined to be short to power supply.

MONITOR EXECUTION

- Continuous

**MONITOR EXECUTION CONDITIONS
(OTHER MONITOR AND SENSOR)**


Other Monitor (There is no temporary DTC stored in memory for the item monitored below)

- P2733: Clutch/shift switching solenoid 1, spool stuck
- P2736: Clutch/shift switching solenoid 1 system (Open circuit)
- P2738: Clutch/shift switching solenoid 1 system (Short to ground)
- P181B: Clutch 1 (Pressure low range out)
- P181C: Clutch 1 (Pressure high range out)

Sensor (The sensor below is determined to be normal)

- Not applicable

LOGIC FLOW CHARTS (Monitor Sequence)

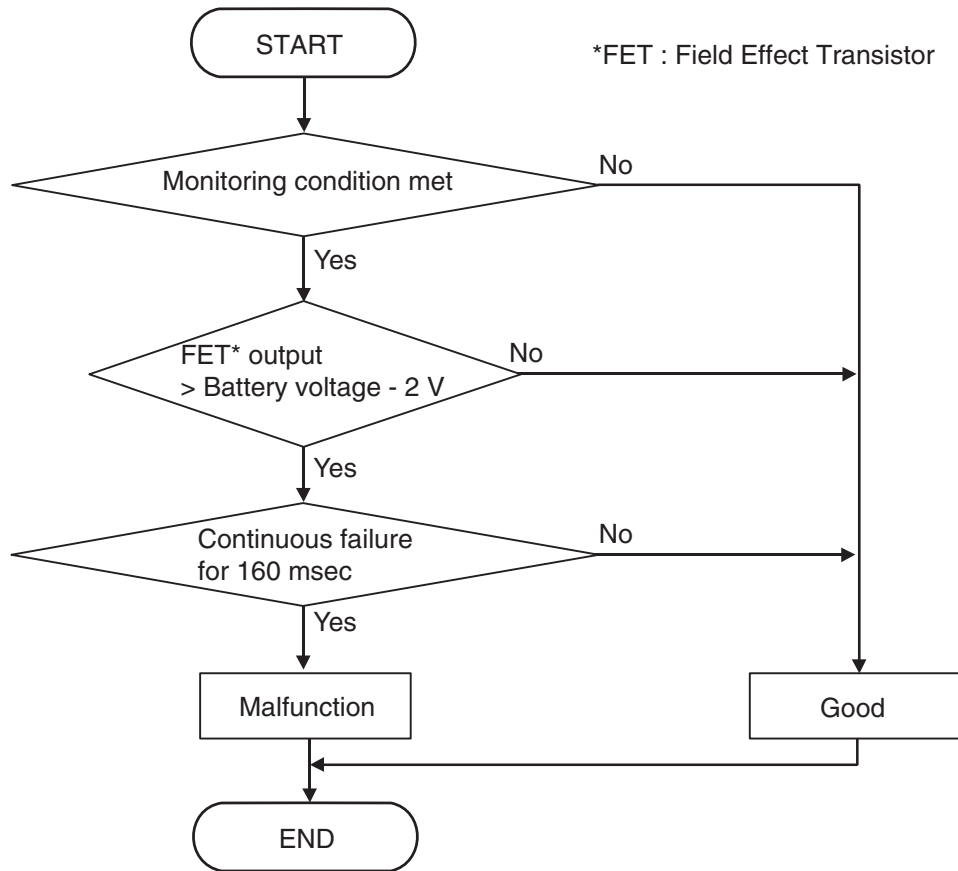

AC710667

DTC SET CONDITIONS

Check Conditions

- Voltage of battery: 8 V or more.
- Voltage of battery: 16.5 V or less.
- Clutch / shift switching solenoid 1: OFF.

JUDGMENT CRITERIA

- FET (Field Effect Transistor) output: (Battery voltage -2 V) or more. (160 millisecond)

OBD-II DRIVE CYCLE PATTERN

The FET channel output remains (Battery voltage -2 V) or less for 160 milliseconds.

PROBABLE CAUSES

- Malfunction of TC-SST-ECU
- Malfunction of clutch/shift switching solenoid 1

DIAGNOSTIC PROCEDURE

Required Special Tools:

- MB991958 Scan Tool (M.U.T.-III Sub Assembly)
 - MB991824: Vehicle Communication Interface (V.C.I.)
 - MB991827 M.U.T.-III USB Cable
 - MB991910 M.U.T.-III Main Harness A

STEP 1. Scan tool CAN bus diagnostics

Using scan tool MB991958, diagnose the CAN bus lines.

Q: Is the check result normal?

YES : Go to Step 2.

NO : Repair the CAN bus lines. (Refer to GROUP 54C – Troubleshooting P.54C-16.) After repairing the CAN bus line, go to Step 2.

STEP 2. Check whether the DTC is reset.**Q: Is DTC No. P2739 set?**

YES : Replace the mechatronic assembly. (Refer to [P.22C-505.](#))

NO : Intermittent malfunction. (Refer to GROUP 00 –How to Cope with Intermittent Malfunction [P.00-13.](#))

DTC P2742: Fluid Temperature Sensor System (Output low range out)

⚠ CAUTION

- If there is any problem in the CAN bus lines, an incorrect diagnostic trouble code may be set. Prior to this diagnosis, diagnose the CAN bus lines.
- Whenever the ECU is replaced, ensure that the CAN bus lines are normal.

DIAGNOSTIC FUNCTION

TC-SST-ECU checks that the output of the fluid temperature sensor is normal.

DESCRIPTIONS OF MONITOR METHODS

The output is determined to be too low.

MONITOR EXECUTION

- Continuous

**MONITOR EXECUTION CONDITIONS
(OTHER MONITOR AND SENSOR)**


Other Monitor (There is no temporary DTC stored in memory for the item monitored below)

- P2743: Fluid temperature sensor system (Output high range out)
- P1808: TC-SST-ECU temperature, fluid temperature sensor system (Correlation error)

Sensor (The sensor below is determined to be normal)

- Not applicable

LOGIC FLOW CHARTS (Monitor Sequence)

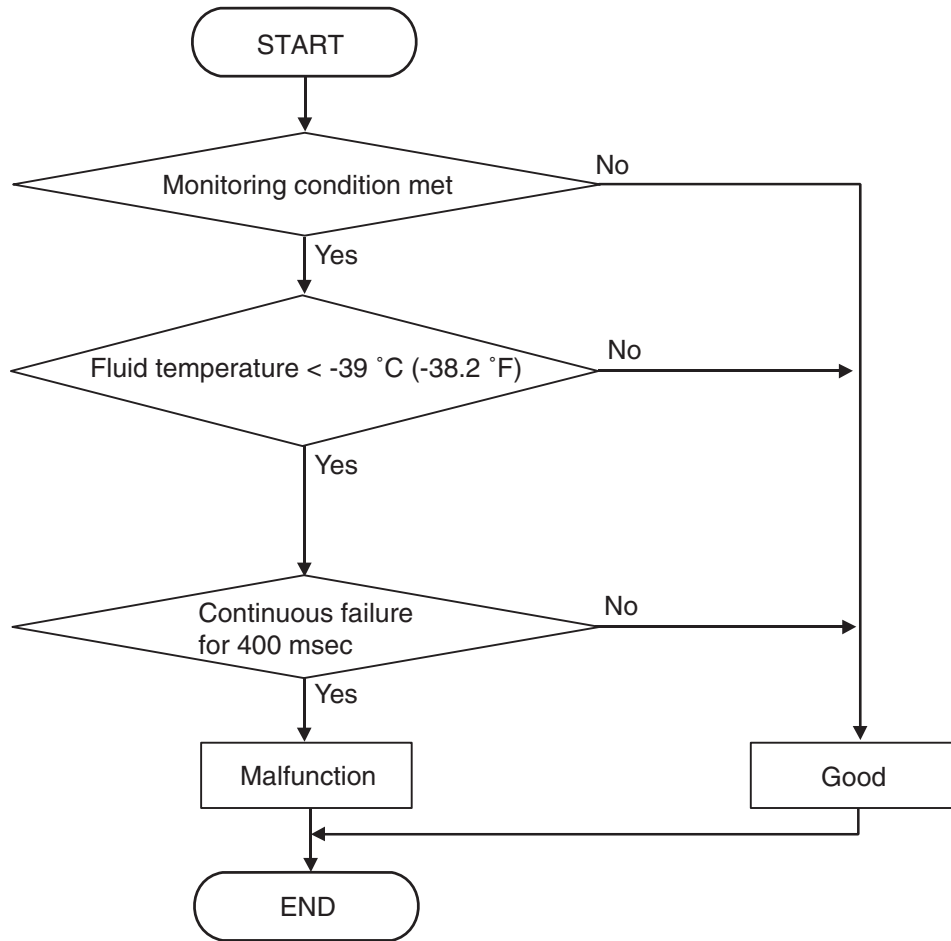

AC710593AC

DTC SET CONDITIONS

Check Conditions

- Voltage of battery: 8 V or more.
- Voltage of battery: 16.5 V or less.

JUDGMENT CRITERIA

- Fluid temperature: -39°C (-38.2°F) or less. (400 millisecond)

OBD-II DRIVE CYCLE PATTERN

The fluid temperature remains -39°C (-38.2°F) or more for 400 milliseconds.

PROBABLE CAUSES

- Malfunction of TC-SST-ECU

DIAGNOSTIC PROCEDURE

Required Special Tools:

- MB991958 Scan Tool (M.U.T.-III Sub Assembly)
 - MB991824: Vehicle Communication Interface (V.C.I.)
 - MB991827 M.U.T.-III USB Cable
 - MB991910 M.U.T.-III Main Harness A

STEP 1. Scan tool CAN bus diagnostics

Using scan tool MB991958, diagnose the CAN bus lines.

Q: Is the check result normal?

YES : Go to Step 2.

NO : Repair the CAN bus lines. (Refer to GROUP 54C – Troubleshooting [P.54C-16.](#)) After repairing the CAN bus line, go to Step 2.

STEP 2. Check whether the DTC is reset.

30 seconds after turning ON the ignition switch, check that the DTC is reset.

Q: Is DTC No. P2742 set?

YES : Replace the mechatronic assembly. (Refer to [P.22C-505.](#))

NO : Intermittent malfunction. (Refer to GROUP 00 –How to Cope with Intermittent Malfunction [P.00-13.](#))

DTC P2743: Fluid Temperature Sensor System (Output high range out)**CAUTION**

- If there is any problem in the CAN bus lines, an incorrect diagnostic trouble code may be set. Prior to this diagnosis, diagnose the CAN bus lines.
- Whenever the ECU is replaced, ensure that the CAN bus lines are normal.

DIAGNOSTIC FUNCTION

TC-SST-ECU checks that the output of the fluid temperature sensor is normal.

DESCRIPTIONS OF MONITOR METHODS

The output is determined to be too high.

MONITOR EXECUTION

- Continuous

MONITOR EXECUTION CONDITIONS (OTHER MONITOR AND SENSOR)


Other Monitor (There is no temporary DTC stored in memory for the item monitored below)

- P2742: Fluid temperature sensor system (Output low range out)
- P1808: TC-SST-ECU temperature, fluid temperature sensor system (Correlation error)

Sensor (The sensor below is determined to be normal)

- Not applicable

LOGIC FLOW CHARTS (Monitor Sequence)

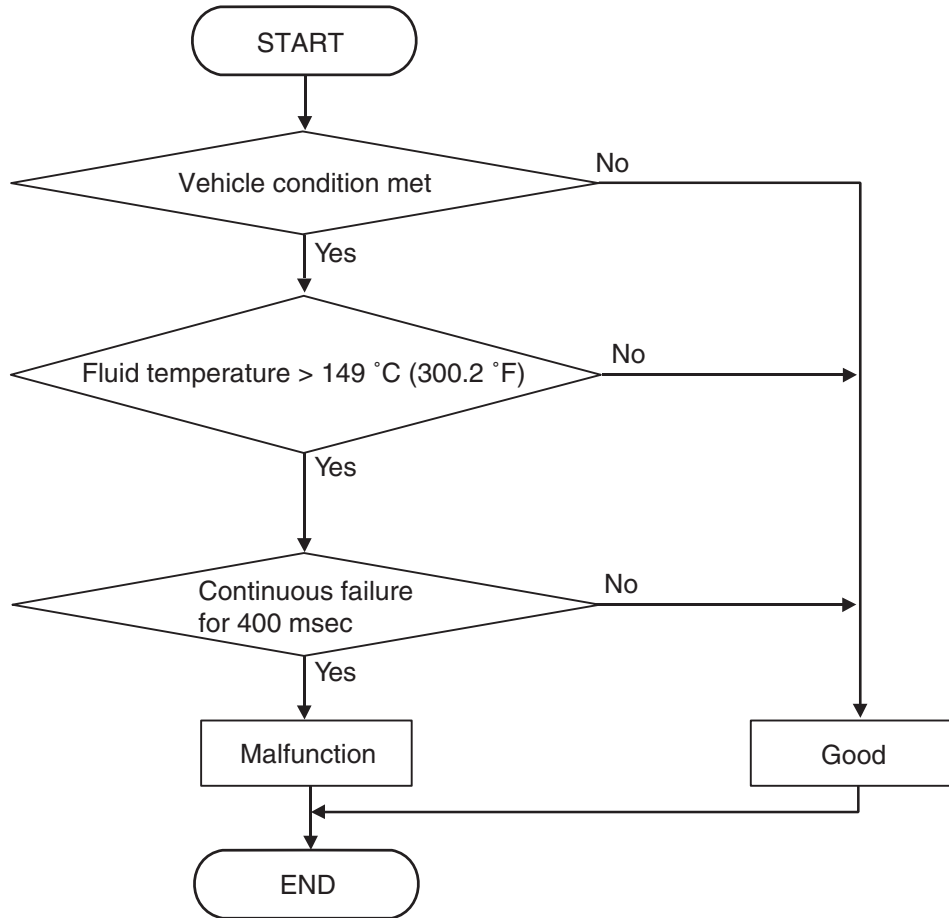

AC710594AB

DTC SET CONDITIONS

Check Conditions

- Voltage of battery: 8 V or more.
- Voltage of battery: 16.5 V or less.

JUDGMENT CRITERIA

- Fluid temperature: 149° C (300.2° F) or more. (400 millisecond)

OBD-II DRIVE CYCLE PATTERN

The fluid temperature remains 149° C (300.2° F) or more for 400 milliseconds.

PROBABLE CAUSES

- Malfunction of TC-SST-ECU

DIAGNOSTIC PROCEDURE

Required Special Tools:

- MB991958 Scan Tool (M.U.T.-III Sub Assembly)
 - MB991824: Vehicle Communication Interface (V.C.I.)
 - MB991827 M.U.T.-III USB Cable
 - MB991910 M.U.T.-III Main Harness A

STEP 1. Scan tool CAN bus diagnostics

Using scan tool MB991958, diagnose the CAN bus lines.

Q: Is the check result normal?

YES : Go to Step 2.

NO : Repair the CAN bus lines. (Refer to GROUP 54C – Troubleshooting P.54C-16.) After repairing the CAN bus line, go to Step 2.

STEP 2. Check whether the DTC is reset.

30 seconds after turning ON the ignition switch, check that the DTC is reset.

Q: Is DTC No. P2743 set?

YES : Replace the mechatronic assembly. (Refer to [P.22C-505.](#))

NO : Intermittent malfunction. (Refer to GROUP 00 –How to Cope with Intermittent Malfunction [P.00-13.](#))

DTC P2766: Input Shaft 2 (Even number gear axle) Speed Sensor System (Poor performance)**⚠ CAUTION**

- If there is any problem in the CAN bus lines, an incorrect diagnostic trouble code may be set. Prior to this diagnosis, diagnose the CAN bus lines.
- Whenever the ECU is replaced, ensure that the CAN bus lines are normal.

DIAGNOSTIC FUNCTION

TC-SST-ECU checks that the input shaft sensor 2 is normal.

DESCRIPTIONS OF MONITOR METHODS

The even number gear side input shaft speed (revolution) is determined to be abnormal.

MONITOR EXECUTION

- Continuous

**MONITOR EXECUTION CONDITIONS
(OTHER MONITOR AND SENSOR)**


Other Monitor (There is no temporary DTC stored in memory for the item monitored below)

- P0715: Input shaft 1 (odd number gear axle) speed sensor system (Output high range out)
- P0716: Input shaft 1 (odd number gear axle) speed sensor system (Poor performance)
- P0717: Input shaft 1 (odd number gear axle) speed sensor system (Output low range out)


Sensor (The sensor below is determined to be normal)

- Input shaft 1 (odd number gear axle) speed sensor

LOGIC FLOW CHARTS (Monitor Sequence) <Rationality>

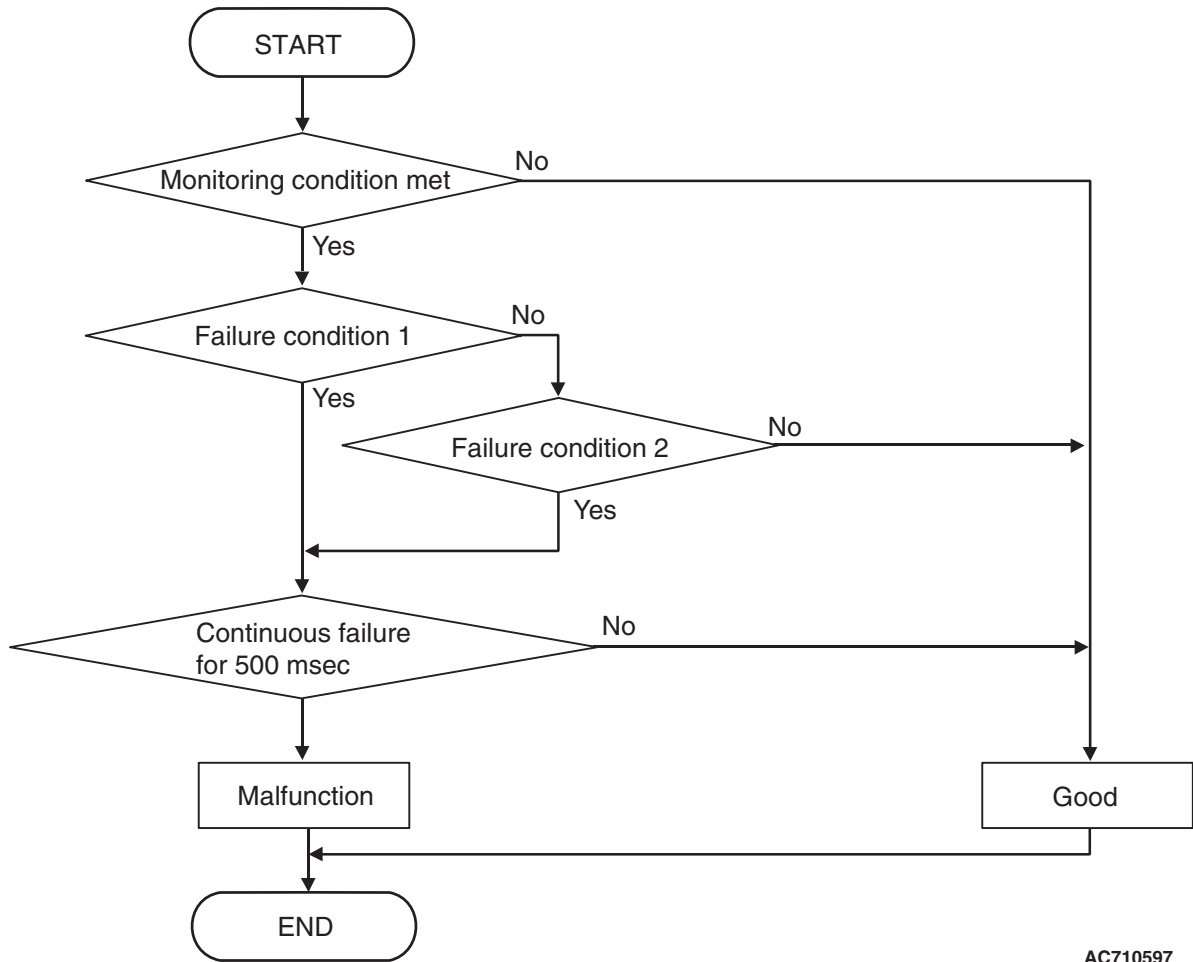


LOGIC FLOW CHARTS (Monitor Sequence) <Rationality (Failure condition 1)>

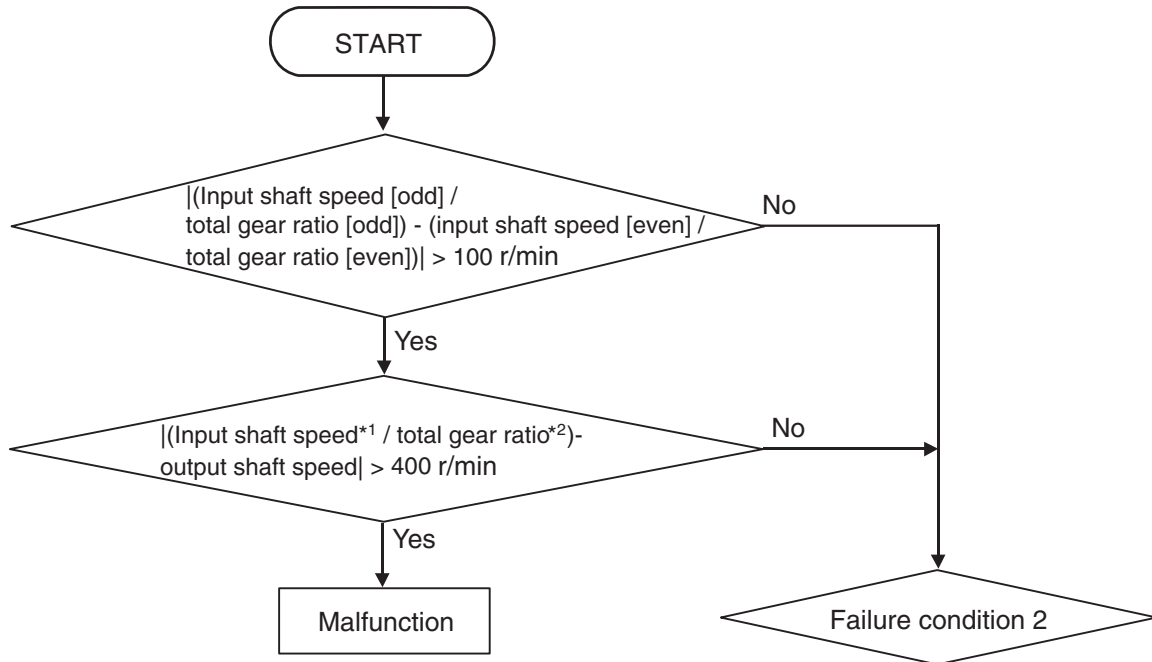

*1 : In case of input speed sensor A monitor, this is speed of input shaft (odd).
In case of input speed sensor B monitor, this is speed of input shaft (even).
*2 : In case of input speed sensor A monitor, this is total gear ratio of input shaft (odd).
In case of input speed sensor B monitor, this is total gear ratio of input shaft (even).

AC710598AC

LOGIC FLOW CHARTS (Monitor Sequence) <Rationality (Failure condition 2)>

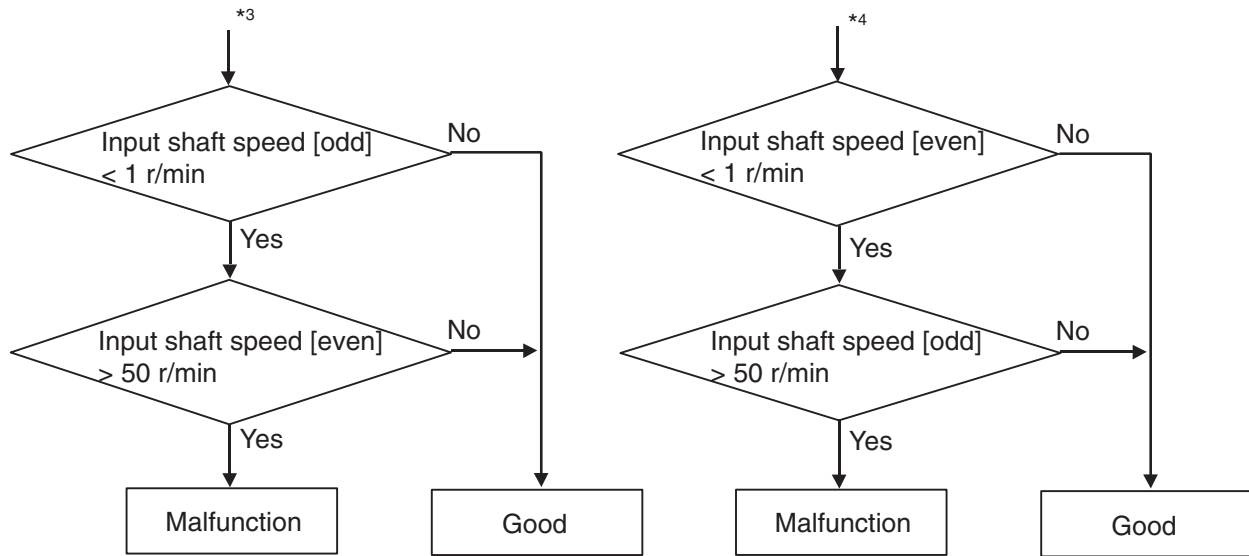

*3 :In case of input speed sensor A monitor

*4 :In case of input speed sensor B monitor

AC710599AB

DTC SET CONDITIONS

Check Conditions <Rationality>

- Voltage of battery: 8 V or more.
- Voltage of battery: 16.5 V or less.
- Input shaft [odd] gear: engaged.

- Input shaft [even] gear: engaged.

JUDGMENT CRITERIA <Rationality>


- Failure condition 1 or failure condition 2 (Refer to Logic Flow Charts (Monitor Sequence) <Rationality>). (500 millisecond)

OBD-II DRIVE CYCLE PATTERN

<RATIONALITY>

Each value of failure condition 1 or failure condition 2 (Logic Flow Charts (Monitor Sequence) <Rationality>) returns to the normal value and remains in the state for 500 milliseconds.

LOGIC FLOW CHARTS (Monitor Sequence) <Rationality - plausibility failure>

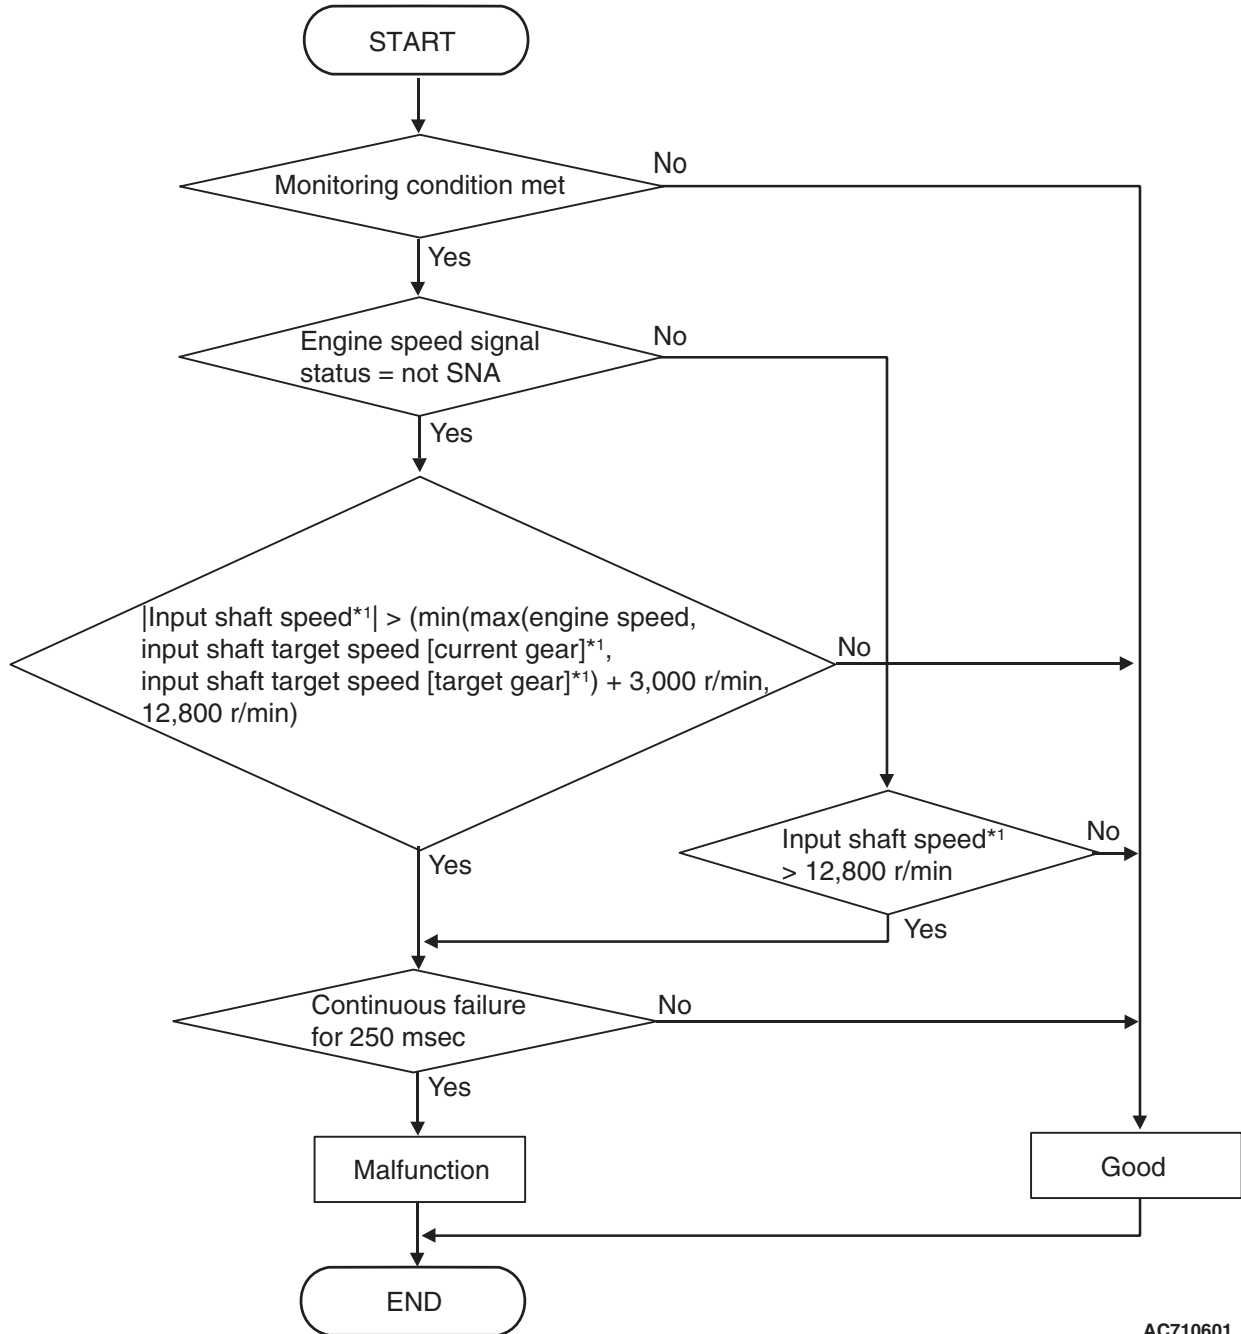

AC710601

*1 :In case of input shaft 1 (odd) speed sensor monitor, this is speed of input shaft (odd).
In case of input shaft 2 (even) speed sensor monitor, this is speed of input shaft (even).

DTC SET CONDITIONS**Check Conditions <Rationality plausibility failure>**

- Voltage of battery: 8 V or more.
- Voltage of battery: 16.5 V or less.

JUDGMENT CRITERIA <Rationality plausibility failure>

- Input shaft 2 (even) speed: Refer to Logic Flow Charts (Monitor Sequence) <Rationality plausibility failure>. (250 millisecond)

OBD-II DRIVE CYCLE PATTERN**<RATIONALITY PLAUSIBILITY FAILURE>**

The value of the Logic Flow Charts (Monitor Sequence) <Rationality plausibility failure> returns to the normal value and remains in the state for 250 milliseconds.

PROBABLE CAUSES

- Malfunction of TC-SST-ECU

DIAGNOSTIC PROCEDURE**Required Special Tools:**

- MB991958 Scan Tool (M.U.T.-III Sub Assembly)
 - MB991824: Vehicle Communication Interface (V.C.I.)
 - MB991827 M.U.T.-III USB Cable
 - MB991910 M.U.T.-III Main Harness A

STEP 1. Scan tool CAN bus diagnostics

Using scan tool MB991958, diagnose the CAN bus lines.

Q: Is the check result normal?

YES : Go to Step 2.

NO : Repair the CAN bus lines. (Refer to GROUP 54C – Troubleshooting [P.54C-16.](#)) After repairing the CAN bus line, go to Step 2.

STEP 2. Monitoring unit No. check

- (1) Check the freeze frame data (item No. 30 to No. 37).
- (2) Check which monitoring unit (No. 115 or No. 240) is set.

Q: Which monitoring unit is set, No. 115 or No. 240?

No. 115 : Go to Step 4

No. 240 : Go to Step 3

STEP 3. Check whether the DTC is reset.

- (1) Erase the DTC.
- (2) Drive the vehicle at 50 km/h (31 mph) or more.
- (3) Check that the DTC is reset.

Q: Is DTC No.P2766 set?

YES : Replace the mechatronic assembly. (Refer to [P.22C-505.](#))

NO : Intermittent malfunction. (Refer to GROUP 00 –How to Cope with Intermittent Malfunction [P.00-13.](#))

STEP 4. Check whether the DTC is reset.

- (1) Erase the DTC.
- (2) Drive with shifting to each gear range.
- (3) Check that the DTC is reset.

Q: Is DTC No.P2766 set?

YES : Go to Step 5.

NO : Intermittent malfunction. (Refer to GROUP 00 –How to Cope with Intermittent Malfunction [P.00-13.](#))

STEP 5. Scan tool Teach-In

- (1) Carry out the Item No. 1: Plausibility check. (Refer to Special Function (Teach-In Reference Table [P.22C-362.](#))
- (2) After Teach-In, check which result ("Yes" or "No") is displayed in the Data list No. 101: Normal End. (Refer to Special Function (Teach-In Reference Table [P.22C-362.](#))

Q: Which is displayed, "Yes" or "No"?

"Yes" : Replace the transaxle assembly. (Refer to [P.22C-497.](#))

"No" : Replace the mechatronic assembly. (Refer to [P.22C-505.](#))

DTC P2809: Clutch/Shift Switching Solenoid 2, spool stuck

CAUTION

- If there is any problem in the CAN bus lines, an incorrect diagnostic trouble code may be set. Prior to this diagnosis, diagnose the CAN bus lines.
- Whenever the ECU is replaced, ensure that the CAN bus lines are normal.

DIAGNOSTIC FUNCTION

TC-SST-ECU checks that the clutch/shift switching solenoid 2 is normal.

DESCRIPTIONS OF MONITOR METHODS

The clutch/shift switching solenoid 2 is determined to be seized.

MONITOR EXECUTION

- Continuous

**MONITOR EXECUTION CONDITIONS
(OTHER MONITOR AND SENSOR)**


Other Monitor (There is no temporary DTC stored in memory for the item monitored below)

- P2733: Clutch/shift switching solenoid 1, spool stuck
- P2736: Clutch/shift switching solenoid 1 system (Open circuit)
- P2738: Clutch/shift switching solenoid 1 system (Short to ground)
- P2739: Clutch/shift switching solenoid 1 system (Short to power supply)
- P2812: Clutch/shift switching solenoid 2 system (Open circuit)
- P2814: Clutch/shift switching solenoid 2 system (Short to ground)
- P2815: Clutch/shift switching solenoid 2 system (Short to power supply)
- P181E: Clutch 2 (Pressure low range out)
- P181F: Clutch 2 (Pressure high range out)

Sensor (The sensor below is determined to be normal)

- Clutch/shift switching solenoid 1

LOGIC FLOW CHARTS (Monitor Sequence)

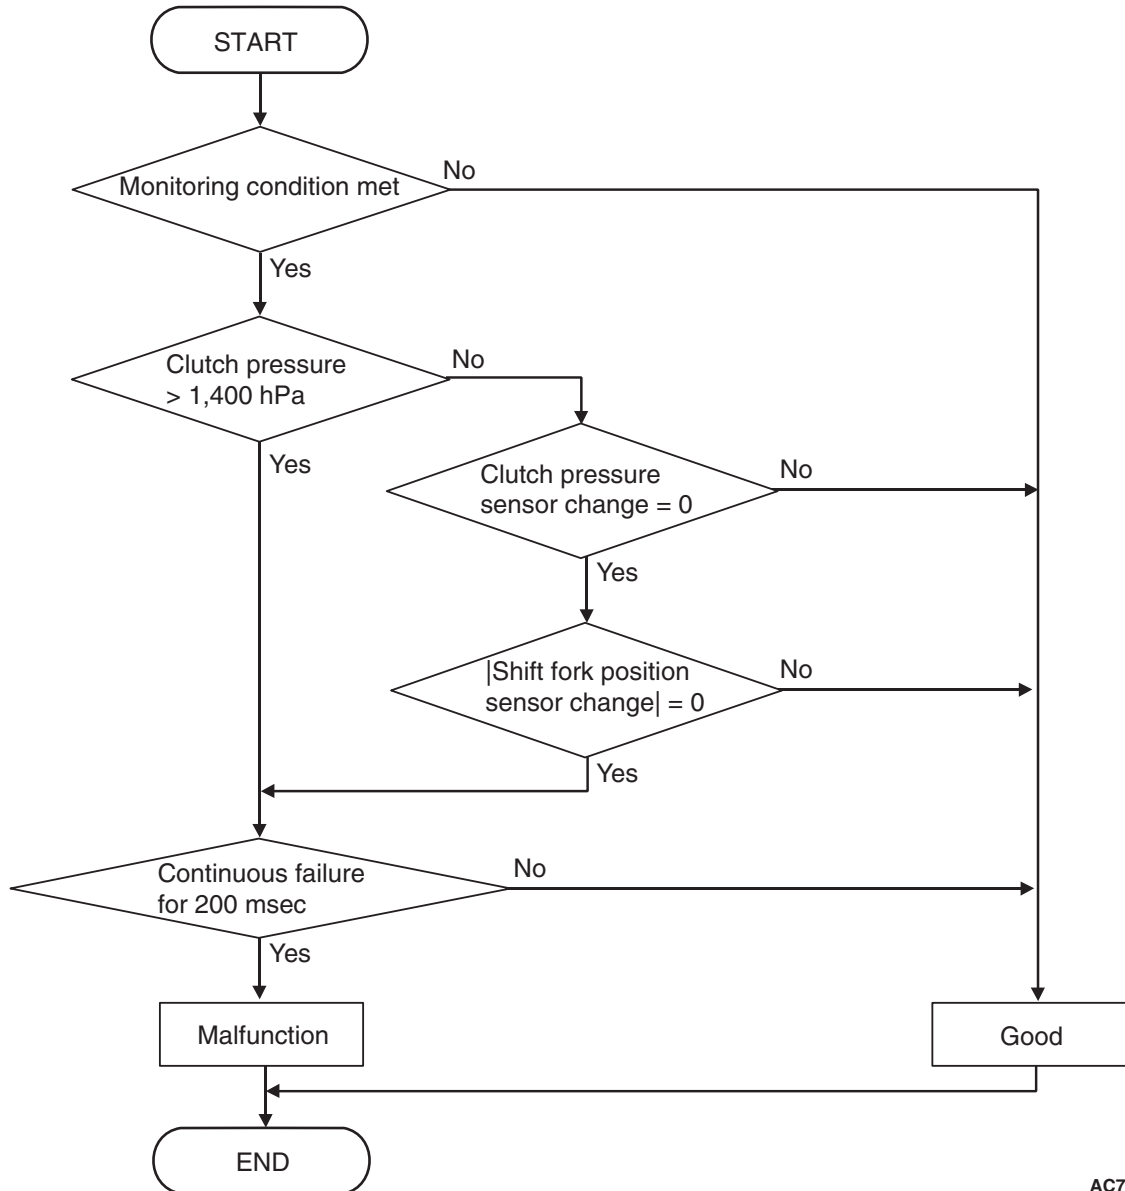

AC710660AB

DTC SET CONDITIONS

Check Conditions

- Voltage of battery: 8 V or more.
- Voltage of battery: 16.5 V or less.
- Engine speed: 650 r/min or more.
- Time since above engine condition: 1.5 seconds or more.
- Clutch/shift switching solenoid 2: ON.
- Clutch cooling flow solenoid: OFF.
- Clutch/shift pressure solenoid 2: ON.

JUDGMENT CRITERIA

- Clutch 2 (even) pressure: 1,400 hPa or more, or clutch 2 pressure sensor (even) change: 0, and shift fork position sensor 3 and 4 change: 0. (200 millisecond)

OBD-II DRIVE CYCLE PATTERN

The status with the clutch 2 pressure 1,400 hPa or less, or with the clutch 2 pressure sensor (even) and shift fork position sensor 3 and 4 changed continues for 200 millisecond.

PROBABLE CAUSES

- Malfunction of TC-SST-ECU
- Insufficient fluid level
- Malfunction of clutch/shift switching solenoid 2

DIAGNOSTIC PROCEDURE

Required Special Tools:

- MB991958 Scan Tool (M.U.T.-III Sub Assembly)
 - MB991824: Vehicle Communication Interface (V.C.I.)
 - MB991827 M.U.T.-III USB Cable
 - MB991910 M.U.T.-III Main Harness A

STEP 1. Scan tool CAN bus diagnostics

Using scan tool MB991958, diagnose the CAN bus lines.

Q: Is the check result normal?

YES : Go to Step 2.

NO : Repair the CAN bus lines. (Refer to GROUP 54C – Troubleshooting [P.54C-16.](#)) After repairing the CAN bus line, go to Step 2.

STEP 2. Check whether the DTC is reset.

After driving in the 4th gear, check that the DTC is reset.

Q: Is DTC No. P2809 set?

YES : Go to Step 3.

NO : Intermittent malfunction. (Refer to GROUP 00 –How to Cope with Intermittent Malfunction [P.00-13.](#))

STEP 3. Check the fluid.

Q: Is the fluid level proper?

YES : Go to Step 4

NO : Add the fluid.

STEP 4. Check the installation status of the mechatronic assembly.

Q: Is the mechatronic assembly installed correctly?

YES : Replace the mechatronic assembly. (Refer to [P.22C-505.](#))

NO : Install the mechatronic assembly correctly. (Refer to [P.22C-505.](#))

DTC P2812: Clutch/Shift Switching Solenoid 2 System (Open circuit)

⚠ CAUTION

- If there is any problem in the CAN bus lines, an incorrect diagnostic trouble code may be set. Prior to this diagnosis, diagnose the CAN bus lines.
- Whenever the ECU is replaced, ensure that the CAN bus lines are normal.

DIAGNOSTIC FUNCTION

TC-SST-ECU checks that the clutch/shift switching solenoid 2 circuit is normal.

DESCRIPTIONS OF MONITOR METHODS

The clutch/shift switching solenoid 2 circuit is determined to be open.

MONITOR EXECUTION

- Continuous

**MONITOR EXECUTION CONDITIONS
(OTHER MONITOR AND SENSOR)**


Other Monitor (There is no temporary DTC stored in memory for the item monitored below)

- P2733: Clutch/shift switching solenoid 1, spool stuck
- P2736: Clutch/shift switching solenoid 1 system (Open circuit)
- P2738: Clutch/shift switching solenoid 1 system (Short to ground)
- P2739: Clutch/shift switching solenoid 1 system (Short to power supply)
- P2809: Clutch/shift switching solenoid 2, spool stuck
- P2814: Clutch/shift switching solenoid 2 system (Short to ground)
- P2815: Clutch/shift switching solenoid 2 system (Short to power supply)
- P181E: Clutch 2 (Pressure low range out)
- P181F: Clutch 2 (Pressure high range out)

Sensor (The sensor below is determined to be normal)

- Clutch/shift switching solenoid 1

LOGIC FLOW CHARTS (Monitor Sequence)

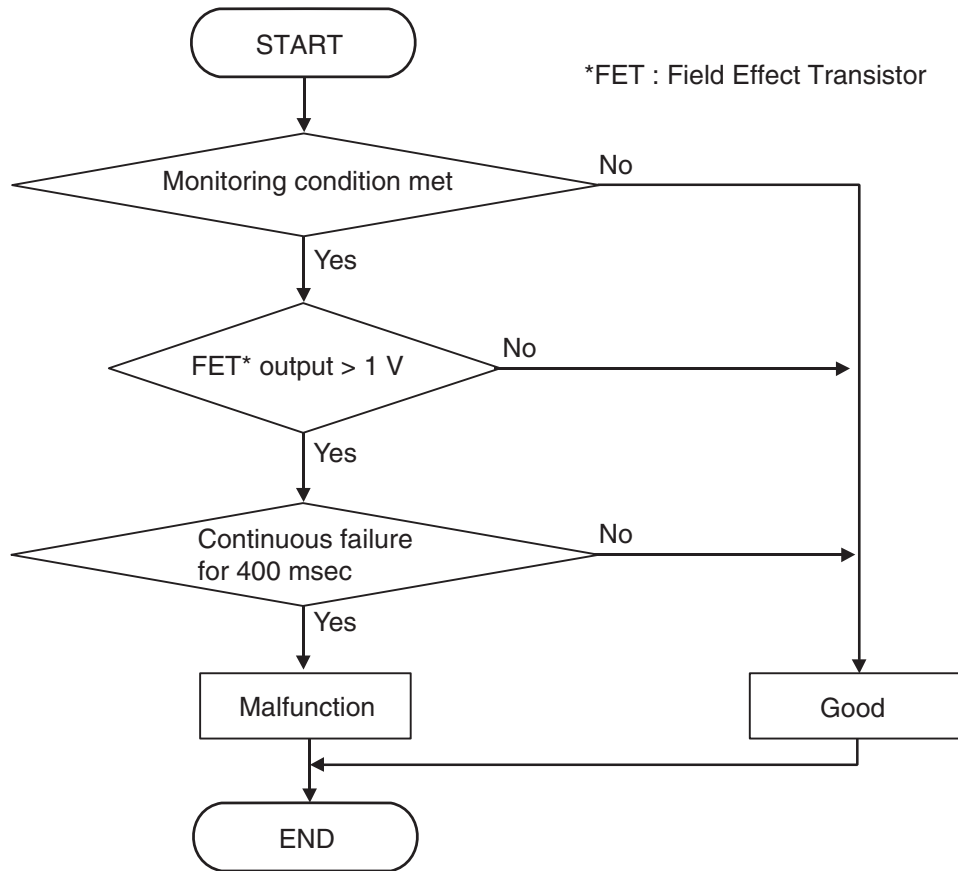

AC710661

DTC SET CONDITIONS

Check Conditions

- Voltage of battery: 8 V or more.
- Voltage of battery: 16.5 V or less.

JUDGMENT CRITERIA

- FET (Field Effect Transistor) output: 1 V or more. (400 millisecond)

OBD-II DRIVE CYCLE PATTERN

The FET channel output remains 1 V or less for 400 milliseconds.

PROBABLE CAUSES

- Malfunction of TC-SST-ECU
- Malfunction of clutch/shift switching solenoid 2

DIAGNOSTIC PROCEDURE

Required Special Tools:

- MB991958 Scan Tool (M.U.T.-III Sub Assembly)
 - MB991824: Vehicle Communication Interface (V.C.I.)
 - MB991827 M.U.T.-III USB Cable
 - MB991910 M.U.T.-III Main Harness A

STEP 1. Scan tool CAN bus diagnostics

Using scan tool MB991958, diagnose the CAN bus lines.

Q: Is the check result normal?

YES : Go to Step 2.

NO : Repair the CAN bus lines. (Refer to GROUP 54C – Troubleshooting P.54C-16.) After repairing the CAN bus line, go to Step 2.

STEP 2. Check whether the DTC is reset.

After driving in the 4th gear, check that the DTC is reset.

Q: Is DTC No. P2812 set?

YES : Replace the mechatronic assembly. (Refer to [P.22C-505.](#))

NO : Intermittent malfunction. (Refer to GROUP 00 –How to Cope with Intermittent Malfunction [P.00-13.](#))

DTC P2814: Clutch/Shift Switching Solenoid 2 System (Short to ground)**⚠ CAUTION**

- If there is any problem in the CAN bus lines, an incorrect diagnostic trouble code may be set. Prior to this diagnosis, diagnose the CAN bus lines.
- Whenever the ECU is replaced, ensure that the CAN bus lines are normal.

DIAGNOSTIC FUNCTION

TC-SST-ECU checks that the clutch/shift switching solenoid 2 circuit is normal.

DESCRIPTIONS OF MONITOR METHODS

The clutch/shift switching solenoid 2 circuit is determined to be short to ground.

MONITOR EXECUTION

- Continuous

**MONITOR EXECUTION CONDITIONS
(OTHER MONITOR AND SENSOR)**


Other Monitor (There is no temporary DTC stored in memory for the item monitored below)

- P2733: Clutch/shift switching solenoid 1, spool stuck
- P2736: Clutch/shift switching solenoid 1 system (Open circuit)
- P2738: Clutch/shift switching solenoid 1 system (Short to ground)
- P2739: Clutch/shift switching solenoid 1 system (Short to power supply)
- P2809: Clutch/shift switching solenoid 2, spool stuck
- P2812: Clutch/shift switching solenoid 2 system (Open circuit)
- P2815: Clutch/shift switching solenoid 2 system (Short to power supply)
- P181E: Clutch 2 (Pressure low range out)
- P181F: Clutch 2 (Pressure high range out)

Sensor (The sensor below is determined to be normal)

- Clutch/shift switching solenoid 1

LOGIC FLOW CHARTS (Monitor Sequence)

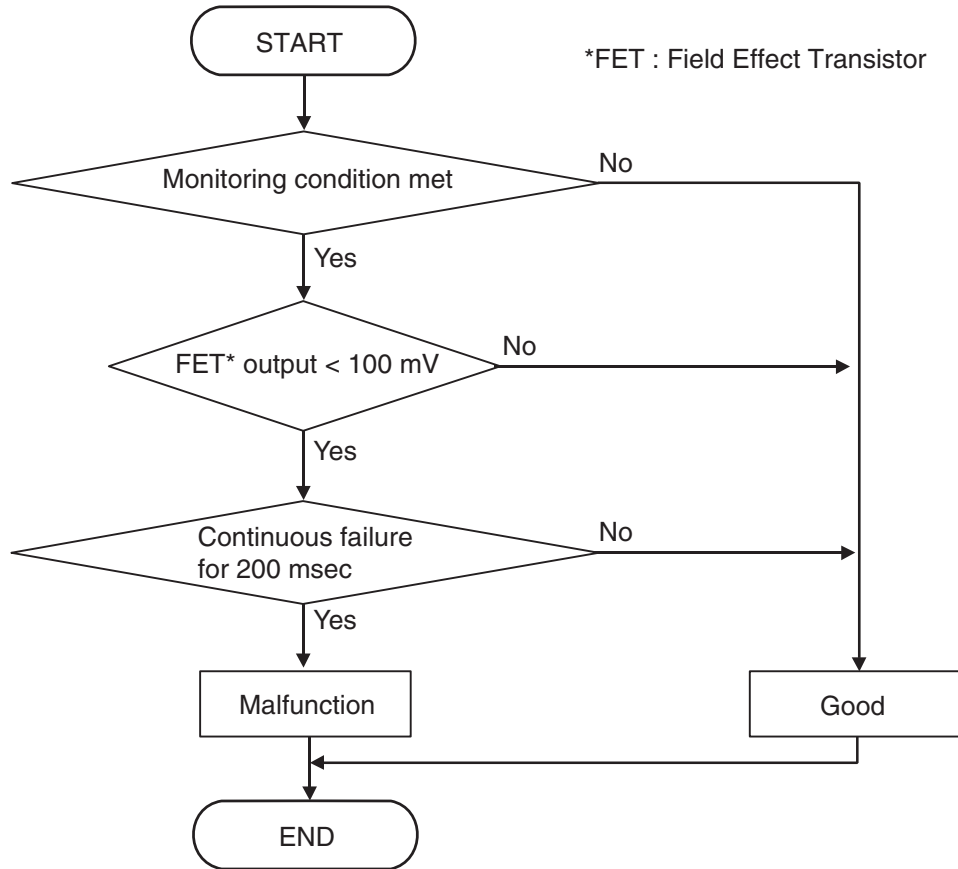

AC710662

DTC SET CONDITIONS

Check Conditions

- Voltage of battery: 8 V or more.
- Voltage of battery: 16.5 V or less.

JUDGMENT CRITERIA

- FET (Field Effect Transistor) output: 100 mV or less. (200 millisecond)

OBD-II DRIVE CYCLE PATTERN

The FET channel output remains 100 mV or more for 200 milliseconds.

PROBABLE CAUSES

- Malfunction of TC-SST-ECU
- Malfunction of clutch/shift switching solenoid 2

DIAGNOSTIC PROCEDURE

Required Special Tools:

- MB991958 Scan Tool (M.U.T.-III Sub Assembly)
 - MB991824: Vehicle Communication Interface (V.C.I.)
 - MB991827 M.U.T.-III USB Cable
 - MB991910 M.U.T.-III Main Harness A

STEP 1. Scan tool CAN bus diagnostics

Using scan tool MB991958, diagnose the CAN bus lines.

Q: Is the check result normal?

YES : Go to Step 2.

NO : Repair the CAN bus lines. (Refer to GROUP 54C – Troubleshooting P.54C-16.) After repairing the CAN bus line, go to Step 2.

STEP 2. Check whether the DTC is reset.**Q: Is DTC No. P2814 set?**

YES : Replace the mechatronic assembly. (Refer to [P.22C-505.](#))

NO : Intermittent malfunction. (Refer to GROUP 00 –How to Cope with Intermittent Malfunction [P.00-13.](#))

DTC P2815: Clutch/Shift Switching Solenoid 2 System (Short to power supply)**⚠ CAUTION**

- If there is any problem in the CAN bus lines, an incorrect diagnostic trouble code may be set. Prior to this diagnosis, diagnose the CAN bus lines.
- Whenever the ECU is replaced, ensure that the CAN bus lines are normal.

DIAGNOSTIC FUNCTION

TC-SST-ECU checks that the clutch/shift switching solenoid 2 circuit is normal.

DESCRIPTIONS OF MONITOR METHODS

The clutch/shift switching solenoid 2 circuit is determined to be short to power supply.

MONITOR EXECUTION

- Continuous

**MONITOR EXECUTION CONDITIONS
(OTHER MONITOR AND SENSOR)**


Other Monitor (There is no temporary DTC stored in memory for the item monitored below)

- P2733: Clutch/shift switching solenoid 1, spool stuck
- P2736: Clutch/shift switching solenoid 1 system (Open circuit)
- P2738: Clutch/shift switching solenoid 1 system (Short to ground)
- P2739: Clutch/shift switching solenoid 1 system (Short to power supply)
- P2809: Clutch/shift switching solenoid 2, spool stuck
- P2812: Clutch/shift switching solenoid 2 system (Open circuit)
- P2814: Clutch/shift switching solenoid 2 system (Short to ground)
- P181E: Clutch 2 (Pressure low range out)
- P181F: Clutch 2 (Pressure high range out)

Sensor (The sensor below is determined to be normal)

- Clutch/shift switching solenoid 1

LOGIC FLOW CHARTS (Monitor Sequence)

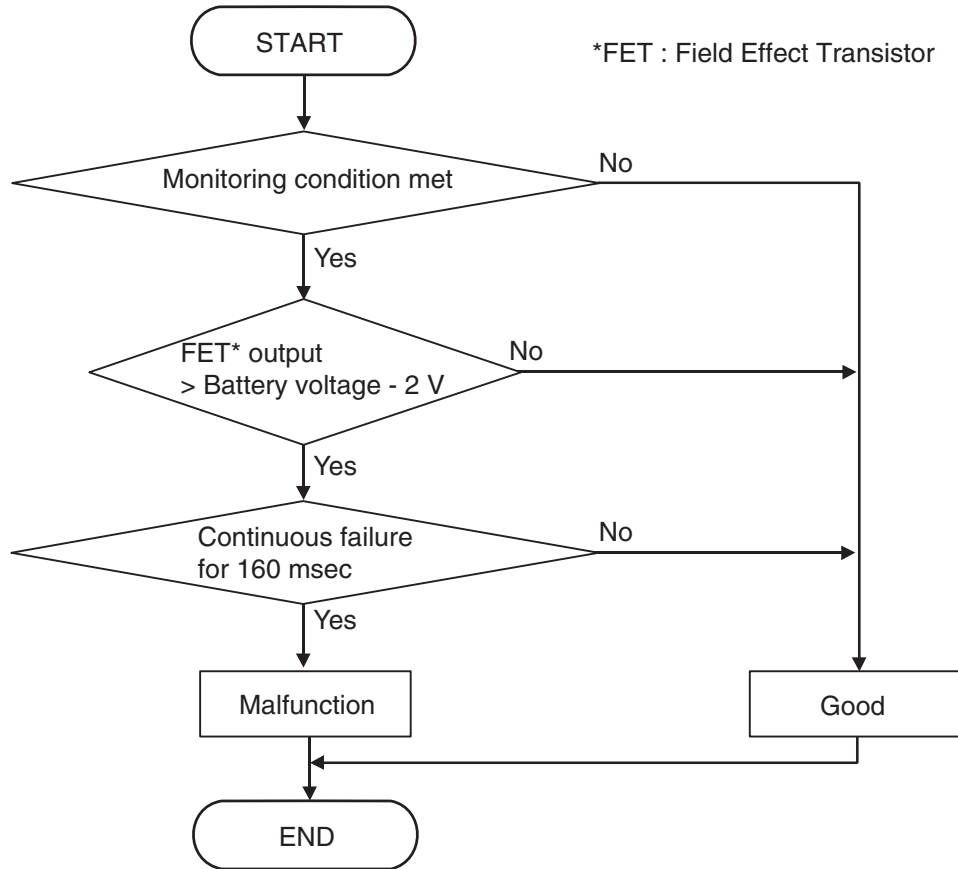

AC710667

DTC SET CONDITIONS

Check Conditions

- Voltage of battery: 8 V or more.
- Voltage of battery: 16.5 V or less.
- Clutch / shift switching solenoid 2: OFF.

JUDGMENT CRITERIA

- FET (Field Effect Transistor) output: (Battery voltage -2 V) or more. (160 millisecond)

OBD-II DRIVE CYCLE PATTERN

The FET channel output remains (Battery voltage -2 V) or less for 160 milliseconds.

PROBABLE CAUSES

- Malfunction of TC-SST-ECU
- Malfunction of clutch/shift switching solenoid 2

DIAGNOSTIC PROCEDURE

Required Special Tools:

- MB991958 Scan Tool (M.U.T.-III Sub Assembly)
 - MB991824: Vehicle Communication Interface (V.C.I.)
 - MB991827 M.U.T.-III USB Cable
 - MB991910 M.U.T.-III Main Harness A

STEP 1. Scan tool CAN bus diagnostics

Using scan tool MB991958, diagnose the CAN bus lines.

Q: Is the check result normal?

YES : Go to Step 2.

NO : Repair the CAN bus lines. (Refer to GROUP 54C – Troubleshooting P.54C-16.) After repairing the CAN bus line, go to Step 2.

STEP 2. Check whether the DTC is reset.**Q: Is DTC No. P2815 set?**

YES : Replace the mechatronic assembly. (Refer to [P.22C-505.](#))

NO : Intermittent malfunction. (Refer to GROUP 00 –How to Cope with Intermittent Malfunction [P.00-13.](#))

DTC U0001: Bus-off**⚠ CAUTION**

- If there is any problem in the CAN bus lines, an incorrect diagnostic trouble code may be set. Prior to this diagnosis, diagnose the CAN bus lines.
- Whenever the ECU is replaced, ensure that the CAN bus lines are normal.

DESCRIPTIONS OF MONITOR METHODS

TC-SST-ECU ceases communication (bus-off).

MONITOR EXECUTION

- Continuous

**MONITOR EXECUTION CONDITIONS
(OTHER MONITOR AND SENSOR)**

Other Monitor (There is no temporary DTC stored in memory for the item monitored below)


- P0841: Clutch 1 pressure sensor system (Poor performance)
- P0842: Clutch 1 pressure sensor system (Output low range out)

- P0843: Clutch 1 pressure sensor system (Output high range out)
- P0846: Clutch 2 pressure sensor system (Poor performance)
- P0847: Clutch 2 pressure sensor system (Output low range out)
- P0848: Clutch 2 pressure sensor system (Output high range out)
- P185D: Clutch open not possible
- U0100: Engine time-out error
- P1803: Shift lever system (CAN or LIN time-out error)
- P1870: Engine torque signal abnormality
- P1871: APS system (Signal abnormality)
- P1872: Between shift lever and TC-SST system (Q-A function abnormality)

Sensor (The sensor below is determined to be normal)

- Clutch 1 pressure sensor
- Clutch 2 pressure sensor
- APS
- Shift lever-ECU

LOGIC FLOW CHARTS (Monitor Sequence)

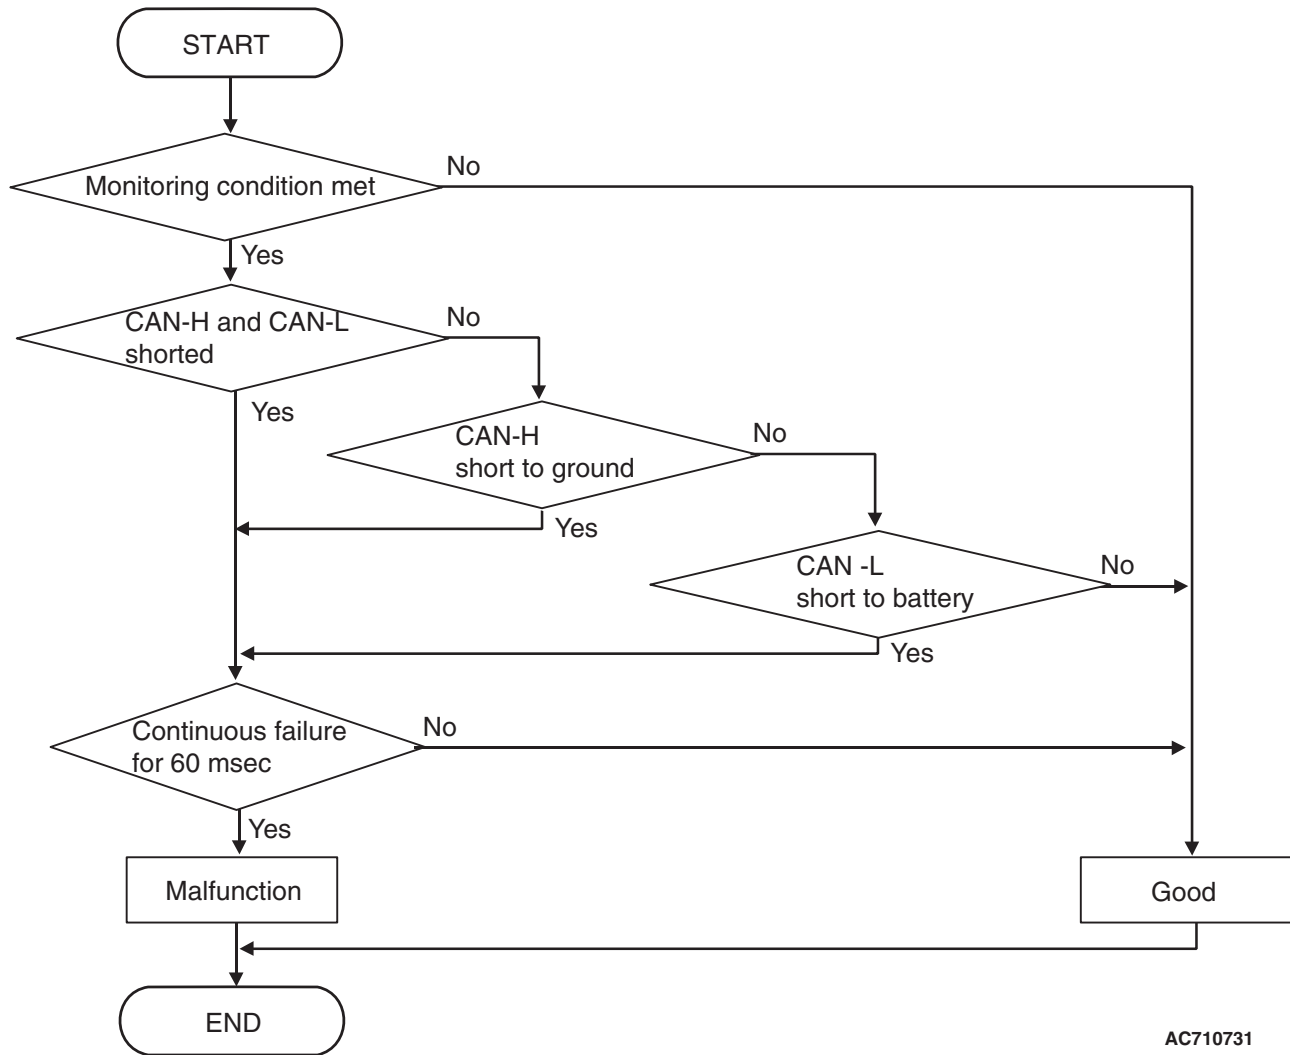

AC710731

DTC SET CONDITIONS

Check Conditions

- Voltage of battery: 8 V or more.
- Voltage of battery: 16.5 V or less.
- Time after TC-SST-ECU start: 5 seconds or more.

JUDGMENT CRITERIA

- CAN communication: Error. (60 millisecond)

OBD-II DRIVE CYCLE PATTERN

The CAN communication remains normal for 60 milliseconds.

PROBABLE CAUSES

- The CAN bus line is defective.
- Malfunction of TC-SST-ECU

DIAGNOSTIC PROCEDURE

Required Special Tools:

- MB991958 Scan Tool (M.U.T.-III Sub Assembly)
 - MB991824: Vehicle Communication Interface (V.C.I.)
 - MB991827 M.U.T.-III USB Cable
 - MB991910 M.U.T.-III Main Harness A

STEP 1. Scan tool CAN bus diagnostics

Using scan tool MB991958, diagnose the CAN bus lines.

Q: Is the check result normal?

YES : Go to Step 2.

NO : Repair the CAN bus lines. (Refer to GROUP 54C – Troubleshooting P.54C-16.) After repairing the CAN bus line, go to Step 2.

STEP 2. Check whether the DTC is reset.

30 seconds after turning ON the ignition switch, check that the DTC is reset.

Q: Is DTC No. U0001 set?

YES : Replace the mechatronic assembly. (Refer to P.22C-505.)

NO : Intermittent malfunction. (Refer to GROUP 00 –How to Cope with Intermittent Malfunction P.00-13.)

DTC U0100: Engine Time-out Error**⚠ CAUTION**

- If there is any problem in the CAN bus lines, an incorrect diagnostic trouble code may be set. Prior to this diagnosis, diagnose the CAN bus lines.
- Whenever the ECU is replaced, ensure that the CAN bus lines are normal.

DESCRIPTIONS OF MONITOR METHODS

The periodic communication data from the engine control module cannot be received.

MONITOR EXECUTION

- Continuous

**MONITOR EXECUTION CONDITIONS
(OTHER MONITOR AND SENSOR)**

Other Monitor (There is no temporary DTC stored in memory for the item monitored below)


- P0841: Clutch 1 pressure sensor system (Poor performance)
- P0842: Clutch 1 pressure sensor system (Output low range out)

- P0843: Clutch 1 pressure sensor system (Output high range out)
- P0846: Clutch 2 pressure sensor system (Poor performance)
- P0847: Clutch 2 pressure sensor system (Output low range out)
- P0848: Clutch 2 pressure sensor system (Output high range out)
- P185D: Clutch open not possible
- U0001: Bus off
- P1803: Shift lever system (CAN or LIN time-out error)
- P1870: Engine torque signal abnormality
- P1871: APS system (Signal abnormality)
- P1872: Between shift lever and TC-SST system (Q-A function abnormality)

Sensor (The sensor below is determined to be normal)

- Clutch 1 pressure sensor
- Clutch 2 pressure sensor
- APS
- Shift lever-ECU

LOGIC FLOW CHARTS (Monitor Sequence)

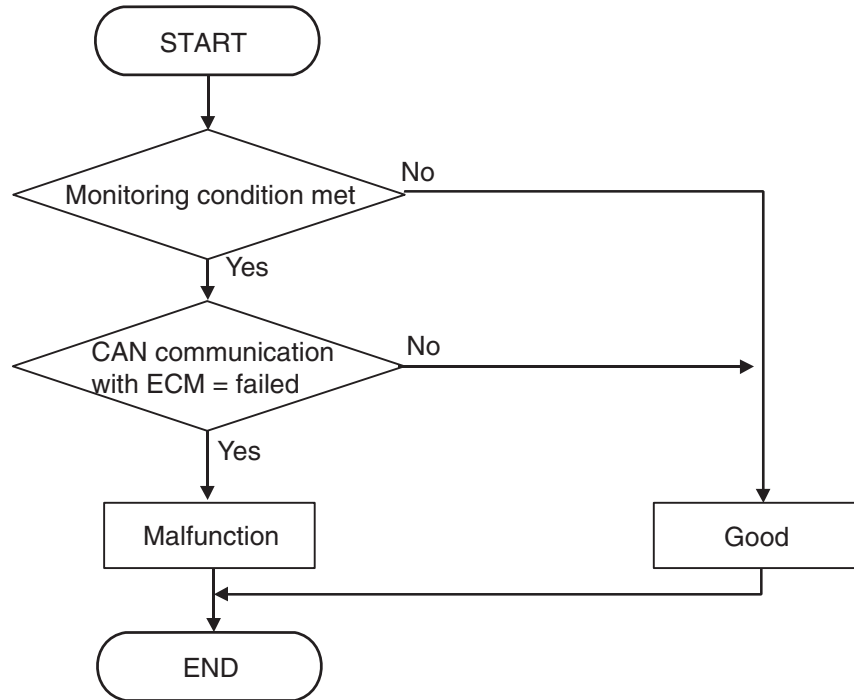

AC710732

DTC SET CONDITIONS

Check Conditions

- Voltage of battery: 10 V or more.
- Voltage of battery: 16.5 V or less.
- Time after TC-SST-ECU start: 5 seconds or more.

JUDGMENT CRITERIA

- CAN communication with ECM: Fail. (Immediately)

OBD-II DRIVE CYCLE PATTERN

Receive the signal from ECM.

PROBABLE CAUSES

- The CAN bus line is defective.
- ECM malfunction
- Malfunction of TC-SST-ECU

DIAGNOSTIC PROCEDURE

Required Special Tools:

- MB991958 Scan Tool (M.U.T.-III Sub Assembly)
 - MB991824: Vehicle Communication Interface (V.C.I.)
 - MB991827 M.U.T.-III USB Cable
 - MB991910 M.U.T.-III Main Harness A

STEP 1. Scan tool CAN bus diagnostics

Using the scan tool, diagnose the CAN bus lines.

Q: Is the check result normal?

YES : Go to Step 2.

NO : Repair the CAN bus lines. (Refer to GROUP 54C – Troubleshooting P.54C-16.) After repairing the CAN bus line, go to Step 2.

STEP 2. Scan tool diagnostic trouble code

Check the engine diagnostic trouble code. (Refer to GROUP 13A –Troubleshooting [P.13A-50.](#))

Q: Is the DTC set?

YES : Perform the relevant troubleshooting.

NO : Go to Step 3.

STEP 3. Check whether the DTC is reset.

After 15 seconds with the engine idle status, check that the DTC is reset.

Q: Is DTC No. U0100 set?

YES : Replace the mechatronic assembly. (Refer to [P.22C-505.](#))

NO : Intermittent malfunction. (Refer to GROUP 00 –How to Cope with Intermittent Malfunction [P.00-13.](#))

DTC U0103: Shift Lever Time-out Error**CAUTION**

- If there is any problem in the CAN bus lines, an incorrect diagnostic trouble code may be set. Prior to this diagnosis, diagnose the CAN bus lines.
- Whenever the ECU is replaced, ensure that the CAN bus lines are normal.

DESCRIPTIONS OF MONITOR METHODS

The periodic communication data from the shift lever-ECU cannot be received.

PROBABLE CAUSES

- The CAN bus line is defective.
- Malfunction of the shift lever-ECU
- Malfunction of TC-SST-ECU

DIAGNOSTIC PROCEDURE**Required Special Tools:**

- MB991958 Scan Tool (M.U.T.-III Sub Assembly)
 - MB991824: Vehicle Communication Interface (V.C.I.)
 - MB991827 M.U.T.-III USB Cable
 - MB991910 M.U.T.-III Main Harness A

STEP 1. Scan tool CAN bus diagnostics

Using the scan tool, diagnose the CAN bus lines.

Q: Is the check result normal?

YES : Go to Step 2.

NO : Repair the CAN bus lines. (Refer to GROUP 54C – Troubleshooting [P.54C-16.](#)) After repairing the CAN bus line, go to Step 2.

STEP 2. Scan tool diagnostic trouble code

Check the shift lever diagnostic trouble code. (Refer to [P.22C-366.](#))

Q: Is the DTC set?

YES : Perform the relevant troubleshooting.

NO : Go to Step 3.

STEP 3. Check whether the DTC is reset.

After 10 or more seconds have passed with the ignition switch ON position, check that the DTC is reset.

Q: Is DTC No. U0103 set?

YES : Replace the mechatronic assembly. (Refer to [P.22C-505.](#))

NO : Intermittent malfunction. (Refer to GROUP 00 –How to Cope with Intermittent Malfunction [P.00-13.](#))

DTC U0121: ASC Time-out Error

⚠ CAUTION

- If there is any problem in the CAN bus lines, an incorrect diagnostic trouble code may be set. Prior to this diagnosis, diagnose the CAN bus lines.
- Whenever the ECU is replaced, ensure that the CAN bus lines are normal.

DESCRIPTIONS OF MONITOR METHODS

The periodic communication data from the ASC-ECU cannot be received.

PROBABLE CAUSES

- The CAN bus line is defective.
- Malfunction of ASC-ECU
- Malfunction of TC-SST-ECU

DIAGNOSTIC PROCEDURE

Required Special Tools:

- MB991958 Scan Tool (M.U.T.-III Sub Assembly)
 - MB991824: Vehicle Communication Interface (V.C.I.)
 - MB991827 M.U.T.-III USB Cable
 - MB991910 M.U.T.-III Main Harness A

STEP 1. Scan tool CAN bus diagnostics

Using the scan tool, diagnose the CAN bus lines.

Q: Is the check result normal?

YES : Go to Step 2.

NO : Repair the CAN bus lines. (Refer to GROUP 54C – Troubleshooting [P.54C-16.](#)) After repairing the CAN bus line, go to Step 2.

STEP 2. Scan tool diagnostic trouble code

Check the ASC diagnostic trouble code. (Refer to GROUP 35C –Troubleshooting [P.35C-27.](#))

Q: Is the DTC set?

YES : Perform the relevant troubleshooting.

NO : Go to Step 3.

STEP 3. Check whether the DTC is reset.

After 15 seconds with the engine idle status, check that the DTC is reset.

Q: Is DTC No. U0121 set?

YES : Replace the mechatronic assembly. (Refer to [P.22C-505.](#))

NO : Intermittent malfunction. (Refer to GROUP 00 –How to Cope with Intermittent Malfunction [P.00-13.](#))

DTC U0136: AWC Time-out Error**⚠ CAUTION**

- If there is any problem in the CAN bus lines, an incorrect diagnostic trouble code may be set. Prior to this diagnosis, diagnose the CAN bus lines.
- Whenever the ECU is replaced, ensure that the CAN bus lines are normal.

DESCRIPTIONS OF MONITOR METHODS

The periodic communication data from the engine control module cannot be received.

PROBABLE CAUSES

- The CAN bus line is defective.
- Malfunction of AWC-ECU
- Malfunction of TC-SST-ECU

DIAGNOSTIC PROCEDURE**Required Special Tools:**

- MB991958 Scan Tool (M.U.T.-III Sub Assembly)
 - MB991824: Vehicle Communication Interface (V.C.I.)
 - MB991827 M.U.T.-III USB Cable
 - MB991910 M.U.T.-III Main Harness A

STEP 1. Scan tool CAN bus diagnostics

Using the scan tool, diagnose the CAN bus lines.

Q: Is the check result normal?

YES : Go to Step 2.

NO : Repair the CAN bus lines. (Refer to GROUP 54C – Troubleshooting [P.54C-16.](#))

STEP 2. Scan tool diagnostic trouble code

Check the AWC diagnostic trouble code. (Refer to GROUP 22C –Troubleshooting [P.22C-397.](#))

Q: Is the DTC set?

YES : Perform the relevant troubleshooting.

NO : Go to Step 3.

STEP 3. Check whether the DTC is reset.

After 10 or more seconds have passed with the ignition switch ON position, check that the DTC is reset.

Q: Is DTC No. U0136 set?

YES : Replace the mechatronic assembly. (Refer to [P.22C-505.](#))

NO : Intermittent malfunction. (Refer to GROUP 00 –How to Cope with Intermittent Malfunction [P.00-13.](#))

DTC U0141: ETACS Time-out Error

⚠ CAUTION

- If there is any problem in the CAN bus lines, an incorrect diagnostic trouble code may be set. Prior to this diagnosis, diagnose the CAN bus lines.
- Whenever the ECU is replaced, ensure that the CAN bus lines are normal.

DESCRIPTIONS OF MONITOR METHODS

The periodic communication data from the ETACS-ECU cannot be received.

PROBABLE CAUSES

- The CAN bus line is defective.
- Malfunction of the ETACS-ECU
- Malfunction of TC-SST-ECU

DIAGNOSTIC PROCEDURE

Required Special Tools:

- MB991958 Scan Tool (M.U.T.-III Sub Assembly)
 - MB991824: Vehicle Communication Interface (V.C.I.)
 - MB991827 M.U.T.-III USB Cable
 - MB991910 M.U.T.-III Main Harness A

STEP 1. Scan tool CAN bus diagnostics

Using the scan tool, diagnose the CAN bus lines.

Q: Is the check result normal?

YES : Go to Step 2.

NO : Repair the CAN bus lines. (Refer to GROUP 54C – Troubleshooting [P.54C-16.](#)) After repairing the CAN bus line, go to Step 2.

STEP 2. Scan tool diagnostic trouble code

Check the ETACS diagnostic trouble code. (Refer to GROUP 54A –Troubleshooting [P.54A-674.](#))

Q: Is the DTC set?

YES : Perform the relevant troubleshooting.

NO : Go to Step 3.

STEP 3. Check whether the DTC is reset.

After 15 seconds with the engine idle status, check that the DTC is reset.

Q: Is DTC No. U0141 set?

YES : Replace the mechatronic assembly. (Refer to [P.22C-505.](#))

NO : Intermittent malfunction. (Refer to GROUP 00 –How to Cope with Intermittent Malfunction [P.00-13.](#))

SYMPTOM PROCEDURES

INSPECTION PROCEDURE 1: The scan tool cannot communicate with TC-SST-ECU.

CAUTION

Whenever the ECU is replaced, ensure that the CAN bus lines are normal.

COMMENTS ON TROUBLE SYMPTOM

The CAN bus line, TC-SST-ECU power supply circuit, or TC-SST-ECU may have a problem.

PROBABLE CAUSES

- Wrong scan tool wiring harness
- The CAN bus line is defective.
- Malfunction of TC-SST-ECU power supply circuit
- Malfunction of TC-SST-ECU
- ECU malfunction of other system

DIAGNOSTIC PROCEDURE**Required Special Tools:**

- MB991958 Scan Tool (M.U.T.-III Sub Assembly)
 - MB991824: Vehicle Communication Interface (V.C.I.)
 - MB991827 M.U.T.-III USB Cable
 - MB991910 M.U.T.-III Main Harness A

STEP 1. Scan tool CAN bus diagnostics

Using scan tool MB991958, diagnose the CAN bus lines.


Q: Is the check result normal?

YES : Check and repair the TC-SST-ECU power supply circuit. (Refer to [P.22C-338.](#))

NO : Repair the CAN bus lines. (Refer to GROUP 54C – Troubleshooting [P.54C-16.](#))


INSPECTION PROCEDURE 2: The driving mode cannot be changed.

Twin clutch sport shift transaxle control mode switch circuit

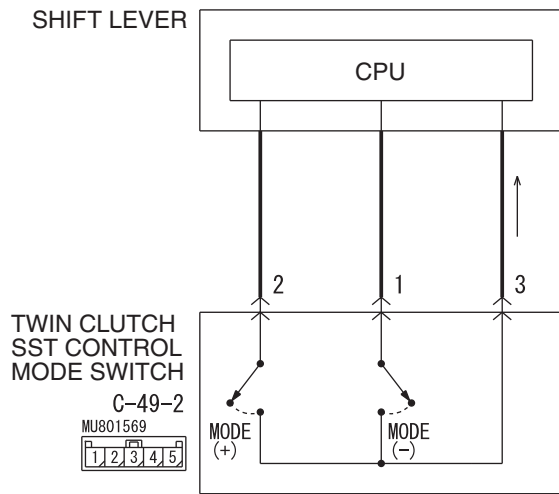

AC803069AB

Connector: C-49-2

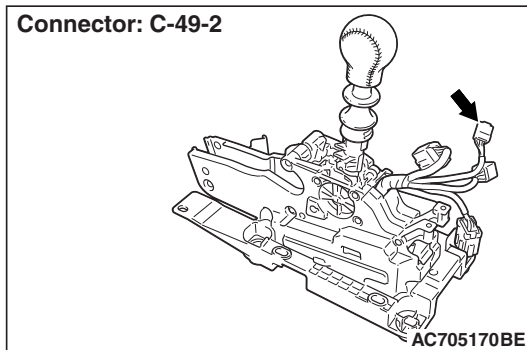

CAUTION

Whenever the ECU is replaced, ensure that the CAN bus lines are normal.

COMMENTS ON TROUBLE SYMPTOM

The twin clutch SST control mode switch, or TC-SST-ECU may have a problem.

PROBABLE CAUSES

- Malfunction of the twin clutch SST control mode switch
- Damaged harness wires and connectors
- Malfunction of the shift lever-ECU
- Malfunction of TC-SST-ECU

DIAGNOSTIC PROCEDURE

Required Special Tools:

- MB991958 Scan Tool (M.U.T.-III Sub Assembly)
 - MB991824: Vehicle Communication Interface (V.C.I.)
 - MB991827 M.U.T.-III USB Cable
 - MB991910 M.U.T.-III Main Harness A

STEP 1. Scan tool CAN bus diagnostics

Using scan tool MB991958, diagnose the CAN bus lines.

Q: Is the check result normal?

YES : Go to Step 2.

NO : Repair the CAN bus lines. (Refer to GROUP 54C – Troubleshooting [P.54C-16.](#)) After repairing the CAN bus line, go to Step 2.

STEP 2. Scan tool data list

Item No.32: Drive mode switch (Refer to data list reference table [P.22C-356.](#))

Q: Is the check result normal?

YES : Intermittent malfunction. (Refer to GROUP 00 –How to Cope with Intermittent Malfunction [P.00-13.](#))

NO : Go to Step 3.

STEP 3. Twin clutch SST control mode switch check

Refer to [P.22C-519.](#)

Q: Is the check result normal?

YES : Go to Step 4.

NO : Replace the twin clutch SST control mode switch. (Refer to [P.22C-519.](#))

STEP 4. Twin clutch SST control mode switch connector check: C-49-2

Check for the contact with terminals.

Q: Is the check result normal?

YES : Go to Step 5.

NO : Repair the defective connector.

STEP 5. Retest the system**Q: Does a malfunction take place again?**

YES : Go to Step 6

NO : The inspection is complete.

STEP 6. Trouble symptom recheck after replacing the shift lever assembly

(1) Replace the shift lever assembly. (Refer to [P.22C-488.](#))

(2) Verify that the condition described by the customer exists.


Q: Does a malfunction take place again?

YES : Replace the mechatronic assembly. (Refer to [P.22C-505.](#))

NO : Intermittent malfunction. (Refer to GROUP 00 –How to Cope with Intermittent Malfunction [P.00-13.](#))


INSPECTION PROCEDURE 3: Speed change with the paddle shift is impossible.

Paddle shift switch system circuit

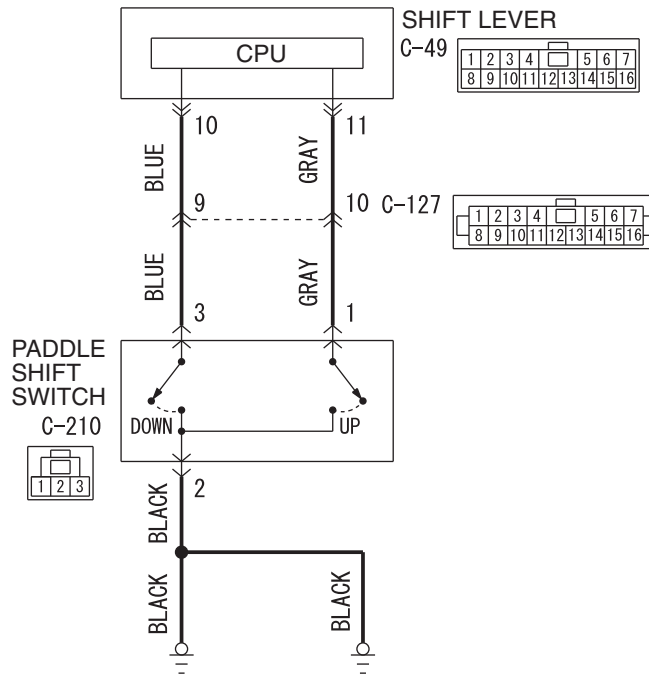


AC803077


Connector: C-49

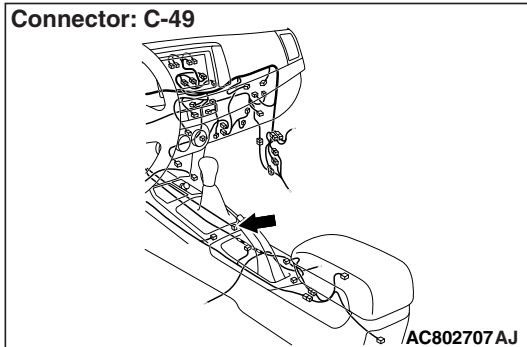

Connector: C-210

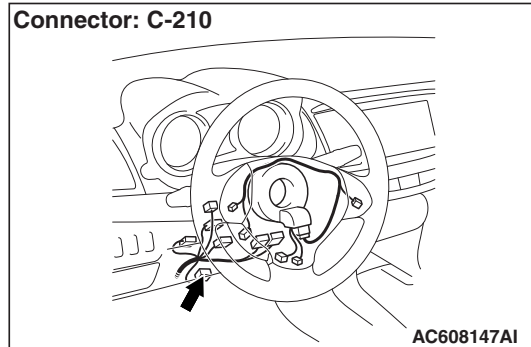

Connector: C-127

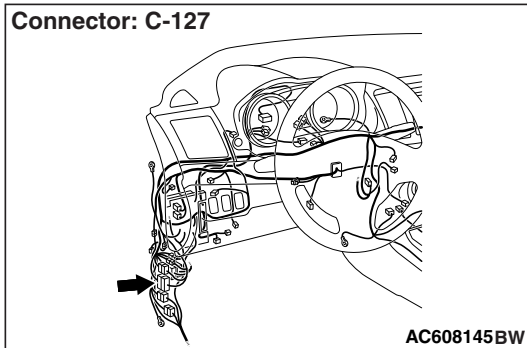

CAUTION

Whenever the ECU is replaced, ensure that the CAN bus lines are normal.

COMMENTS ON TROUBLE SYMPTOM

The paddle shift switch, or TC-SST-ECU may have a problem.

PROBABLE CAUSES

- Malfunction of the paddle shift switch
- Damaged harness wires and connectors
- Malfunction of the shift lever-ECU
- Malfunction of TC-SST-ECU

DIAGNOSTIC PROCEDURE**Required Special Tools:**

- MB991958 Scan Tool (M.U.T.-III Sub Assembly)
 - MB991824: Vehicle Communication Interface (V.C.I.)
 - MB991827 M.U.T.-III USB Cable
 - MB991910 M.U.T.-III Main Harness A

STEP 1. Scan tool CAN bus diagnostics

Using scan tool MB991958, diagnose the CAN bus lines.

Q: Is the check result normal?

YES : Go to Step 2.

NO : Repair the CAN bus lines. (Refer to GROUP 54C – Troubleshooting [P.54C-16.](#)) After repairing the CAN bus line, go to Step 2.

STEP 2. Paddle shift switch check

Refer to [P.22C-517.](#)

Q: Is the check result normal?

YES : Go to Step 3.

NO : Replace the paddle shift assembly. (Refer to [P.22C-517.](#))

STEP 3. Measure the resistance at C-210 paddle shift switch connector.

Disconnect the connector, and measure the resistance between terminal No.2 and ground at the wiring harness side.

OK: Continuity exists. (2 Ω or less)

Q: Is the check result normal?

YES : Go to Step 6.

NO : Go to Step 4.

STEP 4. Paddle shift switch connector check: C-210

Check for the contact with terminals.

Q: Is the check result normal?

YES : Go to Step 5.

NO : Repair the defective connector.

STEP 5. Check the wiring harness between C-210 paddle shift switch connector terminal No.2 and the body ground.

Check the ground line for open circuit.

Q: Is the check result normal?

YES : Go to Step 6.

NO : Repair the wiring harness.

STEP 6. Inspection of the shift lever assembly connector, intermediate connector, and paddle shift switch connector: C-49, C-127, C-210

Check for the contact with terminals.

Q: Is the check result normal?

YES : Go to Step 7.

NO : Repair the defective connector.

STEP 7. Check the wiring harness between C-210 paddle shift switch connector terminal No.1 and C-49 shift lever assembly connector terminal No.11, and between C-210 paddle shift switch connector terminal No.3 and C-49 shift lever assembly connector terminal No.10.

Check the output line for short or open circuit.

Q: Is the check result normal?

YES : Go to Step 8.

NO : Repair the wiring harness.

STEP 8. Retest the system

Q: Does a malfunction take place again?

YES : Go to Step 9.

NO : The inspection is complete.

STEP 9. Trouble symptom recheck after replacing the shift lever assembly

(1) Replace the shift lever assembly. (Refer to [P.22C-488.](#))

(2) Verify that the condition described by the customer exists.


Q: Does a malfunction take place again?

YES : Replace the mechatronic assembly. (Refer to [P.22C-505.](#))

NO : Intermittent malfunction. (Refer to GROUP 00 –How to Cope with Intermittent Malfunction [P.00-13.](#))


INSPECTION PROCEDURE 4: TC-SST-ECU power supply circuit malfunction

Power supply system circuit

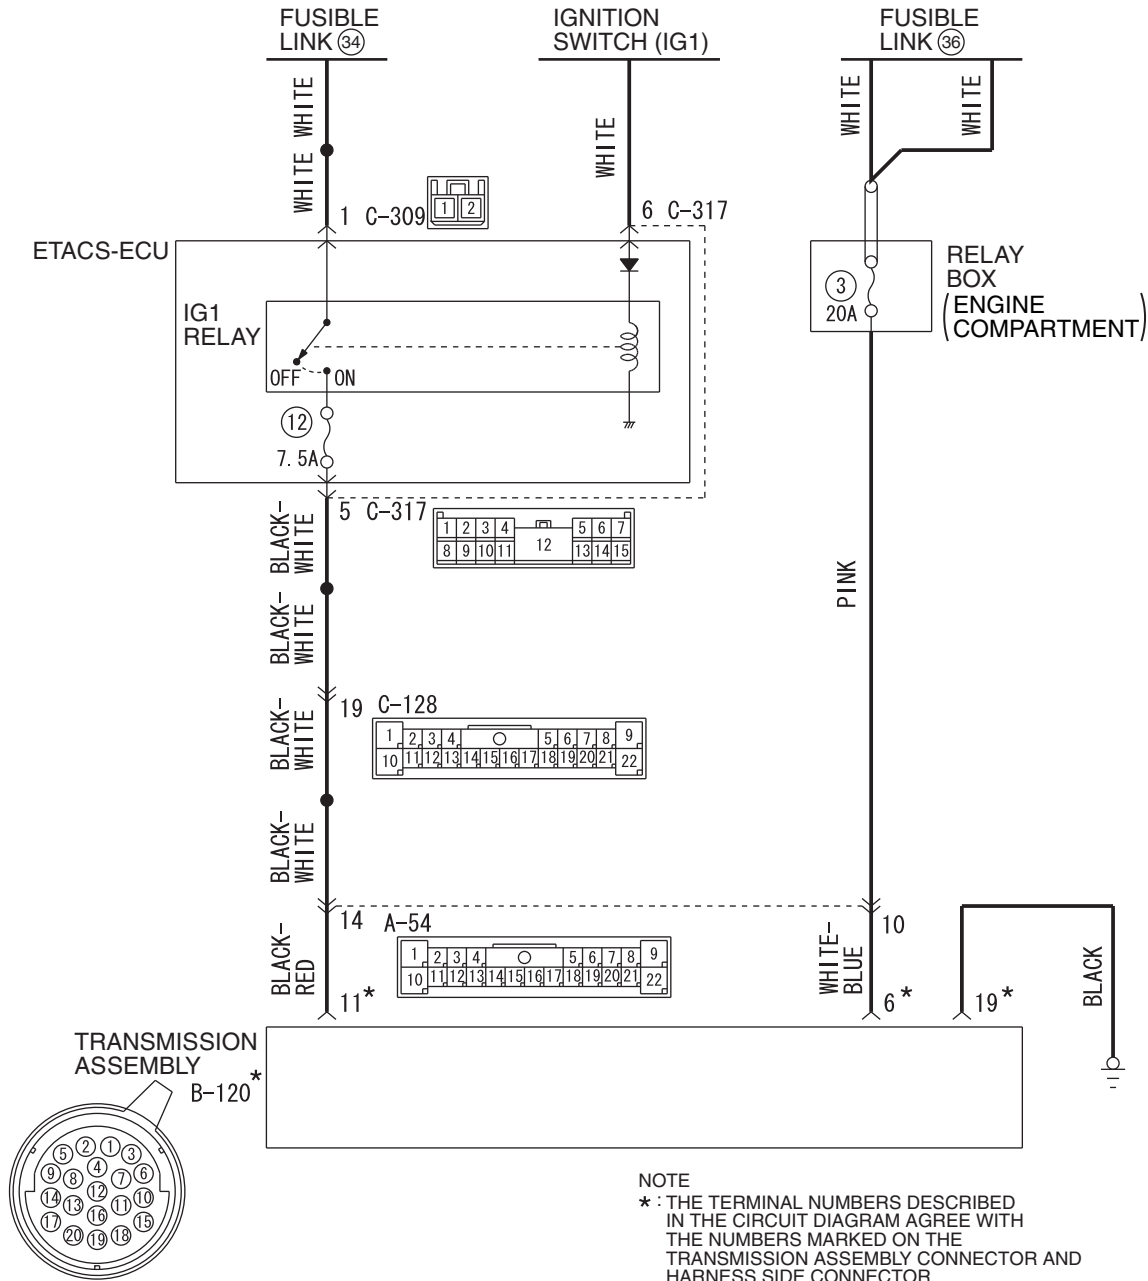


AC803079 AB

Connectors: A-54

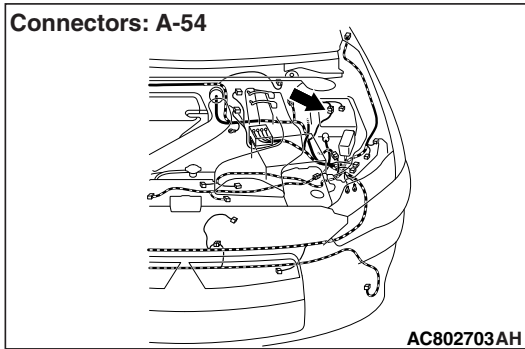


AC802703AH

Connector: C-128

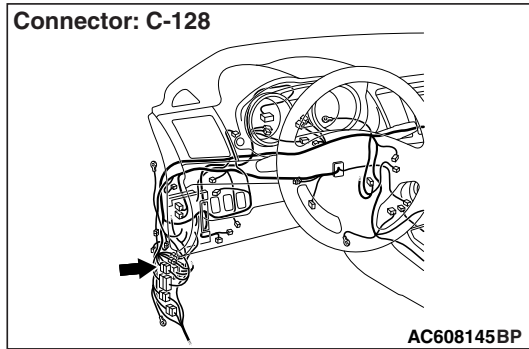


AC608145BP

Connector: B-120

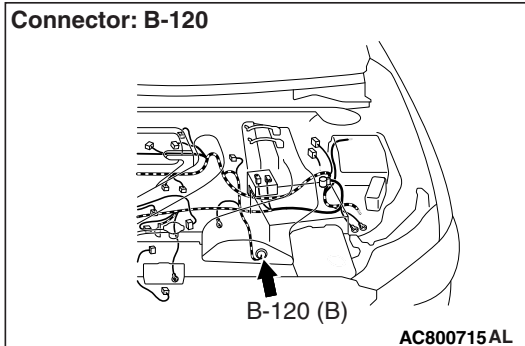

AC800715AL

Connectors: C-309, C-317
Junction block

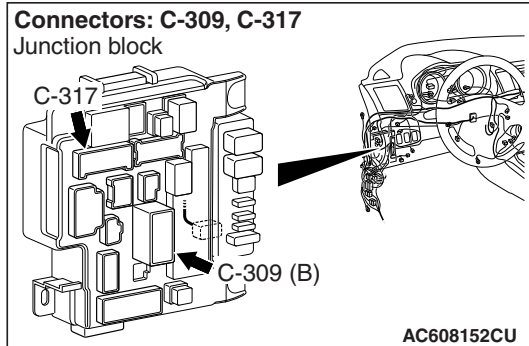

AC608152CU

CAUTION

Whenever the ECU is replaced, ensure that the CAN bus lines are normal.

COMMENTS ON TROUBLE SYMPTOM

TC-SST-ECU power supply circuit, ground circuit, or TC-SST-ECU may have a problem.

PROBABLE CAUSES

- Defective battery
- Damaged harness wires and connectors
- Malfunction of the ETACS-ECU
- Malfunction of the shift lever-ECU

DIAGNOSTIC PROCEDURE

Required Special Tools:

- MB991958 Scan Tool (M.U.T.-III Sub Assembly)
 - MB991824: Vehicle Communication Interface (V.C.I.)
 - MB991827 M.U.T.-III USB Cable
 - MB991910 M.U.T.-III Main Harness A

STEP 1. Check the battery.

Refer to GROUP 54A –Battery Test [P.54A-8](#).

Q: Is the battery in good condition?

YES : Go to Step 2.

NO : Charge or replace the battery.

STEP 2. Measure the resistance at B-120 TC-SST-ECU connector.

Disconnect the connector, and measure the resistance between terminal No.19 and ground at the wiring harness side.

OK: Continuity exists. (2 Ω or less)

Q: Is the check result normal?

YES : Go to Step 5.

NO : Go to Step 3.

STEP 3. TC-SST-ECU connector check: B-120

Check for the contact with terminals.

Q: Is the check result normal?

YES : Go to Step 4.

NO : Repair the defective connector.

STEP 4. Check the wiring harness between B-120**TC-SST-ECU connector terminal No.19 and body ground.**

Check the ground line for open circuit.

Q: Is the check result normal?

YES : Go to Step 5.

NO : Repair the wiring harness.

STEP 5. Measure the voltage at B-120 TC-SST-ECU connector.

Disconnect the connector, and measure the voltage between terminal No.6 and ground at the wiring harness side.

OK: Battery positive voltage**Q: Is the check result normal?**

YES : Go to Step 8.

NO : Go to Step 6.

STEP 6. Inspection of the intermediate connector and TC-SST-ECU connector: A-54, B-120

Check for the contact with terminals.

Q: Is the check result normal?

YES : Go to Step 7.

NO : Repair the defective connector.

STEP 7. Check the wiring harness between B-120**TC-SST-ECU connector terminal No.6 and fusible link No.36.**

Check the power supply line for short or open circuit.

Q: Is the check result normal?

YES : Go to Step 8.

NO : Repair the wiring harness.

STEP 8. Scan tool diagnostic trouble code

Check the ETACS diagnostic trouble code. (Refer to GROUP 54A –Troubleshooting [P.54A-674.](#))

Q: Is the DTC set?

YES : Perform the relevant troubleshooting.

NO : Go to Step 9.

STEP 9. Measure the voltage at B-120 TC-SST-ECU connector.

- (1) Disconnect the connector, and measure the voltage between terminal No.11 and ground at the wiring harness side.
- (2) Turn the ignition switch to the "ON" position.

OK: Battery positive voltage

Q: Is the check result normal?

YES : Go to Step 12.

NO : Go to Step 10.

STEP 10. Inspection of the intermediate connector, TC-SST-ECU connector, and ETACS-ECU connector: A-54, C-128, B-120, C-317

Check for the contact with terminals.

Q: Is the check result normal?

YES : Go to Step 11.

NO : Repair the defective connector.

STEP 11. Check the wiring harness between B-120 TC-SST-ECU connector terminal No.11 and C-317 ETACS-ECU connector terminal No.5.

Check the power supply line for short or open circuit.

Q: Is the check result normal?

YES : Go to Step 12.

NO : Repair the wiring harness.




STEP 12. Retest the system.

Q: Does a malfunction take place again?

YES : Replace the mechatronic assembly. (Refer to [P.22C-505.](#))

NO : Intermittent malfunction. (Refer to GROUP 00 –How to Cope with Intermittent Malfunction [P.00-13.](#))

INSPECTION PROCEDURE 5: The shift lever does not operate.

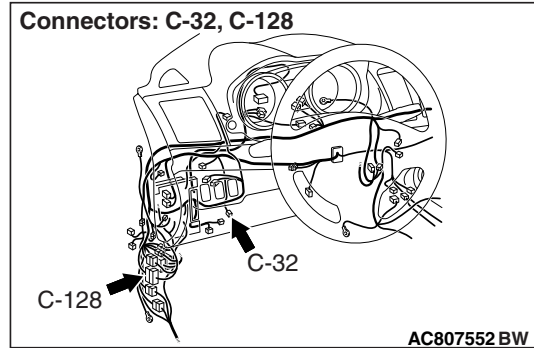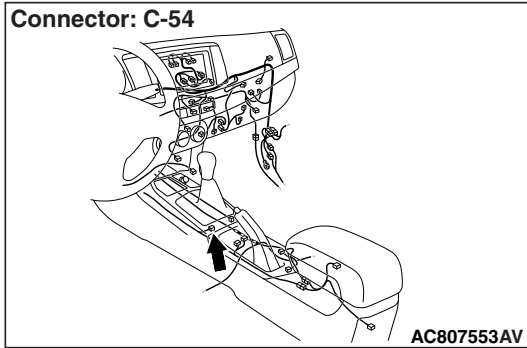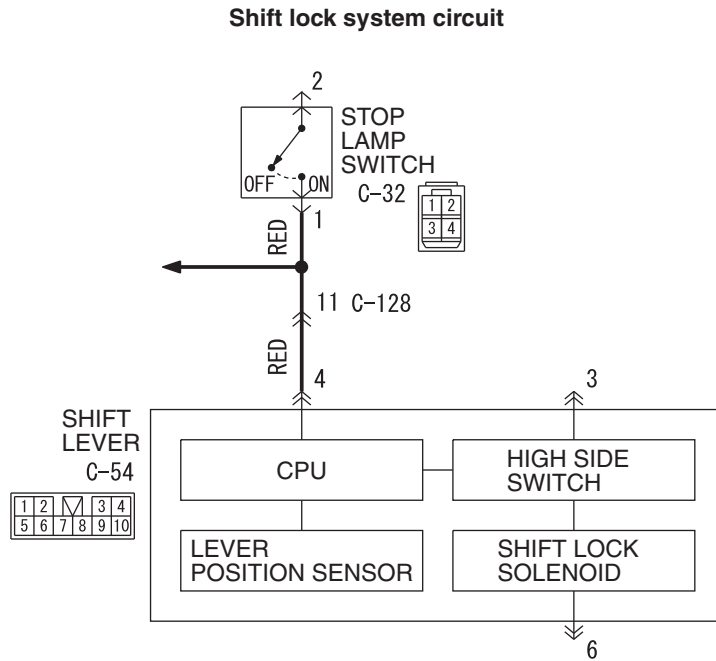

AC901771AD

COMMENTS ON TROUBLE SYMPTOM

The transaxle control cable, shift lever assembly, or transaxle assembly may have a problem.

NOTE: Before performing this diagnosis, check that the stoplight illuminates when the brake pedal is depressed.

If the stoplight does not illuminate, check that the following items are normal. Then perform this diagnosis.

- Open circuit or short to ground (including blown fuse) in stoplight switch system (power supply circuit)
- Stoplight switch system (output circuit) is shorted to ground.
- Improper installation of stoplight switch
- Malfunction of stoplight switch

PROBABLE CAUSES

- Malfunction of the transaxle control cable
- Malfunction of the shift lever assembly
- Malfunction of the transaxle assembly

DIAGNOSTIC PROCEDURE

Required Special Tools:

- MB991958 Scan Tool (M.U.T.-III Sub Assembly)
 - MB991824: Vehicle Communication Interface (V.C.I.)
 - MB991827 M.U.T.-III USB Cable
 - MB991910 M.U.T.-III Main Harness A

STEP 1. Scan tool data list.

Item No.5: Brake SW (Refer to data list reference table [P.22C-356.](#))

Q: Is the check result normal?

YES : Go to Step 7.

NO : Go to Step 2.

STEP 2. Shift lever-ECU connector check: C-54

Check for the contact with terminals.

Q: Is the check result normal?

YES : Go to Step 3.

NO : Repair the defective connector.

STEP 3. Measure the voltage at C-54 shift lever-ECU connector.

Disconnect the connector, and measure the voltage between terminal No.4 and ground at the wiring harness side.

- **OK: 1 V or less (brake pedal released)**
- **OK: System voltage (brake pedal depressed)**

Q: Is the check result normal?

YES : Go to Step 6.

NO : Go to Step 4.

STEP 4. Inspection of the stoplight switch connector, intermediate connector: C-32, C-128

Check for the contact with terminals.

Q: Is the check result normal?

YES : Go to Step 5.

NO : Repair the defective connector.

STEP 5. Check the wiring harness between C-32 stoplight switch connector terminal No.1 and C-54 shift lever-ECU connector terminal No.4.

Check the output line for open or short circuit.

Q: Is the check result normal?

YES : Go to Step 6.

NO : Repair the wiring harness.

STEP 6. Retest the system.**Q: Does a malfunction take place again?**

YES : Replace the shift lever assembly. (Refer to [P.22C-488.](#))

NO : Intermittent malfunction. (Refer to GROUP 00 –How to Cope with Intermittent Malfunction [P.00-13.](#))

STEP 7. Key interlock mechanism check

Refer to [P.22C-482.](#)

Q: Is the check result normal?

YES : Go to Step 8.

NO : Adjust the key interlock mechanism. (Refer to [P.22C-482.](#))

STEP 8. Shift lever operation check

- (1) Disconnect the connection of the shift lever assembly and the transaxle control cable.
- (2) Turn the ignition switch to the ON position. Check that the shift lever can be moved to each range when the brake pedal is depressed.

Q: Is the check result normal?

YES : Go to Step 9.

NO : Replace the shift lever assembly. (Refer to [P.22C-488.](#))

STEP 9. Transaxle control cable check

- (1) Connect the connection of the shift lever assembly and the transaxle control cable.
- (2) Disconnect the connection of the transaxle assembly and the transaxle control cable.
- (3) Turn the ignition switch to the ON position. Check that the shift lever can be moved to each range when the brake pedal is depressed.

Q: Is the check result normal?

YES : Replace the transaxle assembly. (Refer to [P.22C-497.](#))

NO : Check the transaxle control cable for installation condition, and repair or replace if necessary.(Refer to [P.22C-488.](#))

INSPECTION PROCEDURE 6: Gears cannot be changed with the manual mode.

⚠ CAUTION

Whenever the ECU is replaced, ensure that the CAN bus lines are normal.

COMMENTS ON TROUBLE SYMPTOM

The CAN bus lines, shift lever assembly, or mechatronic assembly may have a problem.

PROBABLE CAUSES

- Malfunction of the CAN bus lines
- Malfunction of the shift lever assembly
- Malfunction of the mechatronic assembly

DIAGNOSTIC PROCEDURE

Required Special Tools:

- MB991958 Scan Tool (M.U.T.-III Sub Assembly)
 - MB991824: Vehicle Communication Interface (V.C.I.)
 - MB991827 M.U.T.-III USB Cable
 - MB991910 M.U.T.-III Main Harness A

STEP 1. Scan tool CAN bus diagnostics

Using scan tool MB991958, diagnose the CAN bus lines.

Q: Is the check result normal?

YES : Go to Step 2.

NO : Repair the CAN bus lines. (Refer to GROUP 54C – Troubleshooting [P.54C-16.](#)) After repairing the CAN bus line, go to Step 2.

STEP 2. Scan tool data list.

Shift lever item No.1: Lever position (Refer to [P.22C-356.](#))

- (1) Confirm that "Manual" is displayed when the shift lever position is in the manual mode.
- (2) Confirm that "+" is displayed when the shift lever position is upshifted and held, and "-" is displayed when the shift lever position is downshifted and held.

Q: Is the check result normal?

YES : Go to Step 3.

NO : Replace the shift lever assembly. (Refer to [P.22C-488.](#))

STEP 3. Retest the system.

Q: Does a malfunction take place again?

YES : Replace the mechatronic assembly. (Refer to [P.22C-505.](#))

NO : Intermittent malfunction. (Refer to GROUP 00 –How to Cope with Intermittent Malfunction [P.00-13.](#))

INSPECTION PROCEDURE 7: The vehicle moves with the P-range.

COMMENTS ON TROUBLE SYMPTOM

The transaxle control cable, shift lever assembly, or transaxle assembly may have a problem.

PROBABLE CAUSES

- Malfunction of the transaxle control cable
- Malfunction of the shift lever assembly
- Malfunction of the transaxle assembly

DIAGNOSTIC PROCEDURE

STEP 1. Check for transaxle control cable installation

Check the transaxle control cable for installation condition.

Q: Is the check result normal?

YES : Go to Step 2.

NO : Install the transaxle control cable properly. (Refer to [P.22C-488.](#))

STEP 2. Transaxle control cable operation check

1. Disconnect the connection of the transaxle assembly and the transaxle control cable.
2. Turn the ignition switch to the ON position and depress the brake pedal. Check that the transaxle control cable works when shift lever is moved to P↔R.

Q: Is the check result normal?

YES : Go to Step 5.

NO : Go to Step 3.

STEP 3. Retest the system.**Q: Does a malfunction take place again?**

YES : Replace the transaxle control cable.(Refer to [P.22C-488.](#)) Then, go to Step 4.

NO : Intermittent malfunction. (Refer to GROUP 00 –How to Cope with Intermittent Malfunction [P.00-13.](#))

STEP 4. Retest the system.**Q: Does a malfunction take place again?**

YES : Replace the shift lever assembly. (Refer to [P.22C-488.](#))

NO : This diagnosis is complete.

STEP 5. Retest the system.**Q: Does a malfunction take place again?**

YES : Replace the transaxle assembly. (Refer to [P.22C-497.](#))

NO : Intermittent malfunction. (Refer to GROUP 00 –How to Cope with Intermittent Malfunction [P.00-13.](#))

INSPECTION PROCEDURE 8: Slipping occurs with the D-range/R-range/manual mode, and engine racing occurs during gear shifting/driving.

COMMENTS ON TROUBLE SYMPTOM

Fluid may be insufficient or contaminated. Oil filter case assembly, mechatronic assembly, clutch assembly, or transaxle assembly may have a problem.

PROBABLE CAUSES

- Insufficient or contaminated fluid
- Malfunction of the oil filter case assembly
- Malfunction of the mechatronic assembly
- Malfunction of the clutch assembly
- Malfunction of the transaxle assembly

DIAGNOSTIC PROCEDURE

STEP 1. Oil filter case assembly check

- (1) Check if the oil filter is replaced according to the cycle specified in the Maintenance Note.
 - Normal condition : 96,000 km (60,000 miles)
 - Severe condition : 48,000 km (30,000 miles)
- (2) Visually check that no fluid leaks form the oil filter case assembly and it is installed normally.

Q: Is the check result normal?

YES : Go to Step 2.

NO : Replace the oil filter case assembly. (Refer to [P.22C-515.](#))

STEP 2. Fluid check

Check for the fluid level and if no foreign material and contamination are found.

Q: Is the check result normal?

YES : Go to Step 3.

NO : Charge or replace the fluid.

STEP 3. Retest the system.

Q: Does a malfunction take place again?

YES : Replace the mechatronic assembly. (Refer to [P.22C-505.](#)) Then go to Step 4.

NO : Intermittent malfunction. (Refer to GROUP 00 –How to Cope with Intermittent Malfunction [P.00-13.](#))

STEP 4. Retest the system.

Q: Does a malfunction take place again?

YES : Replace the clutch assembly. (Refer to GROUP 22D –Transaxle [P.22D-6.](#)) Then go to Step 5.

NO : Intermittent malfunction. (Refer to GROUP 00 –How to Cope with Intermittent Malfunction [P.00-13.](#))

STEP 5. Retest the system.**Q: Does a malfunction take place again?**

YES : Replace the transaxle assembly. (Refer to [P.22C-497.](#))

NO : Intermittent malfunction. (Refer to GROUP 00 –How to Cope with Intermittent Malfunction [P.00-13.](#))

INSPECTION PROCEDURE 9: The vehicle does not creep with the D-range/R-range/manual mode.**COMMENTS ON TROUBLE SYMPTOM**

The foot brake or parking brake may be dragging. Mechatronic assembly, clutch assembly, or transaxle assembly may have a problem.

NOTE: If the fluid temperature is extremely high, the creep is controlled slightly for slip control.

PROBABLE CAUSES

- Drag of foot brake or parking brake
- Malfunction of the mechatronic assembly
- Malfunction of the clutch assembly
- Malfunction of the transaxle assembly

DIAGNOSTIC PROCEDURE**STEP 1. Inspect the foot brake or parking brake.**

Check that the foot brake or parking brake is not dragging.

Q: Is the check result normal?

YES : Go to Step 2.

NO : Adjust the foot brake or parking brake.

STEP 2. Retest the system.**Q: Does a malfunction take place again?**

YES : Replace the mechatronic assembly. (Refer to [P.22C-505.](#)) Then go to Step 3.

NO : Intermittent malfunction. (Refer to GROUP 00 –How to Cope with Intermittent Malfunction [P.00-13.](#))

STEP 3. Retest the system.**Q: Does a malfunction take place again?**

YES : Replace the clutch assembly. (Refer to GROUP 22D –Transaxle [P.22D-6.](#)) Then go to Step 4.

NO : Intermittent malfunction. (Refer to GROUP 00 –How to Cope with Intermittent Malfunction [P.00-13.](#))

STEP 4. Retest the system.**Q: Does a malfunction take place again?**

YES : Replace the transaxle assembly. (Refer to [P.22C-497.](#))

NO : Intermittent malfunction. (Refer to GROUP 00 –How to Cope with Intermittent Malfunction [P.00-13.](#))

INSPECTION PROCEDURE 10: The shock is large when the vehicle is stopped and the brake pedal is released with the D-range/R-range/manual mode.

COMMENTS ON TROUBLE SYMPTOM

The mechatronic assembly, or clutch assembly may have a problem.

PROBABLE CAUSES

- Malfunction of the mechatronic assembly
- Malfunction of the clutch assembly

DIAGNOSTIC PROCEDURE

STEP 1. Retest the system.

Q: Does a malfunction take place again?

YES : Replace the mechatronic assembly. (Refer to [P.22C-505.](#)) Then go to Step 2.

NO : Intermittent malfunction. (Refer to GROUP 00 –How to Cope with Intermittent Malfunction [P.00-13.](#))

STEP 2. Retest the system.

Q: Does a malfunction take place again?

YES : Replace the clutch assembly. (Refer to GROUP 22D –Transaxle [P.22D-6.](#))

NO : Intermittent malfunction. (Refer to GROUP 00 –How to Cope with Intermittent Malfunction [P.00-13.](#))

INSPECTION PROCEDURE 11: Poor acceleration

COMMENTS ON TROUBLE SYMPTOM

Fluid may be insufficient or contaminated. Engine system, mechatronic assembly, clutch assembly, or transaxle assembly may have a problem.

PROBABLE CAUSES

- Malfunction of the engine system
- Insufficient or contaminated fluid
- Malfunction of the mechatronic assembly
- Malfunction of the clutch assembly
- Malfunction of the transaxle assembly

DIAGNOSTIC PROCEDURE

STEP 1. Check the engine system

Q: Is the check result normal?

YES : Go to Step 2

NO : Repair the engine system.

STEP 2. Fluid check

Check for the fluid level and if no foreign material and contamination are found.

Q: Is the check result normal?

YES : Go to Step 3.

NO : Charge or replace the fluid.

STEP 3. Retest the system.**Q: Does a malfunction take place again?**

YES : Replace the mechatronic assembly. (Refer to [P.22C-505.](#)) Then go to Step 4.

NO : Intermittent malfunction. (Refer to GROUP 00 –How to Cope with Intermittent Malfunction [P.00-13.](#))

STEP 4. Retest the system.**Q: Does a malfunction take place again?**

YES : Replace the clutch assembly. (Refer to GROUP 22D –Transaxle [P.22D-6.](#)) Then go to Step 5.

NO : Intermittent malfunction. (Refer to GROUP 00 –How to Cope with Intermittent Malfunction [P.00-13.](#))

STEP 5. Retest the system.**Q: Does a malfunction take place again?**

YES : Replace the transaxle assembly. (Refer to [P.22C-497.](#))

NO : Intermittent malfunction. (Refer to GROUP 00 –How to Cope with Intermittent Malfunction [P.00-13.](#))

INSPECTION PROCEDURE 12: The gear shifting does not occur. (The transaxle does not upshift or downshift.)

⚠ CAUTION

Whenever the ECU is replaced, ensure that the CAN bus lines are normal.

COMMENTS ON TROUBLE SYMPTOM

The CAN bus lines, mechatronic assembly, clutch assembly, or transaxle assembly may have a problem.

PROBABLE CAUSES

- Malfunction of the CAN bus lines
- Malfunction of the mechatronic assembly
- Malfunction of the clutch assembly
- Malfunction of the transaxle assembly

DIAGNOSTIC PROCEDURE**Required Special Tools:**

- MB991958 Scan Tool (M.U.T.-III Sub Assembly)
 - MB991824: Vehicle Communication Interface (V.C.I.)
 - MB991827 M.U.T.-III USB Cable
 - MB991910 M.U.T.-III Main Harness A

STEP 1. Scan tool CAN bus diagnostics

Using scan tool MB991958, diagnose the CAN bus lines.

Q: Is the check result normal?

YES : Go to Step 2.

NO : Repair the CAN bus lines. (Refer to GROUP 54C – Troubleshooting [P.54C-16.](#)) After repairing the CAN bus line, go to Step 2.

STEP 2. Retest the system.

Q: Does a malfunction take place again?

YES : Replace the mechatronic assembly. (Refer to [P.22C-505.](#)) Then go to Step 3.

NO : Intermittent malfunction. (Refer to GROUP 00 –How to Cope with Intermittent Malfunction [P.00-13.](#))

STEP 3. Retest the system.

Q: Does a malfunction take place again?

YES : Replace the clutch assembly. (Refer to GROUP 22D –Transaxle [P.22D-6.](#)) Then go to Step 4.

NO : Intermittent malfunction. (Refer to GROUP 00 –How to Cope with Intermittent Malfunction [P.00-13.](#))

STEP 4. Retest the system.

Q: Does a malfunction take place again?

YES : Replace the transaxle assembly. (Refer to [P.22C-497.](#))

NO : Intermittent malfunction. (Refer to GROUP 00 –How to Cope with Intermittent Malfunction [P.00-13.](#))

INSPECTION PROCEDURE 13: The shift shock is large.

COMMENTS ON TROUBLE SYMPTOM

The mechatronic assembly, clutch assembly, or transaxle assembly may have a problem.

PROBABLE CAUSES

- Malfunction of the mechatronic assembly
- Malfunction of the clutch assembly
- Malfunction of the transaxle assembly

DIAGNOSTIC PROCEDURE

STEP 1. Retest the system.

Q: Does a malfunction take place again?

YES : Replace the mechatronic assembly. (Refer to [P.22C-505.](#)) Then go to Step 2.

NO : Intermittent malfunction. (Refer to GROUP 00 –How to Cope with Intermittent Malfunction [P.00-13.](#))

STEP 2. Retest the system.

Q: Does a malfunction take place again?

YES : Replace the clutch assembly. (Refer to GROUP 22D –Transaxle [P.22D-6.](#)) Then go to Step 3.

NO : Intermittent malfunction. (Refer to GROUP 00 –How to Cope with Intermittent Malfunction [P.00-13.](#))

STEP 3. Retest the system.**Q: Does a malfunction take place again?**

YES : Replace the transaxle assembly. (Refer to [P.22C-497.](#))

NO : Intermittent malfunction. (Refer to GROUP 00 –How to Cope with Intermittent Malfunction [P.00-13.](#))

INSPECTION PROCEDURE 14: Delay occurs when the lever is shifted from "N" to "D" or "N" to "R".**COMMENTS ON TROUBLE SYMPTOM**

Fluid may be insufficient or contaminated.
TC-SST-ECU power supply circuit, mechatronic assembly, clutch assembly, or transaxle assembly may have a problem.

PROBABLE CAUSES

- Malfunction of TC-SST-ECU power supply circuit
- Insufficient or contaminated fluid
- Malfunction of the mechatronic assembly
- Malfunction of the clutch assembly
- Malfunction of the transaxle assembly

DIAGNOSTIC PROCEDURE**STEP 1. Check the TC-SST-ECU power supply circuit**

Refer to [P.22C-338.](#)

Q: Is the check result normal?

YES : Go to Step 2.

NO : Repair the TC-SST-ECU power supply circuit. (Refer to [P.22C-338.](#))

STEP 2. Fluid check

Check for the fluid level and if no foreign material and contamination are found.

Q: Is the check result normal?

YES : Go to Step 3.

NO : Charge or replace the fluid.

STEP 3. Retest the system.**Q: Does a malfunction take place again?**

YES : Replace the mechatronic assembly. (Refer to [P.22C-505.](#)) Then go to Step 4.

NO : Intermittent malfunction. (Refer to GROUP 00 –How to Cope with Intermittent Malfunction [P.00-13.](#))

STEP 4. Retest the system.**Q: Does a malfunction take place again?**

YES : Replace the clutch assembly. (Refer to GROUP 22D –Transaxle [P.22D-6.](#)) Then go to Step 5.

NO : Intermittent malfunction. (Refer to GROUP 00 –How to Cope with Intermittent Malfunction [P.00-13.](#))

STEP 5. Retest the system.

Q: Does a malfunction take place again?

YES : Replace the transaxle assembly. (Refer to [P.22C-497.](#))

NO : Intermittent malfunction. (Refer to GROUP 00 –How to Cope with Intermittent Malfunction [P.00-13.](#))

INSPECTION PROCEDURE 15: The engine stops when the lever is shifted from "N" to "D" or "N" to "R".

COMMENTS ON TROUBLE SYMPTOM

Engine system, mechatronic assembly, or clutch assembly may have a problem.

PROBABLE CAUSES

- Malfunction of the engine system
- Malfunction of the mechatronic assembly
- Malfunction of the clutch assembly

DIAGNOSTIC PROCEDURE

STEP 1. Check the engine system

Q: Is the check result normal?

YES : Go to Step 2

NO : Repair the engine system.

STEP 2. Retest the system.

Q: Does a malfunction take place again?

YES : Replace the mechatronic assembly. (Refer to [P.22C-505.](#)) Then go to Step 3.

NO : Intermittent malfunction. (Refer to GROUP 00 –How to Cope with Intermittent Malfunction [P.00-13.](#))

STEP 3. Retest the system.

Q: Does a malfunction take place again?

YES : Replace the clutch assembly. (Refer to GROUP 22D –Transaxle [P.22D-6.](#))

NO : Intermittent malfunction. (Refer to GROUP 00 –How to Cope with Intermittent Malfunction [P.00-13.](#))

INSPECTION PROCEDURE 16: The vehicle moves with the N-range on the level ground.**COMMENTS ON TROUBLE SYMPTOM**

The mechatronic assembly, or clutch assembly may have a problem.

PROBABLE CAUSES

- Malfunction of the mechatronic assembly
- Malfunction of the clutch assembly

DIAGNOSTIC PROCEDURE**STEP 1. Retest the system.****Q: Does a malfunction take place again?**

YES : Replace the mechatronic assembly. (Refer to [P.22C-505](#).) Then go to Step 2.

NO : Intermittent malfunction. (Refer to GROUP 00 –How to Cope with Intermittent Malfunction [P.00-13](#).)

STEP 2. Retest the system.**Q: Does a malfunction take place again?**

YES : Replace the clutch assembly. (Refer to GROUP 22D –Transaxle [P.22D-6](#).)

NO : Intermittent malfunction. (Refer to GROUP 00 –How to Cope with Intermittent Malfunction [P.00-13](#).)

INSPECTION PROCEDURE 17: Judder/noise/vibration**COMMENTS ON TROUBLE SYMPTOM**

Fluid may be insufficient or contaminated. Mechatronic assembly or clutch assembly may have a problem.

NOTE: The following items can become a cause of the probable causes other than transaxle. Perform this troubleshooting after checking that the following probable causes are normal.

- *Engine system*
- *Vibration of exhaust system*

- *Driveshaft malfunction (flaw, wear, looseness, large deflection)*
- *Tire*
- *Interference of the drive system and body*
- *Suspension malfunction (looseness)*

PROBABLE CAUSES

- Insufficient or contaminated fluid
- Malfunction of the mechatronic assembly
- Malfunction of the clutch assembly
- Malfunction of the transaxle assembly

DIAGNOSTIC PROCEDURE

STEP 1. Fluid check

Check for the fluid level and if no foreign material and contamination are found.

Q: Is the check result normal?

YES : Go to Step 2.

NO : Charge or replace the fluid.

STEP 2. Retest the system.

Q: Does a malfunction take place again?

YES : Replace the mechatronic assembly. (Refer to [P.22C-505.](#)) Then go to Step 3.

NO : Intermittent malfunction. (Refer to GROUP 00 –How to Cope with Intermittent Malfunction [P.00-13.](#))

STEP 3. Retest the system.

Q: Does a malfunction take place again?

YES : Replace the clutch assembly. (Refer to GROUP 22D –Transaxle [P.22D-6.](#)) Then go to Step 4.

NO : Intermittent malfunction. (Refer to GROUP 00 –How to Cope with Intermittent Malfunction [P.00-13.](#))

STEP 4. Retest the system.

Q: Does a malfunction take place again?

YES : Replace the transaxle assembly. (Refer to [P.22C-497.](#))

NO : Intermittent malfunction. (Refer to GROUP 00 –How to Cope with Intermittent Malfunction [P.00-13.](#))

DATA LIST REFERENCE TABLE

M1225006700174

Item No.	Display on scan tool	Item name	Check conditions	Normal conditions	
4	Engine torque control source	Engine torque control status	Engine: Idling	Idle control	
			<ul style="list-style-type: none"> • Engine: Idling • Accelerator pedal: Depressed 	Driver request	
5	Brake SW	Stoplight switch	Ignition switch: ON	Brake pedal: Depressed	ON
				Brake pedal: Released	OFF
14	Lever position	Shift lever position	Ignition switch: ON	Shift lever position: P	P
				Shift lever position: R⇔P	R-P
				Shift lever position: R	R
				Shift lever position: N⇔R	N-R
				Shift lever position: N	N
				Shift lever position: D⇔N	D-N
				Shift lever position: D	D
				Shift lever position: Manual mode	Manual
				Shift lever position: Upshift and hold	+
	Shift lever position: Downshift and hold	-			
23	Current gear	Gear	Ignition switch: ON	Shift lever position: N	N
				Driving at a constant speed in 1st	1st
				Driving at a constant speed in 2nd	2nd
				Driving at a constant speed in 3rd	3rd
				Driving at a constant speed in 4th	4th
				Driving at a constant speed in 5th	5th
				Driving at a constant speed in 6th	6th
				Reverse	R
24	Target gear	Target gear	Ignition switch: ON	Shift lever position: N	N
				Driving at a constant speed in 1st	1st
				Driving at a constant speed in 2nd	2nd
				Driving at a constant speed in 3rd	3rd
				Driving at a constant speed in 4th	4th
				Driving at a constant speed in 5th	5th
				Driving at a constant speed in 6th	6th
				Reverse	R
26	Parking brake	Parking brake	Ignition switch: ON	Parking brake lever: Pulled	ON
				Parking brake lever: Released	OFF

Item No.	Display on scan tool	Item name	Check conditions		Normal conditions
27	Vehicle speed	Vehicle speed	Steady state driving		Nearly the same as the speedometer displayed
28	ABS/ASC operation flag	ABS/ASC operation flag	ABS operated		ON
			ABS not operated		OFF
29	ABS/ASC status	ABS/ASC status	Ignition switch: ON		Error/ Diag mode, Normal mode, ASC error, Emission test
30	Paddle SW (up)	Paddle shift switch (up)	Ignition switch: ON	Paddle shift position: Upshift and hold	ON
				Paddle shift position: Other than the above	OFF
31	Paddle SW (down)	Paddle shift switch (down)	Ignition switch: ON	Paddle shift position: Downshift and hold	ON
				Paddle shift position: Other than the above	OFF
32	Drive mode (SW input)	Twin clutch SST control mode switch	Ignition switch: ON	Switch position: Up (to frontward of vehicle) operation, then hold	+
				Switch position: Down (to backward of vehicle) operation, then hold	-
				Switch position: Other than above	Default
35	ASC gear hold request	ASC gear hold request	Ignition switch: ON	Normal state	No request
				Gear hold requested	Gear hold request
37	FL speed sensor	FL wheel speed sensor	Actual driving		The same value as the ASC wheel speed is displayed
38	FR speed sensor	FR wheel speed sensor			
39	RL speed sensor	RL wheel speed sensor			
40	RR speed sensor	RR wheel speed sensor			
41	Cold shift request	Cold shift request	Cold shift requested		ON
			Cold shift not requested		OFF
43	Idle up request flag	Idle up request flag	Idle up requested		ON
			Idle up not requested		OFF
47	Torque limit by spark retard	Torque limit by spark retard	Torque limit by spark retard requested		ON
			Not requested		OFF

Item No.	Display on scan tool	Item name	Check conditions		Normal conditions
48	Torque limit by fuel cutoff	Torque limit by fuel cutoff	Torque limit by fuel cutoff requested		ON
			Not requested		OFF
49	Torque increase request flag	Torque increase request flag	Torque increase requested		ON
			Not requested		OFF
50	Torque reduction request flag	Torque reduction request flag	Torque reduction requested		ON
			Not requested		OFF
51	Torque limit by throttle closing	Torque limit by throttle closing	Torque limit by throttle closing requested		ON
			Not requested		OFF
55	Transmission temperature sensor	Fluid temperature sensor	Ignition switch: ON		The oil temperature is displayed
56	Transmission temperature warning	Fluid temperature warning	Ignition switch: ON	When the oil temperature warning indicator is displayed	ON
				When the oil temperature warning indicator is not displayed	OFF
57	Drive mode SW	Twin clutch SST control mode switch	Ignition switch: ON	Drive mode: Normal	CITY (Normal)
				Drive mode: Sport	SPORT
58	Gear change mode	Gear change mode	Ignition switch: ON	Shift lever position: D	Auto
				Shift lever position: Manual mode	Manual

Item No.	Display on scan tool	Item name	Check conditions	Normal conditions			
59	Meter displayed Gear	Meter displayed Gear	Ignition switch: ON	Shift lever position: P	P		
				Shift lever position: R	R		
				Shift lever position: N	N		
			Shift lever position: D	Driving at a constant speed in 1st	D1		
				Driving at a constant speed in 2nd	D2		
				Driving at a constant speed in 3rd	D3		
				Driving at a constant speed in 4th	D4		
				Driving at a constant speed in 5th	D5		
				Driving at a constant speed in 6th	D6		
			Shift lever position: Manual mode	Driving at a constant speed in 1st	1		
				Driving at a constant speed in 2nd	2		
				Driving at a constant speed in 3rd	3		
				Driving at a constant speed in 4th	4		
				Driving at a constant speed in 5th	5		
				Driving at a constant speed in 6th	6		
			60	Transmission fail flag	Transmission fail flag	Fail-safe function operated	ON
						Fail-safe function not operated	OFF
			61	ECU operation status	TC-SST-ECU operation status	Ignition switch: ON	The ECU operation status is displayed
62	Current gear (internal data)	Current gear (internal data)	Actual driving	The current driving gear is displayed			
63	Pre select gear (internal data)	Pre select gear (internal data)	Actual driving	The pre-select gear is displayed			
64	Gear odd (internal data)	Gear odd (internal data)	Actual driving	The odd number gear currently engaged is displayed			

Item No.	Display on scan tool	Item name	Check conditions	Normal conditions
65	Gear even (internal data)	Gear even (internal data)	Actual driving	The even number gear currently engaged is displayed
66	Clutch (odd) temperature	Clutch (odd) temperature	Ignition switch: ON	The clutch (odd number) surface temperature is displayed
67	Clutch (even) temperature	Clutch (even) temperature	Ignition switch: ON	The clutch (even number) surface temperature is displayed
68	Clutch (odd) slip speed	Clutch (odd) slip speed	Ignition switch: ON	The clutch (odd number) slip speed is displayed
69	Clutch (even) slip speed	Clutch (even) slip speed	Ignition switch: ON	The clutch (even number) slip speed is displayed
70	Coding counter	Coding counter	Ignition switch: ON	Number of counts for performed coding is displayed
71	Battery voltage	Battery voltage	Ignition switch: ON	The battery voltage is displayed
74	Clutch (odd) pressure sensor	Clutch (odd) pressure sensor	Ignition switch: ON	The clutch (odd number) pressure is displayed
75	Clutch (even) pressure sensor	Clutch (even) pressure sensor	Ignition switch: ON	The clutch (even number) pressure is displayed
76	Shift fork position sensor 1	Shift fork position sensor 1	Driving at a constant speed in 1st	9 mm ± 1 mm
			Reverse	-9 mm ± 1 mm
77	Shift fork position sensor 2	Shift fork position sensor 2	Driving at a constant speed in 5th	9 mm ± 1 mm
			Driving at a constant speed in 3rd	-9 mm ± 1 mm
78	Shift fork position sensor 3	Shift fork position sensor 3	Driving at a constant speed in 6th	-9 mm ± 1 mm

Item No.	Display on scan tool	Item name	Check conditions	Normal conditions
79	Shift fork position sensor 4	Shift fork position sensor 4	Driving at a constant speed in 4th	9 mm ± 1 mm
			Driving at a constant speed in 2nd	-9 mm ± 1 mm
80	Clutch shift pressure solenoid 1	Clutch/shift pressure solenoid 1 system	Ignition switch: ON	The drive current of the clutch/shift pressure solenoid 1 is displayed
81	Clutch shift pressure solenoid 2	Clutch/shift pressure solenoid 2 system	Ignition switch: ON	The drive current of the clutch/shift pressure solenoid 2 is displayed
82	Clutch cooling solenoid	Clutch cooling flow solenoid	Ignition switch: ON	The drive current of the clutch cooling flow solenoid is displayed
83	Line pressure solenoid	Line pressure solenoid	Ignition switch: ON	The drive current of the line pressure solenoid is displayed
84	Input shaft (odd) speed	Input shaft 1 (odd) speed	Driving at a constant speed in odd gear	Nearly the same as the tachometer displayed
85	Input shaft (even) speed	Input shaft 2 (even) speed	Driving at a constant speed in even gear	Nearly the same as the tachometer displayed
86	Damper speed sensor	Damper speed sensor	Engine: Idling	Nearly the same as the tachometer displayed
88	ECU temperature (internal data)	TC-SST-ECU temperature (internal data)	Ignition switch: ON	The ECU temperature is displayed

SPECIAL FUNCTION

M1225028400052

TEACH-IN REFERENCE TABLE

⚠ CAUTION

Be careful with the following items when performing Item No.3: Line Pressure Test.

- The engine speed could be high (4,000 r/min) when the Line Pressure Test is in progress. (Depending on the transaxle state, the engine speed may not be high.)
- After Teach-In completion, check that it completed normally. (Teach-In execution results is displayed in the following Data list.)

TEACH-IN

Item No.	Scan tool Item Name
1	Plausibility check
2	Shift fork Teach-In
3	Line pressure Test
4	Stroke Teach-In
5	Boost Teach-In
6	Interlock Teach-In
7	Clutch Ventilation
8	Reset clutch gain

NOTE:

- According to the transmission fluid state (fluid -filled state), Teach-In executed time is not equal.
- Item No.8 is not displayed when the Diag. Version of TC-SST-ECU is pre-0002. (Diag. Version can be checked by the Teach-In screen of scan tool.)

DATA LIST

No.	Data List Item Name	Teach-In state or result	Scan tool display
100	Teach-In executing	Before execution	No
		Other than the execution conditions	Pending
		After execution	Yes →No
101	Normal End	At the normal end	Yes
		At the abnormal end	No
102	Abnormal End	At the normal end	No
		At the abnormal end	Yes
103	Timeout error	When a timeout error is not occurred	No
		When a timeout error is occurred	Yes
104	Abort conditions error	When an error other than the execution conditions is not occurred	No
		When an error other than the execution conditions is occurred	Yes
110	Execute last Teach-In item	–	The previously conducted scan tool item name is displayed
111	Internal Error Data	–	The monitoring unit No. is displayed in case of an error

TC-SST-ECU TERMINAL VOLTAGE REFERENCE CHART

M1225006800096

B-120




AC803080AB

Terminal No.	Check items	Check conditions	Standard value
2	CAN_L	–	–
5	CAN_H	–	–
6	Back-up power supply	Always	Battery positive voltage
11	Power supply	Ignition switch: ON	Battery positive voltage
		Ignition switch: OFF	1 V or less
17	LIN	–	–
19	Ground	Always	1 V or less

DIAGNOSIS <SHIFT LEVER>**DIAGNOSIS FUNCTION**

M1225000500246

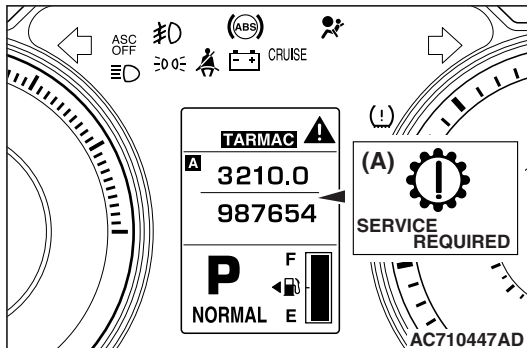**WARNING INDICATOR**

When a malfunction occurs to the shift lever, the figure (A) remains displayed on the information screen of multi information display.

If the figure (A) remains displayed on the information screen of multi information display, check whether or not a diagnostic trouble code is set.

FAIL-SAFE FUNCTION

If an abnormality occurs to the signal of sensors, switches, solenoids, or others, the shift lever-ECU performs a control for the driver safety and system protection. The control contents are as follows.

FAIL-SAFE REFERENCE TABLE

Diagnostic trouble code No.	Item	Control content
P198D	EEPROM	Normal driving can be performed, and displays an occurrence of trouble to the multi information display to warn the driver.
P198E	Lever position sensor system (Malfunction of one sensor)	Normal driving can be performed, and displays an occurrence of trouble to the multi information display to warn the driver.
P198F	Lever position sensor system (Malfunction of two sensors)	The lever position cannot be identified, and the clutch open at TC-SST side prohibits the vehicle from driving. Then displays an occurrence of trouble to the multi information display to warn the driver.

HOW TO CONNECT THE SCAN TOOL (M.U.T.-III)

Required Special Tools:

- MB991958 Scan Tool (M.U.T.-III Sub Assembly)
 - MB991824: Vehicle Communication Interface (V.C.I.)
 - MB991827 M.U.T.-III USB Cable
 - MB991910 M.U.T.-III Main Harness A (Vehicles with CAN communication system)

⚠ CAUTION


To prevent damage to scan tool MB991958, always turn the ignition switch to the "LOCK" (OFF) position before connecting or disconnecting scan tool MB991958.

1. Ensure that the ignition switch is at the "LOCK" (OFF) position.
2. Start up the personal computer.
3. Connect special tool MB991827 to special tool MB991824 and the personal computer.
4. Connect special tool MB991910 to special tool MB991824.
5. Connect special tool MB991910 to the data link connector.
6. Turn the power switch of special tool MB991824 to the "ON" position.

NOTE: When special tool MB991824 is energized, special tool MB991824 indicator light will be illuminated in a green color.

7. Start the scan tool system on the personal computer.

NOTE: Disconnecting scan tool MB991958 is the reverse of the connecting sequence, making sure that the ignition switch is at the "LOCK" (OFF) position.

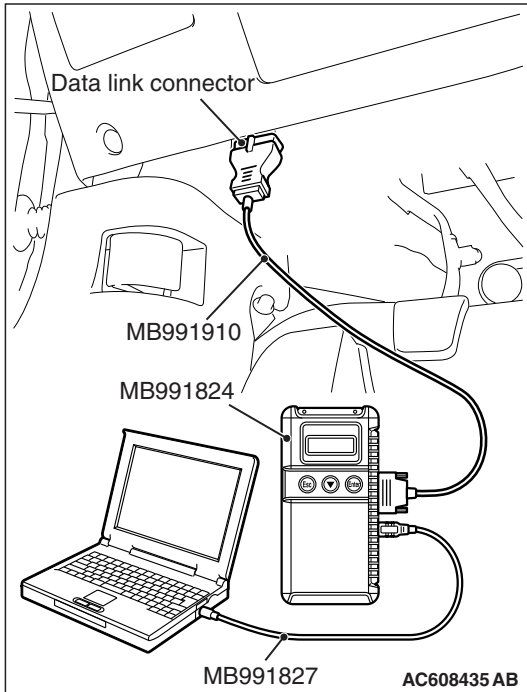

FREEZE FRAME DATA CHECK

Data of when the diagnostic trouble code is determined is obtained, and the status of ACD is stored. By analyzing each data using the scan tool, troubleshooting can be carried out efficiently.

Display items of the freeze frame data are as follows.

FREEZE FRAME DATA REFERENCE TABLE

Item No.	Item	Unit/Display
4	Current trouble accumulative time	min
5	Shift lever position	<ul style="list-style-type: none"> • P • R-P • R • N-R • N <ul style="list-style-type: none"> • D-N • D • Manual • + • -
6	Battery voltage	V

DIAGNOSTIC TROUBLE CODE CHART

M122500600209

⚠ CAUTION

During diagnosis, a DTC associated with other system may be set when the ignition switch is turned ON with connector(s) disconnected. On completion, confirm all systems for diagnostic trouble code(s). If diagnostic trouble code(s) are set, erase them all.

Diagnostic trouble code No.	Diagnostic item	Reference page
P0563	Power supply system	P.22C-367
P198D	EEPROM system	P.22C-368
P198E	Lever position sensor system	P.22C-368
P198F		
U0001	Bus off	P.22C-369
U0100	Engine time-out error	P.22C-370
U0101	TC-SST time-out error	P.22C-370
U0121	ASC time-out error	P.22C-371
U0141	ETACS time-out error	P.22C-372

SYMPTOM CHART

M1225005200198

⚠ CAUTION

During diagnosis, a DTC associated with other system may be set when the ignition switch is turned ON with connector(s) disconnected. On completion, confirm all systems for diagnostic trouble code(s). If diagnostic trouble code(s) are set, erase them all.

Symptom	Inspection procedure No.	Reference page
The scan tool cannot communicate with the shift lever-ECU.	1	P.22C-373
Shift indicator lamp does not illuminate.	2	P.22C-374
Back-up light does not illuminate.	3	P.22C-376
The driving mode cannot be changed.	4	P.22C-380
Speed change with the paddle shift is impossible.	5	P.22C-381
Shift lever-ECU power supply circuit abnormality	6	P.22C-383

DIAGNOSTIC TROUBLE CODE PROCEDURES

DTC P0563: Power Supply System

CAUTION

- If there is any problem in the CAN bus lines, an incorrect diagnostic trouble code may be set. Prior to this diagnosis, diagnose the CAN bus lines.
- Whenever the ECU is replaced, ensure that the CAN bus lines are normal.

OPERATION

The shift lever-ECU checks that the power supply circuit is normal.

DTC SET CONDITIONS

The voltage from the battery is determined to be overvoltage.

PROBABLE CAUSES

- Malfunction of the shift lever-ECU
- Generator malfunction

DIAGNOSIS

STEP 1. Scan tool CAN bus diagnostics

Using scan tool MB991958, diagnose the CAN bus lines.

Q: Is the check result normal?

YES : Go to Step 3.

NO : Repair the CAN bus lines. (Refer to GROUP 54C – Troubleshooting [P.54C-16](#).) After repairing the CAN bus line, go to Step 2.

STEP 2. Check whether the DTC is reset.

Q: Is DTC No. P0563 set?

YES : Go to Step 3.

NO : This diagnosis is complete.

STEP 3. Generator system check

Refer to GROUP 16 –Charging System, On-vehicle Service [P.16-8](#).

Q: Is the check result normal?

YES : Go to Step 4.

NO : Repair or replace the generator related parts.

STEP 4. Check whether the DTC is reset.

Q: Is DTC No. P0563 set?

YES : Shift lever assembly replacement. (Refer to [P.22C-488](#).)

NO : Intermittent malfunction. (Refer to GROUP 00 –How to Cope with Intermittent Malfunction [P.00-13](#).)

DTC P198D: EEPROM System**⚠ CAUTION**

- If there is any problem in the CAN bus lines, an incorrect diagnostic trouble code may be set. Prior to this diagnosis, diagnose the CAN bus lines.
- Whenever the ECU is replaced, ensure that the CAN bus lines are normal.

OPERATION

The shift lever-ECU checks that EEPROM or RAM is normal.

DTC SET CONDITIONS

The EEPROM writing data is determined to be abnormal.

PROBABLE CAUSES

- Malfunction of the shift lever-ECU

DIAGNOSIS**STEP 1. Scan tool CAN bus diagnostics**

Using scan tool MB991958, diagnose the CAN bus lines.

Q: Is the check result normal?

YES : Go to Step 2.

NO : Repair the CAN bus lines. (Refer to GROUP 54C – Troubleshooting [P.54C-16.](#)) After repairing the CAN bus line, go to Step 2.

STEP 2. Check whether the DTC is reset.**Q: Is DTC No. P198D set?**

YES : Replace the shift lever assembly. (Refer to [P.22C-488.](#))

NO : Intermittent malfunction. (Refer to GROUP 00 –How to Cope with Intermittent Malfunction [P.00-13.](#))

DTC P198E, 198F: Lever Position Sensor System**⚠ CAUTION**

- If there is any problem in the CAN bus lines, an incorrect diagnostic trouble code may be set. Prior to this diagnosis, diagnose the CAN bus lines.
- Whenever the ECU is replaced, ensure that the CAN bus lines are normal.

OPERATION

The shift lever-ECU has lever position sensors, and checks for abnormality.

DTC SET CONDITIONS

- When one position signal is determined not to be, P198E is set.
- When two position signals are determined not to be, P198F is set.

PROBABLE CAUSES

- Malfunction of the shift lever-ECU
- Malfunction of the lever position sensor

DIAGNOSIS

STEP 1. Scan tool CAN bus diagnostics

Using scan tool MB991958, diagnose the CAN bus lines.

Q: Is the check result normal?

YES : Go to Step 2.

NO : Repair the CAN bus lines. (Refer to GROUP 54C – Troubleshooting [P.54C-16.](#)) After repairing the CAN bus line, go to Step 2.

STEP 2. Check whether the DTC is reset.

Q: Are DTC Nos. P198E, P198F set?

YES : Replace the shift lever assembly. (Refer to [P.22C-488.](#))

NO : Intermittent malfunction. (Refer to GROUP 00 –How to Cope with Intermittent Malfunction [P.00-13.](#))

DTC U0001: Bus-off

CAUTION

- If there is any problem in the CAN bus lines, an incorrect diagnostic trouble code may be set. Prior to this diagnosis, diagnose the CAN bus lines.
- Whenever the ECU is replaced, ensure that the CAN bus lines are normal.

DTC SET CONDITIONS

The shift lever-ECU ceases communication (bus-off).

PROBABLE CAUSES

- The CAN bus line is defective.
- Malfunction of the shift lever-ECU

DIAGNOSIS

STEP 1. Scan tool CAN bus diagnostics

Using scan tool MB991958, diagnose the CAN bus lines.

Q: Is the check result normal?

YES : Go to Step 2.

NO : Repair the CAN bus lines. (Refer to GROUP 54C – Troubleshooting [P.54C-16.](#)) After repairing the CAN bus line, go to Step 2.

STEP 2. Check whether the DTC is reset.

Q: Is DTC No. U0001 set?

YES : Replace the shift lever assembly. (Refer to [P.22C-488.](#))

NO : Intermittent malfunction. (Refer to GROUP 00 –How to Cope with Intermittent Malfunction [P.00-13.](#))

DTC U0100: Engine Time-out Error**⚠ CAUTION**

- If there is any problem in the CAN bus lines, an incorrect diagnostic trouble code may be set. Prior to this diagnosis, diagnose the CAN bus lines.
- Whenever the ECU is replaced, ensure that the CAN bus lines are normal.

DTC SET CONDITIONS

The periodic communication data from the engine control module cannot be received.

PROBABLE CAUSES

- The CAN bus line is defective.
- Malfunction of engine control module
- Malfunction of the shift lever-ECU

DIAGNOSIS**STEP 1. Scan tool CAN bus diagnostics**

Using the scan tool, diagnose the CAN bus lines.

Q: Is the check result normal?

YES : Go to Step 2.

NO : Repair the CAN bus lines. (Refer to GROUP 54C – Troubleshooting [P.54C-16.](#)) After repairing the CAN bus line, go to Step 2.

STEP 2. Scan tool diagnostic trouble code

Check the engine diagnostic trouble code. (Refer to GROUP 13A –Troubleshooting [P.13A-50.](#))

Q: Is the DTC set?

YES : Perform the relevant troubleshooting.

NO : Go to Step 3.

STEP 3. Check whether the DTC is reset.**Q: Is DTC No. U0100 set?**

YES : Replace the shift lever assembly. (Refer to [P.22C-488.](#))

NO : Intermittent malfunction. (Refer to GROUP 00 –How to Cope with Intermittent Malfunction [P.00-13.](#))

DTC U0101: TC-SST Time-out Error**⚠ CAUTION**

- If there is any problem in the CAN bus lines, an incorrect diagnostic trouble code may be set. Prior to this diagnosis, diagnose the CAN bus lines.
- Whenever the ECU is replaced, ensure that the CAN bus lines are normal.

JUDGMENT CRITERIA

The periodic communication data from TC-SST-ECU cannot be received.

PROBABLE CAUSES

- The CAN bus line is defective.
- Malfunction of TC-SST-ECU
- Malfunction of the shift lever-ECU

DIAGNOSIS

STEP 1. Scan tool CAN bus diagnostics

Using the scan tool, diagnose the CAN bus lines.

Q: Is the check result normal?

YES : Go to Step 2.

NO : Repair the CAN bus lines. (Refer to GROUP 54C – Troubleshooting [P.54C-16.](#)) After repairing the CAN bus line, go to Step 2.

STEP 2. Scan tool diagnostic trouble code

Check the TC-SST diagnostic trouble code. (Refer to [P.22C-16.](#))

Q: Is the DTC set?

YES : Perform the relevant troubleshooting.

NO : Go to Step 3.

STEP 3. Check whether the DTC is reset.

Q: Is DTC No. U0101 set?

YES : Replace the shift lever assembly. (Refer to [P.22C-488.](#))

NO : Intermittent malfunction. (Refer to GROUP 00 –How to Cope with Intermittent Malfunction [P.00-13.](#))

DTC U0121: ASC Time-out Error

 **CAUTION**

- If there is any problem in the CAN bus lines, an incorrect diagnostic trouble code may be set. Prior to this diagnosis, diagnose the CAN bus lines.
- Whenever the ECU is replaced, ensure that the CAN bus lines are normal.

JUDGMENT CRITERIA

The periodic communication data from the ASC-ECU cannot be received.

PROBABLE CAUSES

- The CAN bus line is defective.
- Malfunction of ASC-ECU
- Malfunction of the shift lever-ECU

DIAGNOSIS

STEP 1. Scan tool CAN bus diagnostics

Using the scan tool, diagnose the CAN bus lines.

Q: Is the check result normal?

YES : Go to Step 2.

NO : Repair the CAN bus lines. (Refer to GROUP 54C – Troubleshooting [P.54C-16.](#)) After repairing the CAN bus line, go to Step 2.

STEP 2. Scan tool diagnostic trouble code

Check the ASC diagnostic trouble code. (Refer to GROUP 35C –Troubleshooting P.35C-27.)

Q: Is the DTC set?

YES : Perform the relevant troubleshooting.

NO : Go to Step 3.

STEP 3. Check whether the DTC is reset.**Q: Is DTC No. U0121 set?**

YES : Replace the shift lever assembly. (Refer to P.22C-488.)

NO : Intermittent malfunction. (Refer to GROUP 00 –How to Cope with Intermittent Malfunction P.00-13.)

DTC U0141: ETACS Time-out Error**CAUTION**

- If there is any problem in the CAN bus lines, an incorrect diagnostic trouble code may be set. Prior to this diagnosis, diagnose the CAN bus lines.
- Whenever the ECU is replaced, ensure that the CAN bus lines are normal.

JUDGMENT CRITERIA

The periodic communication data from the ETACS-ECU cannot be received.

PROBABLE CAUSES

- The CAN bus line is defective.
- Malfunction of the ETACS-ECU
- Malfunction of the shift lever-ECU

DIAGNOSIS**STEP 1. Scan tool CAN bus diagnostics**

Using the scan tool, diagnose the CAN bus lines.

Q: Is the check result normal?

YES : Go to Step 2.

NO : Repair the CAN bus lines. (Refer to GROUP 54C – Troubleshooting P.54C-16.) After repairing the CAN bus line, go to Step 2.

STEP 2. Scan tool diagnostic trouble code

Check the ETACS diagnostic trouble code. (Refer to GROUP 54A –Troubleshooting P.54A-674.)

Q: Is the DTC set?

YES : Perform the relevant troubleshooting.

NO : Go to Step 3.

STEP 3. Check whether the DTC is reset.**Q: Is DTC No. U0141 set?**

YES : Replace the shift lever assembly. (Refer to P.22C-488.)

NO : Intermittent malfunction. (Refer to GROUP 00 –How to Cope with Intermittent Malfunction P.00-13.)

SYMPTOM PROCEDURES

INSPECTION PROCEDURE 1: The scan tool cannot communicate with the shift lever-ECU.

⚠ CAUTION

Whenever the ECU is replaced, ensure that the CAN bus lines are normal.

COMMENTS ON TROUBLE SYMPTOM

The CAN bus line, shift lever-ECU power supply circuit, or shift lever-ECU may have a problem.

PROBABLE CAUSES

- Wrong scan tool wiring harness
- The CAN bus line is defective.
- Malfunction of the shift lever-ECU power supply circuit
- Malfunction of the shift lever-ECU
- ECU malfunction of other system

DIAGNOSIS

STEP 1. Scan tool CAN bus diagnostics

Using scan tool MB991958, diagnose the CAN bus lines.


Q: Is the check result normal?

YES : Check and repair the shift lever-ECU power supply circuit. (Refer to [P.22C-383](#).)


NO : Repair the CAN bus lines. (Refer to GROUP 54C – Troubleshooting [P.54C-16](#).)

INSPECTION PROCEDURE 2: Shift indicator light does not illuminate.

Shift lever position indicator panel circuit

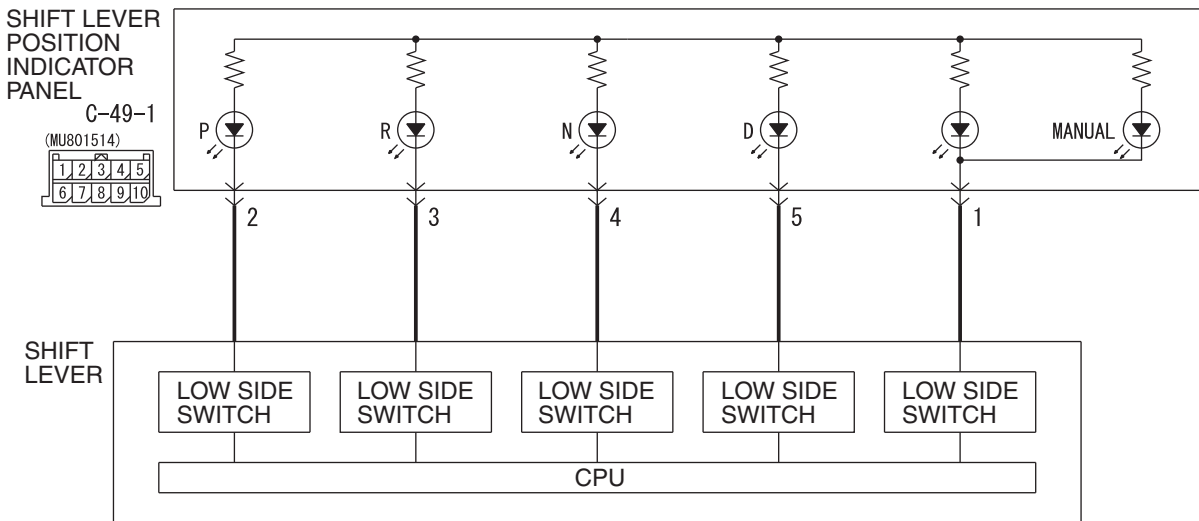

AC900534AC

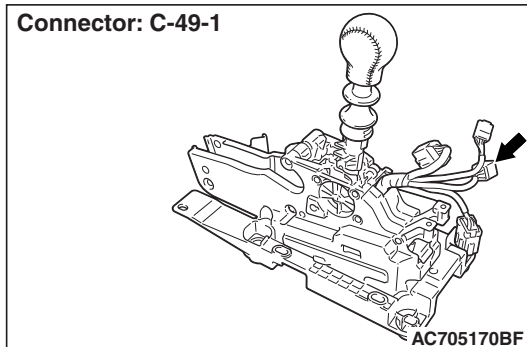

CAUTION

Whenever the ECU is replaced, ensure that the CAN bus lines are normal.

COMMENTS ON TROUBLE SYMPTOM

The shift indicator light or shift lever-ECU may have a problem.

PROBABLE CAUSES

- Malfunction of the shift indicator light
- Damaged harness wires and connectors
- Malfunction of the shift lever-ECU

DIAGNOSTIC PROCEDURE

STEP 1. Scan tool CAN bus diagnostics

Using scan tool MB991958, diagnose the CAN bus lines.

Q: Is the check result normal?

YES : Go to Step 2.

NO : Repair the CAN bus lines. (Refer to GROUP 54C – Troubleshooting [P.54C-16.](#)) After repairing the CAN bus line, go to Step 2.

STEP 2. Scan tool data list

Item No.1: Shift lever position (Refer to data list reference table [P.22C-387.](#))

Q: Is the check result normal?

YES : Go to Step 3.

NO : Replace the shift lever assembly. (Refer to [P.22C-488.](#))

STEP 3. Scan tool actuator test

Item No.1: Shift indicator (Refer to Special Function (Actuator Test Reference Table) [P.22C-389.](#))

Q: Is the check result normal?

YES : Intermittent malfunction. (Refer to GROUP 00 –How to Cope with Intermittent Malfunction [P.00-13.](#))

NO : Go to Step 4.

STEP 4. Inspection of the floor console panel assembly connector: C-49-1

Check for the contact with terminals.


Q: Is the check result normal?






YES : Replace the floor console panel assembly. (Refer to GROUP 52A –Floor Console Assembly [P.52A-9.](#))

NO : Repair the defective connector.

INSPECTION PROCEDURE 3: Back-up light does not illuminate.

Backup lamp switch system circuit

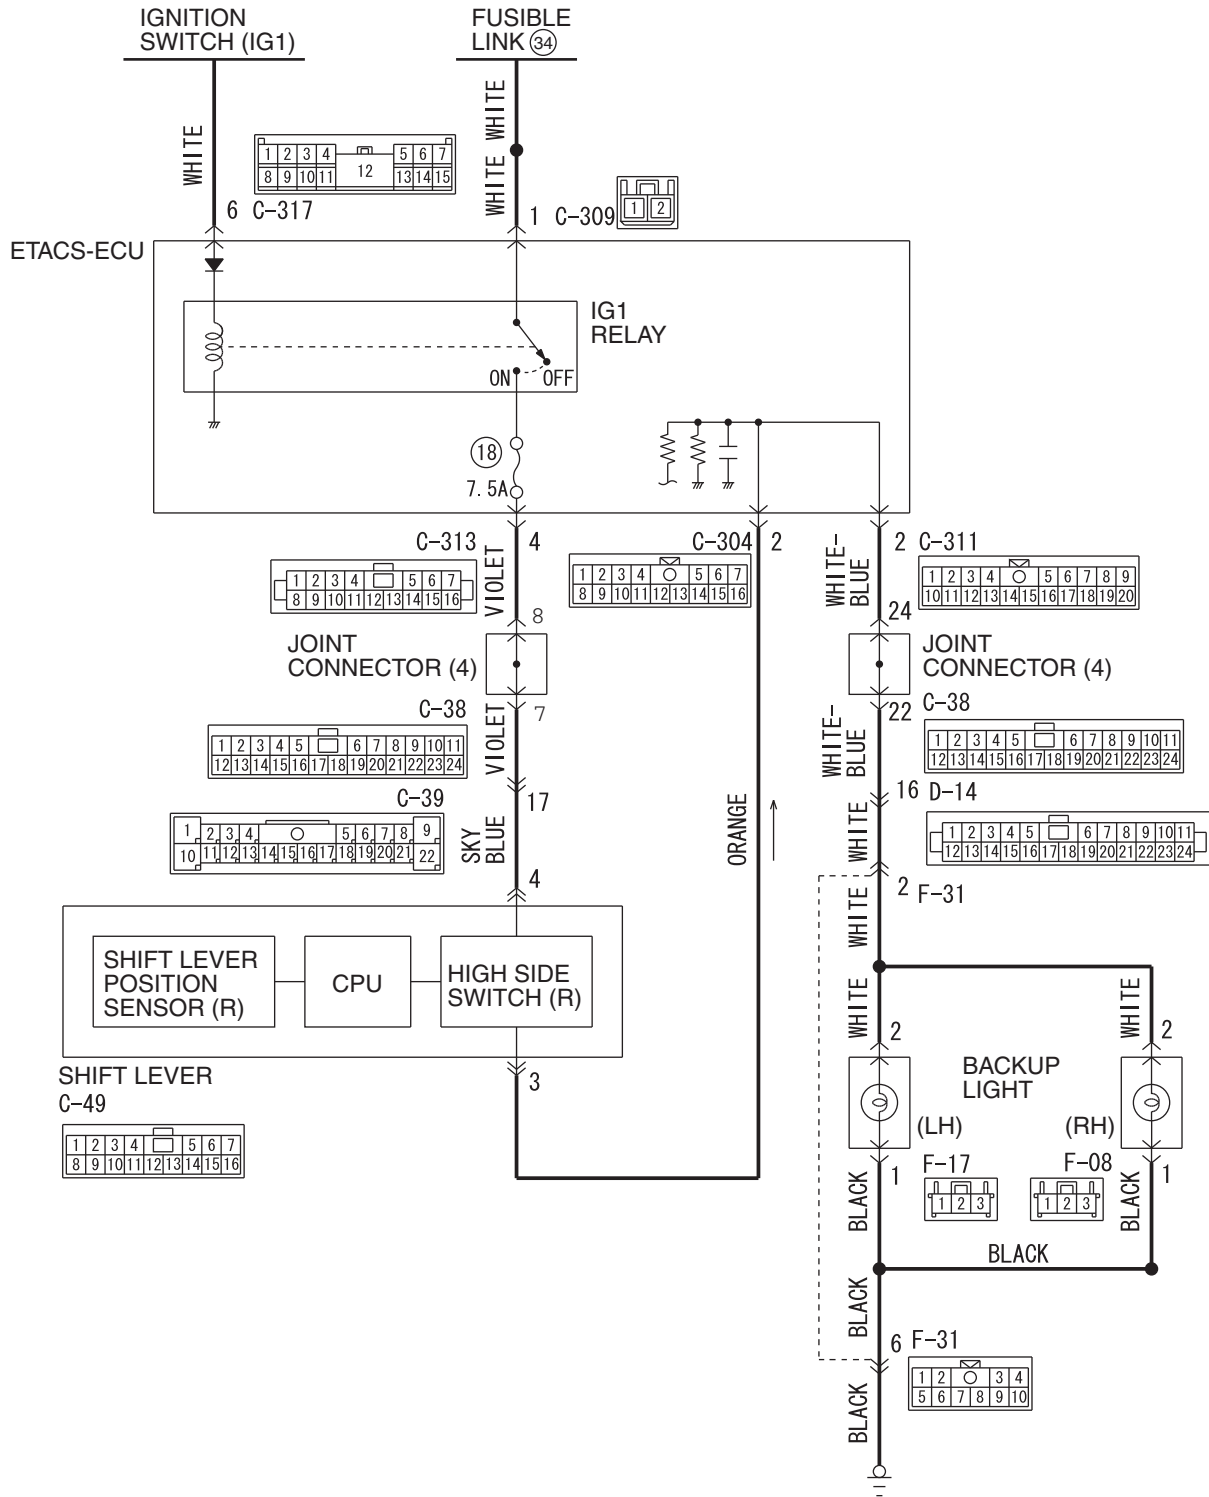

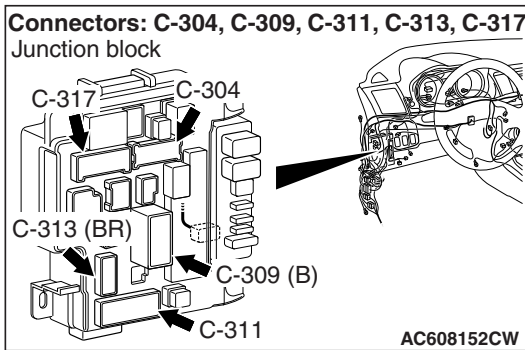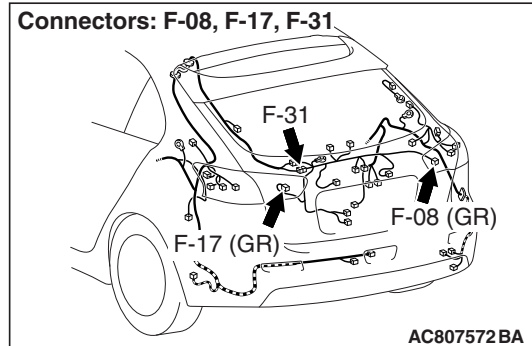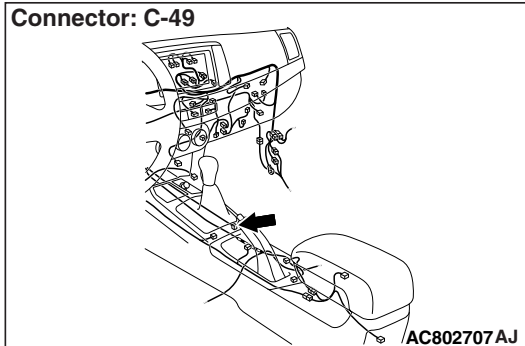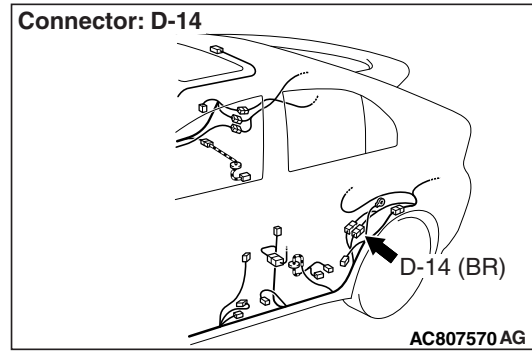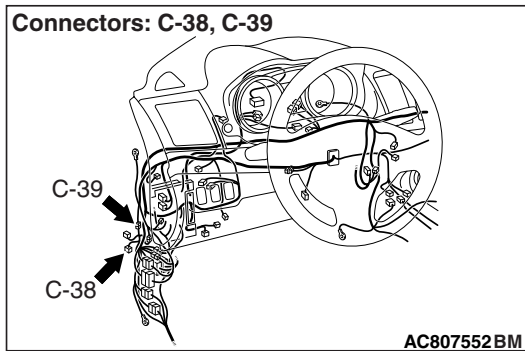

CAUTION

Whenever the ECU is replaced, ensure that the CAN bus lines are normal.

COMMENTS ON TROUBLE SYMPTOM

The back-up light, ETACS-ECU, or shift lever-ECU may have a problem.

PROBABLE CAUSES

- Malfunction of the ETACS-ECU
- Malfunction of the back-up light
- Damaged harness wires and connectors
- Malfunction of the shift lever-ECU

DIAGNOSIS

STEP 1. Scan tool CAN bus diagnostics

Using scan tool MB991958, diagnose the CAN bus lines.

Q: Is the check result normal?

YES : Go to Step 2.

NO : Repair the CAN bus lines. (Refer to GROUP 54C – Troubleshooting P.54C-16.) After repairing the CAN bus line, go to Step 2.

STEP 2. Scan tool actuator test

Item No.2: Back-up light (Refer to Special Function (Actuator Test Reference Table [P.22C-389](#).)

Q: Is the check result normal?

YES : Intermittent malfunction. (Refer to GROUP 00 –How to Cope with Intermittent Malfunction [P.00-13](#).)

NO : Go to Step 3.

STEP 3. Scan tool diagnostic trouble code

Check the ETACS diagnostic trouble code. (Refer to GROUP 54A –Troubleshooting [P.54A-674](#).)

Q: Is the DTC set?

YES : Perform the relevant troubleshooting.

NO : Go to Step 4.

STEP 4. Bulb check

Check if the bulb of the back-up light which does not illuminate is normal.

Q: Is the check result normal?

YES : Go to Step 5.

NO : Replace the bulb.

STEP 5. Measure the resistance at F-08 back-up light (RH) connector and F-17 back-up light (LH) connector.

Disconnect the connector, and measure the resistance between the connector terminal No.1 and ground at the wiring harness side.

OK: Continuity exists. (2 Ω or less)

Q: Is the check result normal?

YES : Go to Step 8.

NO : Go to Step 6.

STEP 6. Inspection of the back-up light (RH) connector, back-up light (LH) connector, and intermediate connector: F-08, F-17, F-31

Check for the contact with the connector terminals.

Q: Is the check result normal?

YES : Go to Step 7.

NO : Repair the defective connector.

STEP 7. Check the wiring harness between F-08 back-up light (RH) connector terminal No.1 and body ground, and between F-17 back-up light (LH) connector terminal No.1 and body ground.

Check the ground line for open circuit.

Q: Is the check result normal?

YES : Intermittent malfunction. (Refer to GROUP 00 –How to Cope with Intermittent Malfunction [P.00-13](#).)

NO : Repair the wiring harness.

STEP 8. Measure the voltage at F-08 back-up light (RH) connector and F-17 back-up light (LH) connector.

- (1) Disconnect the connector, and measure the voltage between the connector terminal No.2 and ground at the wiring harness side.
- (2) Turn the ignition switch to the "ON" position.
- (3) Place the shift lever to the R range.

OK: Battery positive voltage

Q: Is the check result normal?

YES : Intermittent malfunction. (Refer to GROUP 00 –How to Cope with Intermittent Malfunction [P.00-13.](#))

NO : Go to Step 9.

STEP 9. Inspection of J/C (4), intermediate connector, shift lever assembly connector, ETACS-ECU connector, and back-up light connector: C-38, C-39, C-49, C-304, C-311, C-313, D-14, F-08, F-17, F-31

Check for the contact with the connector terminals.

Q: Is the check result normal?

YES : Go to Step 10.

NO : Repair the defective connector.

STEP 10. Check the wiring harness between F-08 back-up light (RH) connector terminal No.2 and C-311 ETACS-ECU connector terminal No.2, and between F-17 back-up light (RH) connector terminal No.2 and C-311 ETACS-ECU connector terminal No.2.

Check the power supply line for open or short circuit.

Q: Is the check result normal?

YES : Go to Step 11.

NO : Repair the wiring harness.

STEP 11. Check the wiring harness between C-49 shift lever assembly connector terminal No.3 and C-304 ETACS-ECU connector terminal No.2.

Check the power supply line for open or short circuit.

Q: Is the check result normal?

YES : Go to Step 12.

NO : Repair the wiring harness.

STEP 12. Check the wiring harness between C-49 shift lever assembly connector terminal No.4 and C-313 ETACS-ECU connector terminal No.4.

Check the power supply line for open or short circuit.

Q: Is the check result normal?

YES : Replace the ETACS-ECU. (Refer to GROUP 54A – ETACS-ECU [P.54A-769.](#) Then go to Step 13.

NO : Repair the wiring harness.

STEP 13. Retest the system.**Q: Does a malfunction take place again?**

YES : Replace the shift lever assembly. (Refer to [P.22C-488.](#))

NO : This diagnosis is complete.

INSPECTION PROCEDURE 4: The driving mode cannot be changed.**TWIN CLUTCH SPORTRONIC SHIFT TRANSMISSION CONTROL MODE SWITCH CIRCUIT**

Refer to [P.22C-333.](#)

CAUTION

Whenever the ECU is replaced, ensure that the CAN bus lines are normal.

COMMENTS ON TROUBLE SYMPTOM

The twin clutch SST control mode switch, or shift lever-ECU may have a problem.

PROBABLE CAUSES

- Malfunction of the twin clutch SST control mode switch
- Damaged harness wires and connectors
- Malfunction of the shift lever-ECU
- Malfunction of TC-SST-ECU

DIAGNOSIS**STEP 1. Scan tool CAN bus diagnostics**

Using scan tool MB991958, diagnose the CAN bus lines.

Q: Is the check result normal?

YES : Go to Step 2.

NO : Repair the CAN bus lines. (Refer to GROUP 54C – Troubleshooting [P.54C-16.](#)) After repairing the CAN bus line, go to Step 2.

STEP 2. Scan tool data list

Item No.30: Drive mode switch (Refer to data list reference table [P.22C-387.](#))

Q: Is the check result normal?

YES : Intermittent malfunction. (Refer to GROUP 00 –How to Cope with Intermittent Malfunction [P.00-13.](#))

NO : Go to Step 3.

STEP 3. Twin clutch SST control mode switch check

Refer to [P.22C-519.](#)

Q: Is the check result normal?

YES : Go to Step 4.

NO : Replace the twin clutch SST control mode switch. (Refer to [P.22C-519.](#))

STEP 4. Twin clutch SST control mode switch connector check: C-49-2

Check for the contact with terminals.

Q: Is the check result normal?

YES : Go to Step 5.

NO : Repair the defective connector.

STEP 5. Trouble symptom recheck after replacing the shift lever assembly

(1) Replace the shift lever assembly. (Refer to [P.22C-488.](#))

(2) Verify that the condition described by the customer exists.

Q: Does a malfunction take place again?

YES : Replace the mechatronic assembly. (Refer to [P.22C-505.](#))

NO : Intermittent malfunction. (Refer to GROUP 00 –How to Cope with Intermittent Malfunction [P.00-13.](#))

inspection PROCEDURE 5: Speed change with the paddle shift is impossible.

**PADDLE SHIFT SWITCH SYSTEM
CIRCUIT**

Refer to [P.22C-335.](#)

CAUTION

Whenever the ECU is replaced, ensure that the CAN bus lines are normal.

COMMENTS ON TROUBLE SYMPTOM

The paddle shift switch, or shift lever-ECU may have a problem.

PROBABLE CAUSES

- Malfunction of the paddle shift switch
- Damaged harness wires and connectors
- Malfunction of the shift lever-ECU
- Malfunction of TC-SST-ECU

DIAGNOSIS

STEP 1. Scan tool CAN bus diagnostics

Using scan tool MB991958, diagnose the CAN bus lines.

Q: Is the check result normal?

YES : Go to Step 2.

NO : Repair the CAN bus lines. (Refer to GROUP 54C – Troubleshooting [P.54C-16.](#)) After repairing the CAN bus line, go to Step 2.

STEP 2. Paddle shift switch check

Refer to [P.22C-517.](#)

Q: Is the check result normal?

YES : Go to Step 3.

NO : Replace the paddle shift assembly. (Refer to [P.22C-517.](#))

STEP 3. Measure the resistance at C-210 paddle shift switch connector.

Disconnect the connector, and measure the resistance between terminal No.2 and ground at the wiring harness side.

OK: Continuity exists. (2 Ω or less)

Q: Is the check result normal?

YES : Go to Step 6.

NO : Go to Step 4.

STEP 4. Paddle shift switch connector check: C-210

Check for the contact with terminals.

Q: Is the check result normal?

YES : Go to Step 5.

NO : Repair the defective connector.

STEP 5. Check the wiring harness between C-210 paddle shift switch connector terminal No.2 and the body ground.

Check the ground line for open circuit.

Q: Is the check result normal?

YES : Go to Step 6.

NO : Repair the wiring harness.

STEP 6. Inspection of the shift lever assembly connector, intermediate connector, and paddle shift switch connector: C-49, C-127, C-210

Check for the contact with terminals.

Q: Is the check result normal?

YES : Go to Step 7.

NO : Repair the defective connector.

STEP 7. Check the wiring harness between C-210 paddle shift switch connector terminal No.1 and C-49 shift lever assembly connector terminal No.11, and between C-210 paddle shift switch connector terminal No.3 and C-49 shift lever assembly connector terminal No.10.

Check the output line for short or open circuit.

Q: Is the check result normal?

YES : Go to Step 8.

NO : Repair the wiring harness.

STEP 8. Trouble symptom recheck after replacing the shift lever assembly

(1) Replace the shift lever assembly. (Refer to [P.22C-488.](#))


(2) Verify that the condition described by the customer exists.

Q: Does a malfunction take place again?




YES : Replace the mechatronic assembly. (Refer to [P.22C-505.](#))

NO : Intermittent malfunction. (Refer to GROUP 00 –How to Cope with Intermittent Malfunction [P.00-13.](#))

INSPECTION PROCEDURE 6: Shift lever-ECU power supply circuit abnormality

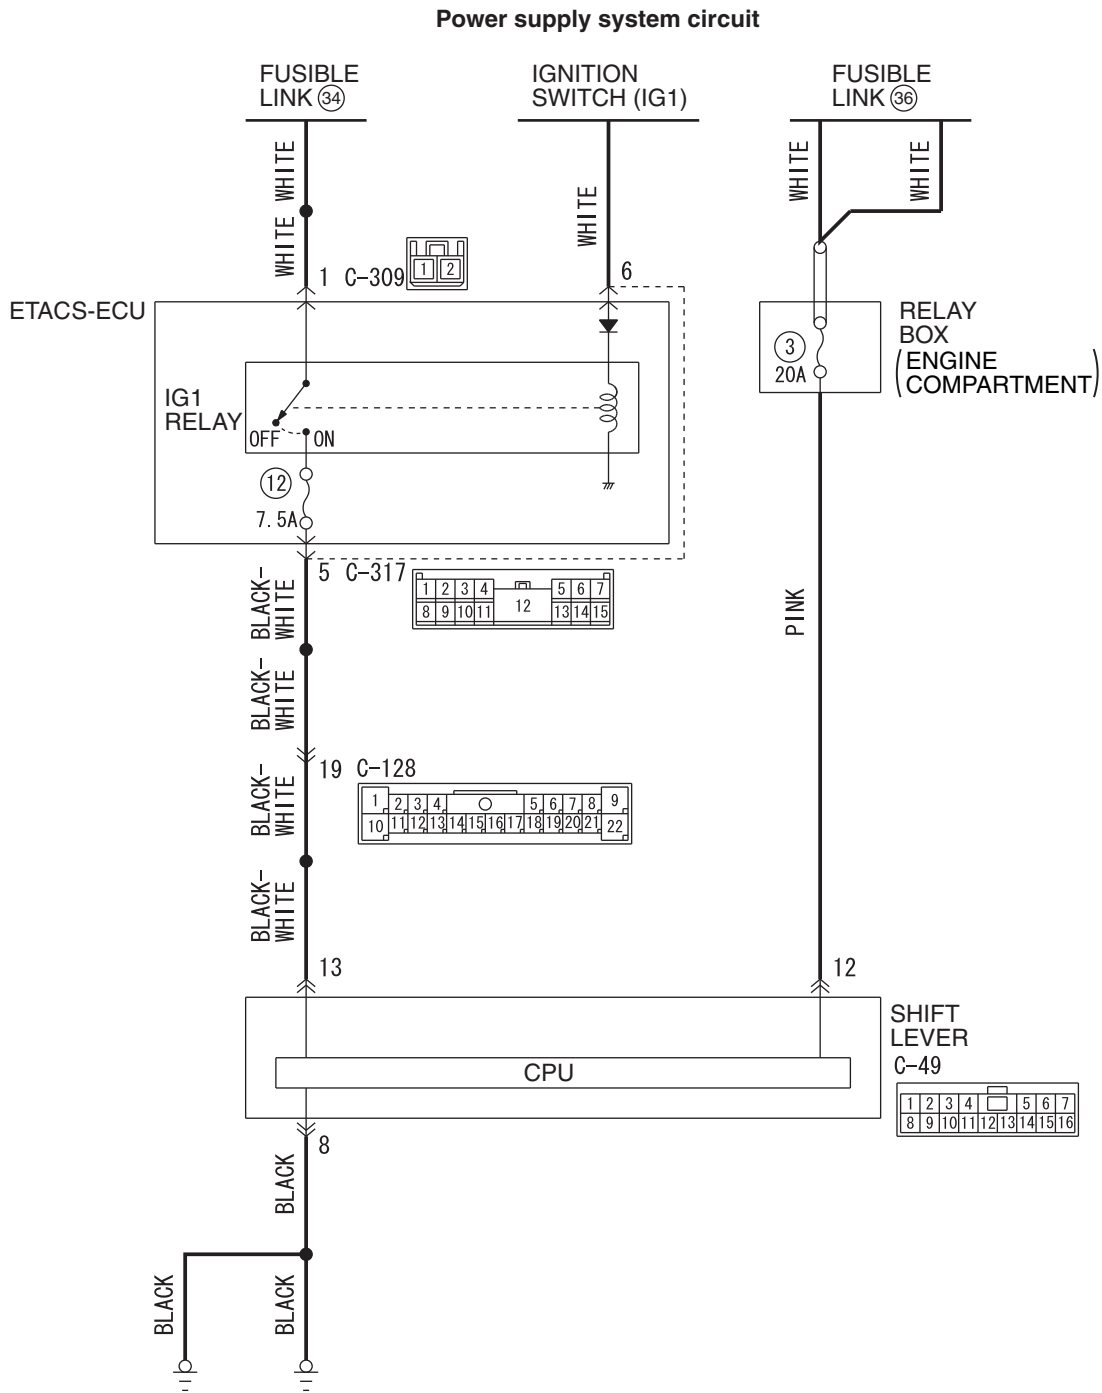

AC803095AB

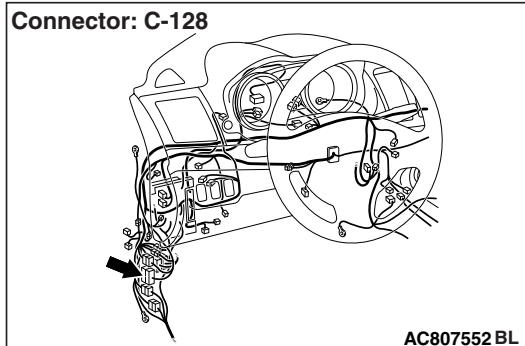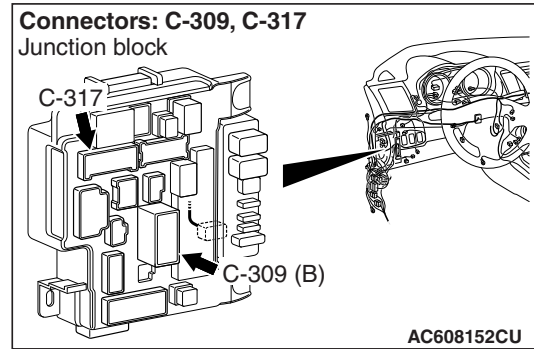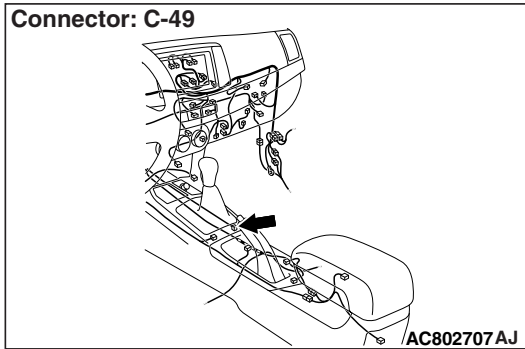

CAUTION

Whenever the ECU is replaced, ensure that the CAN bus lines are normal.

COMMENTS ON TROUBLE SYMPTOM

The shift lever-ECU power supply circuit, ground circuit, or shift lever-ECU may have a problem.

PROBABLE CAUSES

- Defective battery
- Damaged harness wires and connectors
- Malfunction of the ETACS-ECU
- Malfunction of the shift lever-ECU

DIAGNOSIS

STEP 1. Check the battery.

Refer to GROUP 54A –Battery Test [P.54A-8](#).

Q: Is the battery in good condition?

YES : Go to Step 2.

NO : Charge or replace the battery.

STEP 2. Measure the resistance at C-49 shift lever-ECU connector.

Disconnect the connector, and measure the resistance between terminal No.8 and ground at the wiring harness side.

OK: Continuity exists. (2 Ω or less)

Q: Is the check result normal?

YES : Go to Step 5.

NO : Go to Step 3.

STEP 3. Shift lever-ECU connector check: C-49

Check for the contact with terminals.

Q: Is the check result normal?

YES : Go to Step 4.

NO : Repair the defective connector.

STEP 4. Check the wiring harness between C-49 shift lever-ECU connector terminal No.8 and body ground.

Check the ground line for open circuit.

Q: Is the check result normal?

YES : Go to Step 5.

NO : Repair the wiring harness.

STEP 5. Measure the voltage at C-49 shift lever-ECU connector.

Disconnect the connector, and measure the voltage between terminal No.12 and ground at the wiring harness side.

OK: Battery positive voltage

Q: Is the check result normal?

YES : Go to Step 8.

NO : Go to Step 6.

STEP 6. Shift lever-ECU connector check: C-49

Check for the contact with terminals.

Q: Is the check result normal?

YES : Go to Step 7.

NO : Repair the defective connector.

STEP 7. Check the wiring harness between C-49 shift lever-ECU connector terminal No.12 and fusible link No.36.

Check the power supply line for short or open circuit.

Q: Is the check result normal?

YES : Go to Step 8.

NO : Repair the wiring harness.

STEP 8. Scan tool diagnostic trouble code

Check the ETACS diagnostic trouble code. (Refer to GROUP 54A –Troubleshooting [P.54A-674.](#))

Q: Is the DTC set?

YES : Perform the relevant troubleshooting.

NO : Go to Step 9.

STEP 9. Measure the voltage at C-49 shift lever-ECU connector.

(1) Disconnect the connector, and measure the voltage between terminal No.13 and ground at the wiring harness side.

(2) Turn the ignition switch to the "ON" position.

OK: Battery positive voltage

Q: Is the check result normal?

YES : Go to Step 12.

NO : Go to Step 10.

STEP 10. Inspection of the shift lever-ECU connector, intermediate connector, and ETACS-ECU connector: C-49, C-128, C-317

Check for the contact with terminals.

Q: Is the check result normal?

YES : Go to Step 11.

NO : Repair the defective connector.

STEP 11. Check the wiring harness between C-49 shift lever-ECU connector terminal No.13 and C-317 ETACS-ECU connector terminal No.5.

Check the power supply line for short or open circuit.

Q: Is the check result normal?

YES : Go to Step 12.

NO : Repair the wiring harness.

STEP 12. Retest the system.

Q: Does a malfunction take place again?

YES : Replace the shift lever assembly. (Refer to [P.22C-488.](#))

NO : Intermittent malfunction. (Refer to GROUP 00 –How to Cope with Intermittent Malfunction [P.00-13.](#))

DATA LIST REFERENCE TABLE

M1225006700185

Item No.	Display on scan tool	Check conditions	Normal conditions	
1	Lever position	Shift lever position	Shift lever position: P	P
			Shift lever position: R↔P	R-P
			Shift lever position: R	R
			Shift lever position: N↔R	N-R
			Shift lever position: N	N
			Shift lever position: D↔N	D-N
			Shift lever position: D	D
			Shift lever position: Manual mode	Manual
			Shift lever position: Upshift and hold	+
		Shift lever position: Downshift and hold	-	
3	Battery voltage (CAN data)	Ignition switch: ON	Battery voltage (12 V)	
4	Back light voltage	Ignition switch: ON	Shift lever position: R	20 –120 digits
			Shift lever position: Other than above	10 digits or less
5	Shift lock voltage	Ignition switch: ON	<ul style="list-style-type: none"> • Shift lever position: P • Brake pedal: Depressed 	500 digits or more
			Shift lever position: Other than above	100 digits or less
6	Battery voltage	Ignition switch: ON	520 –920 digits	
7	Shift indicator voltage (D range)	Ignition switch: ON	Shift lever position: D	10 –370 digits
			Shift lever position: Other than above	10 digits or less
8	Shift indicator voltage (M mode)	Ignition switch: ON	Shift lever position: Manual mode	10 –370 digits
			Shift lever position: Other than above	10 digits or less
9	Shift indicator voltage (N range)	Ignition switch: ON	Shift lever position: N	10 –370 digits
			Shift lever position: Other than above	10 digits or less
10	Shift indicator voltage (P range)	Ignition switch: ON	Shift lever position: P	10 –370 digits
			Shift lever position: Other than above	10 digits or less
11	Shift indicator voltage (R range)	Ignition switch: ON	Shift lever position: R	10 –370 digits
			Shift lever position: Other than above	10 digits or less
16	Shift indicator PWM* (Day)	Ignition switch: ON	100%	

Item No.	Display on scan tool	Check conditions	Normal conditions	
17	Shift indicator PWM* (Night)	Ignition switch: ON	20%	
20	ILL+	Ignition switch: ON	Headlight (taillight): ON ON	
			Headlight (taillight): OFF OFF	
23	Ignition SW	Ignition switch: ON	ON	
		Ignition switch: START	START	
24	Shift position	<ul style="list-style-type: none"> Shift lever position: Manual mode Driving at a constant speed in 1st 	1st	
		<ul style="list-style-type: none"> Shift lever position: Manual mode Driving at a constant speed in 2nd 	2nd	
		<ul style="list-style-type: none"> Shift lever position: Manual mode Driving at a constant speed in 3rd 	3rd	
		<ul style="list-style-type: none"> Shift lever position: Manual mode Driving at a constant speed in 4th 	4th	
		<ul style="list-style-type: none"> Shift lever position: Manual mode Driving at a constant speed in 5th 	5th	
		<ul style="list-style-type: none"> Shift lever position: Manual mode Driving at a constant speed in 6th 	6th	
		Ignition switch: ON	Shift lever position: D	D
			Shift lever position: N	N
			Shift lever position: P	P
			Shift lever position: R	R
		<ul style="list-style-type: none"> Shift lever position: D Driving at a constant speed in 1st 	D1	
		<ul style="list-style-type: none"> Shift lever position: D Driving at a constant speed in 2nd 	D2	
		<ul style="list-style-type: none"> Shift lever position: D Driving at a constant speed in 3rd 	D3	
		<ul style="list-style-type: none"> Shift lever position: D Driving at a constant speed in 4th 	D4	
<ul style="list-style-type: none"> Shift lever position: D Driving at a constant speed in 5th 	D5			
<ul style="list-style-type: none"> Shift lever position: D Driving at a constant speed in 6th 	D6			
25	Vehicle speed	Driving at a constant speed of 20 km/h	20 mph	
30	Drive mode SW (output data)	Ignition switch: ON	Switch position: Operate the switch toward the front of the vehicle, and hold it	+
			Switch position: Operate the switch toward the back of the vehicle, and hold it	-
			Switch position: Other than above	Not active

Item No.	Display on scan tool	Check conditions	Normal conditions	
32	Lever position (output data)	Ignition switch: ON	Shift lever position: P	P
			Shift lever position: R↔P	R-P
			Shift lever position: R	R
			Shift lever position: N↔R	N-R
			Shift lever position: N	N
			Shift lever position: D↔N	D-N
			Shift lever position: D	D
			Shift lever position: Manual mode	Manual
			Shift lever position: Upshift and hold	+
Shift lever position: Downshift and hold	-			

NOTE: *: PWM indicates the duty value (ratio).


SPECIAL FUNCTION (ACTUATOR TEST REFERENCE TABLE)

M1225027200107

Item No.	Display on scan tool	Test content	Check conditions	Normal conditions
1	Shift indicator	Display the shift position requested by the scan tool for 3 seconds.	<ul style="list-style-type: none"> • Ignition switch: ON • Shift lever position: P • Engine: Stopped 	The requested position is displayed.
2	Back up light	Illuminate the back-up light for 3 seconds.		The back-up light illuminates.

SHIFT LEVER -ECU TERMINALVOLTAGE REFERENCE CHART

M1225007800107

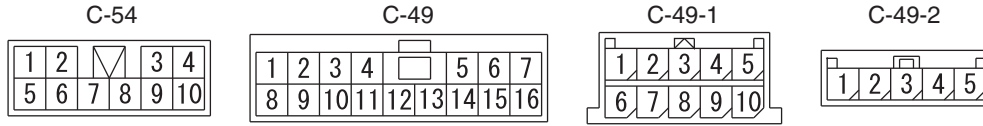

AC707982AG

Connector number	Terminal No.	Check items	Check conditions		Standard value
C-54	3	Shift lock solenoid power supply	Ignition switch: ON		Battery positive voltage
			Ignition switch: Other than above		1 V or less
	4	Stoplight switch	Brake pedal: Depressed		Battery positive voltage
			Brake pedal: Released		1 V or less
	5	Ignition switch (ACC)	Ignition switch: ACC		Battery positive voltage
			Ignition switch: Other than above		1 V or less
6	Ground	Always		1 V or less	
C-49	1	CAN_L	-		-
	2	CAN_H	-		-
	3	R range output	Ignition switch: ON	Shift lever position: R	Battery positive voltage
				Shift lever position: Other than above	1 V or less
	4	R range input	Always		Battery positive voltage
	5	N range output	Ignition switch: ON	Shift lever position: N	Battery positive voltage
				Shift lever position: Other than above	1 V or less
	6	Illumination power supply	Taillight: Turned ON		Battery positive voltage
			Taillight: Turned OFF		1 V or less
	7	P/N range input	Always		Battery positive voltage
8	Ground	Always		-	
10	Paddle switch (Down)	Ignition switch: ON	Paddle shift position: Downshift and hold	1 V or less	
			Paddle shift position: Other than the above	Battery positive voltage	

Connector number	Terminal No.	Check items	Check conditions		Standard value
C-49	11	Paddle switch (Up)	Ignition switch: ON	Paddle shift position: Upshift and hold	1 V or less
				Paddle shift position: Other than the above	Battery positive voltage
	12	Power supply	Always		Battery positive voltage
	13	Ignition switch (IG1)	Ignition switch: ON		Battery positive voltage
			Ignition switch: Other than above		1 V or less
	14	Illumination ground	Taillight: Turned ON		In accordance with the rheostat switch operation, the voltage changes.
			Taillight: Turned OFF		1 V or less
	15	P range output	Ignition switch: ON	Shift lever position: P	Battery positive voltage
				Shift lever position: Other than above	1 V or less
	16	LIN	-		-

Connector number	Terminal No.	Check items	Check conditions	Standard value	
C-49-1	1	D range lamp	Ignition switch: ON	Shift lever position: D	1 V or less
				Shift lever position: Other than above	Battery positive voltage
	2	N range lamp	Ignition switch: ON	Shift lever position: N	1 V or less
				Shift lever position: Other than above	Battery positive voltage
	3	R range lamp	Ignition switch: ON	Shift lever position: R	1 V or less
				Shift lever position: Other than above	Battery positive voltage
	4	P range lamp	Ignition switch: ON	Shift lever position: P	1 V or less
				Shift lever position: Other than above	Battery positive voltage
	5	Manual mode lamp	Ignition switch: ON	Shift lever position: Manual mode	1 V or less
				Shift lever position: Other than above	Battery positive voltage
	6	Illumination power supply	Taillight: Turned ON		Battery positive voltage
			Taillight: Turned OFF		1 V or less
	7	Power supply	Always		Battery positive voltage
	10	Illumination ground	Taillight: Turned ON		In accordance with the rheostat switch operation, the voltage changes.
Taillight: Turned OFF			1 V or less		

Connector number	Terminal No.	Check items	Check conditions	Standard value	
C-49-2	1	Twin clutch SST control mode switch (Normal)	Ignition switch: ON	Switch position: Operate the switch toward the back of the vehicle, and hold it.	1 V or less
				Switch position: Other than above	Battery positive voltage
	2	Twin clutch SST control mode switch (Sport)	Ignition switch: ON	Switch position: Operate the switch toward the front of the vehicle, and hold it.	1 V or less
				Switch position: Other than above	Battery positive voltage
	3	Ground	Always		1 V or less
	4	Illumination ground	Taillight: Turned ON		In accordance with the rheostat switch operation, the voltage changes.
Taillight: Turned OFF				1 V or less	
5	Illumination power supply	Taillight: Turned ON		Battery positive voltage	
		Taillight: Turned OFF		1 V or less	

DIAGNOSIS <ACTIVE CENTER DIFFERENTIAL (ACD)>

TROUBLESHOOTING STRATEGY

M1221007000916

Use these steps to plan your diagnostic strategy. If you follow them carefully, you will find most ACD malfunctions.

1. Gather as much information as possible about the complaint from the customer.
2. Verify that the condition described by the customer exists.
3. Check the vehicle for any ACD Diagnostic Trouble Codes (DTCs).
4. If you can not verify the condition and there are no DTCs, the malfunction is intermittent. For information on how to cope with intermittent malfunctions, refer to GROUP 00, How to Use Troubleshooting/Inspection Service Points –How to Cope with Intermittent Malfunction P.00-13.
5. If you can verify the condition but there are no DTCs, or the system can not communicate with scan tool, refer to the Symptom Chart P.22C-399.
6. If there is a DTC, record the number of the code, then erase the code from memory using scan tool.
7. Reconfirm the symptom.
8. If a DTC is set again, go to the Inspection Chart for Diagnostic Trouble Codes.
9. If a DTC is not set again, the malfunction is intermittent. For information on how to cope with intermittent malfunctions, refer to GROUP 00, How to Use Troubleshooting/Inspection Service Points –How to Cope with Intermittent Malfunction P.00-13.
10. Verify malfunction is eliminated. After repairs are completed, the complaint conditions to confirm the malfunction has been eliminated.

PRECAUTIONS FOR DIAGNOSIS


Before diagnosis, check that all the following items are normal.

- A normal steering wheel is installed correctly to the neutral position of steering column shaft assembly.

- The size of tire and wheel, specification, tire pressure, balance, and wear status are normal.
- The wheel alignment is normal.
- No modifications to the engine, suspension, or others, which can affect the ACD system, is implemented.

DIAGNOSIS FUNCTION

M1221007700186

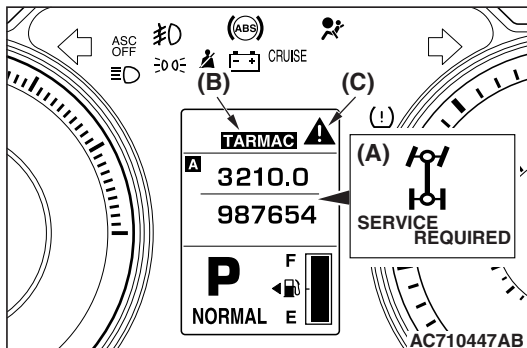

WARNING INDICATOR

When a malfunction occurs in the ACD system, the figure (A) will be displayed on the information screen of multi information display, and the mode display (B) will be turned off. Subsequently, the screen returns to the one before the warning display, and then "!" indicator (C) will illuminate. If the indicator (C) continues to be displayed on the information screen of multi information display, check the diagnostic trouble code that is set.

FAIL-SAFE FUNCTION

If an abnormality occurs to the signal of sensors, switches, solenoids, or others, the AWC-ECU performs a control for the driver safety and system protection. The control contents are as follows.

FAIL-SAFE REFERENCE TABLE

Diagnostic trouble code No.	Item	Control content
C2203	VIN not written	Normal control
C1614	Parking brake switch	A warning is given to the driver with the trouble displayed to the multi information display, but the control is maintained because the vehicle behavior is not affected.
C1624	EEPROM	
C161F	AWC actuator protection 1	A warning is given to the driver by the flashing of multi information display control mode, and the control is stopped.
C1621	AWC actuator protection 2	
Others (other than above)		A warning is given to the driver with the trouble displayed to the multi information display, and the control is stopped.

NOTE: All the troubles will return to a normal status when the ignition switch is turned from OFF to ON.

HOW TO CONNECT THE SCAN TOOL (M.U.T.-III)

Required Special Tools:

- MB991958 Scan Tool (M.U.T.-III Sub Assembly)
 - MB991824: Vehicle Communication Interface (V.C.I.)
 - MB991827 M.U.T.-III USB Cable
 - MB991910 M.U.T.-III Main Harness A (Vehicles with CAN communication system)

⚠ CAUTION


To prevent damage to scan tool MB991958, always turn the ignition switch to the "LOCK" (OFF) position before connecting or disconnecting scan tool MB991958.

1. Ensure that the ignition switch is at the "LOCK" (OFF) position.
2. Start up the personal computer.
3. Connect special tool MB991827 to special tool MB991824 and the personal computer.
4. Connect special tool MB991910 to special tool MB991824.
5. Connect special tool MB991910 to the data link connector.
6. Turn the power switch of special tool MB991824 to the "ON" position.

NOTE: When special tool MB991824 is energized, special tool MB991824 indicator light will be illuminated in a green color.

7. Start the scan tool system on the personal computer.

NOTE: Disconnecting scan tool MB991958 is the reverse of the connecting sequence, making sure that the ignition switch is at the "LOCK" (OFF) position.

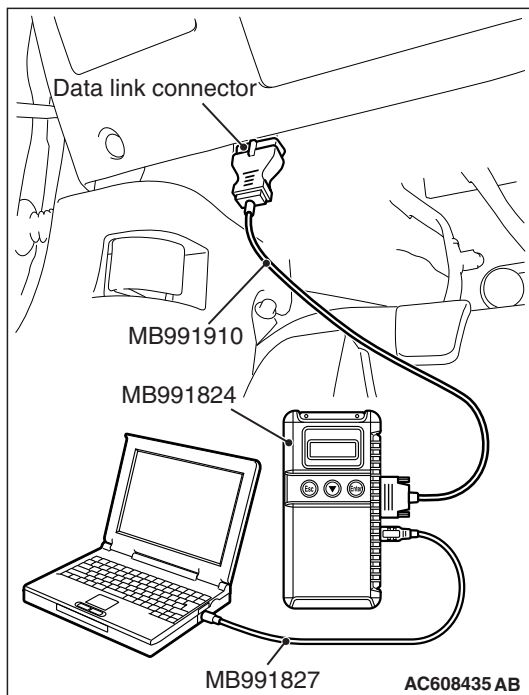

FREEZE FRAME DATA CHECK

Display items of the freeze frame data are as follows.

Data of when the diagnostic trouble code is determined is obtained, and the status of ACD is stored. By analyzing each data using the scan tool, troubleshooting can be carried out efficiently.

DISPLAY ITEM LIST

Item No.	Item	Unit/display
1	Odometer	km
2	Ignition cycle	Count
4	Current trouble accumulative time	min
5	ACD control mode (for meter display)	<ul style="list-style-type: none"> • TARMAC • GRAVEL • SNOW
6	ASC control mode	<ul style="list-style-type: none"> • ASC ON • ASC OFF
8	Stoplight switch	<ul style="list-style-type: none"> • ON • OFF
9	Parking brake switch	<ul style="list-style-type: none"> • ON • OFF
10	ABS activation flag	<ul style="list-style-type: none"> • ON • OFF
11	Steering wheel sensor	deg
12	Accelerator opening angle	%
13	Wheel speed sensor <FL>	km/h
14	Wheel speed sensor <FR>	km/h
15	Wheel speed sensor <RL>	km/h
16	Wheel speed sensor <RR>	km/h
18	Yaw rate sensor	deg/s
19	Lateral G-sensor	m/s ²
20	Longitudinal G-sensor	m/s ²
21	ACD target torque	Nm

DIAGNOSTIC TROUBLE CODE CHART

⚠ CAUTION

During diagnosis, a DTC associated with other system may be set when the ignition switch is turned ON with connector(s) disconnected. On completion, confirm all systems for diagnostic trouble code(s). If diagnostic trouble code(s) are set, erase them all.

Diagnostic trouble code No.	Item	Reference page
C1000	Stoplight switch system	P.22C-400
C100A	FL	Wheel speed sensor system (faulty circuit)
C1015	FR	
C1020	RL	
C102B	RR	
C1011	FL	Wheel speed sensor system (faulty signal)
C101C	FR	
C1027	RL	
C1032	RR	
C1014	FL	Wheel speed sensor system (characteristics abnormality)
C101F	FR	
C102A	RL	
C1035	RR	
C1078	Tire turning malfunction	P.22C-407
C1219	Steering wheel sensor system (faulty signal)	P.22C-409
C121A	Steering wheel sensor system (neutral learning abnormality)	P.22C-411
C123C	G and yaw rate sensor system (faulty signal)	P.22C-412
C1242	G and yaw rate sensor system (abnormality of longitudinal G sensor output signal)	P.22C-414
C1610	Electronic relay abnormality of AWC actuator power supply	P.22C-416
C1611	AWC pressure sensor system (low voltage)	P.22C-417
C1612	AWC pressure sensor system (high voltage)	P.22C-419
C1613	AWC switch system (stuck ON)	P.22C-422
C1614	Parking brake switch system (stuck ON)	P.22C-425
C1616	Cranking signal system (stuck ON)	P.22C-428
C1617	AWC CAN main data system (data not received)	P.22C-430
C161C	ACD proportioning valve system (malfunction)	P.22C-432
C161D	Electric pump relay system (faulty circuit)	P.22C-435
C161E	Electric pump system	P.22C-438
C161F	AWC actuator protection 1	This is the code that is set when the control is suspended to protect AWC actuator, and not a malfunction.

Diagnostic trouble code No.	Item	Reference page
C1621	AWC actuator protection 2	This is the code that is set when the control is suspended to protect AWC actuator, and not a malfunction.
C1622	ACD control system (abnormal)	P.22C-440
C1624	AWC-ECU system (internal error)	P.22C-441
C1625	AWC pressure sensor system (power supply voltage abnormality)	P.22C-442
C2100	Battery voltage malfunction (low voltage)	P.22C-445
C2101	Battery voltage malfunction (high voltage)	P.22C-448
C2203	VIN not recorded	P.22C-450
C2205	Steering wheel sensor system (internal error)	P.22C-451
U0001	Bus-off	P.22C-452
U0100	Engine time-out error	P.22C-453
U0101	TC-SST time-out error	P.22C-454
U0121	ASC time-out error	P.22C-455
U0126	Steering wheel sensor time-out error	P.22C-456
U0141	ETACS time-out error	P.22C-457
U0401	Engine data error	P.22C-458
U0428	Steering wheel sensor data error	P.22C-459
U0431	ETACS data error	P.22C-460
U1415	Coding incomplete/fail	P.22C-461
U1417	Coding data malfunction	P.22C-462
U1425	TC-SST data error	P.22C-463
U1427	Wheel speed sensor data error	P.22C-464
U1428	G and yaw rate sensor data error	P.22C-465


SYMPTOM CHART

Symptom	Inspection procedure No.	Reference page
Communication between the scan tool and AWC-ECU cannot be established	1	P.22C-467
Mode does not change even when the AWC switch is pressed	2	P.22C-467
AWC-ECU power supply circuit malfunction (Control mode is not displayed.)	3	P.22C-470
ACD control mode display is flashing. (Diagnostic trouble code No.C161F or C1621 is set)	-	This is the symptom that AWC-ECU suspends the control to protect the actuator during severe driving, and not a malfunction. Turn the ignition switch from OFF to ON to return to control.



DIAGNOSTIC TROUBLE CODE PROCEDURES

DTC C1000: Stoplight Switch System

Stoplight switch system circuit

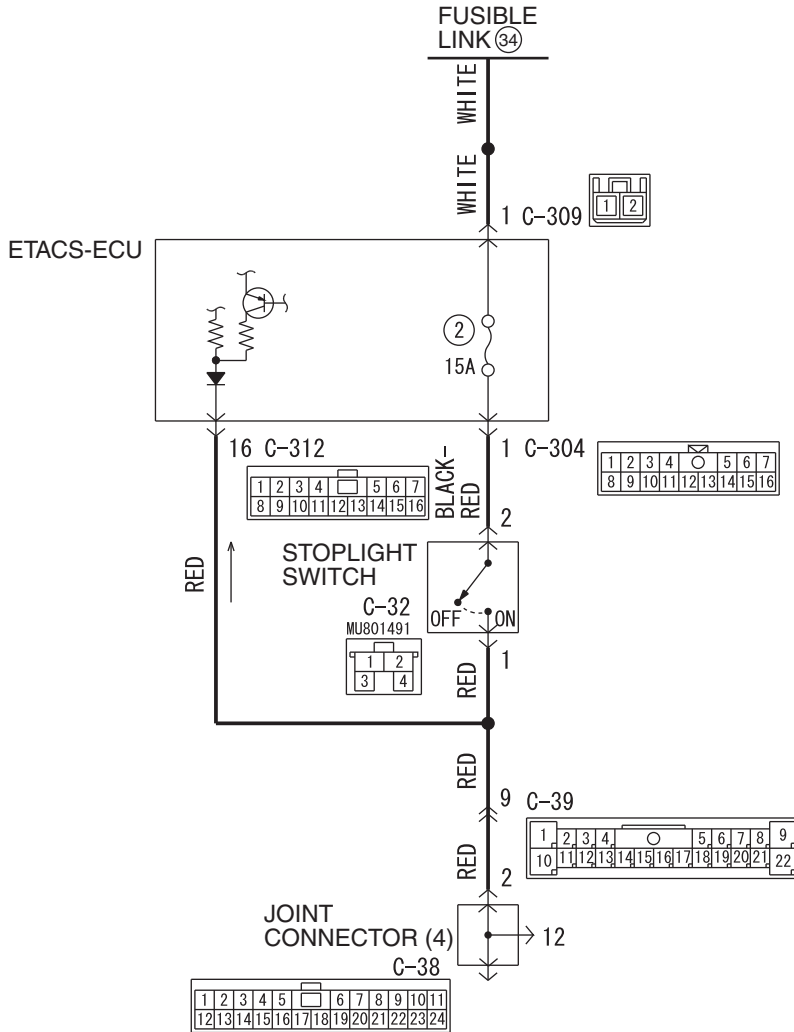

AC807747

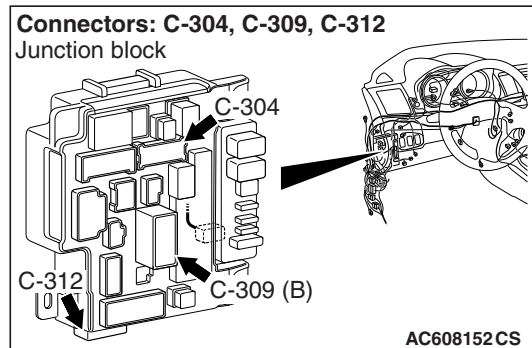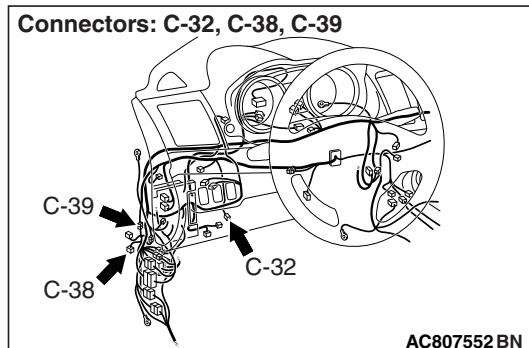

CAUTION

- If there is any problem in the CAN bus lines, an incorrect diagnostic trouble code may be set. Prior to this diagnosis, diagnose the CAN bus lines.
- Whenever the ECU is replaced, ensure that the CAN bus lines are normal.

OPERATION

AWC-ECU receives signals of stoplight switch from ETACS-ECU via the CAN bus lines.

DTC SET CONDITIONS

This diagnostic trouble code is set when the abnormality below is detected:

- The vehicle has run for a long time with the stop light switch turned ON.
- With the stoplight switch OFF, the vehicle speed is decelerated suddenly.

PROBABLE CAUSES

- Incorrect adjustment of stoplight switch position
- Malfunction of stoplight switch
- Stoplight malfunction
- Damaged harness wires and connectors
- Malfunction of the ETACS-ECU
- Malfunction of AWC-ECU

DIAGNOSIS

STEP 1. Scan tool CAN bus diagnostics

Using scan tool MB991958, diagnose the CAN bus lines.

Q: Is the check result normal?

YES : Go to Step 3.

NO : Repair the CAN bus lines (Refer to GROUP 54C – CAN Bus Diagnosis Table P.54C-16). After repairing the CAN bus line, go to Step 2.

STEP 2. Check whether the DTC is reset.

Q: Is DTC No. C1000 set?

YES : Go to Step 3.

NO : This diagnosis is complete.

STEP 3. Check of the stoplight on and off.

Check that the stoplight illuminates when the brake pedal is depressed, and the stoplight goes out when the brake pedal is released.

Q: Is the check result normal?

YES : Go to Step 14.

NO : Go to Step 4.

STEP 4. Stoplight switch installation status check.

Refer to GROUP 35A –On-vehicle Service P.35A-31.

Q: Is the check result normal?

YES : Go to Step 5.

NO : Install the stoplight switch correctly. Then go to Step 18.

STEP 5. Check the stoplight switch.

Refer to GROUP 35A –Brake Pedal [P.35A-32](#).

Q: Is the check result normal?

YES : Go to Step 6.

NO : Replace the stoplight switch. (Refer to GROUP 35A – Brake Pedal [P.35A-31](#)). Then go to Step 18.

STEP 6. ETACS-ECU connector check: C-304**Q: Is the check result normal?**

YES : Go to Step 7.

NO : Repair the defective connector. Then go to Step 18.

STEP 7. Measure the voltage at the C-304 ETACS-ECU connector.

Disconnect the connector, and measure the voltage between terminal No.1 and ground at the ECU side.

OK: Battery positive voltage

Q: Is the check result normal?

YES : Go to Step 8.

NO : Replace the ETACS-ECU. (Refer to GROUP 54A – ETACS-ECU [P.54A-769](#)). Then go to Step 18.

STEP 8. Stoplight switch connector check: C-32**Q: Is the check result normal?**

YES : Go to Step 9.

NO : Repair the defective connector. Then go to Step 18.

STEP 9. Voltage measurement at the C-32 stoplight switch connector.

Disconnect the connector, and measure the voltage between terminal No.2 and ground at the wiring harness side.

OK: Battery positive voltage

Q: Is the check result normal?

YES : Go to Step 11.

NO : Go to Step 10.

STEP 10. Check the wiring harness between C-304 ETACS-ECU connector terminal No.1 and C-32 stoplight switch connector terminal No.2.

Check the output line for open or short circuit.

Q: Is the check result normal?

YES : Go to Step 11.

NO : Repair the wiring harness. Then go to Step 18.

STEP 11. J/C (4), intermediate connector, stoplight switch connector, ETACS-ECU connector check: C-38, C-39, C-32, C-312

Q: Is the check result normal?

YES : Go to Step 12.

NO : Repair the defective connector. Then go to Step 18.

STEP 12. Voltage measurement at C-38 J/C (4)

Disconnect the connector, and measure the voltage between terminal No.2 and ground at the wiring harness side.

OK: Battery positive voltage (brake pedal depressed)

Q: Is the check result normal?

YES : Go to Step 14.

NO : Go to Step 13.

STEP 13. Check the wiring harness between C-32 stoplight switch connector terminal No.1 and the C-38 J/C (4) terminal No.2.

Check the output line for open or short circuit.

Q: Is the check result normal?

YES : Go to Step 16.

NO : Repair the wiring harness. Then go to Step 18.

STEP 14. Measure the voltage at the C-312 ETACS-ECU connector.

Disconnect the connector, and measure the voltage between terminal No.16 and ground at the wiring harness side.

- **OK: 1 V or less (brake pedal released)**
- **OK: Battery positive voltage (brake pedal depressed)**

Q: Is the check result normal?

YES : Go to Step 16.

NO : Go to Step 15.

STEP 15. Check the wiring harness between C-312 ETACS-ECU connector terminal No.16 and C-32 stoplight switch connector terminal No.1.

Check the output line for open circuit.

Q: Is the check result normal?

YES : Go to Step 16.

NO : Repair the wiring harness. Then go to Step 18.

STEP 16. Scan tool data list

Item No.39: Stoplight switch (Refer to data list reference table [P.22C-473.](#))

Q: Is the check result normal?

YES : Go to Step 17.

NO : Replace the ETACS-ECU. (Refer to GROUP 54A – ETACS-ECU [P.54A-769.](#)) Then go to Step 18.

STEP 17. Check whether the DTC is reset.**Q: Is DTC No. C1000 set?**

YES : Replace the AWC-ECU. (Refer to [P.22C-518](#)). Then go to Step 18.

NO : Intermittent malfunction. (Refer to GROUP 00 –How to Cope with Intermittent Malfunction [P.00-13](#)).

STEP 18. Check whether the DTC is reset.**Q: Is DTC No. C1000 set?**

YES : Return to Step 1.

NO : This diagnosis is complete.

DTC C100A <FL>, C1015 <FR>, C1020 <RL>, C102B <RR>: Wheel Speed Sensor System (Faulty Circuit)**CAUTION**

- If there is any problem in the CAN bus lines, an incorrect diagnostic trouble code may be set. Prior to this diagnosis, diagnose the CAN bus lines.
- Whenever the ECU is replaced, ensure that the CAN bus lines are normal.

OPERATION

AWC-ECU receives the wheel speed data from ASC-ECU via the CAN communication.

DTC SET CONDITIONS

Observe the wheel speed at startup. If one or more of the wheel speed does not follow, the diagnostic trouble code of the relevant wheel speed sensor is set.

PROBABLE CAUSES

- Malfunction of wheel speed sensor
- Damaged harness wires and connectors
- Malfunction of encoder for wheel speed detection
- Malfunction of ASC-ECU
- Malfunction of AWC-ECU

DIAGNOSIS**STEP 1. Scan tool CAN bus diagnostics**

Using scan tool MB991958, diagnose the CAN bus lines.

Q: Is the check result normal?

YES : Go to Step 3.

NO : Repair the CAN bus lines (Refer to GROUP 54C – CAN Bus Diagnosis Table [P.54C-16](#)). After repairing the CAN bus line, go to Step 2.

STEP 2. Check whether the DTC is reset.**Q: Is the relevant wheel speed sensor diagnostic trouble code No.C100A <FL>, C1015 <FR>, C1020 <RL>, or C102B <RR> set?**

YES : Go to Step 3.

NO : This diagnosis is complete.

STEP 3. Scan tool diagnostic trouble code

Check the ASC diagnostic trouble code. (Refer to GROUP 35C –Troubleshooting P.35C-27).

Q: Is the DTC set?

YES : Perform the relevant troubleshooting.

NO : Go to Step 4.

STEP 4. Scan tool data list

Check the data list of the relevant wheel speed sensor. (Refer to P.22C-473).

- Item No.22: Wheel speed sensor <FL>
- Item No.23: Wheel speed sensor <FR>
- Item No.24: Wheel speed sensor <RL>
- Item No.25: Wheel speed sensor <RR>

Q: Is the check result normal?

YES : Intermittent malfunction. (Refer to GROUP 00 –How to Cope with Intermittent Malfunction P.00-13).

NO : Replace the AWC-ECU. (Refer to P.22C-518).

DTC C1011 <FL>, C101C <FR>, C1027 <RL>, C1032 <RR>: Wheel Speed Sensor System (Faulty Signal)

⚠ CAUTION

- If there is any problem in the CAN bus lines, an incorrect diagnostic trouble code may be set. Prior to this diagnosis, diagnose the CAN bus lines.
- Whenever the ECU is replaced, ensure that the CAN bus lines are normal.

OPERATION

AWC-ECU receives the wheel speed data from ASC-ECU via the CAN communication.

DTC SET CONDITIONS

When an irregular change in the wheel speed sensor is detected, the diagnostic trouble code of the relevant wheel speed sensor is set.

PROBABLE CAUSES

- Malfunction of wheel speed sensor
- Damaged harness wires and connectors
- Malfunction of encoder for wheel speed detection
- Malfunction of ASC-ECU
- Malfunction of AWC-ECU

DIAGNOSIS

STEP 1. Scan tool CAN bus diagnostics

Using scan tool MB991958, diagnose the CAN bus lines.

Q: Is the check result normal?

YES : Go to Step 3.

NO : Repair the CAN bus lines. (Refer to GROUP 54C – Troubleshooting P.54C-16). After repairing the CAN bus line, go to Step 2.

STEP 2. Check whether the DTC is reset.

Q: Is the relevant wheel speed sensor diagnostic trouble code No.C1011 <FL>, C101C <FR>, C1027 <RL>, or C1032 <RR> set?

YES : Go to Step 3.

NO : This diagnosis is complete.

STEP 3. Scan tool diagnostic trouble code

Check the ASC diagnostic trouble code. (Refer to GROUP 35C –Troubleshooting P.35C-27).

Q: Is the DTC set?

YES : Perform the relevant troubleshooting.

NO : Go to Step 4.

STEP 4. Scan tool data list

Check the data list of the relevant wheel speed sensor. (Refer to P.22C-473).

- Item No.22: Wheel speed sensor <FL>
- Item No.23: Wheel speed sensor <FR>
- Item No.24: Wheel speed sensor <RL>
- Item No.25: Wheel speed sensor <RR>

Q: Is the check result normal?

YES : Intermittent malfunction. (Refer to GROUP 00 –How to Cope with Intermittent Malfunction P.00-13).

NO : Replace the AWC-ECU. (Refer to P.22C-518).

**DTC C1014 <FL>, C101F <FR>, C102A <RL>, C1035 <RR>: Wheel Speed Sensor System
(Characteristics Abnormality)**
 **CAUTION**

- If there is any problem in the CAN bus lines, an incorrect diagnostic trouble code may be set. Prior to this diagnosis, diagnose the CAN bus lines.
- Whenever the ECU is replaced, ensure that the CAN bus lines are normal.

OPERATION

AWC-ECU receives the wheel speed data from ASC-ECU via the CAN communication.

DTC SET CONDITIONS

If one or more of the wheel speed is out of the range of the specified value, the diagnostic trouble code of the relevant wheel speed sensor is set.

PROBABLE CAUSES

- Malfunction of wheel speed sensor
- Damaged harness wires and connectors
- Malfunction of encoder for wheel speed detection
- Malfunction of ASC-ECU
- Malfunction of AWC-ECU

DIAGNOSIS

STEP 1. Scan tool CAN bus diagnostics

Using scan tool MB991958, diagnose the CAN bus lines.

Q: Is the check result normal?

YES : Go to Step 3.

NO : Repair the CAN bus lines. (Refer to GROUP 54C – Troubleshooting P.54C-16). After repairing the CAN bus line, go to Step 2.

STEP 2. Check whether the DTC is reset.

Q: Is the relevant wheel speed sensor diagnostic trouble code No.C1014 <FL>, C101F <FR>, C102A <RL>, or C1035 <RR> set?

YES : Go to Step 3.

NO : This diagnosis is complete.

STEP 3. Scan tool diagnostic trouble code

Check the ASC diagnostic trouble code. (Refer to GROUP 35C – Troubleshooting P.35C-27).

Q: Is the DTC set?

YES : Perform the relevant troubleshooting.

NO : Go to Step 4.

STEP 4. Scan tool data list

Check the data list of the relevant wheel speed sensor. (Refer to P.22C-473).

- Item No.22: Wheel speed sensor <FL>
- Item No.23: Wheel speed sensor <FR>
- Item No.24: Wheel speed sensor <RL>
- Item No.25: Wheel speed sensor <RR>

Q: Is the check result normal?

YES : Intermittent malfunction. (Refer to GROUP 00 –How to Cope with Intermittent Malfunction P.00-13).

NO : Replace the AWC-ECU. (Refer to P.22C-518).

DTC C1078: Tire Turning Malfunction

CAUTION

- If there is any problem in the CAN bus lines, an incorrect diagnostic trouble code may be set. Prior to this diagnosis, diagnose the CAN bus lines.
- Whenever the ECU is replaced, ensure that the CAN bus lines are normal.

OPERATION

AWC-ECU receives the wheel speed data from ASC-ECU via the CAN communication.

DTC SET CONDITIONS

The wheel speed is observed when the steering angle is in the neutral position, and the code is set when the wheel speed, which is more than the specified value, is detected.

PROBABLE CAUSES

- Tire with incorrect diameter equipped
- Improper tire pressure
- Malfunction of ASC-ECU
- Malfunction of AWC-ECU

DIAGNOSIS

STEP 1. Scan tool CAN bus diagnostics

Using scan tool MB991958, diagnose the CAN bus lines.

Q: Is the check result normal?

YES : Go to Step 3.

NO : Repair the CAN bus line (Refer to GROUP 54C – Troubleshooting [P.54C-16](#)). After repairing the CAN bus line, go to Step 2.

STEP 2. Check whether the DTC is reset.**Q: Is DTC No. C1078 set?**

YES : Go to Step 3.

NO : This diagnosis is complete.

STEP 3. Check the tires

Check that the wheels/tires with the identical size are installed, and that each tire pressure is within the value specified on the tire pressure label.

Q: Is the check result normal?

YES : Go to Step 4.

NO : Install the wheels/tires with the identical size, or adjust the tire pressure. Then go to Step 5.

STEP 4. Scan tool diagnostic trouble code

Check the ASC diagnostic trouble code. (Refer to GROUP 35C –Troubleshooting [P.35C-27](#)).

Q: Is the DTC set?

YES : Perform the relevant troubleshooting.

NO : Go to Step 5.

STEP 5. Scan tool data list

Check the following data list. (Refer to [P.22C-473](#)).

- Item No.22: Wheel speed sensor <FL>
- Item No.23: Wheel speed sensor <FR>
- Item No.24: Wheel speed sensor <RL>
- Item No.25: Wheel speed sensor <RR>

Q: Is the check result normal?

YES : Intermittent malfunction. (Refer to GROUP 00 –How to Cope with Intermittent Malfunction [P.00-13](#)).

NO : Replace the AWC-ECU. (Refer to [P.22C-518](#)).

DTC C1219: Steering Wheel Sensor System (Faulty Signal)

⚠ CAUTION

- If there is any problem in the CAN bus lines, an incorrect diagnostic trouble code may be set. Prior to this diagnosis, diagnose the CAN bus lines.
- Whenever the ECU is replaced, ensure that the CAN bus lines are normal.
- When the steering wheel sensor is replaced, calibrate the steering wheel sensor (Refer to GROUP 35C –On-vehicle Service P.35C-304), and initialize the steering angle correction amount stored in AWC-ECU. (Item No.1: Steering angle correction amount initialization P.22C-476).
- Do not drop the G and yaw rate sensor or subject it to a shock.
- When G and yaw rate sensor is replaced, calibrate G and yaw rate sensor (refer to GROUP 35C –On-vehicle Service P.35C-302)

OPERATION

AWC-ECU receives steering wheel data from the steering wheel sensor via CAN communication.

DTC SET CONDITIONS

This diagnostic trouble code is set when the abnormality below is detected:

- The tolerance of neutral position of steering wheel sensor exceeds the specified range.
- Abnormality in steering wheel sensor output value
- Abnormality is detected by a comparison of output value from the steering wheel sensor with the output values from wheel speed sensor and G and yaw rate sensor.

PROBABLE CAUSES

- Improper installation of steering wheel sensor
- Malfunction of steering wheel sensor
- Malfunction of G and yaw rate sensor
- Malfunction of wheel speed sensor
- Malfunction of AWC-ECU
- Vehicle straight-ahead position and steering wheel neutral position is not matched.

DIAGNOSIS

STEP 1. Scan tool CAN bus diagnostics

Using scan tool MB991958, diagnose the CAN bus lines.

Q: Is the check result normal?

YES : Go to Step 3.

NO : Repair the CAN bus lines. (Refer to GROUP 54C – Troubleshooting P.54C-16). After repairing the CAN bus line, go to Step 2.

STEP 2. Check whether the DTC is reset.

Q: Is DTC No. C1219 set?

YES : Go to Step 3.

NO : This diagnosis is complete.

STEP 3. Scan tool diagnostic trouble code

Q: Is DTC No. C2205 set?

YES : Perform the relevant troubleshooting.

NO : Go to Step 4.

STEP 4. Scan tool diagnostic trouble code

Check if the wheel speed sensor-related, G and yaw rate sensor-related, or steering wheel sensor-related diagnostic trouble code is set.

Q: Is the DTC set?

YES : Carry out the appropriate troubleshooting. Then go to Step 9.

NO : Go to Step 5.

STEP 5. Check of steering wheel sensor installation status

Check that the steering wheel sensor is installed correctly. (Refer to GROUP 35C –Steering Wheel Sensor [P.35C-321](#)).

Q: Is the check result normal?

YES : Go to Step 6.

NO : Install the steering wheel sensor correctly. Then go to Step 6.

STEP 6. Wheel alignment check**Q: Is the check result normal?**

YES : After checking the wheel alignment, calibrate the steering wheel sensor (Refer to GROUP 35C – On-vehicle Service [P.35C-304](#)), and initialize AWC-ECU steering angle correction amount (Refer to [P.22C-476](#)). Then, go to Step 7.

NO : After adjusting the wheel alignment, calibrate the steering wheel sensor (Refer to GROUP 35C – On-vehicle Service [P.35C-304](#)), and initialize AWC-ECU steering angle correction amount (Refer to [P.22C-476](#)). Then, go to Step 7.

STEP 7. Scan tool data list

Item 11: Steering wheel sensor (Refer to [P.22C-473](#)).

Q: Is the check result normal?

YES : Go to Step 8.

NO : Replace the steering wheel sensor. (Refer to GROUP 35C –Steering Wheel Sensor [P.35C-321](#)). Then, go to Step 9.

STEP 8. Check whether the DTC is reset.**Q: Is DTC No. C1219 set?**

YES : Replace the AWC-ECU. (Refer to [P.22C-518](#)). Then, go to Step 9.

NO : Intermittent malfunction. (Refer to GROUP 00 –How to Cope with Intermittent Malfunction [P.00-13](#)).

STEP 9. Check whether the DTC is reset.**Q: Is DTC No. C1219 set?**

YES : Return to Step 1.

NO : This diagnosis is complete.

DTC C121A: Steering Wheel Sensor System (Neutral Learning Abnormality)

⚠ CAUTION

- If there is any problem in the CAN bus lines, an incorrect diagnostic trouble code may be set. Prior to this diagnosis, diagnose the CAN bus lines.
- Whenever the ECU is replaced, ensure that the CAN bus lines are normal.
- When the steering wheel sensor is replaced, calibrate the steering wheel sensor (Refer to GROUP 35C –On-vehicle Service P.35C-304), and initialize the steering angle correction amount stored in AWC-ECU. (Item No.1: Steering angle correction amount initialization P.22C-476).

OPERATION

Steering wheel sensor stores the neutral position learned by the scan tool. When the neutral position has not been learned, the steering wheel sensor outputs the signal indicating that the learning has not been performed.

DTC SET CONDITIONS

This DTC is set when it is detected that the steering wheel sensor has not learned the neutral position.

PROBABLE CAUSES

- Steering wheel sensor neutral point not learned
- Malfunction of steering wheel sensor
- Malfunction of AWC-ECU

DIAGNOSIS

STEP 1. Scan tool CAN bus diagnostics

Using scan tool MB991958, diagnose the CAN bus lines.

Q: Is the check result normal?

YES : Go to Step 3.

NO : Repair the CAN bus lines. (Refer to GROUP 54C – Troubleshooting P.54C-16). After repairing the CAN bus line, go to Step 2.

STEP 2. Check whether the DTC is reset.

Q: Is DTC No. C121A set?

YES : Go to Step 3.

NO : This diagnosis is complete.

STEP 3. Steering wheel sensor calibration.

Perform calibration of the steering wheel sensor. (Refer to GROUP 35C –On-vehicle Service P.35C-304).

Q: Has the calibration succeeded?

YES : Go to Step 4.

NO : Replace the steering wheel sensor. (Refer to GROUP 35C –Steering Wheel Sensor P.35C-321). Then, go to Step 4.

STEP 4. Check whether the DTC is reset.

Q: Is DTC No. C121A set?

YES : Replace the AWC-ECU. (Refer to P.22C-518). Then, go to Step 5.

NO : Intermittent malfunction. (Refer to GROUP 00 –How to Cope with Intermittent Malfunction P.00-13).

STEP 5. Check whether the DTC is reset.**Q: Is DTC No. C121A set?****YES :** Return to Step 1.**NO :** This diagnosis is complete.**DTC C123C: G and Yaw Rate Sensor System (Faulty Signal)****⚠ CAUTION**

- If there is any problem in the CAN bus lines, an incorrect diagnostic trouble code may be set. Prior to this diagnosis, diagnose the CAN bus lines.
- Whenever the ECU is replaced, ensure that the CAN bus lines are normal.
- When the steering wheel sensor is replaced, calibrate the steering wheel sensor (Refer to GROUP 35C –On-vehicle Service P.35C-304), and initialize the steering angle correction amount stored in AWC-ECU. (Item No.1: Steering angle correction amount initialization P.22C-476).
- Do not drop the G and yaw rate sensor or subject it to a shock.
- When G and yaw rate sensor is replaced, calibrate G and yaw rate sensor (refer to GROUP 35C –On-vehicle Service P.35C-302)

OPERATION

AWC-ECU receives the G and yaw rate sensor data from ASC-ECU via the CAN communication.

DTC SET CONDITIONS

This diagnostic trouble code is set when the abnormality below is detected:

- Abnormality in G and yaw rate sensor output value
- This diagnostic trouble code is set when AWC-ECU determines that an abnormality is present by comparing the measurement values of G and yaw rate sensor with the calculation value of G and yaw rate calculated by the measurement values of the wheel speed sensor and steering wheel sensor.

PROBABLE CAUSES

- Improper installation of G and yaw rate sensor
- Malfunction of G and yaw rate sensor
- Malfunction of wheel speed sensor
- Malfunction of steering wheel sensor
- Malfunction of ASC-ECU
- Malfunction of AWC-ECU

DIAGNOSIS**STEP 1. Scan tool CAN bus diagnostics**

Using scan tool MB991958, diagnose the CAN bus lines.

Q: Is the check result normal?**YES :** Go to Step 3.**NO :** Repair the CAN bus lines. (Refer to GROUP 54C – Troubleshooting P.54C-16). After repairing the CAN bus line, go to Step 2.**STEP 2. Check whether the DTC is reset.****Q: Is DTC No. C123C set?****YES :** Go to Step 3.**NO :** This diagnosis is complete.

STEP 3. Scan tool diagnostic trouble code

Check the ASC diagnostic trouble code. (Refer to GROUP 35C –Troubleshooting [P.35C-27](#)).

Q: Is the check result normal?

YES : Perform the relevant troubleshooting.

NO : Go to Step 4.

STEP 4. Scan tool diagnostic trouble code

Check if the wheel speed sensor-related, or steering wheel sensor-related diagnostic trouble code is set.

Q: Is the DTC set?

YES : Perform the relevant troubleshooting.

NO : Go to Step 5.

STEP 5. Check of G and yaw rate sensor installation status.

Check that the G and yaw rate sensor is installed correctly. (Refer to GROUP 35C –G and Yaw Rate Sensor [P.35C-320](#)).

Q: Is the check result normal?

YES : Go to Step 6.

NO : Reinstall the G and yaw rate sensor correctly. Then go to Step 6.

STEP 6. Scan tool data list

Check the following data list. (Refer to [P.22C-473](#)).

- Item No.26: Yaw rate sensor
- Item No.29: Lateral G sensor

Q: Is the check result normal?

YES : Go to Step 7.

NO : Replace the G and yaw rate sensor. (Refer to GROUP 35C –G and Yaw Rate Sensor [P.35C-320](#)). Then go to Step 11.

STEP 7. Check of steering wheel sensor installation status.

Check that the steering wheel sensor is installed correctly. (Refer to GROUP 35C –Steering Wheel Sensor [P.35C-321](#)).

Q: Is the check result normal?

YES : Go to Step 8.

NO : Install the steering wheel sensor correctly. Then go to Step 8.

STEP 8. Wheel alignment check.**Q: Is the check result normal?**

YES : After checking the wheel alignment, calibrate the steering wheel sensor (Refer to GROUP 35C – On-vehicle Service [P.35C-304](#)), and initialize AWC-ECU steering angle correction amount (Refer to [P.22C-476](#)). Then go to Step 9.

NO : After adjusting the wheel alignment, calibrate the steering wheel sensor (Refer to GROUP 35C – On-vehicle Service [P.35C-304](#)), and initialize AWC-ECU steering angle correction amount (Refer to [P.22C-476](#)). Then go to Step 9.

STEP 9. Scan tool data list

Item 11: Steering wheel sensor (Refer to [P.22C-473](#)).

Q: Is the check result normal?

YES : Go to Step 10.

NO : Replace the steering wheel sensor. (Refer to GROUP 35C –Steering Wheel Sensor [P.35C-321](#)). Then go to Step 10.

STEP 10. Check whether the DTC is reset.**Q: Is DTC No. C123C set?**

YES : Replace the AWC-ECU. (Refer to [P.22C-518](#)). Then go to Step 11.

NO : Intermittent malfunction. (Refer to GROUP 00 –How to Cope with Intermittent Malfunction [P.00-13](#)).

STEP 11. Check whether the DTC is reset.**Q: Is DTC No. C123C set?**

YES : Return to Step 1.

NO : This diagnosis is complete.

DTC C1242: G and Yaw Rate Sensor System (Abnormality of Longitudinal G Sensor Output Signal)**CAUTION**

- If there is any problem in the CAN bus lines, an incorrect diagnostic trouble code may be set. Prior to this diagnosis, diagnose the CAN bus lines.
- Whenever the ECU is replaced, ensure that the CAN bus lines are normal.
- Do not drop the G and yaw rate sensor or subject it to a shock.
- When G and yaw rate sensor is replaced, calibrate G and yaw rate sensor (refer to GROUP 35C –On-vehicle Service [P.35C-302](#))

OPERATION

AWC-ECU receives the G and yaw rate sensor data from ASC-ECU via the CAN communication.

DTC set conditions

This diagnostic trouble code is set when the abnormality below is detected:

- Abnormality in G and yaw rate sensor output value

- This diagnostic trouble code is set when AWC-ECU determines that an abnormality is present by comparing the longitudinal G that is output from the G and yaw rate sensor during braking with the calculation value calculated by the data from the wheel speed sensor.

PROBABLE CAUSES

- Improper installation of G and yaw rate sensor
- Malfunction of G and yaw rate sensor
- Malfunction of wheel speed sensor
- Malfunction of stoplight switch
- Malfunction of AWC-ECU
- Malfunction of ASC-ECU

DIAGNOSIS

STEP 1. Scan tool CAN bus diagnostics

Using scan tool MB991958, diagnose the CAN bus lines.

Q: Is the check result normal?

YES : Go to Step 3.

NO : Repair the CAN bus lines. (Refer to GROUP 54C – Troubleshooting [P.54C-16](#)). After repairing the CAN bus line, go to Step 2.

STEP 2. Check whether the DTC is reset.

Q: Is DTC No. C1242 set?

YES : Go to Step 3.

NO : This diagnosis is complete.

STEP 3. Scan tool diagnostic trouble code

Check the ASC diagnostic trouble code. (Refer to GROUP 35C – Troubleshooting [P.35C-27](#)).

Q: Is the check result normal?

YES : Perform the relevant troubleshooting.

NO : Go to Step 4.

STEP 4. Scan tool diagnostic trouble code

Check if the stoplight switch-related, or wheel speed sensor-related diagnostic trouble code is set.

Q: Is the DTC set?

YES : Perform the relevant troubleshooting.

NO : Go to Step 5.

STEP 5. Check of G and yaw rate sensor installation status.

Check that the G and yaw rate sensor is installed correctly. (Refer to GROUP 35C –G and Yaw Rate Sensor [P.35C-320](#)).

Q: Is the check result normal?

YES : Go to Step 6.

NO : Reinstall the G and yaw rate sensor correctly. Then go to Step 6.

STEP 6. Scan tool data list

Item No.31: Longitudinal G sensor (Refer to [P.22C-473](#)).

Q: Is the check result normal?

YES : Go to Step 7.

NO : Replace the G and yaw rate sensor. (Refer to GROUP 35C –G and Yaw Rate Sensor [P.35C-320](#)). Then go to Step 8.

STEP 7. Check whether the DTC is reset.**Q: Is DTC No. C1242 set?**

YES : Replace the AWC-ECU. (Refer to [P.22C-518](#)). Then go to Step 8.

NO : Intermittent malfunction. (Refer to GROUP 00 –How to Cope with Intermittent Malfunction [P.00-13](#)).

STEP 8. Check whether the DTC is reset.**Q: Is DTC No. C1242 set?**

YES : Return to Step 1.

NO : This diagnosis is complete.

DTC C1610: Electronic Relay Abnormality of AWC Actuator Power Supply**⚠ CAUTION**

- If there is any problem in the CAN bus lines, an incorrect diagnostic trouble code may be set. Prior to this diagnosis, diagnose the CAN bus lines.
- Whenever the ECU is replaced, ensure that the CAN bus lines are normal.

OPERATION

A relay is incorporated in AWC-ECU, and the power is supplied to the actuator via this relay.

DTC SET CONDITIONS

When the actuator power supply relay in AWC-ECU is seized, the code is set.

PROBABLE CAUSES

- Malfunction of AWC-ECU

DIAGNOSIS**STEP 1. Scan tool CAN bus diagnostics**

Using scan tool MB991958, diagnose the CAN bus lines.

Q: Is the check result normal?

YES : Go to Step 3.

NO : Repair the CAN bus lines. (Refer to GROUP 54C – Troubleshooting [P.54C-16](#)). After repairing the CAN bus line, go to Step 2.

STEP 2. Check whether the DTC is reset.**Q: Is DTC No. C1610 set?**

YES : Replace the AWC-ECU. (Refer to [P.22C-518](#)).

NO : This diagnosis is complete.

STEP 3. Check whether the DTC is reset.


Q: Is DTC No. C1610 set?

YES : Replace the AWC-ECU. (Refer to [P.22C-518](#)).



NO : Intermittent malfunction. (Refer to GROUP 00 –How to Cope with Intermittent Malfunction [P.00-13](#)).


DTC C1611: AWC Pressure Sensor System (Low Voltage)

AWC pressure sensor system circuit

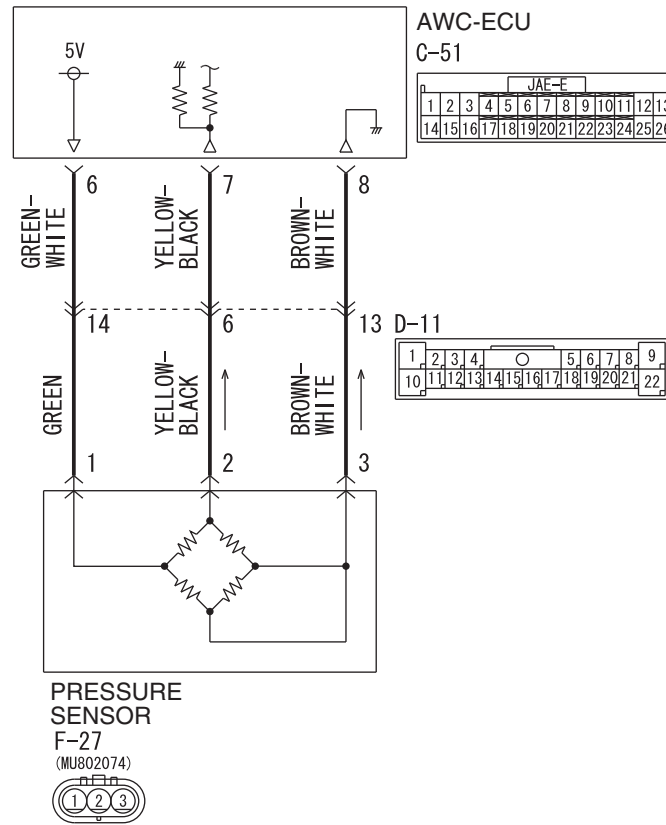

AC803119AB

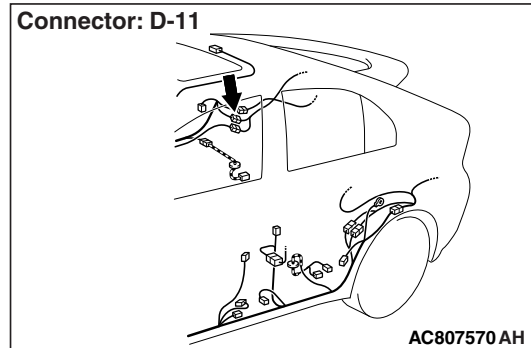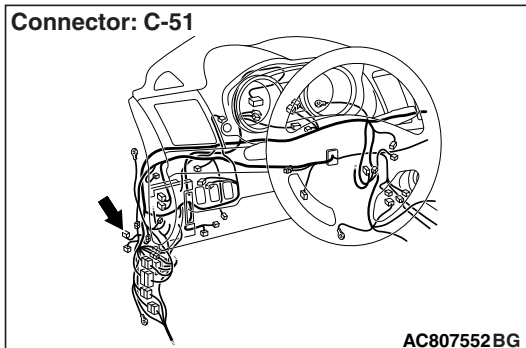

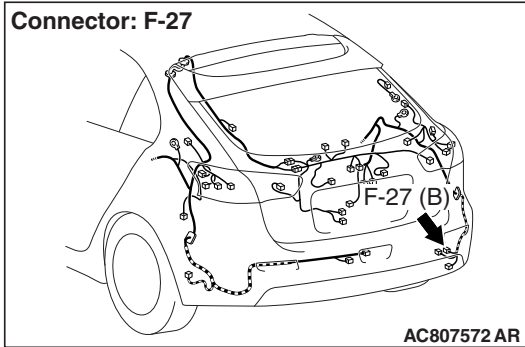**CAUTION**

- If there is any problem in the CAN bus lines, an incorrect diagnostic trouble code may be set. Prior to this diagnosis, diagnose the CAN bus lines.
- Whenever the ECU is replaced, ensure that the CAN bus lines are normal.

OPERATION

AWC-ECU controls the electric pump by the information from AWC pressure sensor.

DTC SET CONDITIONS

The code is set when AWC pressure sensor output voltage is 0.2 V or less.

PROBABLE CAUSES

- AWC pressure sensor malfunction
- Damaged harness wires and connectors
- Malfunction of AWC-ECU

DIAGNOSIS**STEP 1. Scan tool CAN bus diagnostics**

Using scan tool MB991958, diagnose the CAN bus lines.

Q: Is the check result normal?

YES : Go to Step 3.

NO : Repair the CAN bus lines. (Refer to GROUP 54C – Troubleshooting P.54C-16). After repairing the CAN bus line, go to Step 2.

STEP 2. Check whether the DTC is reset.**Q: Is DTC No. C1611 set?**

YES : Go to Step 3.

NO : This diagnosis is complete.

STEP 3. AWC-ECU connector, intermediate connector, AWC pressure sensor connector check: C-51, D-11, F-27**Q: Is the check result normal?**

YES : Go to Step 4.

NO : Repair the defective connector. Then go to Step 7.

STEP 4. Check the wiring harness between C-51 AWC-ECU connector terminal No.7 and F-27 AWC pressure sensor connector terminal No.2.

Check the output line for open or short circuit.

Q: Is the check result normal?

YES : Go to Step 5.

NO : Repair the wiring harness. Then go to Step 7.

STEP 5. Scan tool data list

Item No.87: Pressure sensor output voltage.

OK: 0.20 –2.67 V

Q: Is the check result normal?

YES : Go to Step 6.

NO : Replace the hydraulic unit. (Refer to [P.22C-521](#)) Then go to Step 6.

STEP 6. Check whether the DTC is reset.

Q: Is DTC No. C1611 set?

YES : Replace the AWC-ECU. (Refer to [P.22C-518](#)). Then, go to Step 7.

NO : Intermittent malfunction. (Refer to GROUP 00 –How to Cope with Intermittent Malfunction [P.00-13](#)).

STEP 7. Check whether the DTC is reset.

Q: Is DTC No. C1611 set?

YES : Return to Step 1.

NO : This diagnosis is complete.

DTC C1612: AWC Pressure Sensor System (High Voltage)

**AWC PRESSURE SENSOR SYSTEM
CIRCUIT**

Refer to [P.22C-417](#).

⚠ CAUTION

- If there is any problem in the CAN bus lines, an incorrect diagnostic trouble code may be set. Prior to this diagnosis, diagnose the CAN bus lines.
- Whenever the ECU is replaced, ensure that the CAN bus lines are normal.

OPERATION

AWC-ECU controls the electric pump by the information from AWC pressure sensor.

DTC SET CONDITIONS

The code is set when AWC pressure sensor output voltage is 4.6 V or more.

PROBABLE CAUSES

- AWC pressure sensor malfunction
- Damaged harness wires and connectors
- Malfunction of AWC-ECU

DIAGNOSIS

STEP 1. Scan tool CAN bus diagnostics

Using scan tool MB991958, diagnose the CAN bus lines.

Q: Is the check result normal?

YES : Go to Step 3.

NO : Repair the CAN bus lines. (Refer to GROUP 54C – Troubleshooting [P.54C-16](#)). After repairing the CAN bus line, go to Step 2.

STEP 2. Check whether the DTC is reset.**Q: Is DTC No. C1612 set?****YES :** Go to Step 3.**NO :** This diagnosis is complete.

STEP 3. Scan tool diagnostic trouble codeCheck if the ACD-related DTC No.C1625 is set. (Refer to [P.22C-397](#)).**Q: Is the DTC set?****YES :** Perform the relevant troubleshooting. Then go to Step 9.**NO :** Go to Step 4.

STEP 4. AWC-ECU connector, intermediate connector, AWC pressure sensor connector check: C-51, D-11, F-27**Q: Is the check result normal?****YES :** Go to Step 5.**NO :** Repair the defective connector. Then go to Step 9.

STEP 5. Check the wiring harness between C-51 AWC-ECU connector terminal No.7 and F-27 AWC pressure sensor connector terminal No.2.

Check the output line for short (for short to the power supply) or open circuit.

Q: Is the check result normal?**YES :** Go to Step 6.**NO :** Repair the wiring harness. Then go to Step 9.

STEP 6. Check the wiring harness between C-51 AWC-ECUconnector terminal No.8 and F-27 AWC pressure sensor connector terminal No.3.

Check the ground line for open circuit.

Q: Is the check result normal?**YES :** Go to Step 7.**NO :** Check D-11 intermediate connector. When no problem is found, repair the wiring harness. Then go to Step 9.

STEP 7. Scan tool data list

Item No.87: Pressure sensor output voltage.

OK: 0.20 –2.67 V

Q: Is the check result normal?

YES : Go to Step 8.

NO : Replace the hydraulic unit. (Refer to [P.22C-521](#)).
Then go to Step 8.

STEP 8. Check whether the DTC is reset.

Q: Is DTC No. C1612 set?

YES : Replace the AWC-ECU. (Refer to [P.22C-518](#)). Then
go to Step 9.

NO : Intermittent malfunction. (Refer to GROUP 00 –How
to Cope with Intermittent Malfunction [P.00-13](#)).

STEP 9. Check whether the DTC is reset.


Q: Is DTC No. C1612 set?

YES : Return to Step 1.



NO : This diagnosis is complete.


DTC C1613: AWC Switch System (Stuck ON)

AWC mode select switch system circuit

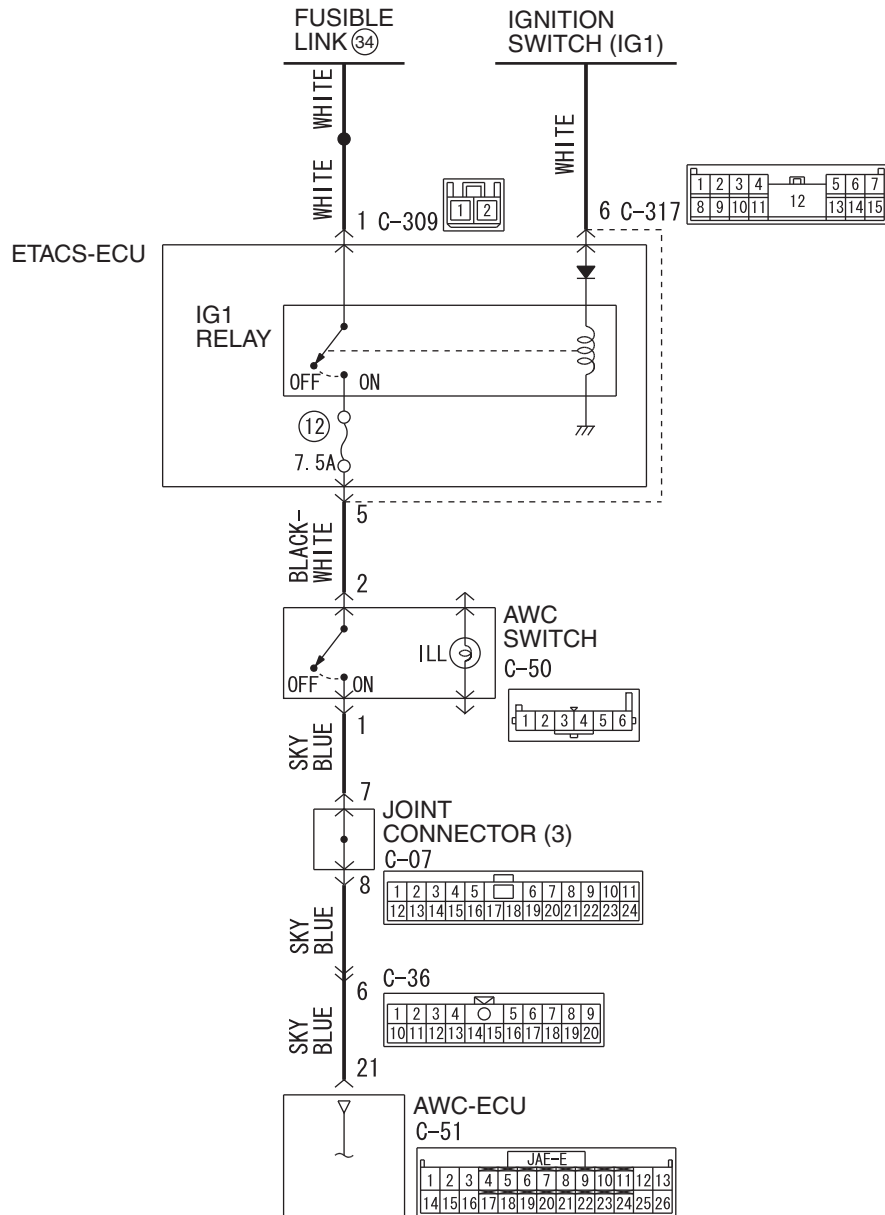

AC807751 AB

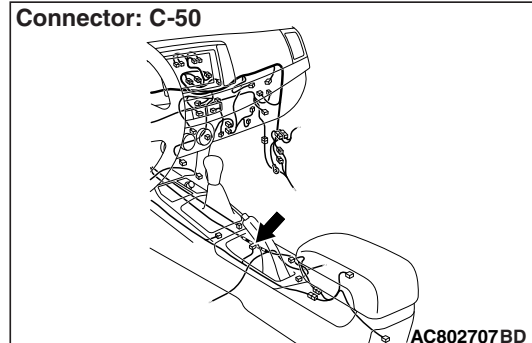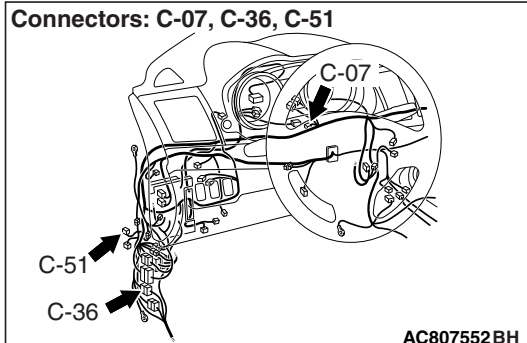

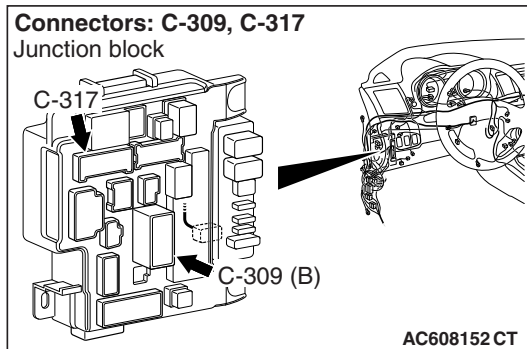

CAUTION

- If there is any problem in the CAN bus lines, an incorrect diagnostic trouble code may be set. Prior to this diagnosis, diagnose the CAN bus lines.
- Whenever the ECU is replaced, ensure that the CAN bus lines are normal.

OPERATION

- AWC-ECU controls the driving mode by the information from AWC switch.

- AWC-ECU sends ACD control mode to the combination meter via ETACS-ECU.

DTC SET CONDITIONS

If the AWC switch is on sticking, the code is set.

PROBABLE CAUSES

- AWC switch malfunction
- Damaged harness wires and connectors
- Malfunction of AWC-ECU

DIAGNOSIS

STEP 1. Scan tool CAN bus diagnostics

Using scan tool MB991958, diagnose the CAN bus lines.

Q: Is the check result normal?

YES : Go to Step 3.

NO : Repair the CAN bus lines. (Refer to GROUP 54C – Troubleshooting P.54C-16). After repairing the CAN bus line, go to Step 2.

STEP 2. Check whether the DTC is reset.

Q: Is DTC No. C1613 set?

YES : Go to Step 3.

NO : This diagnosis is complete.

STEP 3. J/C (3), Intermediate connector, AWC-ECU connector, AWC switch connector check: C-07, C-36, C-51, C-50

Q: Is the check result normal?

YES : Go to Step 4.

NO : Repair the defective connector. Then go to Step 8.

STEP 4. Wiring harness check between C-51 AWC-ECU connector terminal No.21 and C-50 AWC switch connector terminal No.1.

Check the output line for short (for short to the power supply) circuit.

Q: Is the check result normal?

YES : Go to Step 5.

NO : Repair the wiring harness. Then go to Step 8.

STEP 5. Scan tool data list

Item No.89: AWC switch (Refer to data list reference table [P.22C-473](#)).

Q: Is the check result normal?

YES : Go to Step 7.

NO : Go to Step 6.

STEP 6. AWC switch check.

Check the AWC switch. (Refer to [P.22C-520](#)).

Q: Is the check result normal?

YES : Go to Step 7.

NO : Replace the AWC switch. (Refer to [P.22C-518](#)). Then go to Step 8.

STEP 7. Check whether the DTC is reset.**Q: Is DTC No. C1613 set?**

YES : Replace the AWC-ECU. (Refer to [P.22C-518](#)). Then go to Step 8.

NO : Intermittent malfunction. (Refer to GROUP 00 –How to Cope with Intermittent Malfunction [P.00-13](#)).


STEP 8. Check whether the DTC is reset.**Q: Is DTC No. C1613 set?**

YES : Return to Step 1.



NO : This diagnosis is complete.

DTC C1614: Parking Brake Switch System (Stuck ON)

Parking brake switch system circuit

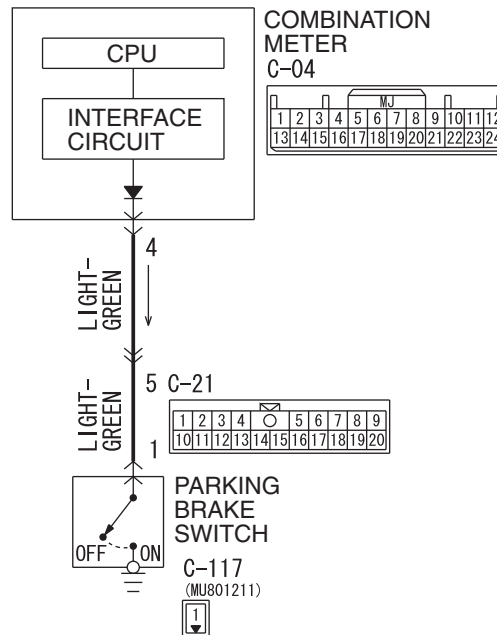

AC803121AB

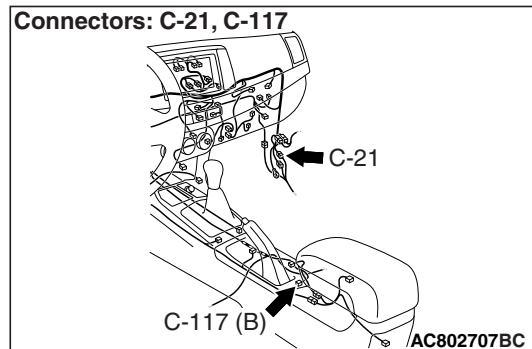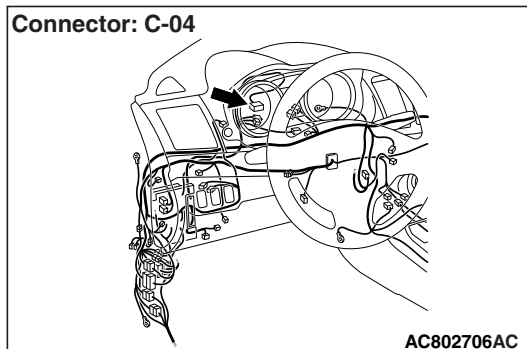

CAUTION

- If there is any problem in the CAN bus lines, an incorrect diagnostic trouble code may be set. Prior to this diagnosis, diagnose the CAN bus lines.
- Whenever the ECU is replaced, ensure that the CAN bus lines are normal.

OPERATION

AWC-ECU receives the parking brake switch signal from the combination meter via ETACS-ECU.

DTC SET CONDITIONS

If the parking brake switch is on sticking, the code is set.

PROBABLE CAUSES

- Parking brake switch malfunction
- Damaged harness wires and connectors
- Malfunction of the ETACS-ECU
- Malfunction of the combination meter
- Malfunction of AWC-ECU
- Driving with the parking brake pulled

DIAGNOSIS

STEP 1. Scan tool CAN bus diagnostics

Using scan tool MB991958, diagnose the CAN bus lines.

Q: Is the check result normal?

YES : Go to Step 3.

NO : Repair the CAN bus lines. (Refer to GROUP 54C – Troubleshooting [P.54C-16](#)). After repairing the CAN bus line, go to Step 2.

STEP 2. Check whether the DTC is reset.**Q: Is DTC No. C1614 set?**

YES : Go to Step 3.

NO : This diagnosis is complete.

STEP 3. Scan tool data list

Item 40: Parking brake switch (Refer to data list reference table [P.22C-473](#)).

Q: Is the check result normal?

YES : Go to Step 9.

NO : Go to Step 4.

STEP 4. Scan tool diagnostic trouble code

- Check whether the combination meter-related DTC is set. (Refer to GROUP 54A –Troubleshooting [P.54A-33](#)).
- Check the ETACS diagnostic trouble code. (Refer to GROUP 54A –Troubleshooting [P.54A-674](#)).

Q: Is the DTC set?

YES : Perform the relevant troubleshooting.

NO : Go to Step 5.

STEP 5. Check the parking brake switch.

Check the parking brake switch. (Refer to GROUP 36 – On-vehicle Service [P.36-10](#)).

Q: Is the check result normal?

YES : Go to Step 6.

NO : Replace the parking brake switch. (Refer to GROUP 36 –Parking Brake Lever [P.36-11](#)). Then go to Step 9.

STEP 6. Combination meter connector, intermediate connector, and parking brake switch connector check: C-04, C-21, C-117

Check the contact status of the terminals.

Q: Is the check result normal?

YES : Go to Step 7.

NO : Repair the defective connector. Then go to Step 9.

STEP 7. Check the wiring harness between C-04 combination meter connector terminal No.4 and C-117 parking brake switch connector terminal No.1.

Check the output line for short circuit.

Q: Is the check result normal?

YES : Replace the combination meter. (Refer to GROUP 54A –Combination Meter [P.54A-124](#)). Then go to Step 8.

NO : Repair the wiring harness. Then go to Step 8.

STEP 8. Check whether the DTC is reset.

Q: Is DTC No. C1614 set?

YES : Replace the AWC-ECU. (Refer to [P.22C-518](#)). Then go to Step 9.

NO : Intermittent malfunction. (Refer to GROUP 00 –How to Cope with Intermittent Malfunction [P.00-13](#)).

STEP 9. Check whether the DTC is reset.


Q: Is DTC No. C1614 set?

YES : Return to Step 1.



NO : This diagnosis is complete.

DTC C1616: Cranking Signal System (Stuck ON)

Cranking signal system circuit

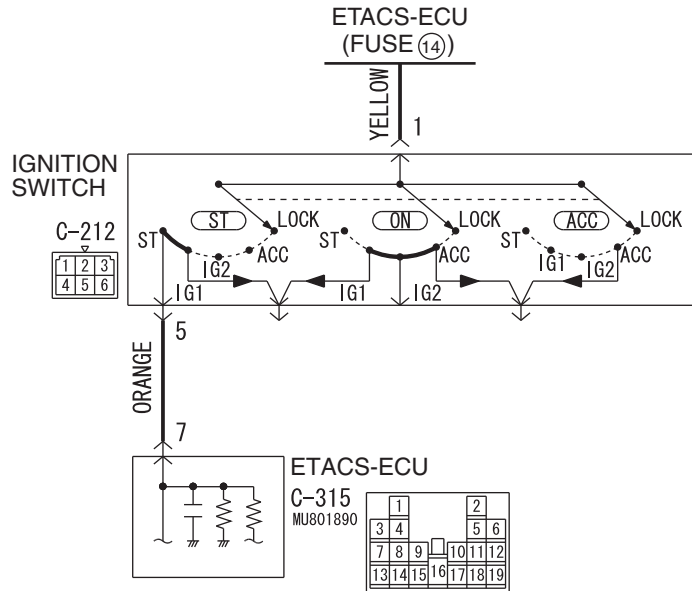

AC803122 AB

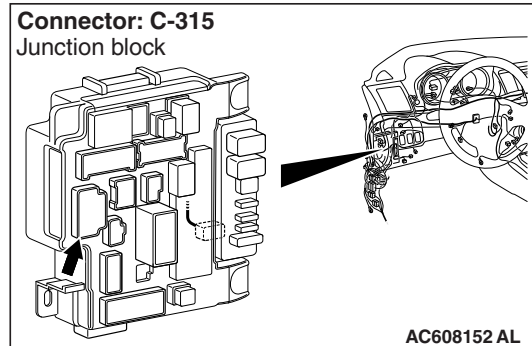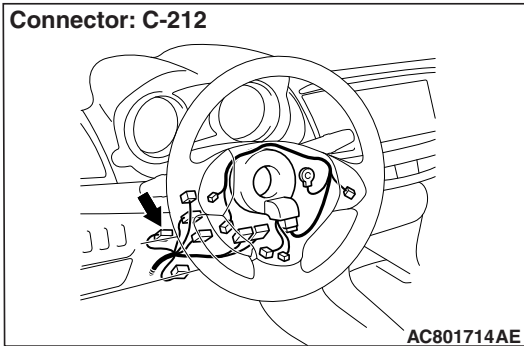

CAUTION

- If there is any problem in the CAN bus lines, an incorrect diagnostic trouble code may be set. Prior to this diagnosis, diagnose the CAN bus lines.
- Whenever the ECU is replaced, ensure that the CAN bus lines are normal.

OPERATION

AWC-ECU receives the signal of the ignition switch from ETACS-ECU via CAN communication.

DTC SET CONDITIONS

The code is set when the cranking signal is set for five seconds or more continuously while driving.

PROBABLE CAUSES

- Malfunction of the ETACS-ECU
- Ignition switch malfunction
- Damaged harness wires and connectors
- Malfunction of AWC-ECU

DIAGNOSIS

STEP 1. Scan tool CAN bus diagnostics

Using scan tool MB991958, diagnose the CAN bus lines.

Q: Is the check result normal?

YES : Go to Step 3.

NO : Repair the CAN bus lines. (Refer to GROUP 54C – Troubleshooting [P.54C-16](#)). After repairing the CAN bus line, go to Step 2.

STEP 2. Check whether the DTC is reset.

Q: Is DTC No. C1616 set?

YES : Go to Step 3.

NO : This diagnosis is complete.

STEP 3. Scan tool diagnostic trouble code

- Check the KOS diagnostic trouble code. (Refer to GROUP 42B –Troubleshooting [P.42B-31](#)).
- Check the WCM diagnostic trouble code. (Refer to GROUP 42C –Troubleshooting [P.42C-18](#)).
- Check the ETACS diagnostic trouble code. (Refer to GROUP 54A –Troubleshooting [P.54A-674](#)).

Q: Is the DTC set?

YES : Perform the relevant troubleshooting.

NO : Go to Step 4.

STEP 4. Scan tool data list

Item 42: Ignition switch (Refer to data list reference table [P.22C-473](#).)

Q: Is the check result normal?

YES : Go to Step 9.

NO : Go to Step 5.

STEP 5. Ignition switch check

(1) Disconnect C-212 ignition switch connector, and check the continuity between the terminals No.1 and No.5 at the ignition switch side.

(2) Turn the ignition switch to the "ON" position.

OK: No continuity

Q: Is the check result normal?

YES : Go to Step 6.

NO : Replace the ignition switch. (Refer to GROUP 54A – Ignition Switch [P.54A-23](#)). Then go to Step 10.

STEP 6. Ignition switch connector, ETACS-ECU connector check: C-212, C-315

Q: Is the check result normal?

YES : Go to Step 7.

NO : Repair the defective connector. Then go to Step 10.

STEP 7. Check the wiring harness between C-212 ignition switch connector terminal No.5 and C-315 ETACS-ECU connector terminal No.7.

Check the power supply line for short (for short to the power supply) circuit.

Q: Is the check result normal?

YES : Go to Step 8.

NO : Repair the wiring harness. Then go to Step 10.

STEP 8. Scan tool data list

ETACS item No.287: Starter switch (Refer to GROUP 54A – ETACS P.54A-721).

Q: Is the check result normal?

YES : Go to Step 9.

NO : Replace the ETACS-ECU. (Refer to GROUP 54A – ETACS-ECU P.54A-769). Then go to Step 9.

STEP 9. Check whether the DTC is reset.**Q: Is DTC No. C1616 set?**

YES : Replace the AWC-ECU. (Refer to P.22C-518). Then go to Step 10.

NO : Intermittent malfunction. (Refer to GROUP 00 –How to Cope with Intermittent Malfunction P.00-13).

STEP 10. Check whether the DTC is reset.**Q: Is DTC No. C1616 set?**

YES : Return to Step 1.

NO : This diagnosis is complete.

DTC C1617: AWC CAN Main Data System (Data Not Received)**CAUTION**

- If there is any problem in the CAN bus lines, an incorrect diagnostic trouble code may be set. Prior to this diagnosis, diagnose the CAN bus lines.
- Whenever the ECU is replaced, ensure that the CAN bus lines are normal.

OPERATION

AWC-ECU receives various data from ECU via CAN communication.

DTC SET CONDITIONS

The code is set when the signal necessary for AWC control cannot be received.

PROBABLE CAUSES

- The CAN bus line is defective.
- Malfunction of engine control module
- Malfunction of ASC-ECU
- Malfunction of steering wheel sensor
- Malfunction of the ETACS-ECU
- Malfunction of AWC-ECU

DIAGNOSIS

STEP 1. Scan tool CAN bus diagnostics

Using scan tool MB991958, diagnose the CAN bus lines.

Q: Is the check result normal?

YES : Go to Step 3.

NO : Repair the CAN bus lines. (Refer to GROUP 54C – Troubleshooting [P.54C-16](#)). After repairing the CAN bus line, go to Step 2.

STEP 2. Check whether the DTC is reset.

Q: Is DTC No. C1617 set?

YES : Go to Step 3.

NO : This diagnosis is complete.

STEP 3. Scan tool diagnostic trouble code

Check if the AWC-related DTC No.U0100, U0101, U0121, U0126, or U0141 is set. (Refer to [P.22C-397](#)).

Q: Is the DTC set?

YES : Perform the relevant troubleshooting.

NO : Go to Step 4.

STEP 4. Scan tool diagnostic trouble code

- Check the engine diagnostic trouble code. (Refer to GROUP 13A –Troubleshooting [P.13A-50](#)).
- Check the ASC diagnostic trouble code. (Refer to GROUP 35C –Troubleshooting [P.35C-27](#)).
- Check the ETACS diagnostic trouble code. (Refer to GROUP 54A –Troubleshooting [P.54A-674](#)).

Q: Is the DTC set?

YES : Perform the relevant troubleshooting.

NO : Go to Step 5.

STEP 5. Check whether the DTC is reset.

Q: Is DTC No. C1617 set?

YES : Replace the AWC-ECU. (Refer to [P.22C-518](#)). Then go to Step 6.

NO : Intermittent malfunction. (Refer to GROUP 00 –How to Cope with Intermittent Malfunction [P.00-13](#)).

STEP 6. Check whether the DTC is reset.


Q: Is DTC No. C1617 set?

YES : Return to Step 1.




NO : This diagnosis is complete.

DTC C161C: ACD Proportioning Valve System (Malfunction)

ACD proportioning valve system

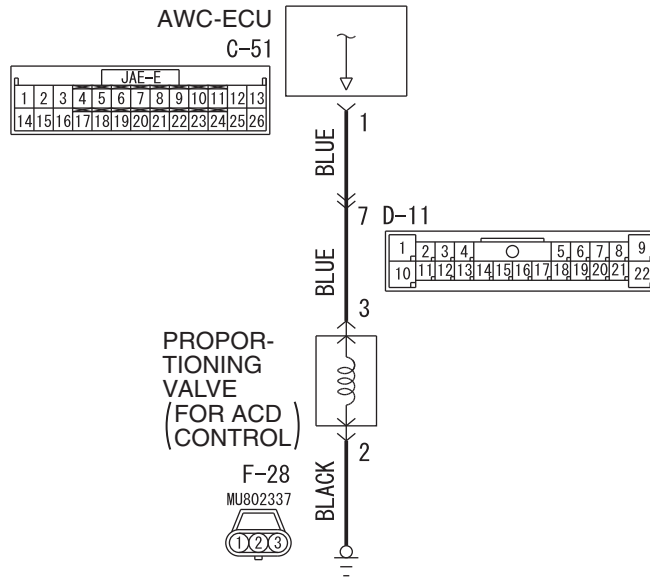

AC803123AB

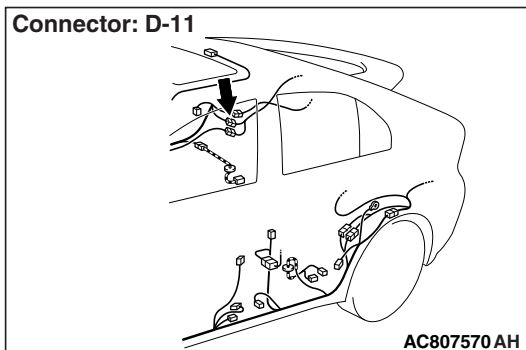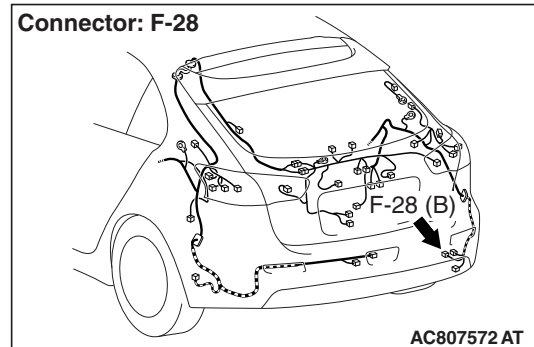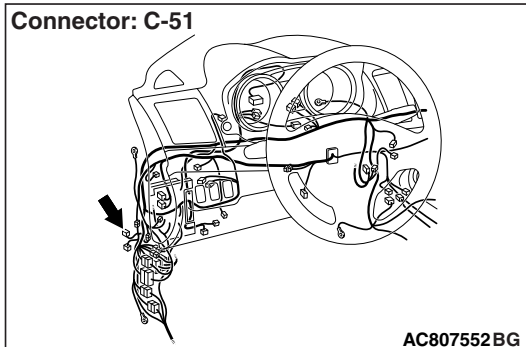

CAUTION

- If there is any problem in the CAN bus lines, an incorrect diagnostic trouble code may be set. Prior to this diagnosis, diagnose the CAN bus lines.
- Whenever the ECU is replaced, ensure that the CAN bus lines are normal.

OPERATION

AWC-ECU controls ACD proportioning valve.

DTC SET CONDITIONS

The code is set when the current monitor value of the ACD proportioning valve solenoid is determined to be abnormal.

PROBABLE CAUSES

- ACD proportioning valve malfunction
- Damaged harness wires and connectors
- Malfunction of AWC-ECU

DIAGNOSIS

STEP 1. Scan tool CAN bus diagnostics

Using scan tool MB991958, diagnose the CAN bus lines.

Q: Is the check result normal?

YES : Go to Step 3.

NO : Repair the CAN bus lines. (Refer to GROUP 54C – Troubleshooting [P.54C-16](#)). After repairing the CAN bus line, go to Step 2.

STEP 2. Check whether the DTC is reset.

Q: Is DTC No. C161C set?

YES : Go to Step 3.

NO : This diagnosis is complete.

STEP 3. ACD proportioning valve check.

Measure the resistance of ACD proportioning valve.

Standard value: $3.7 \pm 0.3 \Omega$

Q: Is the check result normal?

YES : Go to Step 4.

NO : Replace the hydraulic unit. (Refer to [P.22C-521](#)). Then go to Step 8.

STEP 4. AWC-ECU connector, intermediate connector, proportioning valve (for ACD) connector check: C-51, D-11, F-28

Q: Is the check result normal?

YES : Go to Step 5.

NO : Repair the defective connector. Then go to Step 8.

STEP 5. Check the wiring harness between C-51 AWC-ECU connector terminal No.1 and F-28 proportioning valve (for ACD) connector terminal No.3 and between F-28 proportioning valve (for ACD) connector terminal No.2 and body ground.

Check the power supply line for open or short circuit, and check the ground line for open circuit.

Q: Is the check result normal?

YES : Go to Step 6.

NO : Repair the wiring harness. Then go to Step 8.

STEP 6. Scan tool data list

Item 92: ACD proportion valve (Refer to data list reference table [P.22C-473](#)).

Q: Is the check result normal?

YES : Go to Step 7.

NO : Replace the AWC-ECU. (Refer to [P.22C-518](#)). Then go to Step 8.

STEP 7. Check whether the DTC is reset.**Q: Is DTC No. C161C set?**

YES : Replace the AWC-ECU. (Refer to [P.22C-518](#)). Then go to Step 8.

NO : Intermittent malfunction. (Refer to GROUP 00 –How to Cope with Intermittent Malfunction [P.00-13](#)).


STEP 8. Check whether the DTC is reset.**Q: Is DTC No. C161C set?**

YES : Return to Step 1.



NO : This diagnosis is complete.




DTC C161D: Electric Pump Relay System (Faulty Circuit)

AWC pump relay circuit system circuit

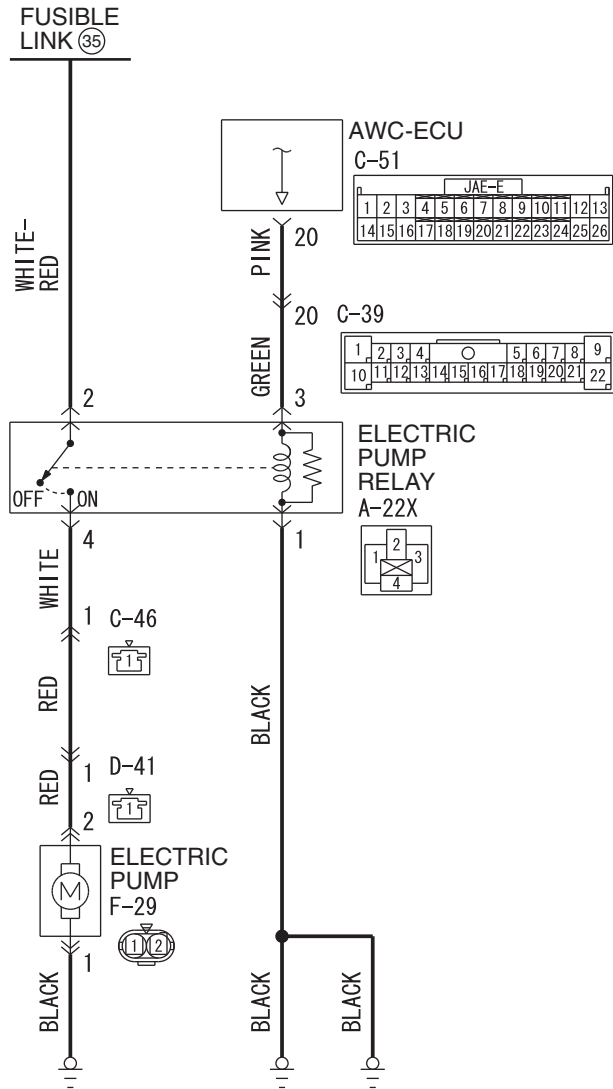

AC803124 AB

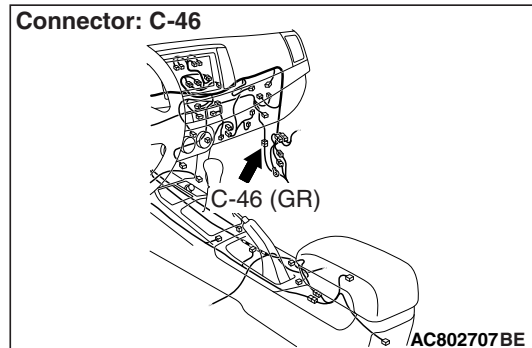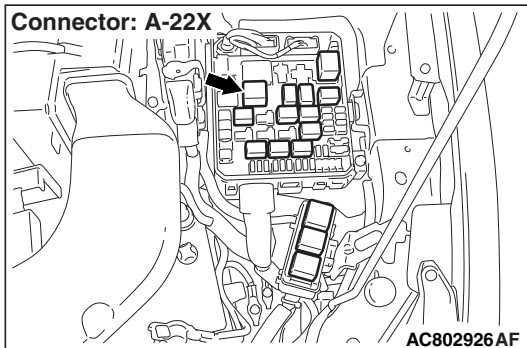

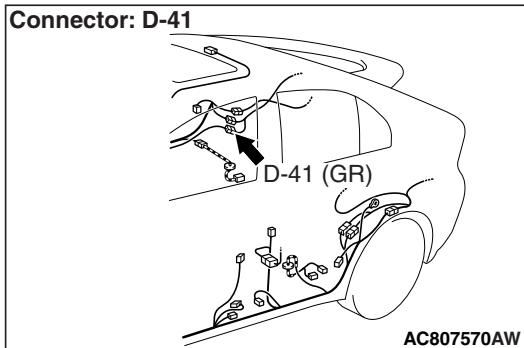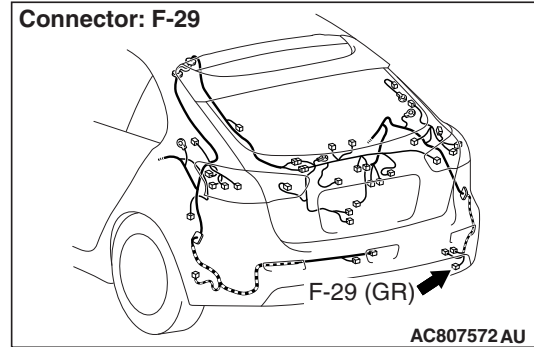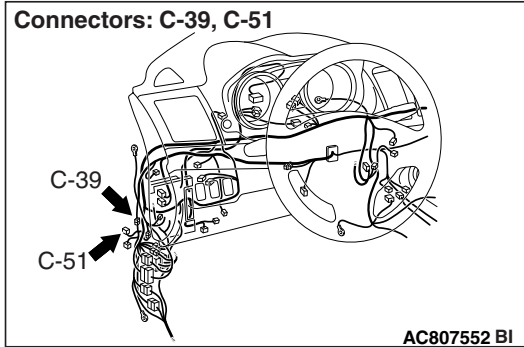

⚠ CAUTION

- If there is any problem in the CAN bus lines, an incorrect diagnostic trouble code may be set. Prior to this diagnosis, diagnose the CAN bus lines.
- Whenever the ECU is replaced, ensure that the CAN bus lines are normal.

OPERATION

AWC-ECU operates the electric pump via the electric pump relay.

DTC SET CONDITIONS

The code is set when the electric pump relay coil side circuit is open or shorted.

PROBABLE CAUSES

- Electric pump relay malfunction
- Damaged harness wires and connectors
- Malfunction of AWC-ECU

DIAGNOSIS

STEP 1. Scan tool CAN bus diagnostics

Using scan tool MB991958, diagnose the CAN bus lines.

Q: Is the check result normal?

YES : Go to Step 3.

NO : Repair the CAN bus lines. (Refer to GROUP 54C – Troubleshooting P.54C-16). After repairing the CAN bus line, go to Step 2.

STEP 2. Check whether the DTC is reset.

Q: Is DTC No. C161D set?

YES : Go to Step 3.

NO : This diagnosis is complete.

STEP 3. Scan tool actuator test

OK: Operating sound of the electric pump can be heard.

Q: Is the check result normal?

YES : Go to Step 9.

NO : Go to Step 4.

STEP 4. Electric pump relay check.

Check the electric pump relay. (Refer to [P.22C-519](#)).

Q: Is the check result normal?

YES : Go to Step 5.

NO : Replace the electric pump relay. (Refer to [P.22C-519](#)). Then go to Step 9.

STEP 5. Electric pump relay connector, AWC-ECU connector check: A-22X, C-51

Q: Is the check result normal?

YES : Go to Step 6.

NO : Repair the defective connector. Then go to Step 9.

STEP 6. Check the wiring harness between A-22X electric pump relay connector terminal No.3 and C-51 AWC-ECU connector terminal No.20.

Check the power supply line for short or open circuit.

Q: Is the check result normal?

YES : Go to Step 7.

NO : Check C-31 intermediate connector. When no problem is found, repair the wiring harness. Then go to Step 9.

STEP 7. Check the wiring harness between A-22X electric pump relay connector terminal No.1 and body ground.

Check the ground line for open circuit.

Q: Is the check result normal?

YES : Go to Step 8.

NO : Repair the wiring harness. Then go to Step 9.

STEP 8. Check whether the DTC is reset.

Q: Is DTC No. C161D set?

YES : Replace the AWC-ECU. (Refer to [P.22C-518](#)). Then go to Step 9.

NO : Intermittent malfunction. (Refer to GROUP 00 –How to Cope with Intermittent Malfunction [P.00-13](#)).

STEP 9. Check whether the DTC is reset.

Q: Is DTC No. C161D set?

YES : Return to Step 1.

NO : This diagnosis is complete.

DTC C161E: Electric Pump System**AWC PUMP RELAY SYSTEM CIRCUIT**

Refer to [P.22C-435](#).

⚠ CAUTION

- If there is any problem in the CAN bus lines, an incorrect diagnostic trouble code may be set. Prior to this diagnosis, diagnose the CAN bus lines.
- Whenever the ECU is replaced, ensure that the CAN bus lines are normal.
- Since the fluid in the hydraulic unit will be hardened under low temperature, the load of the pump increases and the motor may not operate normally. Therefore, completely remove snow and ice from the hydraulic unit and leave the vehicle under temperature of 0° C or higher for 4 hours or more before performing the troubleshooting.

OPERATION

AWC-ECU controls the electric pump by the information from AWC pressure sensor and electric pump relay.

DTC SET CONDITIONS

The code is set when the electric pump operation signal is output from AWC-ECU, and when the AWC pressure sensor signal is not reached the specified pressure after the specified time has elapsed.

PROBABLE CAUSES

- Fluid malfunction (low fluid level)
- AWC pressure sensor malfunction
- Electric pump relay malfunction
- Hydraulic unit malfunction
- Electric pump malfunction
- Damaged harness wires and connectors
- Malfunction of AWC-ECU
- Used under low temperature condition

DIAGNOSIS**STEP 1. Check whether the diagnostic trouble code is reset.**

As for vehicles under low temperature condition, carry out the contents of the precautions, and then check the diagnostic trouble code again.

Q: Is diagnostic trouble code No.C161E set?

YES : Go to Step 2.

NO : This diagnosis is complete.

STEP 2. Scan tool CAN bus diagnostics

Using scan tool MB991958, diagnose the CAN bus lines.

Q: Is the check result normal?

YES : Go to Step 4.

NO : Repair the CAN bus lines. (Refer to GROUP 54C – Troubleshooting [P.54C-16](#)). After repairing the CAN bus line, go to Step 3.

STEP 3. Check whether the DTC is reset.**Q: Is DTC No. C161E set?**

YES : Go to Step 4.

NO : This diagnosis is complete.

STEP 4. Fluid check

Check that the fluid level is adequate. (Refer to [P.22C-483](#)).

Q: Is the check result normal?

YES : Go to Step 5.

NO : Add the fluid.

STEP 5. Scan tool diagnostic trouble code

Check if the ACD diagnostic trouble code No.C1611, C1612, C1625, or C161D is set. (Refer to [P.22C-397](#)).

Q: Is the DTC set?

YES : Perform the relevant troubleshooting.

NO : Go to Step 6.

STEP 6. Scan tool actuator test

OK: Operating sound of the electric pump can be heard.

Q: Is the check result normal?

YES : Go to Step 14.

NO : Go to Step 7.

STEP 7. Electric pump relay check.

Check the electric pump relay. (Refer to [P.22C-519](#)).

Q: Is the check result normal?

YES : Go to Step 8.

NO : Replace the electric pump relay. (Refer to [P.22C-519](#)). Then go to Step 15.

STEP 8. Electric pump relay connector check: A-22X

Q: Is the check result normal?

YES : Go to Step 9.

NO : Repair the defective connector. Then go to Step 15.

STEP 9. Check the wiring harness between A-22X electric pump relay connector terminal No.2 and fusible link (35).

Check the power supply line for short or open circuit.

Q: Is the check result normal?

YES : Go to Step 10.

NO : Repair the wiring harness. Then go to Step 15.

STEP 10. Electric pump connector check: F-29

Q: Is the check result normal?

YES : Go to Step 11.

NO : Repair the defective connector. Then go to Step 15.

STEP 11. Check the wiring harness between A-22X electric pump relay connector terminal No.4 and F-29 electric pump connector terminal No.2.

Check the power supply line for short or open circuit.

Q: Is the check result normal?

YES : Go to Step 12.

NO : Check C-136 and D-13 intermediate connectors.
When no problem is found, repair the wiring harness.
Then go to Step 15.

STEP 12. Check the wiring harness between F-29 electric pump connector terminal No.1 and body ground.

Check the ground line for open circuit.

Q: Is the check result normal?

YES : Go to Step 13.

NO : Repair the wiring harness. Then go to Step 15.

STEP 13. Check whether the DTC is reset.

Q: Is DTC No. C161E set?

YES : Replace the hydraulic unit. (Refer to [P.22C-521](#)).
Then go to Step 14.

NO : Intermittent malfunction. (Refer to GROUP 00 –How to Cope with Intermittent Malfunction [P.00-13](#)).

STEP 14. Check whether the DTC is reset.

Q: Is DTC No. C161E set?

YES : Replace the AWC-ECU. (Refer to [P.22C-518](#)). Then go to Step 15.

NO : This diagnosis is complete.

STEP 15. Check whether the DTC is reset.

Q: Is DTC No. C161E set?

YES : Return to Step 2.

NO : This diagnosis is complete.

DTC C1622: ACD Control System (Abnormal)

CAUTION

- If there is any problem in the CAN bus lines, an incorrect diagnostic trouble code may be set. Prior to this diagnosis, diagnose the CAN bus lines.
- Whenever the ECU is replaced, ensure that the CAN bus lines are normal.

OPERATION

AWC-ECU provides power supply to the ACD proportioning valve.

DTC SET CONDITIONS

This diagnostic trouble code is set if any condition below is found:

- When ACD clutch is protected.
- When the current value of the ACD proportioning valve solenoid exceeds the specified value for a prolonged period.

PROBABLE CAUSES

- The driving and road conditions are severe.
- Malfunction of AWC-ECU

DIAGNOSIS

STEP 1. Scan tool CAN bus diagnostics

Using scan tool MB991958, diagnose the CAN bus lines.

Q: Is the check result normal?

YES : Go to Step 3.

NO : Repair the CAN bus lines. (Refer to GROUP 54C – Troubleshooting [P.54C-16](#)). After repairing the CAN bus line, go to Step 2.

STEP 2. Check whether the DTC is reset.

Q: Is DTC No. C1622 set?

YES : Go to Step 3.

NO : This diagnosis is complete.

STEP 3. Scan tool diagnostic trouble code

Check other ACD diagnostic trouble code. (Refer to [P.22C-397](#)).

Q: Is the DTC set?

YES : Perform the relevant troubleshooting.

NO : Go to Step 4.

STEP 4. Check whether the DTC is reset.

Q: Is DTC No. C1622 set?

YES : Replace the AWC-ECU. (Refer to [P.22C-518](#)). Then go to Step 5.

NO : This diagnosis is complete. (The clutch protection activated in such driving or road condition as ACD control is applied for a prolonged period).

STEP 5. Check whether the DTC is reset.

Q: Is DTC No. C1622 set?

YES : Return to Step 1.

NO : This diagnosis is complete.

DTC C1624: AWC-ECU System (Internal Error)

CAUTION

- If there is any problem in the CAN bus lines, an incorrect diagnostic trouble code may be set. Prior to this diagnosis, diagnose the CAN bus lines.
- Whenever the ECU is replaced, ensure that the CAN bus lines are normal.

OPERATION

AWC-ECU monitors the malfunction in the ECU.

DTC SET CONDITIONS

The code is set when a malfunction is found in AWC-ECU.

PROBABLE CAUSES

- Malfunction of AWC-ECU

DIAGNOSIS**STEP 1. Scan tool CAN bus diagnostics**

Using scan tool MB991958, diagnose the CAN bus lines.

Q: Is the check result normal?

YES : Go to Step 3.

NO : Repair the CAN bus lines. (Refer to GROUP 54C – Troubleshooting [P.54C-16](#)). After repairing the CAN bus line, go to Step 2.

STEP 2. Check whether the DTC is reset.**Q: Is DTC No. C1624 set?**

YES : Go to Step 3.

NO : This diagnosis is complete.

STEP 3. Scan tool diagnostic trouble code

Check other ACD diagnostic trouble code. (Refer to [P.22C-397](#)).

Q: Is the DTC set?

YES : Perform the relevant troubleshooting.

NO : Go to Step 4.

STEP 4. Check whether the DTC is reset.**Q: Is DTC No. C1624 set?**

YES : Replace the AWC-ECU. (Refer to [P.22C-518](#)). Then go to Step 5.

NO : Intermittent malfunction. (Refer to GROUP 00 –How to Cope with Intermittent Malfunction [P.00-13](#)).

STEP 5. Check whether the DTC is reset.**Q: Is DTC No. C1624 set?**

YES : Return to Step 1.

NO : This diagnosis is complete.

DTC C1625: AWC Pressure Sensor System (Power Supply Voltage Abnormality)**AWC PRESSURE SENSOR SYSTEM
CIRCUIT**

Refer to [P.22C-417](#).

CAUTION

- If there is any problem in the CAN bus lines, an incorrect diagnostic trouble code may be set. Prior to this diagnosis, diagnose the CAN bus lines.
- Whenever the ECU is replaced, ensure that the CAN bus lines are normal.

OPERATION

AWC-ECU monitors the AWC pressure sensor power supply voltage.

DTC SET CONDITIONS

The code is set when the power supply voltage to the AWC pressure sensor is outside the specified value.

PROBABLE CAUSES

- AWC pressure sensor malfunction
- Damaged harness wires and connectors
- Malfunction of AWC-ECU

DIAGNOSIS

STEP 1. Scan tool CAN bus diagnostics

Using scan tool MB991958, diagnose the CAN bus lines.

Q: Is the check result normal?

YES : Go to Step 3.

NO : Repair the CAN bus lines. (Refer to GROUP 54C – Troubleshooting P.54C-16). After repairing the CAN bus line, go to Step 2.

STEP 2. Check whether the DTC is reset.

Q: Is DTC No. C1625 set?

YES : Go to Step 3.

NO : This diagnosis is complete.

STEP 3. Voltage measurement at F-27 AWC pressure sensor connector

(1) Disconnect the connector, and measure the voltage between the terminal No.1 and the body ground at the wiring harness side.

(2) Turn the ignition switch to the "ON" position.

OK: Approx. 5 V

Q: Is the check result normal?

YES : Go to Step 6.

NO : Go to Step 4.

STEP 4. AWC-ECU connector, intermediate connector, AWC pressure sensor connector check: C-51, D-11, F-27

Q: Is the check result normal?

YES : Go to Step 5.

NO : Repair the defective connector. Then go to Step 8.

STEP 5. Check the wiring harness between C-51 AWC-ECU connector terminal No.6 and F-27 AWC pressure sensor connector terminal No.1.

Check the power supply line for short or open circuit.

Q: Is the check result normal?

YES : Go to Step 6.

NO : Check D-11 intermediate connector. When no problem is found, repair the wiring harness. Then go to Step 8.

STEP 6. Scan tool data list

Item No.86: Pressure sensor power supply voltage (Refer to data list reference table [P.22C-473](#)).

Q: Is the check result normal?

YES : Go to Step 7.

NO : Replace the hydraulic unit. (Refer to [P.22C-521](#)).
Then go to Step 7.

STEP 7. Check whether the DTC is reset.**Q: Is DTC No. C1625 set?**

YES : Replace the AWC-ECU. (Refer to [P.22C-518](#)). Then go to Step 8.

NO : Intermittent malfunction. (Refer to GROUP 00 –How to Cope with Intermittent Malfunction [P.00-13](#)).


STEP 8. Check whether the DTC is reset.**Q: Is DTC No. C1625 set?**

YES : Return to Step 1.

NO : This diagnosis is complete.


DTC C2100: Battery Voltage Malfunction (Low Voltage)

Power supply system circuit

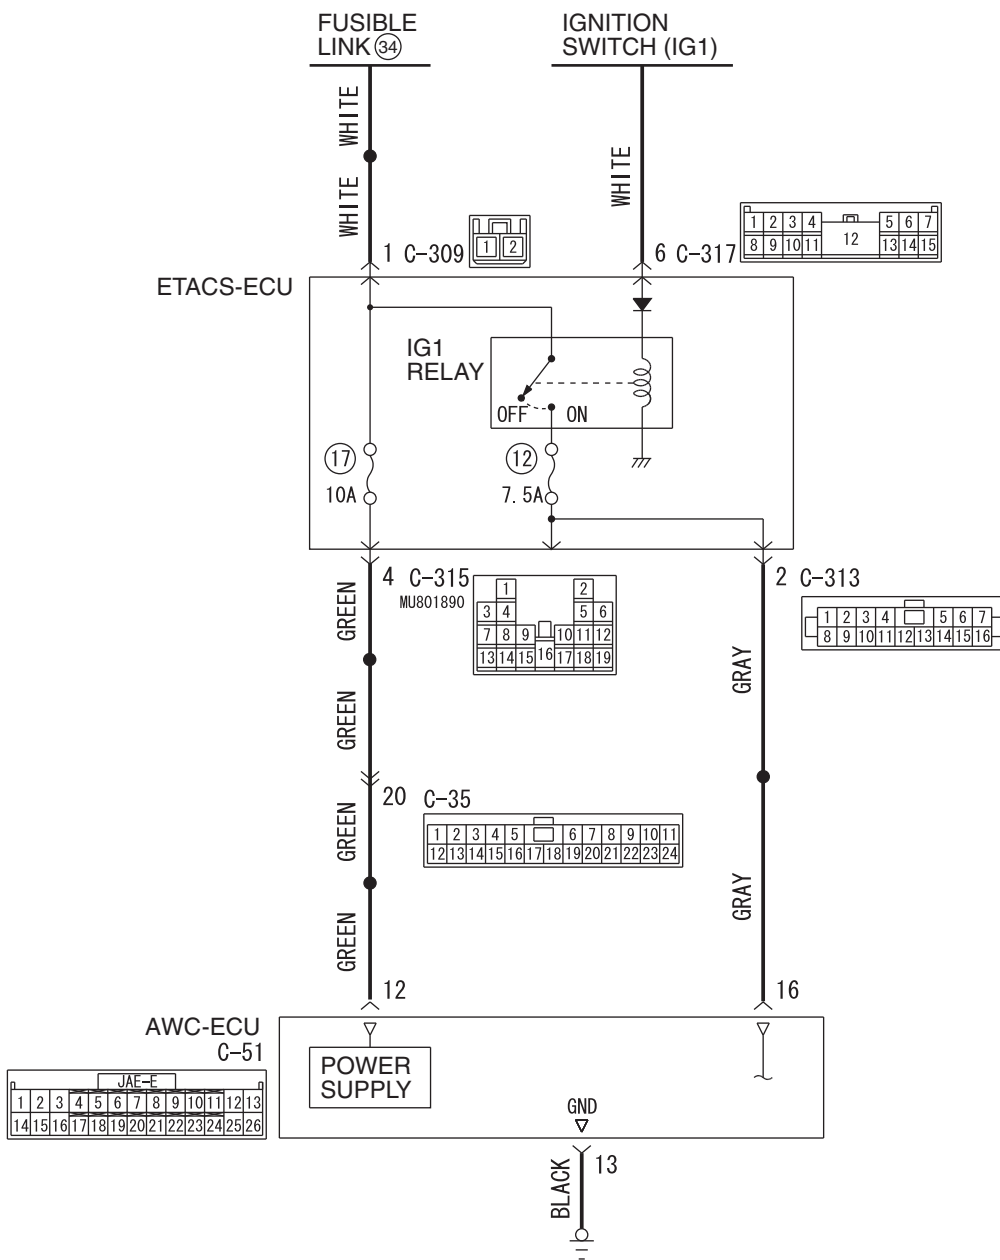


AC803125 AB

Connector: C-35, C-51

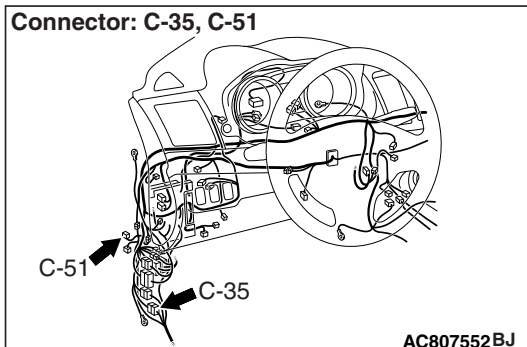

Connectors: C-309, C-313, C-315, C-317
 Junction block

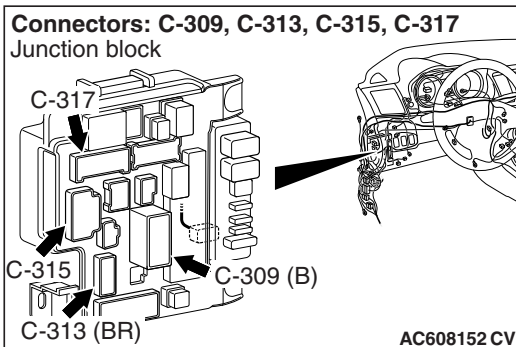

CAUTION

- If there is any problem in the CAN bus lines, an incorrect diagnostic trouble code may be set. Prior to this diagnosis, diagnose the CAN bus lines.
- Whenever the ECU is replaced, ensure that the CAN bus lines are normal.

OPERATION

AWC-ECU power supply is provided from the battery via ETACS-ECU.

DTC SET CONDITIONS

This diagnostic trouble code is set when the abnormality below is detected:

- When the AWC-ECU power supply voltage and solenoid valve power supply voltage are 9 V or less.

PROBABLE CAUSES

- Malfunction of the ETACS-ECU
- Defective battery
- Charging system failed
- Damaged harness wires and connectors
- Malfunction of AWC-ECU

DIAGNOSIS**STEP 1. Scan tool CAN bus diagnostics**

Using scan tool MB991958, diagnose the CAN bus lines.

Q: Is the check result normal?

YES : Go to Step 3.

NO : Repair the CAN bus lines. (Refer to GROUP 54C – Troubleshooting P.54C-16). After repairing the CAN bus line, go to Step 2.

STEP 2. Check whether the DTC is reset.**Q: Is DTC No. C2100 set?**

YES : Go to Step 3.

NO : This diagnosis is complete.

STEP 3. Scan tool diagnostic trouble code

Check the ETACS diagnostic trouble code. (Refer to GROUP 54A –Troubleshooting P.54A-674).

Q: Is the DTC set?

YES : Perform the relevant troubleshooting.

NO : Go to Step 4.

STEP 4. Check the battery.

Refer to GROUP 54A –Battery Test P.54A-8.

Q: Is the check result normal?

YES : Go to Step 6.

NO : Charge or replace the battery. Then go to Step 5.

STEP 5. Check the charging system.

Refer to GROUP 16 –Charging System P.16-8.

Q: Is the check result normal?

YES : Go to Step 6.

NO : Repair or replace the charging system component(s).

STEP 6. Voltage measurement at C-51 AWC-ECU connector

Disconnect the connector, and measure the voltage between terminal No.12 and ground at the wiring harness side.

OK: Battery positive voltage

Q: Is the check result normal?

YES : Go to Step 10.

NO : Go to Step 7.

STEP 7. AWC-ECU connector, ETACS-ECU connector, intermediate connector check: C-51, C-315, C-35

Q: Is the check result normal?

YES : Go to Step 8.

NO : Repair the defective connector. Then go to Step 13.

STEP 8. Check the wiring harness between C-51 AWC-ECU connector terminal No.12 and C-315 ETACS-ECU connector terminal No.4.

Check the power supply line for short or open circuit.

Q: Is the check result normal?

YES : Go to Step 9.

NO : Check C-35 intermediate connector. When no problem is found, repair the wiring harness. Then go to Step 13.

STEP 9. Scan tool data list

Item No.43: Battery voltage (Refer to data list reference table [P.22C-473](#)).

Q: Is the check result normal?

YES : Intermittent malfunction. (Refer to GROUP 00 –How to Cope with Intermittent Malfunction [P.00-13](#)).

NO : Replace the ETACS-ECU. (Refer to GROUP 54A – ETACS-ECU [P.54A-769](#)). Then go to Step 13.

STEP 10. AWC-ECU connector check: C-51

Q: Is the check result normal?

YES : Go to Step 11.

NO : Repair the defective connector. Then go to Step 13.

STEP 11. Check the wiring harness between C-51 AWC-ECU connector terminal No.13 and body ground.

Check the ground line for open circuit.

Q: Is the check result normal?

YES : Go to Step 12.

NO : Repair the wiring harness. Then go to Step 13.

STEP 12. Scan tool data list

Item No.43: Battery voltage (Refer to data list reference table [P.22C-473](#)).

Q: Is the check result normal?

YES : Intermittent malfunction. (Refer to GROUP 00 –How to Cope with Intermittent Malfunction [P.00-13](#)).

NO : Replace the AWC-ECU. (Refer to [P.22C-518](#)). Then go to Step 13.

STEP 13. Check whether the DTC is reset.**Q: Is DTC No. C2100 set?**

YES : Return to Step 1.

NO : This diagnosis is complete.

DTC C2101: Battery Voltage Malfunction (High Voltage)**POWER SUPPLY SYSTEM CIRCUIT**

Refer to [P.22C-445](#).

CAUTION

- If there is any problem in the CAN bus lines, an incorrect diagnostic trouble code may be set. Prior to this diagnosis, diagnose the CAN bus lines.
- Whenever the ECU is replaced, ensure that the CAN bus lines are normal.

OPERATION

AWC-ECU power supply is provided from the battery via ETACS-ECU.

DTC SET CONDITIONS

The code is set when the AWC-ECU power supply voltage and solenoid valve power supply voltage are 18 V or more.

PROBABLE CAUSES

- Loose battery terminal
- Defective battery
- Charging system failed
- Malfunction of the ETACS-ECU
- Damaged harness wires and connectors
- Malfunction of AWC-ECU

DIAGNOSIS**STEP 1. Scan tool CAN bus diagnostics**

Using scan tool MB991958, diagnose the CAN bus lines.

Q: Is the check result normal?

YES : Go to Step 3.

NO : Repair the CAN bus lines. (Refer to GROUP 54C – Troubleshooting [P.54C-16](#)). After repairing the CAN bus line, go to Step 2.

STEP 2. Check whether the DTC is reset.**Q: Is DTC No. C2101 set?**

YES : Go to Step 3.

NO : This diagnosis is complete.

STEP 3. Scan tool diagnostic trouble code

Check the ETACS diagnostic trouble code. (Refer to GROUP 54A –Troubleshooting [P.54A-674](#)).

Q: Is the DTC set?

YES : Perform the relevant troubleshooting.

NO : Go to Step 4.

STEP 4. Battery terminal check

Check that the battery terminal is not loose.

Q: Is the check result normal?

YES : Go to Step 5.

NO : Securely install the battery terminal. Then go to Step 5.

STEP 5. Check the charging system.

Refer to GROUP 16 –Charging System [P.16-8](#).

Q: Is the check result normal?

YES : Go to Step 6.

NO : Repair or replace the charging system component(s).

STEP 6. Check the battery.

Refer to GROUP 54A –Battery Test [P.54A-8](#).

Q: Is the check result normal?

YES : Go to Step 7.

NO : Replace the battery. Then go to Step 7.

STEP 7. Voltage measurement at C-51 AWC-ECU connector

Disconnect the connector, and measure the voltage between terminal No.12 and ground at the wiring harness side.

OK: Battery positive voltage

Q: Is the check result normal?

YES : Go to Step 11.

NO : Go to Step 8.

STEP 8. AWC-ECU connector, ETACS-ECU connector, intermediate connector check: C-51, C-315, C-35

Q: Is the check result normal?

YES : Go to Step 9.

NO : Repair the defective connector. Then go to Step 12.

STEP 9. Check the wiring harness between C-51 AWC-ECUconnector terminal No.12 and C-315 ETACS-ECU connector terminal No.4.

Check the power supply line for short circuit.

Q: Is the check result normal?

YES : Go to Step 10.

NO : Check C-35 intermediate connector. When no problem is found, repair the wiring harness. Then go to Step 12.

STEP 10. Scan tool data list

Item No.43: Battery voltage (Refer to data list reference table [P.22C-473](#)).

Q: Is the check result normal?

YES : Intermittent malfunction. (Refer to GROUP 00 –How to Cope with Intermittent Malfunction [P.00-13](#)).

NO : Replace the ETACS-ECU. (Refer to GROUP 54A – ETACS-ECU [P.54A-769](#)). Then go to Step 12.

STEP 11. Scan tool data list

Item No.43: Battery voltage (Refer to data list reference table [P.22C-473](#)).

Q: Is the check result normal?

YES : Intermittent malfunction. (Refer to GROUP 00 –How to Cope with Intermittent Malfunction [P.00-13](#)).

NO : Replace the AWC-ECU. (Refer to [P.22C-518](#)). Then go to Step 12.

STEP 12. Check whether the DTC is reset.**Q: Is DTC No. C2101 set?**

YES : Return to Step 1.

NO : This diagnosis is complete.

DTC C2203: VIN not Recorded**⚠ CAUTION**

- If there is any problem in the CAN bus lines, an incorrect diagnostic trouble code may be set. Prior to this diagnosis, diagnose the CAN bus lines.
- Whenever the ECU is replaced, ensure that the CAN bus lines are normal.

OPERATION

AWC-ECU receives chassis number information from the engine control module.

DTC SET CONDITIONS

When the chassis number is not written. (AWC-ECU receives chassis number information from the engine control module via CAN, and writes to AWC-ECU.)

PROBABLE CAUSES

- The CAN bus line is defective.
- Malfunction of engine control module
- VIN not written
- Malfunction of AWC-ECU

DIAGNOSIS**STEP 1. Scan tool CAN bus diagnostics**

Using scan tool MB991958, diagnose the CAN bus lines.

Q: Is the check result normal?

YES : Go to Step 2.

NO : Repair the CAN bus lines. (Refer to GROUP 54C – Troubleshooting [P.54C-16](#)). After repairing the CAN bus line, go to Step 2.

STEP 2. Scan tool diagnostic trouble code

Check whether engine-related diagnostic trouble code No.P0630 is set. (Refer to GROUP 13A –Troubleshooting P.13A-50).

Q: Is the DTC set?

YES : Perform the relevant troubleshooting.

NO : Go to Step 3.

STEP 3. Check whether the DTC is reset.**Q: Is DTC No. C2203 set?**

YES : Replace the AWC-ECU. (Refer to P.22C-518). Then go to Step 4.

NO : Intermittent malfunction. (Refer to GROUP 00 –How to Cope with Intermittent Malfunction P.00-13).

STEP 4. Check whether the DTC is reset.**Q: Is DTC No. C2203 set?**

YES : Return to Step 1.

NO : This diagnosis is complete.

DTC C2205: Steering Wheel Sensor System (Internal Error)

⚠ CAUTION

- If there is any problem in the CAN bus lines, an incorrect diagnostic trouble code may be set. Prior to this diagnosis, diagnose the CAN bus lines.
- Whenever the ECU is replaced, ensure that the CAN bus lines are normal.
- When the steering wheel sensor is replaced, calibrate the steering wheel sensor (Refer to GROUP 35C –On-vehicle Service P.35C-304), and initialize the steering angle correction amount stored in AWC-ECU. (Item No.1: Steering angle correction amount initialization P.22C-476).

OPERATION

AWC-ECU receives the self-diagnosis status of steering wheel sensor.

DTC SET CONDITIONS

The code is set when abnormality is detected by the self-diagnosis of the steering wheel sensor.

PROBABLE CAUSES

- Malfunction of steering wheel sensor
- Malfunction of AWC-ECU

DIAGNOSIS

STEP 1. Scan tool CAN bus diagnostics

Using scan tool MB991958, diagnose the CAN bus lines.

Q: Is the check result normal?

YES : Go to Step 3.

NO : Repair the CAN bus lines. (Refer to GROUP 54C – Troubleshooting P.54C-16). After repairing the CAN bus line, go to Step 2.

STEP 2. Check whether the DTC is reset.**Q: Is DTC No. C2205 set?****YES** : Go to Step 3.**NO** : This diagnosis is complete.**STEP 3. Scan tool data list**Item 13: Steering wheel sensor (Refer to [P.22C-473](#)).**Q: Is the check result normal?****YES** : Go to Step 4.**NO** : Replace the steering wheel sensor. (Refer to GROUP 35C –Steering Wheel Sensor [P.35C-321](#)). Then go to Step 5.**STEP 4. Check whether the DTC is reset.****Q: Is DTC No. C2205 set?****YES** : Replace the AWC-ECU. (Refer to [P.22C-518](#)). Then go to Step 5.**NO** : Intermittent malfunction. (Refer to GROUP 00 –How to Cope with Intermittent Malfunction [P.00-13](#)).**STEP 5. Check whether the DTC is reset.****Q: Is DTC No.C2205 set?****YES** : Return to Step 1.**NO** : This diagnosis is complete.**DTC U0001: Bus-off****⚠ CAUTION**

- If there is any problem in the CAN bus lines, an incorrect diagnostic trouble code may be set. Prior to this diagnosis, diagnose the CAN bus lines.
- Whenever the ECU is replaced, ensure that the CAN bus lines are normal.

DTC SET CONDITIONS

The code is set when AWC-ECU ceases (bus-off).

PROBABLE CAUSES

- The CAN bus line is defective.
- Malfunction of AWC-ECU
- ECU malfunction of other system

DIAGNOSIS**STEP 1. Scan tool CAN bus diagnostics**

Using scan tool MB991958, diagnose the CAN bus lines.

Q: Is the check result normal?**YES** : Go to Step 2.**NO** : Repair the CAN bus lines. (Refer to GROUP 54C – Troubleshooting [P.54C-16](#)). After repairing the CAN bus line, go to Step 2.

STEP 2. Check whether the DTC is reset.

Q: Is DTC No. U0001 set?

YES : Replace the AWC-ECU. (Refer to [P.22C-518](#)). Then go to Step 3.

NO : Intermittent malfunction. (Refer to GROUP 00 –How to Cope with Intermittent Malfunction [P.00-13](#)).

STEP 3. Check whether the DTC is reset.

Q: Is DTC No. U0001 set?

YES : Return to Step 1.

NO : This diagnosis is complete.

DTC U0100: Engine Time-out Error

CAUTION

- If there is any problem in the CAN bus lines, an incorrect diagnostic trouble code may be set. Prior to this diagnosis, diagnose the CAN bus lines.
- Whenever the ECU is replaced, ensure that the CAN bus lines are normal.

OPERATION

AWC-ECU communicates with the engine control module via the CAN bus lines.

DTC SET CONDITIONS

The code is set when the signal sent from engine control module cannot be received for a certain period.

PROBABLE CAUSES

- The CAN bus line is defective.
- Malfunction of engine control module
- Malfunction of AWC-ECU

DIAGNOSIS

STEP 1. Scan tool CAN bus diagnostics

Using scan tool MB991958, diagnose the CAN bus lines.

Q: Is the check result normal?

YES : Go to Step 2.

NO : Repair the CAN bus lines. (Refer to GROUP 54C – Troubleshooting [P.54C-16](#)). After repairing the CAN bus line, go to Step 2.

STEP 2. Scan tool diagnostic trouble code

Check the engine diagnostic trouble code. (Refer to GROUP 13A –Troubleshooting [P.13A-50](#)).

Q: Is the DTC set?

YES : Perform the relevant troubleshooting.

NO : Go to Step 3.

STEP 3. Check whether the DTC is reset.

Q: Is DTC No. U0100 set?

YES : Replace the AWC-ECU. (Refer to [P.22C-518](#)). Then go to Step 4.

NO : Intermittent malfunction. (Refer to GROUP 00 –How to Cope with Intermittent Malfunction [P.00-13](#)).

STEP 4. Check whether the DTC is reset.**Q: Is DTC No. U0100 set?****YES** : Return to Step 1.**NO** : This diagnosis is complete.**DTC U0101: TC-SST Time-out Error****⚠ CAUTION**

- If there is any problem in the CAN bus lines, an incorrect diagnostic trouble code may be set. Prior to this diagnosis, diagnose the CAN bus lines.
- Whenever the ECU is replaced, ensure that the CAN bus lines are normal.

OPERATION

AWC-ECU communicates with TC-SST-ECU via the CAN bus lines.

DTC SET CONDITIONS

The code is set when the signal sent from TC-SST-ECU cannot be received for a certain period.

PROBABLE CAUSES

- The CAN bus line is defective.
- Malfunction of TC-SST-ECU
- ETACS coding data error
- Malfunction of AWC-ECU

DIAGNOSIS**STEP 1. Scan tool CAN bus diagnostics**

Using scan tool MB991958, diagnose the CAN bus lines.

Q: Is the check result normal?**YES** : Go to Step 2.**NO** : Repair the CAN bus lines. (Refer to GROUP 54C – Troubleshooting [P.54C-16](#)).**STEP 2. Scan tool diagnostic trouble code**

Check the TC-SST diagnostic trouble code. (Refer to [P.22C-16](#)).

Q: Is the DTC set?**YES** : Perform the relevant troubleshooting.**NO** : Go to Step 3.**STEP 3. ETACS-ECU coding data check.**

Check the transaxle coding data stored in ETACS-ECU for any abnormality. (Refer to GROUP 00 –Coding Reference Table [P.00-28](#)).

Q: Is the check result normal?**YES** : Go to Step 4.**NO** : Replace the ETACS-ECU. (Refer to GROUP 54A – ETACS-ECU [P.54A-769](#)). Then go to Step 5.

STEP 4. Check whether the DTC is reset.

Q: Is DTC No. U0101 set?

YES : Replace the AWC-ECU. (Refer to [P.22C-518](#)). Then go to Step 5.

NO : Intermittent malfunction. (Refer to GROUP 00 –How to Cope with Intermittent Malfunction [P.00-13](#)).

STEP 5. Check whether the DTC is reset.

Q: Is DTC No. U0101 set?

YES : Return to Step 1.

NO : This diagnosis is complete.

DTC U0121: ASC Time-out Error

⚠ CAUTION

- If there is any problem in the CAN bus lines, an incorrect diagnostic trouble code may be set. Prior to this diagnosis, diagnose the CAN bus lines.
- Whenever the ECU is replaced, ensure that the CAN bus lines are normal.

OPERATION

AWC-ECU communicates with the ASC-ECU via the CAN bus lines.

DTC SET CONDITIONS

The code is set when the signal sent from the ASC-ECU cannot be received for a certain period.

PROBABLE CAUSES

- The CAN bus line is defective.
- Malfunction of ASC-ECU
- Malfunction of AWC-ECU

DIAGNOSIS

STEP 1. Scan tool CAN bus diagnostics

Using scan tool MB991958, diagnose the CAN bus lines.

Q: Is the check result normal?

YES : Go to Step 2.

NO : Repair the CAN bus lines. (Refer to GROUP 54C – Troubleshooting [P.54C-16](#)).

STEP 2. Scan tool diagnostic trouble code

Check the ASC diagnostic trouble code. (Refer to GROUP 35C –Troubleshooting [P.35C-27](#)).

Q: Is the DTC set?

YES : Perform the relevant troubleshooting.

NO : Go to Step 3.

STEP 3. Check whether the DTC is reset.

Q: Is DTC No. U0121 set?

YES : Replace the AWC-ECU. (Refer to [P.22C-518](#)). Then go to Step 4.

NO : Intermittent malfunction. (Refer to GROUP 00 –How to Cope with Intermittent Malfunction [P.00-13](#)).

STEP 4. Check whether the DTC is reset.**Q: Is DTC No. U0121 set?****YES :** Return to Step 1.**NO :** This diagnosis is complete.**DTC U0126: Steering Wheel Sensor Time-out Error****⚠ CAUTION**

- If there is any problem in the CAN bus lines, an incorrect diagnostic trouble code may be set. Prior to this diagnosis, diagnose the CAN bus lines.
- Whenever the ECU is replaced, ensure that the CAN bus lines are normal.
- When the steering wheel sensor is replaced, calibrate the steering wheel sensor (Refer to GROUP 35C –On-vehicle Service [P.35C-304](#)), and initialize the steering angle correction amount stored in AWC-ECU. (Item No.1: Steering angle correction amount initialization [P.22C-476](#)).

OPERATION

AWC-ECU communicates with the steering wheel sensor via the CAN bus lines.

DTC SET CONDITIONS

The code is set when the signal sent from steering wheel sensor cannot be received for a certain period.

PROBABLE CAUSES

- The CAN bus line is defective.
- Malfunction of steering wheel sensor
- Malfunction of AWC-ECU

DIAGNOSIS**STEP 1. Scan tool CAN bus diagnostics**

Using scan tool MB991958, diagnose the CAN bus lines.

Q: Is the check result normal?**YES :** Go to Step 2.**NO :** Repair the CAN bus lines. (Refer to GROUP 54C – Troubleshooting [P.54C-16](#)).**STEP 2. Scan tool data list**

Item No.11: Steering wheel sensor (Refer to data list reference table [P.22C-473](#)).

Q: Is the check result normal?**YES :** Intermittent malfunction. (Refer to GROUP 00 –How to Cope with Intermittent Malfunction [P.00-13](#)).**NO :** Replace the steering wheel sensor. (Refer to GROUP 35C –Steering Wheel Sensor [P.35C-321](#)). Then go to Step 3.**STEP 3. Check whether the DTC is reset.****Q: Is DTC No. U0126 set?****YES :** Replace the AWC-ECU. (Refer to [P.22C-518](#)). Then go to Step 4.**NO :** Intermittent malfunction. (Refer to GROUP 00 –How to Cope with Intermittent Malfunction [P.00-13](#)).

STEP 4. Check whether the DTC is reset.

Q: Is DTC No. U0126 set?

YES : Return to Step 1.

NO : This diagnosis is complete.

DTC U0141: ETACS Time-out Error

⚠ CAUTION

- If there is any problem in the CAN bus lines, an incorrect diagnostic trouble code may be set. Prior to this diagnosis, diagnose the CAN bus lines.
- Whenever the ECU is replaced, ensure that the CAN bus lines are normal.

OPERATION

AWC-ECU communicates with the ETACS-ECU via the CAN bus lines.

DTC SET CONDITIONS

The code is set when the signal sent from ETACS-ECU cannot be received for a certain period.

PROBABLE CAUSES

- The CAN bus line is defective.
- Malfunction of the ETACS-ECU
- Malfunction of AWC-ECU

DIAGNOSIS

STEP 1. Scan tool CAN bus diagnostics

Using scan tool MB991958, diagnose the CAN bus lines.

Q: Is the check result normal?

YES : Go to Step 2.

NO : Repair the CAN bus lines. (Refer to GROUP 54C – Troubleshooting [P.54C-16](#)).

STEP 2. Scan tool diagnostic trouble code

Check the ETACS diagnostic trouble code. (Refer to GROUP 54A –Troubleshooting [P.54A-674](#)).

Q: Is the DTC set?

YES : Perform the relevant troubleshooting.

NO : Go to Step 3.

STEP 3. Check whether the DTC is reset.

Q: Is DTC No. U0141 set?

YES : Replace the AWC-ECU. (Refer to [P.22C-518](#)). Then go to Step 4.

NO : Intermittent malfunction. (Refer to GROUP 00 –How to Cope with Intermittent Malfunction [P.00-13](#)).

STEP 4. Check whether the DTC is reset.

Q: Is DTC No. U0141 set?

YES : Return to Step 1.

NO : This diagnosis is complete.

DTC U0401: Engine Data Error**CAUTION**

- If there is any problem in the CAN bus lines, an incorrect diagnostic trouble code may be set. Prior to this diagnosis, diagnose the CAN bus lines.
- Whenever the ECU is replaced, ensure that the CAN bus lines are normal.

OPERATION

AWC-ECU communicates with the engine control module via the CAN bus lines.

DTC SET CONDITIONS

The code is set when abnormality is detected in the signal received from the engine control module.

PROBABLE CAUSES

- The CAN bus line is defective.
- Engine malfunction
- Malfunction of AWC-ECU

DIAGNOSIS**STEP 1. Scan tool CAN bus diagnostics**

Using scan tool MB991958, diagnose the CAN bus lines.

Q: Is the check result normal?

YES : Go to Step 2.

NO : Repair the CAN bus lines. (Refer to GROUP 54C – Troubleshooting [P.54C-16](#)).

STEP 2. Scan tool diagnostic trouble code

Check the engine diagnostic trouble code. (Refer to GROUP 13A –Troubleshooting [P.13A-50](#)).

Q: Is the DTC set?

YES : Perform the relevant troubleshooting.

NO : Go to Step 3.

STEP 3. Scan tool data list

Check the following data list. (Refer to data list reference table [P.22C-473](#)).

- Item No.15: Engine speed
- Item No.16: Engine torque (Driver request value)

Q: Is the check result normal?

YES : Intermittent malfunction. (Refer to GROUP 00 –How to Cope with Intermittent Malfunction [P.00-13](#)).

NO : Go to Step 4.

STEP 4. Check whether the DTC is reset.**Q: Is DTC No. U0401 set?**

YES : Replace the AWC-ECU. (Refer to [P.22C-518](#)). Then go to Step 5.

NO : Intermittent malfunction. (Refer to GROUP 00 –How to Cope with Intermittent Malfunction [P.00-13](#)).

STEP 5. Check whether the DTC is reset.**Q: Is DTC No. U0401 set?**

YES : Return to Step 1.

NO : This diagnosis is complete.

DTC U0428: Steering Wheel Sensor Data Error

⚠ CAUTION

- If there is any problem in the CAN bus lines, an incorrect diagnostic trouble code may be set. Prior to this diagnosis, diagnose the CAN bus lines.
- Whenever the ECU is replaced, ensure that the CAN bus lines are normal.
- When the steering wheel sensor is replaced, calibrate the steering wheel sensor (Refer to GROUP 35C –On-vehicle Service [P.35C-304](#)), and initialize the steering angle correction amount stored in AWC-ECU. (Item No.1: Steering angle correction amount initialization [P.22C-476](#)).

OPERATION

AWC-ECU communicates with the steering wheel sensor via the CAN bus lines.

DTC SET CONDITIONS

The code is set when abnormality is detected in the signal received from the steering wheel sensor.

PROBABLE CAUSES

- The CAN bus line is defective.
- Malfunction of steering wheel sensor
- Malfunction of AWC-ECU

DIAGNOSIS

STEP 1. Scan tool CAN bus diagnostics

Using scan tool MB991958, diagnose the CAN bus lines.

Q: Is the check result normal?

YES : Go to Step 2.

NO : Repair the CAN bus lines. (Refer to GROUP 54C – Troubleshooting [P.54C-16](#)).

STEP 2. Scan tool data list

Item No.11: Steering wheel sensor (Refer to [P.22C-473](#)).

Q: Is the check result normal?

YES : Intermittent malfunction. (Refer to GROUP 00 –How to Cope with Intermittent Malfunction [P.00-13](#)).

NO : Replace the steering wheel sensor. (Refer to GROUP 35C –Steering Wheel Sensor [P.35C-321](#)). Then go to Step 3.

STEP 3. Check whether the DTC is reset.

Q: Is DTC No. U0428 set?

YES : Replace the AWC-ECU. (Refer to [P.22C-518](#)). Then go to Step 4.

NO : Intermittent malfunction. (Refer to GROUP 00 –How to Cope with Intermittent Malfunction [P.00-13](#)).

STEP 4. Check whether the DTC is reset.

Q: Is DTC No. U0428 set?

YES : Return to Step 1.

NO : This diagnosis is complete.

DTC U0431: ETACS Data Error**⚠ CAUTION**

- If there is any problem in the CAN bus lines, an incorrect diagnostic trouble code may be set. Prior to this diagnosis, diagnose the CAN bus lines.
- Whenever the ECU is replaced, ensure that the CAN bus lines are normal.

OPERATION

AWC-ECU communicates with the ETACS-ECU via the CAN bus lines.

DTC SET CONDITIONS

The code is set when abnormality is detected in the signal received from the ETACS-ECU.

PROBABLE CAUSES

- The CAN bus line is defective.
- Malfunction of the ETACS-ECU
- Malfunction of AWC-ECU

DIAGNOSIS**STEP 1. Scan tool CAN bus diagnostics**

Using scan tool MB991958, diagnose the CAN bus lines.

Q: Is the check result normal?

YES : Go to Step 2.

NO : Repair the CAN bus lines. (Refer to GROUP 54C – Troubleshooting [P.54C-16](#)).

STEP 2. Scan tool diagnostic trouble code

Check the ETACS diagnostic trouble code. (Refer to GROUP 54A –Troubleshooting [P.54A-674](#)).

Q: Is the DTC set?

YES : Perform the relevant troubleshooting.

NO : Go to Step 3.

STEP 3. Scan tool data list

Check the following data list. (Refer to data list reference table [P.22C-473](#)).

- Item No. 39: Stoplight switch
- Item No.43: Battery positive voltage

Q: Is the check result normal?

YES : Intermittent malfunction. (Refer to GROUP 00 –How to Cope with Intermittent Malfunction [P.00-13](#)).

NO : Go to Step 4.

STEP 4. Check whether the DTC is reset.**Q: Is DTC No. U0431 set?**

YES : Replace the AWC-ECU. (Refer to [P.22C-518](#)). Then go to Step 5.

NO : Intermittent malfunction. (Refer to GROUP 00 –How to Cope with Intermittent Malfunction [P.00-13](#)).

STEP 5. Check whether the DTC is reset.**Q: Is DTC No. U0431 set?**

YES : Return to Step 1.

NO : This diagnosis is complete.

DTC U1415: Coding incomplete/fail

⚠ CAUTION

- If there is any problem in the CAN bus lines, an incorrect diagnostic trouble code may be set. Prior to this diagnosis, diagnose the CAN bus lines.
- Whenever the ECU is replaced, ensure that the CAN bus lines are normal.
- When the diagnostic trouble code No.U1415 is set in AWC-ECU, the diagnostic trouble code may also be set in ETACS-ECU. When the diagnostic trouble code is set in ETACS-ECU, perform the diagnosis of the diagnostic trouble code for ETACS-ECU first.

OPERATION

AWC-ECU receives the vehicle information stored in ETACS-ECU via CAN bus lines.

DTC SET CONDITIONS

The diagnostic trouble code is set when the AWC-ECU coding has not been performed.

PROBABLE CAUSES

- Variant coding for ETACS-ECU has not been implemented.
- Malfunction of AWC-ECU

DIAGNOSIS

STEP 1. Scan tool CAN bus diagnostics

Using scan tool MB991958, diagnose the CAN bus lines.

Q: Is the check result normal?

YES : Go to Step 2.

NO : Repair the CAN bus lines. (Refer to GROUP 54C – Troubleshooting [P.54C-16](#)).

STEP 2. Scan tool diagnostic trouble code

Check the ETACS diagnostic trouble code. (Refer to GROUP 54A –Troubleshooting [P.54A-674](#)).

Q: Is the DTC set?

YES : Perform the relevant troubleshooting.

NO : Go to Step 3.

STEP 3. ETACS-ECU coding data check

Using the scan tool, check if there is any abnormality to the coding data stored in the ETACS-ECU. (Refer to GROUP 00 – Coding Reference Table [P.00-28](#)).

Q: Is the check result normal?

YES : Go to Step 4.

NO : Replace the ETACS-ECU. (Refer to GROUP 54A – ETACS-ECU [P.54A-769](#)). Then go to Step 5.

STEP 4. Check whether the DTC is reset.

Q: Is DTC No. U1415 set?

YES : Replace the AWC-ECU. (Refer to [P.22C-518](#)). Then go to Step 5.

NO : Intermittent malfunction. (Refer to GROUP 00 –How to Cope with Intermittent Malfunction [P.00-13](#)).

STEP 5. Check whether the DTC is reset.**Q: Is DTC No. U1415 set?****YES** : Return to Step 1.**NO** : This diagnosis is complete.**DTC U1417: Coding Data Malfunction****CAUTION**

- If there is any problem in the CAN bus lines, an incorrect diagnostic trouble code may be set. Prior to this diagnosis, diagnose the CAN bus lines.
- Whenever the ECU is replaced, ensure that the communication circuit is normal.
- When the diagnostic trouble code No.U1417 is set in AWC-ECU, the diagnostic trouble code may also be set in ETACS-ECU. When the diagnostic trouble code is set in ETACS-ECU, perform the diagnosis of the diagnostic trouble code for ETACS-ECU first.

OPERATION

AWC-ECU receives the vehicle information stored in ETACS-ECU via CAN bus lines.

DTC SET CONDITIONS

The code is set when the vehicle information received from ETACS-ECU is not correct.

PROBABLE CAUSES

- The CAN bus line is defective.
- Malfunction of the ETACS-ECU
- Malfunction of AWC-ECU
- ETACS-ECU has been interchanged between two vehicles.

DIAGNOSIS**STEP 1. Scan tool CAN bus diagnostics**

Using scan tool MB991958, diagnose the CAN bus lines.

Q: Is the check result normal?**YES** : Go to Step 2.**NO** : Repair the CAN bus lines. (Refer to GROUP 54C – Troubleshooting P.54C-16).**STEP 2. Scan tool diagnostic trouble code**

Check the ETACS diagnostic trouble code. (Refer to GROUP 54A –Troubleshooting P.54A-674).

Q: Is the DTC set?**YES** : Perform the relevant troubleshooting.**NO** : Go to Step 3.**STEP 3. ETACS-ECU coding data check**

Using the scan tool, check if there is any abnormality to the coding data stored in the ETACS-ECU. (Refer to GROUP 00 – Coding Reference Table P.00-28).

Q: Is the check result normal?**YES** : Go to Step 4.**NO** : Repair the coding data or replace ETACS-ECU. (Refer to GROUP 54A –ETACS-ECU P.54A-769). Then go to Step 5.

STEP 4. Check whether the DTC is reset.

Q: Is DTC No. U1417 set?

YES : Replace the AWC-ECU. (Refer to [P.22C-518](#)). Then go to Step 5.

NO : Intermittent malfunction. (Refer to GROUP 00 –How to Cope with Intermittent Malfunction [P.00-13](#)).

STEP 5. Check whether the DTC is reset.

Q: Is DTC No. U1417 set?

YES : Return to Step 1.

NO : This diagnosis is complete.

DTC U1425: TC-SST Data Error

⚠ CAUTION

- If there is any problem in the CAN bus lines, an incorrect diagnostic trouble code may be set. Prior to this diagnosis, diagnose the CAN bus lines.
- Whenever the ECU is replaced, ensure that the CAN bus lines are normal.

OPERATION

AWC-ECU communicates with TC-SST-ECU via the CAN bus lines.

DTC SET CONDITIONS

The code is set when abnormality is detected in the signal received from the TC-SST-ECU.

PROBABLE CAUSES

- The CAN bus line is defective.
- Malfunction of TC-SST-ECU
- Malfunction of AWC-ECU

DIAGNOSIS

STEP 1. Scan tool CAN bus diagnostics

Using scan tool MB991958, diagnose the CAN bus lines.

Q: Is the check result normal?

YES : Go to Step 2.

NO : Repair the CAN bus lines. (Refer to GROUP 54C – Troubleshooting [P.54C-16](#)).

STEP 2. Scan tool diagnostic trouble code

Check the TC-SST diagnostic trouble code. (Refer to [P.22C-16](#)).

Q: Is the DTC set?

YES : Perform the relevant troubleshooting.

NO : Go to Step 3.

STEP 3. Scan tool data list

Item No.17: T/M shift range (Refer to [P.22C-473](#)).

Q: Is the check result normal?

YES : Intermittent malfunction. (Refer to GROUP 00 –How to Cope with Intermittent Malfunction [P.00-13](#)).

NO : Go to Step 4.

STEP 4. Check whether the DTC is reset.**Q: Is DTC No. U1425 set?**

YES : Replace the AWC-ECU. (Refer to [P.22C-518](#)). Then go to Step 5.

NO : Intermittent malfunction. (Refer to GROUP 00 –How to Cope with Intermittent Malfunction [P.00-13](#)).

STEP 5. Check whether the DTC is reset.**Q: Is DTC No. U1425 set?**

YES : Return to Step 1.

NO : This diagnosis is complete.

DTC U1427: Wheel Speed Sensor Data Error**CAUTION**

- If there is any problem in the CAN bus lines, an incorrect diagnostic trouble code may be set. Prior to this diagnosis, diagnose the CAN bus lines.
- Whenever the ECU is replaced, ensure that the CAN bus lines are normal.

OPERATION

AWC-ECU communicates with the ASC-ECU via the CAN bus lines.

DTC SET CONDITIONS

The code is set when abnormality is detected in the signal received from the wheel speed sensor.

PROBABLE CAUSES

- The CAN bus line is defective.
- Malfunction of ASC-ECU
- Malfunction of wheel speed sensor
- Malfunction of AWC-ECU

DIAGNOSIS**STEP 1. Scan tool CAN bus diagnostics**

Using scan tool MB991958, diagnose the CAN bus lines.

Q: Is the check result normal?

YES : Go to Step 2.

NO : Repair the CAN bus lines. (Refer to GROUP 54C – Troubleshooting [P.54C-16](#)).

STEP 2. Scan tool diagnostic trouble code

Check the ASC diagnostic trouble code. (Refer to GROUP 35C –Troubleshooting [P.35C-27](#)).

Q: Is the DTC set?

YES : Perform the relevant troubleshooting.

NO : Go to Step 3.

STEP 3. Scan tool data list

Check the data list below. (Refer to [P.22C-473](#)).

- Item No.22: Wheel speed sensor <FL>
- Item No.23: Wheel speed sensor <FR>
- Item No.24: Wheel speed sensor <RL>
- Item No.25: Wheel speed sensor <RR>

Q: Is the check result normal?

YES : Intermittent malfunction. (Refer to GROUP 00 –How to Cope with Intermittent Malfunction [P.00-13](#)).

NO : Go to Step 4.

STEP 4. Check whether the DTC is reset.**Q: Is DTC No. U1427 set?**

YES : Replace the AWC-ECU. (Refer to [P.22C-518](#)). Then go to Step 5.

NO : Intermittent malfunction. (Refer to GROUP 00 –How to Cope with Intermittent Malfunction [P.00-13](#)).

STEP 5. Check whether the DTC is reset.**Q: Is DTC No. U1427 set?**

YES : Return to Step 1.

NO : This diagnosis is complete.

DTC U1428: G and Yaw Rate Sensor Data Error

⚠ CAUTION

- If there is any problem in the CAN bus lines, an incorrect diagnostic trouble code may be set. Prior to this diagnosis, diagnose the CAN bus lines.
- Whenever the ECU is replaced, ensure that the CAN bus lines are normal.
- Do not drop the G and yaw rate sensor or subject it to a shock.
- When G and yaw rate sensor is replaced, calibrate G and yaw rate sensor (refer to GROUP 35C –On-vehicle Service [P.35C-302](#))

OPERATION

AWC-ECU receives the G and yaw rate sensor data from ASC-ECU via the CAN communication.

DTC SET CONDITIONS

The code is set when abnormality is detected in the signal received from the G and yaw rate sensor.

PROBABLE CAUSES

- Malfunction of G and yaw rate sensor
- Malfunction of ASC-ECU
- Malfunction of AWC-ECU

DIAGNOSIS

STEP 1. Scan tool CAN bus diagnostics

Using scan tool MB991958, diagnose the CAN bus lines.

Q: Is the check result normal?

YES : Go to Step 2.

NO : Repair the CAN bus lines. (Refer to GROUP 54C – Troubleshooting [P.54C-16](#)).

STEP 2. Scan tool diagnostic trouble code

Check the ASC diagnostic trouble code. (Refer to GROUP 35C –Troubleshooting [P.35C-27](#)).

Q: Is the DTC set?

YES : Perform the relevant troubleshooting.

NO : Go to Step 3.

STEP 3. Scan tool diagnostic trouble code

Check if the ACD diagnostic trouble code No. C123C, C1242 is set. (Refer to [P.22C-397](#)).

Q: Is the check result normal?

YES : Perform the relevant troubleshooting.

NO : Go to Step 4.

STEP 4. Scan tool data list

Check the data list below. (Refer to [P.22C-473](#)).

- Item No.26: Yaw rate sensor
- Item No.29: Lateral G sensor
- Item No.31: Longitudinal G sensor

Q: Is the check result normal?

YES : Go to Step 5.

NO : Replace the G and yaw rate sensor. (Refer to GROUP 35C –G and Yaw Rate Sensor [P.35C-320](#)). Then go to Step 6.

STEP 5. Check whether the DTC is reset.**Q: Is DTC No.U1428 set?**

YES : Replace the AWC-ECU. (Refer to [P.22C-518](#)). Then go to Step 6.

NO : Intermittent malfunction. (Refer to GROUP 00 –How to Cope with Intermittent Malfunction [P.00-13](#)).

STEP 6. Check whether the DTC is reset.**Q: Is DTC No.U1428 set?**

YES : Return to Step 1.

NO : This diagnosis is complete.

SYMPTOM PROCEDURES

INSPECTION PROCEDURE 1: Communication between the scan tool and AWC-ECU cannot be established

CAUTION

- If there is any problem in the CAN bus lines, an incorrect trouble symptom may occur. Prior to this diagnosis, always diagnose the CAN bus lines.
- Whenever the ECU is replaced, ensure that the CAN bus lines are normal.

COMMENTS ON TROUBLE SYMPTOM

CAN bus line, AWC-ECU power supply circuit, or AWC-ECU may have a problem.

PROBABLE CAUSES

- Wrong scan tool wiring harness
- The CAN bus line is defective.
- AWC-ECU power supply circuit malfunction
- Malfunction of AWC-ECU
- ECU malfunction of other system

DIAGNOSIS

STEP 1. Scan tool CAN bus diagnostics

Using scan tool MB991958, diagnose the CAN bus lines.

Q: Is the check result normal?

YES : Check/repair the AWC-ECU power supply circuit.
(Refer to [P.22C-470](#).)

NO : Repair the CAN bus lines. (Refer to GROUP 54C – Troubleshooting [P.54C-16](#)).

INSPECTION PROCEDURE 2: Mode does not change even when the AWC switch is pressed

AWC MODE SELECT SWITCH SYSTEM CIRCUIT

Refer to [P.22C-422](#).

CAUTION

- If there is any problem in the CAN bus lines, an incorrect trouble symptom may occur. Prior to this diagnosis, always diagnose the CAN bus lines.
- Whenever the ECU is replaced, ensure that the CAN bus lines are normal.

COMMENTS ON TROUBLE SYMPTOM

AWC switch or AWC-ECU may have a problem.

PROBABLE CAUSES

- AWC switch malfunction
- Malfunction of the ETACS-ECU
- Malfunction of the combination meter
- Damaged harness wires and connectors
- Malfunction of AWC-ECU

DIAGNOSIS

STEP 1. Scan tool CAN bus diagnostics

Using scan tool MB991958, diagnose the CAN bus lines.

Q: Is the check result normal?

YES : Go to Step 3.

NO : Repair the CAN bus lines. (Refer to GROUP 54C – Troubleshooting [P.54C-16](#)). After repairing the CAN bus line, go to Step 2.

STEP 2. Retest the system.**Q: Is the check result normal?**

YES : Intermittent malfunction. (Refer to GROUP 00 –How to Cope with Intermittent Malfunction [P.00-13](#)).

NO : Go to Step 3.

STEP 3. Scan tool data list

Item No.89: AWC switch (Refer to data list reference table [P.22C-473](#)).

Q: Is the check result normal?

YES : Go to Step 11.

NO : Go to Step 4.

STEP 4. AWC switch check.

Check the AWC switch. (Refer to [P.22C-520](#)).

Q: Is the check result normal?

YES : Go to Step 5.

NO : Replace the AWC switch. (Refer to [P.22C-519](#)). Then go to Step 13.

STEP 5. Measure the voltage at C-50 AWC switch connector.

- (1) Disconnect the connector, and measure the voltage between terminal No.2 and ground at the harness side.
- (2) Turn the ignition switch to the "ON" position.

OK: Battery positive voltage

Q: Is the check result normal?

YES : Go to Step 8.

NO : Go to Step 6.

STEP 6. AWC switch connector, ETACS-ECU connector check: C-50, C-317**Q: Is the check result normal?**

YES : Go to Step 7.

NO : Repair the defective connector. Then go to Step 13.

STEP 7. Check the wiring harness between C-50 AWC switch connector terminal No.2 and C-317 ETACS-ECU connector terminal No.5.

Check the power supply line for short or open circuit.

Q: Is the check result normal?

YES : Replace the ETACS-ECU. (Refer to GROUP 54A – ETACS-ECU [P.54A-769](#)). Then go to Step 12.

NO : Repair the wiring harness. Then go to Step 13.

STEP 8. Voltage measurement at C-51 AWC-ECU connector

(1) With C-51 AWC-ECU connector connected, measure the voltage between terminal No.21 and ground at the harness side.

(2) Turn the ignition switch to the "ON" position.

OK: Battery voltage (Press and hold the AWC switch)

OK: 1 V or less (Release the AWC switch)

Q: Is the check result normal?

YES : Go to Step 11.

NO : Go to Step 9.

STEP 9. Intermediate connector, AWC-ECU connector, AWC switch connector check: C-36, C-51, C-50

Q: Is the check result normal?

YES : Go to Step 10.

NO : Repair the defective connector. Then go to Step 13.

STEP 10. Wiring harness check between C-51 AWC-ECU connector terminal No.21 and C-50 AWC switch connector terminal No.1

Check the output line for short or open circuit.

Q: Is the check result normal?

YES : Go to Step 12.

NO : Repair the wiring harness. Then go to Step 11.

STEP 11. Scan tool data list

Combination meter item No.F13, F14, F15: Mode display (Refer to GROUP 54A –Combination Meter [P.54A-94](#)).

Q: Is the check result normal?

YES : Go to Step 12.

NO : Replace the combination meter. (Refer to GROUP 54A –Combination Meter [P.54A-124](#)). Then go to Step 12.

STEP 12. Retest the system.**Q: Is the check result normal?**

YES : Intermittent malfunction. (Refer to GROUP 00 –How to Cope with Intermittent Malfunction [P.00-13](#)).

NO : Replace the AWC-ECU. (Refer to [P.22C-518](#)). Then go to Step 13.

STEP 13. Retest the system.**Q: Is the check result normal?**

YES : Return to Step 1.

NO : This diagnosis is complete.

INSPECTION PROCEDURE 3: AWC-ECU power supply circuit malfunction (Control mode is not displayed.)**POWER SUPPLY SYSTEM CIRCUIT**

Refer to [P.22C-445](#).

CAUTION

- If there is any problem in the CAN bus lines, an incorrect trouble symptom may occur. Prior to this diagnosis, always diagnose the CAN bus lines.
- Whenever the ECU is replaced, ensure that the CAN bus lines are normal.

COMMENTS ON TROUBLE SYMPTOM

AWC-ECU power supply circuit, ground circuit, or AWC-ECU may have a problem.

PROBABLE CAUSES

- Malfunction of the ETACS-ECU
- Damaged harness wires and connectors
- Malfunction of AWC-ECU

DIAGNOSIS**STEP 1. Scan tool CAN bus diagnostics**

Using scan tool MB991958, diagnose the CAN bus lines.

Q: Is the check result normal?

YES : Go to Step 3.

NO : Repair the CAN bus lines. (Refer to GROUP 54C – Troubleshooting [P.54C-16](#)). After repairing the CAN bus line, go to Step 2.

STEP 2. Retest the system.**Q: Is the check result normal?**

YES : Intermittent malfunction. (Refer to GROUP 00 –How to Cope with Intermittent Malfunction [P.00-13](#)).

NO : Go to Step 3.

STEP 3. Voltage measurement at C-51 AWC-ECU connector

Disconnect the connector, and measure the voltage between terminal No.12 and ground at the wiring harness side.

OK: Battery positive voltage

Q: Is the check result normal?

YES : Go to Step 6.

NO : Go to Step 4.

STEP 4. AWC-ECU connector, ETACS-ECU connector, intermediate connector check: C-51, C-315, C-35

Q: Is the check result normal?

YES : Go to Step 5.

NO : Repair the defective connector. Then go to Step 13.

STEP 5. Check the wiring harness between C-51 AWC-ECU connector terminal No.12 and C-315 ETACS-ECU connector terminal No.4.

Check the wiring harness for open circuit.

Q: Is the check result normal?

YES : Go to Step 12.

NO : Check C-35 intermediate connector. When no problem is found, repair the wiring harness. Then go to Step 13.

STEP 6. Voltage measurement at C-51 AWC-ECU connector

(1) Disconnect the connector, and measure the voltage between terminal No.16 and ground at the wiring harness side.

(2) Turn the ignition switch to the "ON" position.

OK: Battery positive voltage

Q: Is the check result normal?

YES : Go to Step 9.

NO : Go to Step 7.

STEP 7. AWC-ECU connector, ETACS-ECU connector check: C-51, C-313

Q: Is the check result normal?

YES : Go to Step 8.

NO : Repair the defective connector. Then go to Step 13.

STEP 8. Check the wiring harness between C-51 AWC-ECU connector terminal No.16 and C-313 ETACS-ECU connector terminal No.2.

Check the wiring harness for open circuit.

Q: Is the check result normal?

YES : Go to Step 12.

NO : When no problem is found, repair the wiring harness. Then go to Step 11.

STEP 9. AWC-ECU connector check: C-51**Q: Is the check result normal?****YES** : Go to Step 10.**NO** : Repair the defective connector. Then go to Step 13.

STEP 10. Check the wiring harness between C-51 AWC-ECU connector terminal No.13 and body ground.

Check the wiring harness for open circuit.

Q: Is the check result normal?**YES** : Go to Step 11.**NO** : Repair the wiring harness. Then go to Step 13.

STEP 11. Scan tool data listItem No.43: Battery voltage (Refer to data list reference table [P.22C-473](#)).**Q: Is the check result normal?****YES** : Intermittent malfunction. (Refer to GROUP 00 –How to Cope with Intermittent Malfunction [P.00-13](#)).**NO** : Replace the AWC-ECU. (Refer to [P.22C-518](#)). Then go to Step 13.

STEP 12. Retest the system.**Q: Is the check result normal?****YES** : Intermittent malfunction. (Refer to GROUP 00 –How to Cope with Intermittent Malfunction [P.00-13](#).)**NO** : Replace the ETACS-ECU. (Refer to GROUP 54A – ETACS-ECU [P.54A-769](#)). Then go to Step 13.

STEP 13. Retest the system.**Q: Is the check result normal?****YES** : Return to Step 1.**NO** : This diagnosis is complete.

DATA LIST REFERENCE TABLE

M1221011200162

Item No.	Display on scan tool	Check conditions	Normal condition	
1	ACD control mode	TARMAC is selected (displayed on multi information display).	TARMAC	
		GRAVEL is selected (displayed on multi information display).	GRAVEL	
		SNOW is selected (displayed on multi information display).	SNOW	
2	T/M gear position hold request	Perform a test run of the vehicle.	Retention requested	ON
			Retention not requested	OFF
3	System fail	Normal	Correct	
		Faulty	Malfunction	
4	ACD target torque (for Meter)	Perform a test run of the vehicle.	0 –5 seg	
11	Steering angle sensor	Steering wheel: Steered 90° to right	R90 deg	
		Steering wheel: Steered 90° to left	L90 deg	
12	Steering angle speed	Steering wheel: Without steering wheel operation	0 deg/s	
		Steering wheel: With steering wheel operation	Changes depending on the turning speed.	
13	Steering angle sensor (status)	Normal	Correct	
		Faulty	Malfunction	
		Neutral point not learned	Neutral not learned	
		Neutral point not learned or failed	Neutral not learned and Malfunction	
14	Accelerator position	Release the accelerator pedal	18 –22%	
		Depress the accelerator pedal	Increases in response to the depression amount	
		Accelerator pedal fully opened	80% or more	
15	Engine speed	Idling and test run	Nearly the same as the tachometer display	
16	Engine torque (Driver request)	Operate the accelerator pedal	The torque changes	
17	T/M Gear position	Shift lever position: P	P	
		Shift lever position: R	R	
		Shift lever position: Drive at D	D1 –D6	
		Shift lever position: Manual mode	M/T	
18	FL wheel speed (raw value)	–(reference because of rpm)	–	
19	FR wheel speed (raw value)			
20	RL wheel speed (raw value)			
21	RR wheel speed (raw value)			

Item No.	Display on scan tool	Check conditions	Normal condition
22	FL wheel speed sensor	Perform a test run of the vehicle.	Nearly the same as the speedometer display
23	FR wheel speed sensor		
24	RL wheel speed sensor		
25	RR wheel speed sensor		
26	Yaw rate sensor	Perform a test run of the vehicle.	-100 –100 deg/s
29	Lateral G sensor	Vehicle is stopped (horizontal state).	-1.1 –1.1 m/s ²
		Perform a test run of the vehicle.	-10 –10 m/s ²
31	Longitudinal G sensor	Vehicle is stopped (horizontal state).	-1.1 –1.1 m/s ²
		Perform a test run of the vehicle.	-10 –10 m/s ²
39	Stoplight switch	Brake pedal: Depressed	ON
		Brake pedal: Released	OFF
40	Parking brake switch	Parking brake lever: Pulled	ON
		Parking brake lever: Released	OFF
41	Back up lamp switch	Shift lever: Operated to reverse	ON
		Shift lever: Other than above	OFF
42	Ignition switch	Ignition switch: ON	ON
		Ignition switch: START	START
43	Battery voltage	Ignition switch: ON	Battery positive voltage
44	IOD fuse	Fuse inserted	ON
		Fuse removed	OFF
45	Odometer	Ignition switch: ON	The same as the meter display
46	ETACS coding status	Coding incomplete	Not complete
		Coding data requested	Data request
		Coding completed	Complete
47	ECU connection (ABS)	ASC-ECU connected	Present
		ASC-ECU disconnected	Not present
48	ECU connection (ENGINE)	Engine control module connected	Present
		Engine control module disconnected	Not present
49	ECU connection (T/M)	SST-ECU connected	Present
		SST-ECU disconnected	Not present
50	ECU connection (SAS)	Steering sensor connected	Present
		Steering sensor disconnected	Not present
51	Coding status	Coding incomplete	Not complete
		Coding completed	Complete
52	T/M type	5M/T	5M/T
		TC-SST	SST

Item No.	Display on scan tool	Check conditions	Normal condition
53	Rear diff type	Mechanical differential	LOM
		AYC differential	AYC
58	ABS fail flag	Faulty	ON
		Normal	OFF
59	ABS activation flag	Activated	ON
		Not activated	OFF
65	ASC fail flag	Faulty	ON
		Normal	OFF
66	ASC switch mode	When ASC is ON	ON
		When ASC is OFF	OFF
68	ASC activation flag	Activated	ON
		Not activated	OFF
83	IG1	ON	ON
		OFF	OFF
84	ECU power supply voltage	Ignition switch: ON	10 –16 V
85	Output load voltage	Ignition switch: ON	10 –16 V
86	Pressure sensor power voltage	Ignition switch: ON	Approx. 5 V
87	Pressure sensor output voltage	Immediately after electric pump motor operation	1.86 –2.67 V
88	Pressure sensor	Immediately after electric pump motor operation	1–1.6 MPa
89	Mode SW	Mode selection switch: Pressed	ON
		Mode selection switch: Released	OFF
92	ACD proportion valve (indicated)	During ACD operation	50 –1,000 mA
96	Motor relay drive indication	ON	ON
		OFF	OFF
97	Yaw rate sensor (adjusted value)	Ignition switch: ON	-6 –6 deg/s
98	SAS (adjusted value)	Ignition switch: ON	-15 –15 deg
99	Lateral G sensor(adjusted value)	Ignition switch: ON	-1.7 –1.7 m/s ²
100	Longitudinal G (adjusted value)	Ignition switch: ON	-3 –3 m/s ²
101	Chassis Number writing counter	Ignition switch: ON	Writing count
102	Chassis Number (original) lock	Ignition switch: ON	Locked
			Unlocked
103	Mileage counter	Ignition switch: ON	Counter value
104	Coding counter	Ignition switch: ON	Coding count

SPECIAL FUNCTION REFERENCE TABLE

M1221011300136

ACTUATOR TEST TABLE

Item No.	Check items	Test content	Normal conditions
1	Air bleeding <ACD>	According to the steering angle of steering wheel, energize the proportioning valve, and operate the proportioning valve for 5 minutes.	No air comes out from the bleeder screw established to the transfer.
3	Oil level check	Operate the direction valve to left and right for 20 seconds.	Oil level of reservoir tank is adequate.
4	Electric pump operation	Operate the electric pump for 3 seconds.	Operating sound of the electric pump can be heard.
5	ACD operation check	Operate the proportioning valve <ACD> for 1 minute, and supply the maximum hydraulic pressure to the multiplate clutch.	The tight corner braking phenomenon occurs.
8	Control OFF	Turn OFF the electric pump relay, and turn OFF the ACD control.	With the actual driving of vehicle, there is a difference between when the control is ON and OFF.

⚠ CAUTION

Since the fluid in the hydraulic unit will be hardened under low temperature, all the inspection items in the table may not be checked properly. Therefore, completely remove snow and ice from the hydraulic unit and leave the vehicle under temperature of 0° C (32° F) or higher for 4 hours or more before performing the actuator test.

- The actuator test can be performed only when all the following conditions are satisfied.
 - Every wheel speed sensor input is 20 km/h (12.4 mph) or less.
 - No system malfunction is detected.

- The steering angle of steering wheel is within $\pm 30^\circ$ from the neutral position.
- With the actuator test, when any of the conditions below is met, the forced activation will be cancelled.
 - Any of the wheel speed sensors detects an input of 20 km/h (12.4 mph) or more (excluding item No.8 "Control OFF").
 - A system malfunction is detected.
 - The forced activation time has elapsed.
 - Scan tool is removed.
 - Scan tool clear key is operated.

SENSOR NEUTRAL POSITION LEARNED INITIALIZATION LIST


Item No.	Item	Initialization contents
1	Steering angle correction amount initialization	Reset the steering angle sensor neutral position learned value.

The sensor neutral position learned value initialization can be performed only when the vehicle is stopped.

AWD-ECU TERMINAL VOLTAGE REFERENCE CHART FOR ACD

M1221011400122

C-51

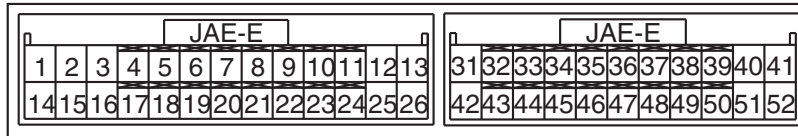

AC506684AL

Terminal No.	Inspection Items	Inspection requirement		Normal Condition
1	Proportioning valve (for ACD)	With the actuator test (item No.1), operate the proportioning valve <ACD>.	While executing the actuator test	0.2-4 V
			After completing the actuator test	1 V or less
4	CAN-H	-		-
5	CAN-L	-		-
6	Pressure sensor power supply	Ignition switch: ON		Approx.5 V
7	Pressure sensor output voltage	Ignition switch: ON		0.5-2.7 V
8	Pressure sensor ground	Any time		1 V or less
12	Power supply	Any time		Battery positive voltage
13	Ground	Any time		1 V or less
16	Ignition switch	Ignition switch: ON		Battery positive voltage
		Ignition switch: OFF		1 V or less
17	Back up power supply	Any time		Battery positive voltage
20	Electric pump relay	While the electric pump motor is operating		Battery positive voltage
21	AWC switch	Ignition switch: ON	Press and hold the switch.	Battery positive voltage
			Release the switch.	1 V or less

ON-VEHICLE SERVICE

TRANSMISSION FLUID LEAKAGE CHECK



M1225029700034

1. Clean the transaxle exterior, and visually check the transaxle for fluid leaks.
2. If the fluid is leaking from the oil pan or the oil seal, replace the part. If the fluid is leaking from the part other than the oil pan and the oil seal, replace the transaxle assembly.

TRANSMISSION FLUID LEVEL CHECK

M1225008000212

1. Remove the engine room under cover front B assembly. (Refer to GROUP 51 –Under Cover P.51-20.)
2. Start the engine, and let it run at idle to warm it up for 15 minutes.
3. Move the shift lever to every position (P, R, N, D, manual mode) (Hold for 20 seconds in each position), and then move it to the P range.
4. Stop the engine.
5. Remove the air cleaner element and air cleaner intake duct. (Refer to GROUP 15 –Air Cleaner P.15-9.)
6. Remove the filler plug.

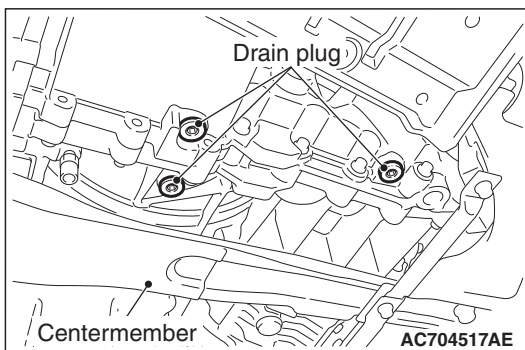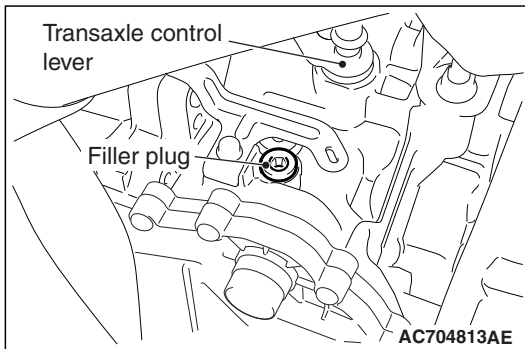

⚠ CAUTION

- The drained fluid can be reused if it is between the replacement intervals.

<Replacement interval>

- Normal condition: 96,000 km (60,000 miles)
- Severe condition: 48,000 km (30,000 miles)
- When reusing the drained fluid, make sure that no foreign object gets into the fluid.

7. Remove the drain plugs, and leave it for 3 minutes to drain the fluid.

NOTE: Because the fluid in the oil cooler, oil filter, and transaxle assembly cannot be drained, the amount of drained fluid will be approximately 5.5 dm³ (approximately 5.8 quarts).

8. Tighten the drain plugs to the specified torque.

Tightening torque: 35 ± 5 N·m (26 ± 4 ft-lb)

⚠ CAUTION

Measure the drained fluid. If the drained fluid is less than approximately 5.5 dm³ (approximately 5.8 quarts), add new fluid to make it approximately 5.5 dm³ (approximately 5.8 quarts).

9. Fill the fluid into the filler plug.

Brand name: Dia Queen SSTF-I

Filling amount: Approximately 5.5 dm³ (approximately 5.8 quarts)

10. Tighten the filler plug to the specified torque.

Tightening torque: $35 \pm 5 \text{ N} \cdot \text{m}$ ($26 \pm 4 \text{ ft}\cdot\text{lb}$)



11. Install the air cleaner element and air cleaner intake duct.
(Refer to GROUP 15 –Air Cleaner P.15-9.)

12. Install the engine room under cover front B assembly. (Refer to GROUP 51 –Under Cover P.51-20.)

TRANSMISSION FLUID CHANGE

M1225008100220

1. Remove the engine room under cover front B assembly.
(Refer to GROUP 51 –Under Cover P.51-20.)
2. Start the engine, and let it run at idle to warm it up for 15 minutes.
3. Move the shift lever to every position (P, R, N, D, manual mode) (Hold for 20 seconds in each position), and then move it to the P range.
4. Stop the engine.
5. Remove the air cleaner element and air cleaner intake duct.
(Refer to GROUP 15 –Air Cleaner P.15-9.)
6. Remove the filler plug.

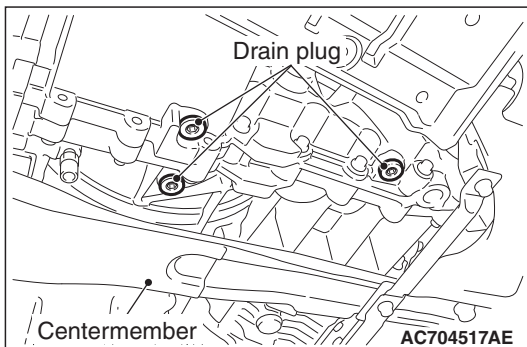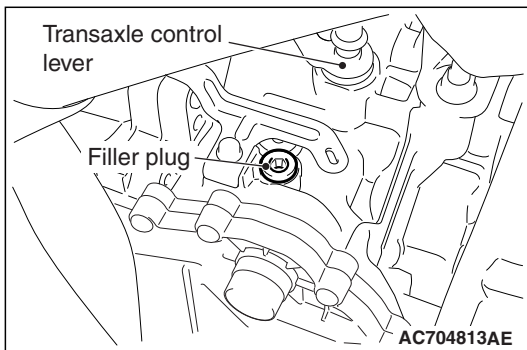

7. Remove the drain plug, and leave it for 3 minutes to drain the fluid.

NOTE: Because the fluid in the oil cooler, oil filter, and transaxle assembly cannot be drained, the amount of drained fluid will be approximately 5.5 dm^3 (approximately 5.8 quarts).

8. Tighten the drain plug to the specified torque.

Tightening torque: $35 \pm 5 \text{ N} \cdot \text{m}$ ($26 \pm 4 \text{ ft}\cdot\text{lb}$)

9. Fill the fluid into the filler plug.

Brand name: Dia Queen SSTF-I



Filling amount: Approximately 5.5 dm^3 (approximately 5.8 quarts)

10. Tighten the filler plug to the specified torque.

Tightening torque: $35 \pm 5 \text{ N} \cdot \text{m}$ ($26 \pm 4 \text{ ft}\cdot\text{lb}$)

11. Install the air cleaner element and air cleaner intake duct.
(Refer to GROUP 15 –Air Cleaner P.15-9.)

12. Install the engine room under cover front B assembly. (Refer to GROUP 51 –Under Cover P.51-20.)

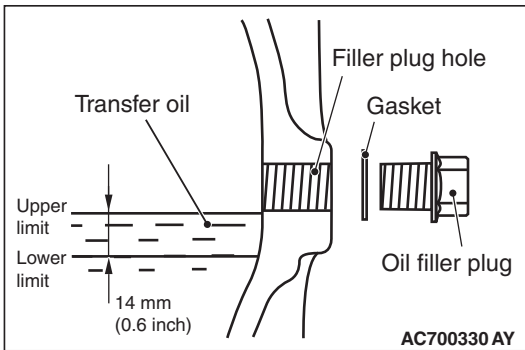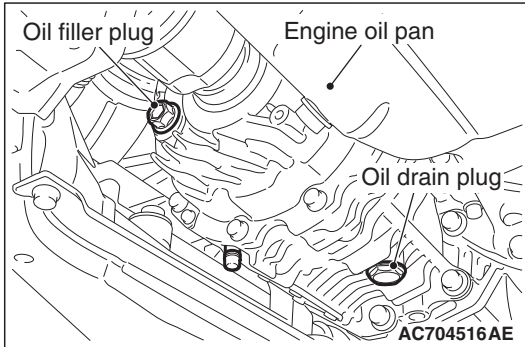

TRANSFER OIL CHECK

M1221001100410

1. Remove the engine room under cover front B assembly. (Refer to GROUP 51, Under Cover P.51-20.)
2. Remove the filler plug and gasket.
3. Check that the oil level is not 14 mm (0.6 inch) below the bottom of the oil filler plug hole.
4. Check that the oil is not excessively foul and has moderate viscosity.
5. If the oil level is not in between the upper limit and the lower limit, refill the specified oil to the bottom of the oil filler plug hole.



Brand name: DiaQueen LSD gear oil
6. Install the filler plug and new gasket, then tighten them to the specified torque.

Tightening torque: $32 \pm 2 \text{ N} \cdot \text{m}$ ($24 \pm 1 \text{ ft} \cdot \text{lb}$)
7. Install the engine room under cover front B assembly. (Refer to GROUP 51, Under Cover P.51-20.)

TRANSFER OIL CHANGE

M1221001200428

1. Remove the engine room under cover front B assembly. (Refer to GROUP 51, Under Cover P.51-20.)

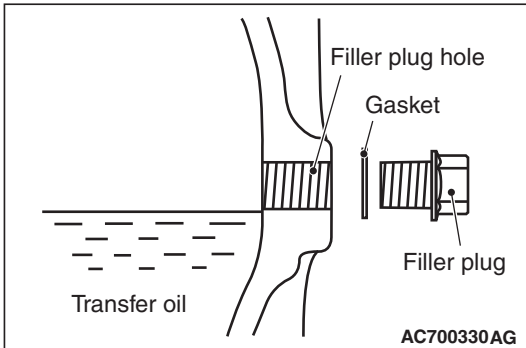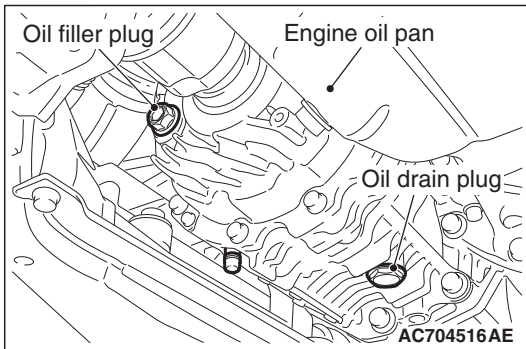

2. Remove the drain plug and gasket to drain the oil.
3. Install the drain plug and new gasket, then tighten them to the specified torque.

Tightening torque: $32 \pm 2 \text{ N} \cdot \text{m}$ ($24 \pm 1 \text{ ft-lb}$)

4. Remove the filler plug and gasket, then fill the oil up to the lower edge of the filler plug hole.

Brand name: DiaQueen LSD gear oil

Quantity: 0.8 dm^3 (0.85 quarts)

5. Install the filler plug and new gasket, then tighten them to the specified torque.

Tightening torque: $32 \pm 2 \text{ N} \cdot \text{m}$ ($24 \pm 1 \text{ ft-lb}$)


6. Install the engine room under cover front B assembly. (Refer to GROUP 51, Under Cover P.51-20.)

SHIFT LEVER OPERATION CHECK

M1225008400180

1. Check that the engine starts when the shift lever is in the N (Brake pedal is depressed) or P range, and that the engine does not start in other ranges.
2. Start the engine, and release the parking brake. Then, check that the vehicle travels forward when the shift lever is in the D range or the mode is set to the manual mode, and that the vehicle travels backward when the shift lever is set in the R range.
3. Stop the engine.
4. Turn ON the ignition switch, and move the shift lever from the P to R range. Check that the back-up light becomes on at this time.

NOTE: Because the misoperation preventive device is equipped, the shift lever cannot be moved out of the P position unless the ignition switch is turned to the position other than LOCK (OFF) and the brake pedal is depressed.

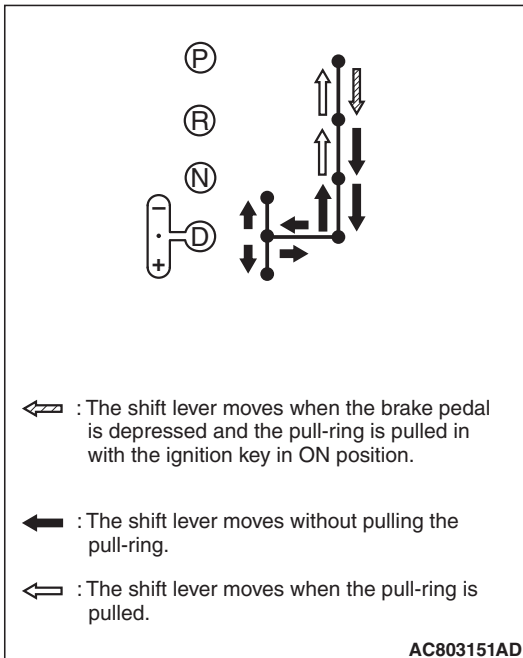

KEY INTERLOCK MECHANISM CHECK

M1225008500154

1. Perform the following checks.

Inspection procedure	Check conditions	Items to be checked (Normal status)
1	Brake pedal: Depressed	Ignition switch position: LOCK (OFF) or ACC
2		Ignition switch position: ON
3	Shift lever position: Other than P	The ignition switch cannot be turned to the LOCK (OFF) position.
4	Shift lever position: P	The ignition switch can be turned to the LOCK (OFF) position smoothly.

2. If there is a problem with above operations, install the key interlock cable according to the procedure below. (Automatic adjustment)

(1) Disconnect the key interlock cable connection (shift lever side).(Refer to P.22C-493.)

CAUTION

Leave the ignition switch in the LOCK (OFF) position until the key interlock cable installation is completed.


(2) Move the shift lever to the P position, and turn the ignition switch to the LOCK (OFF) position.

(3) Install the tip of key interlock cable to the lock cam of shift lever assembly, using a caution not to twist the inner cable.

(4) Install the adjuster case with its lock guide pulled up (unlocked).

(5) With the lock cam pin pushed in the direction B as shown in the figure to remove the slack from the key interlock cable, securely lower the lock guide and lock it.

NOTE: The lock position of the key interlock cable is automatically adjusted by a spring.

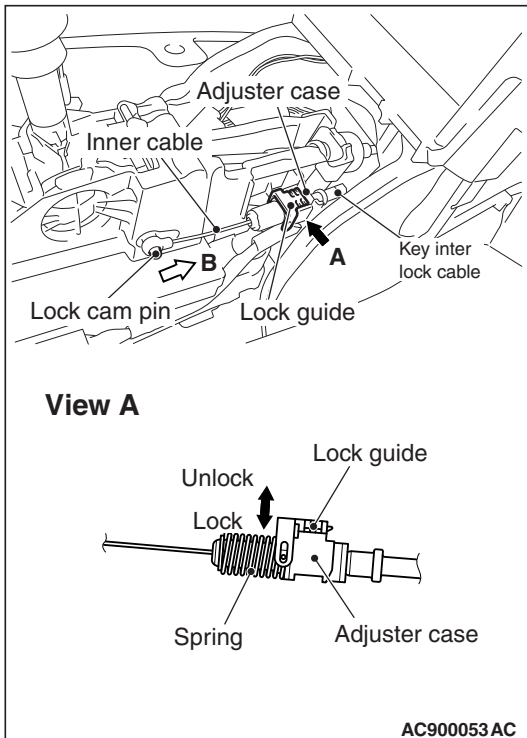

**SHIFT LOCK MECHANISM CHECK
SYSTEM CHECK**

M1225008600128

Inspection procedure	Check conditions		Items to be checked (Normal status)	Possible cause of abnormality
1	Release the brake pedal.	Ignition switch position: LOCK (OFF) or ACC	The shift lever cannot be moved out of the P position.	<ul style="list-style-type: none"> • Shift lever assembly abnormality (seizure, damage, or others) • Electrical circuit abnormality (short circuit in solenoid or wiring harness) • Key interlock mechanism abnormality
2	Depress the brake pedal.			<ul style="list-style-type: none"> • Shift lever assembly abnormality (seizure, damage, or others) • Key interlock mechanism abnormality
3	Release the brake pedal.	Ignition switch position: ON		<ul style="list-style-type: none"> • Shift lever assembly abnormality (seizure, damage, or others) • Electrical circuit abnormality (short circuit in solenoid or wiring harness)
4	Depress the brake pedal.			<ul style="list-style-type: none"> • Shift lever assembly abnormality (seizure, damage, or others) • Electrical circuit abnormality (open circuit in solenoid or wiring harness)
			The shift lever can be moved from the P position to other positions smoothly.	

COMPONENTS CHECK

1. Troubleshoot the shift lever.
2. Remove the shift lever assembly. Then, check that there is no damage to each part, and that the shift lever can be moved to each position.(Refer to P.22C-488.)
3. After performing the check above, if an abnormality is found, replace the shift lever assembly.


ACD CONTROL FLUID CHECK

M1225008700136

<WHEN THE SCAN TOOL IS NOT USED>

1. Remove the cargo floor box lid and quarter trim plug on the right of the luggage room.
2. If the vehicle has been run, leave it for 90 min. or more in an ordinary temperature {10 –30° C (50 –86° F)} to allow the accumulator internal pressure to drop.

NOTE: If the ambient temperature is 10° C (50° F) or less, allow more time to leave the vehicle to stand idle.

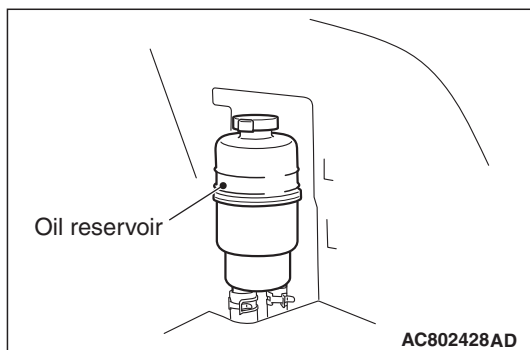

3. Check that the oil reservoir fluid level is in between MAX and MIN.
4. If the fluid level is not in between MAX and MIN, fill the specified fluid.

Brand name: DIAMOND ATF SP III

5. Install the quarter trim plug and cargo floor box lid.

<WHEN THE SCAN TOOL IS USED>

1. Remove the cargo floor box lid and quarter trim plug on the right of the luggage room.

CAUTION

Turn the ignition switch to the "LOCK (OFF)" position before connecting or disconnecting the scan tool.

2. Set the scan tool to the 16-pin data link connector. (Refer to [P.22C-394.](#))
3. Turn the ignition switch to the ON position.

4. Using the scan tool, forcibly activate the hydraulic unit (item No. 03) to reduce the pressure inside the accumulator.

NOTE:


- *With the forced activation (oil level check mode), the hydraulic unit direction valve is operated 20 seconds to right and left, and then the operation is cancelled automatically. Also, using the clear key on the scan tool, the activation can be forcibly cancelled.*
- *When the functions are suspended by the fail-safe function, the hydraulic unit cannot be forcibly activated.*

5. Check that the oil reservoir fluid level is in between MAX and MIN.

6. If the fluid level is not in between MAX and MIN, fill the specified fluid.

Brand name: DIAMOND ATF SP III

7. Install the quarter trim plug and cargo floor box lid.

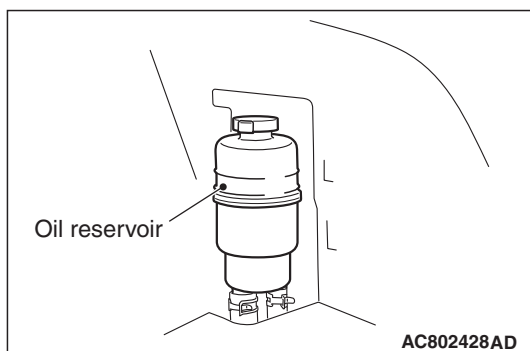


ACD BLEEDING

M1225008800092

CAUTION

At low temperature the fluid viscosity is so high that air bleeding becomes degenerated. Air bleeding should be done at normal temperatures {10 to 30° C (50 to 86° F)}.

1. Raise the vehicle.
2. Remove the engine room under cover front B assembly. (Refer to GROUP 51 –Under Cover [P.51-20.](#))

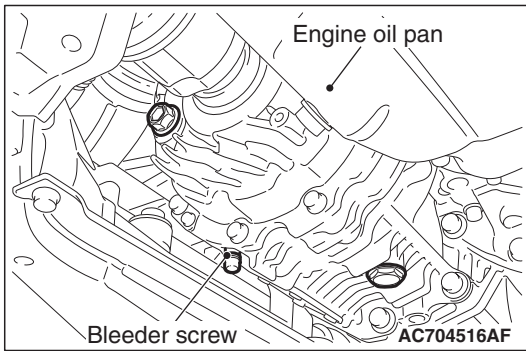

- Remove the bleeder screw cap of the transfer, then connect the vinyl hose.

CAUTION

Before connecting or disconnecting scan tool, always turn the ignition switch to the LOCK (OFF) position.

- Connect scan tool to the data link connector. (Refer to P.22C-394.)
- Position the steering wheel in a straight ahead direction.
- Turn the ignition switch to the "ON" position.
- Perform the actuator test (item No.01) of scan tool to forcibly activate the hydraulic unit.


NOTE:

- The forced activation (item No.01: Air bleeding mode) is continued for 5 minutes, then it will be cancelled automatically. Also, using the clear key on the scan tool, the activation can be forcibly cancelled.
- When the hydraulic unit functions are stopped due to the fail-safe, the forced activation cannot be performed.

- From the straight-ahead position, gradually rotate the steering wheel to the right or left. Loosen the bleeder screw, and check that the air is bled with fluid.

CAUTION

- Keep the fluid level above the oil filter while air-bleeding. If you fail to do so, an "air layer" will be present below the oil filter. This can cause the fluid not to be added below the oil filter.
- If the fluid level should have decreased below the oil filter, squeeze and release the feed hose so that the fluid should be added below the oil filter.

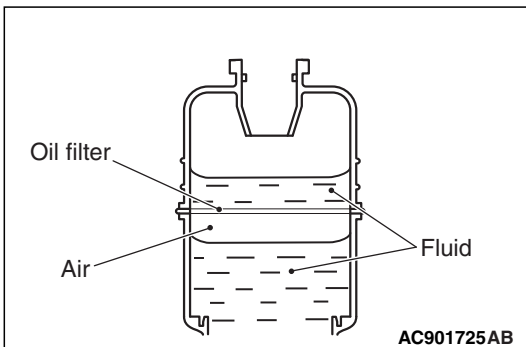

- After bleeding the air, tighten the bleeder screw.
- Repeat Steps 7 and 8 for two to three times. After checking that air mixing is eliminated, tighten the bleeder screw to the specified torque.

Tightening torque: 5.0 ± 1.0 N·m (44 ± 9 in-lb)

CAUTION

If the air bleeding is insufficient, the noise from the hydraulic unit occurs, which may deteriorate the pump durability.

- After the air bleeding is complete, check the fluid level. (Refer to P.22C-483).
- Install the engine room under cover front B assembly. (Refer to GROUP 51 –Under Cover P.51-20.)

ACD OPERATION CHECK

M1225008900107

CAUTION

Before connecting or disconnecting scan tool, always turn the ignition switch to the LOCK (OFF) position.

- Connect scan tool to the data link connector. (Refer to P.22C-394.)

2. Start the engine.
3. Position the steering wheel in a straight ahead direction.
4. Drive the vehicle at 20 km/h (12.4 mph) or less, carry out the scan tool actuator test (item No.05), and forcibly activate the ACD. Then, turn the steering wheel 180° or more to the right or left, and check that tight corner braking occurs.

NOTE:

- The forced activation (item No.05: ACD operation check mode) is continued for 1 minute, then it will be cancelled automatically. Also, using the clear key on the scan tool, the activation can be forcibly cancelled.
- When the ACD functions are stopped due to the fail-safe, the forced activation cannot be performed.
- The occurrence levels of body vibration and noise caused by the tight corner braking phenomenon will differ depending on the conditions of tire and road surface.
- If the tight corner braking phenomenon does not occur, the system may have an abnormality. Therefore, check the hydraulic pressure.

HYDRAULIC PRESSURE CHECK

M1225009000118

1. Remove the rear wheel (RH), then remove the rear wheel splash shield. (Refer to GROUP 42A –Splash shield P.42A-13).
2. Raise the vehicle.
3. Disconnect the hydraulic unit from the ACD pressure tube assembly. Then, connect the special tool below to the hydraulic unit side.
 - Hose adapter (MB991705)
 - Oil pressure gauge (MD998330)
4. Bleed the system. (Refer to P.22C-484.)


CAUTION

Before connecting or disconnecting scan tool, always turn the ignition switch to the LOCK (OFF) position.

5. Connect scan tool to the data link connector. (Refer to P.22C-394.)
6. Turn the ignition switch to the "ON" position.
7. Perform the actuator test (item No.05) of scan tool to forcibly activate ACD.

NOTE:

- The forced activation (item No.05: ACD operation check mode) is continued for 1 minute, then it will be cancelled automatically. Also, using the clear key on the scan tool, the activation can be forcibly cancelled.
- When the ACD functions are stopped due to the fail-safe, the forced activation cannot be performed.

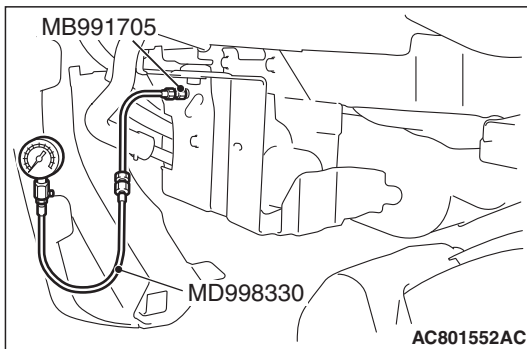

⚠ CAUTION

During the hydraulic pressure check, fill the fluid so that the fluid constantly remains in the oil reservoir.

8. Check that the generated hydraulic pressure of the hydraulic unit is within the standard value.

Standard valve: 0.9 –1.1 MPa (130 –159 psi)

9. If the measured value exceeds the standard value, replace the hydraulic unit.


10. After applying oil to the flare nut thread of ACD pressure tube assembly, connect the assembly to the hydraulic unit, then tighten to the specified torque.

Tightening torque: 26 ± 4 N· m (19 ± 3 ft-lb)

11. Perform the air bleeding. (Refer to [P.22C-484](#)).

TWIN CLUTCH SST CONTROL MODE SWITCH REMOVAL AND INSTALLATION

M1225009200112

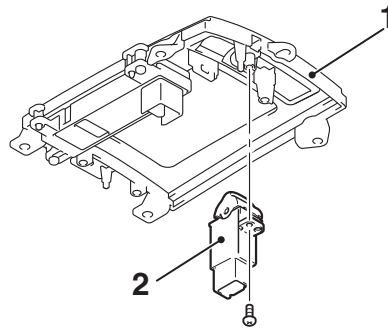

AC710482AB

Removal steps


1. Floor console panel assembly
(Refer to GROUP 52A –Floor Console Assembly [P.52A-9](#).)
2. Twin clutch SST control mode switch

INSPECTION

TWIN CLUTCH SST CONTROL MODE SWITCH
CHECK

M1225009100104

1. Check the continuity between the connector terminals of twin clutch SST control mode switch.

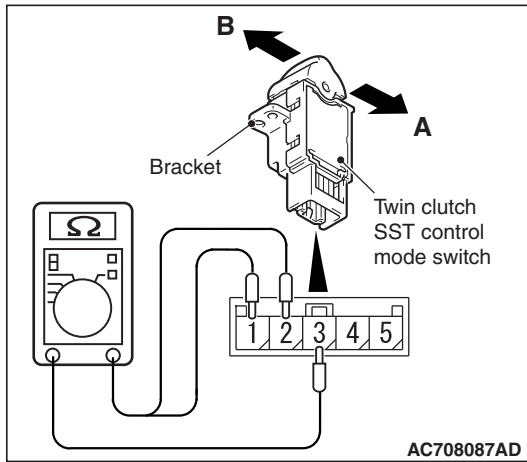

Terminal number	Switch position	Continuity
2 -3	Operate to direction A, then hold.	Yes (2 Ω or less)
	Other than above	Not present
1 -3	Operate to direction B, then hold.	Yes (2 Ω or less)
	Other than above	Not present

2. When other than above, replace the twin clutch SST control mode switch.

TRANSMISSION CONTROL

REMOVAL AND INSTALLATION

M1225009600228


CAUTION

When the transaxle control cable is disconnected, check after the installation that the cable is properly connected, and that the parking lock mechanism operates normally. At this time, do not check by simply using the display on the combination meter and shift indicator panel. Always check according to the procedure below.

- With the P range, the vehicle does not move on a slight slope or when pushed by hands.
- When driving at 5 km/h (3.1 mph) or less, the vehicle stops when the shift lever is moved to the P range.

Post-installation Operation

- Key interlock mechanism check (Refer to [P.22C-482.](#))
- Shift lock mechanism check (Refer to [P.22C-483.](#))
- Shift lever operation check (Refer to [P.22C-481.](#))

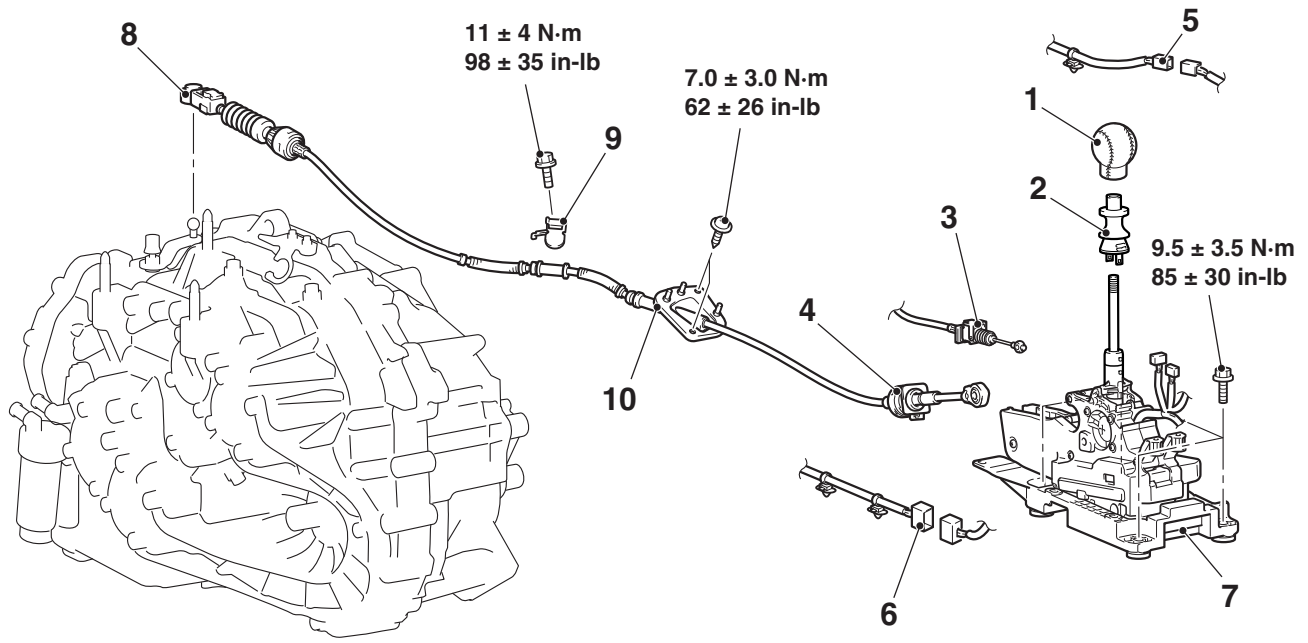

AC902576AB

**Shift lever assembly
removal steps**

1. Shift knob
 - Floor console bracket (A)
(Refer to GROUP 52A –Floor Console Assembly P.52A-9.)
2. Pull ring
3. Key interlock cable connection (shift lever side)
4. Transaxle control cable connection (shift lever side)
5. Shift lever-ECU connector connection
6. Shift lock solenoid connector connection
7. Shift lever assembly

**Transaxle control cable
removal steps**

1. Shift knob
 - SRS-ECU (Refer to GROUP 52B –SRS-ECU P.52B-411.)

**Transaxle control cable
removal steps (Continued)**

- G and yaw rate sensor and G and yaw rate sensor bracket (Refer to GROUP 35C –G and Yaw Rate Sensor P.35C-320.)
4. Transaxle control cable connection (shift lever side)
 - Air cleaner assembly (Refer to GROUP 15 –Air Cleaner P.15-9.)
 - Battery (Refer to GROUP 54A –Battery P.54A-10.)
 8. Transaxle control cable connection (transaxle side)
 9. Transaxle control cable bracket
 10. Transaxle control cable

<<A>>

>>C<<


>>B<<

>>A<<


>>A<<

REMOVAL SERVICE POINT**<<A>> PULL RING REMOVAL**



1. Pull the pull ring upward as shown in the figure. (Carry out the following operation with the pull ring pulled upward.)

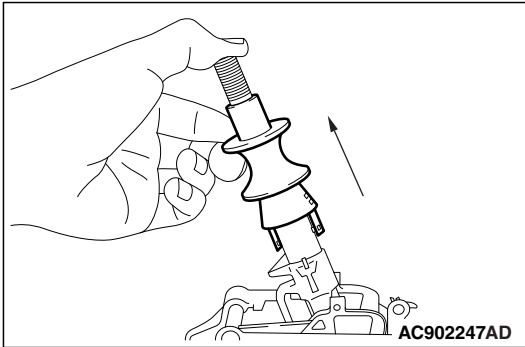

2. Raise the claw using a precision screwdriver.

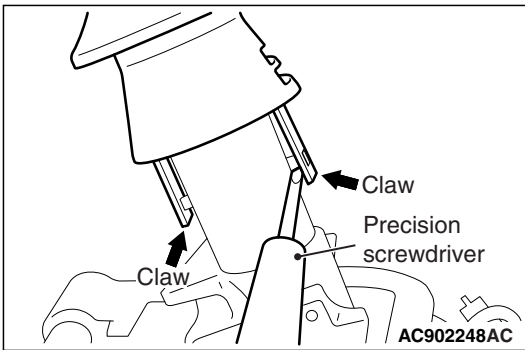




3. Remove the pull ring by turning it clockwise, and pull it out upward.

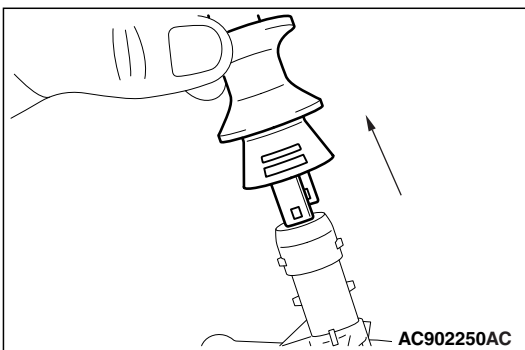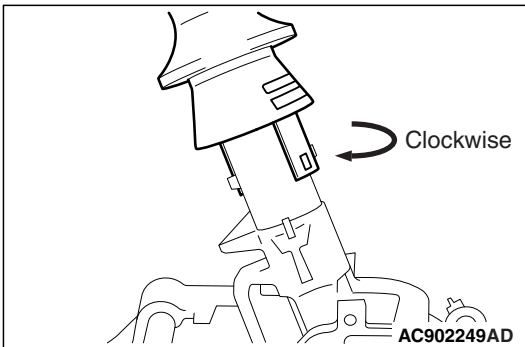

INSTALLATION SERVICE POINTS

>>A<< TRANSAXLE CONTROL CABLE (TRAN- SAXLE SIDE/SHIFT LEVER SIDE) INSTALLATION

1. Connect the transaxle control cable (shift lever side) to the shift lever assembly.
2. Operate the lever so that the shift control lever positioning mark is set to the N position.

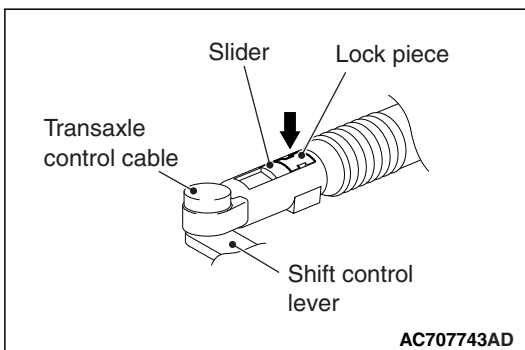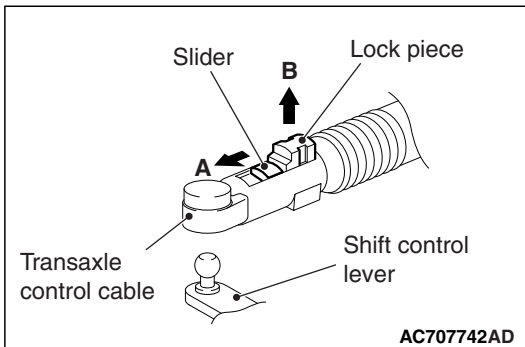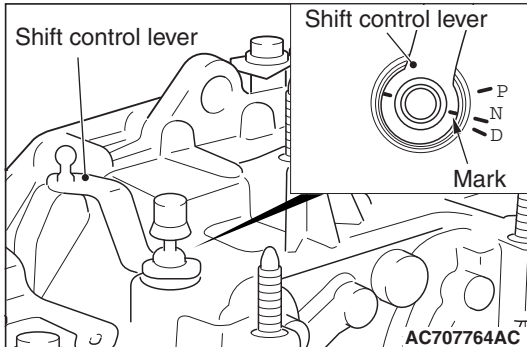

3. Move the slider of the transaxle control cable (transaxle side) tip to the direction A to pull up the lock piece to the direction B.
4. Install the transaxle control cable (transaxle side) in the transaxle control cable bracket at the top of transaxle.
5. Move the shift lever to the N⇔D position three times or more, and shift to the N position.
6. Connect the transaxle control cable to the shift control lever, and firmly push down the lock piece of transaxle control cable to lock it.

NOTE:

- The slider automatically returns to the fixed position by the spring.
- The lock position of transaxle control cable is automatically adjusted by a spring.


>>B<< KEY INTERLOCK CABLE INSTALLATION

⚠ CAUTION

Leave the ignition switch in the LOCK (OFF) position until the key interlock cable installation is completed.


1. Move the shift lever to the P position, and turn the ignition switch to the LOCK (OFF) position.
2. Install the tip of key interlock cable to the lock cam pin of shift lever assembly, using a caution not to twist the inner cable.
3. Install the adjuster case with its lock guide pulled up (unlocked).
4. With the lock cam pin pushed in the direction B as shown in the figure to remove the slack from the key interlock cable, securely lower the lock guide and lock it.

NOTE: The lock position of the key interlock cable is automatically adjusted by a spring.

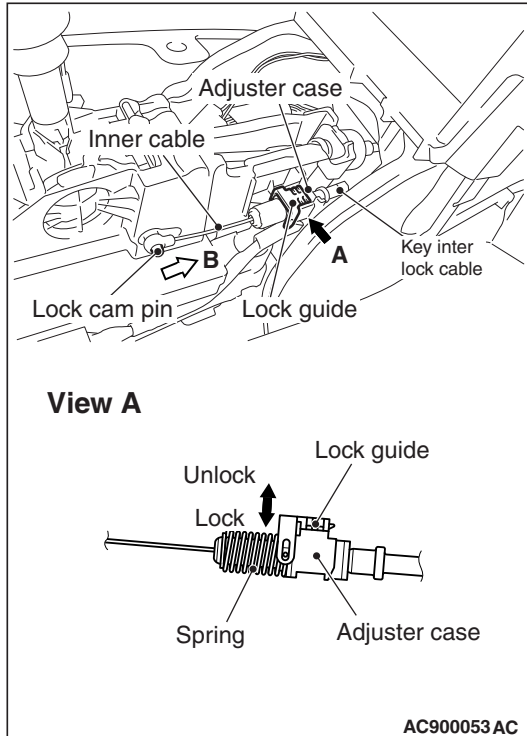

>>C<< PULL RING INSTALLATION

1. With the A in the figure raised, install the pull ring by turning it counterclockwise.

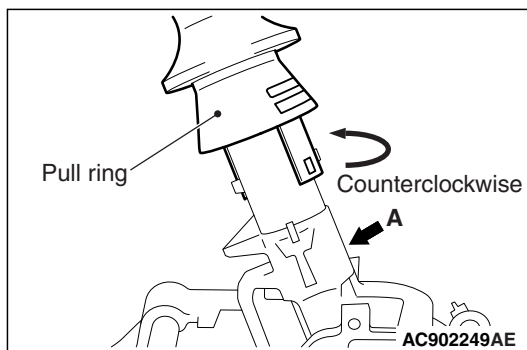

KEY INTERLOCK AND SHIFT LOCK MECHANISMS

REMOVAL AND INSTALLATION


M1225009800192

Pre-removal Operation

- Floor console bracket (A) and floor console side cover removal (Refer to GROUP 52A –Floor Console Assembly P.52A-9.)
- Instrument panel cover lower removal <Vehicles with instrument panel cover lower> (Refer to GROUP 52A – Instrument Lower Panel P.52A-8.)
- Steering column lower cover removal (Refer to GROUP 37 –Steering Column Shaft P.37-36.)
- Foot duct (driver's side) removal (Refer to GROUP 55 – Duct P.55-150.)

Post-installation Operation

- Foot duct (driver's side) installation (Refer to GROUP 55 – Duct P.55-150.)
- Steering column lower cover installation (Refer to GROUP 37 –Steering Column Shaft P.37-36.)
- Instrument panel cover lower installation <Vehicles with instrument panel cover lower> (Refer to GROUP 52A – Instrument Lower Panel P.52A-8.)
- Floor console bracket (A) and floor console side cover installation (Refer to GROUP 52A –Floor Console Assembly P.52A-9.)
- Key interlock mechanism check (Refer to P.22C-482.)
- Shift lock mechanism check (Refer to P.22C-483.)
- Shift lever operation check (Refer to P.22C-481.)

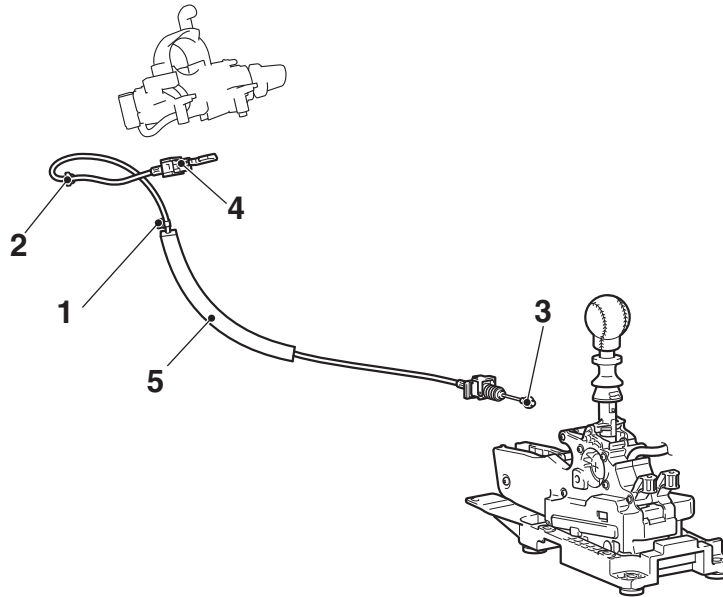

AC709660AB

Removal steps

1. Band clip
2. Wiring harness clip
3. Key interlock cable connection (shift lever side)

>>B<<

<<A>>

>>A<<

Removal steps

4. Key interlock cable connection (steering side)
5. Key interlock cable

REMOVAL SERVICE POINT**<<A>> KEY INTERLOCK CABLE (STEERING SIDE) REMOVAL**

Turn the ignition switch to the ACC position and then pull the key interlock cable out from the ignition key cylinder.

INSTALLATION SERVICE POINTS**>>A<< KEY INTERLOCK CABLE (STEERING SIDE) INSTALLATION**


Turn the ignition switch to the ACC position and then install the key interlock cable to the ignition key cylinder.

>>B<< KEY INTERLOCK CABLE (SHIFT LEVER SIDE) INSTALLATION**⚠ CAUTION**

Leave the ignition switch in the LOCK (OFF) position until the key interlock cable installation is completed.

1. Move the shift lever to the P position, and turn the ignition switch to the LOCK (OFF) position.
2. Install the tip of key interlock cable to the lock cam pin of shift lever assembly, using a caution not to twist the inner cable.
3. Install the adjuster case with its lock guide pulled up (unlocked).
4. With the lock cam pin pushed in the direction B as shown in the figure to remove the slack from the key interlock cable, securely lower the lock guide and lock it.

NOTE: The lock position of the key interlock cable is automatically adjusted by a spring.

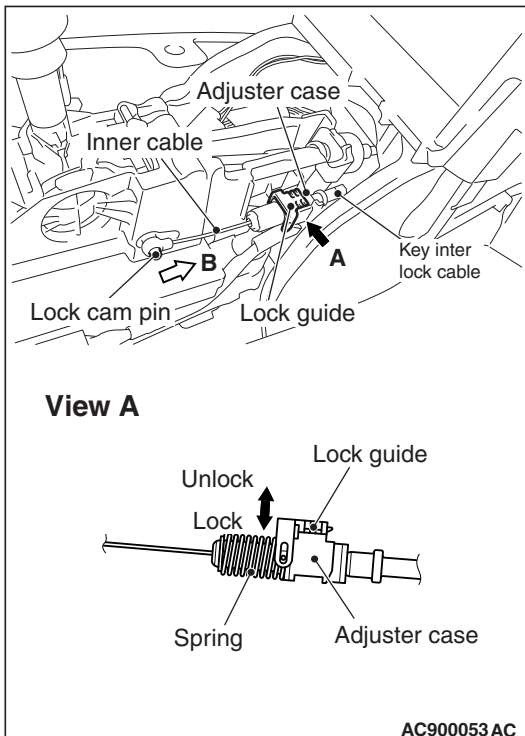


TRANSFER ASSEMBLY

REMOVAL AND INSTALLATION

M1225010000275

<p>Pre-removal Operation</p> <ul style="list-style-type: none"> • Engine Room Under Cover Front B Assembly Removal (Refer to GROUP 51 –Under Cover P.51-20.) • Transfer Oil Draining (Refer to P.22C-480.) 	<p>Post-installation Operation</p> <ul style="list-style-type: none"> • ACD Bleeding (Refer to P.22C-484.) • Transfer Oil Filling (Refer to P.22C-480.) • Engine Room Under Cover Front B Assembly Installation (Refer to GROUP 51 –Under Cover P.51-20.)
---	---

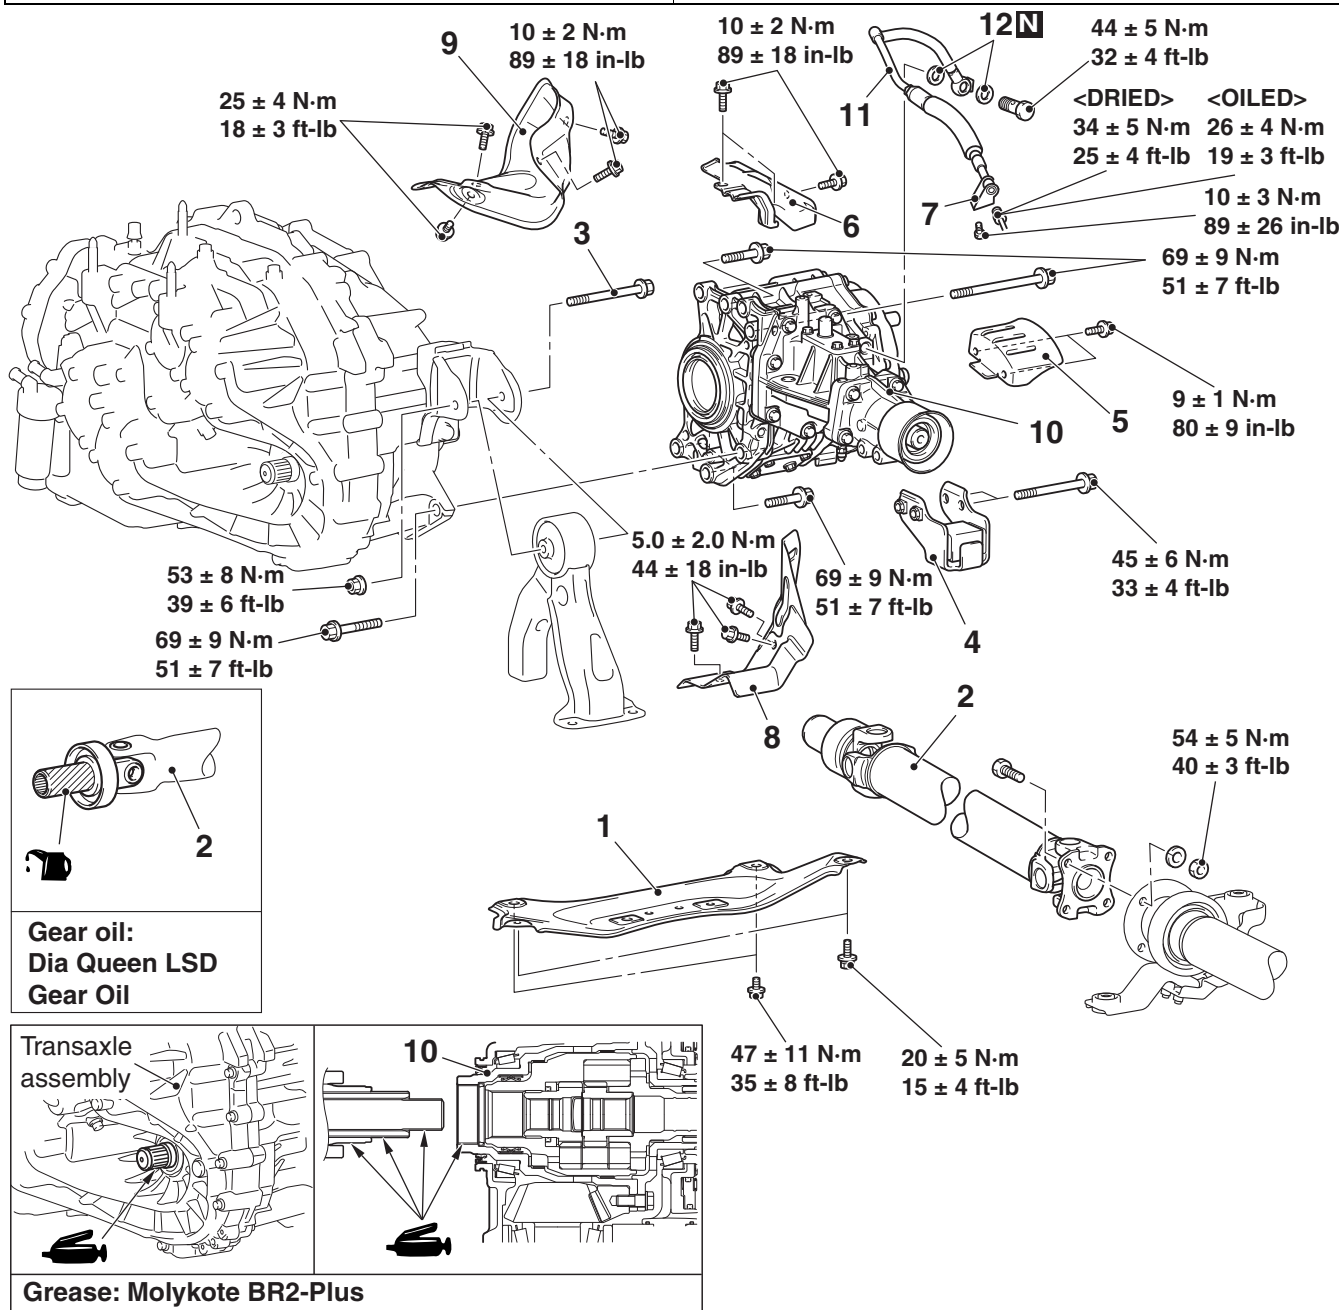

AC901707AC

<<A>>

- Removal steps**
1. Front floor backbone brace
 2. Front propeller shaft assembly


- Removal steps**
- Front driveshaft assembly (Refer to GROUP 26 – Driveshaft Assembly P.26-21.)

Removal steps

- Center member and front roll stopper assembly (Refer to GROUP 32 –Engine Roll Stopper and Center Member P.32-11.)
- Front exhaust pipe removal (Refer to GROUP 15 – Exhaust Pipe and Main Muffler P.15-31.)
- 3. Rear roll stopper center bolt
- 4. Dynamic damper
- 5. Driveshaft heat protector
- 6. Transfer heat protector
- 7. Transfer pressure hose assembly connection
- 8. Steering gear and linkage heat protector
- 9. Turbocharger protector A
- 10. Transfer assembly
- 11. Transfer pressure hose assembly
- 12. Gasket

<>

>>A<<

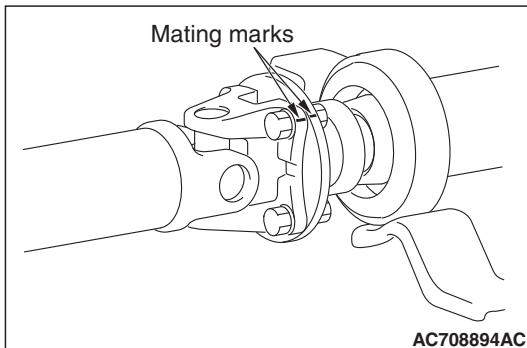**REMOVAL SERVICE POINTS****<<A>> FRONT PROPELLER SHAFT ASSEMBLY
REMOVAL**

Make mating marks on the front propeller shaft assembly and companion flange, then remove the connecting nut.

<> TRANSFER ASSEMBLY REMOVAL

Move the engine and transaxle assembly toward the front of the vehicle to create a gap between the engine/transaxle assembly and the crossmember. Pull out the transfer assembly through this gap.

INSTALLATION SERVICE POINT**>>A<< TRANSFER PRESSURE HOSE ASSEMBLY
INSTALLATION****⚠ CAUTION**

When installing the transfer pressure hose assembly, use caution that the assembly does not interfere with surrounding components.

TRANSAXLE ASSEMBLY

REMOVAL AND INSTALLATION

M1225010200280

CAUTION

- When the transaxle assembly is replaced, save the vehicle identification number and perform the variant coding. Refer to the "M.U.T.-III Owner's Manual" and perform coding.
- When the mechatronic assembly is replaced, reprogram the ECU and carry out the following Teach-In (Refer to [P.22C-8](#)).
- When the clutch assembly is replaced, the following Teach-In must be carried out (Refer to [P.22C-8](#)).
- When the transaxle control cable is disconnected, check after the installation that the cable is properly connected, and that the parking lock mechanism operates normally. At this time, do not check by simply using the display on the combination meter and shift indicator panel. Always check according to the procedure below.
 - When driving at 5 km/h (3.1 mph) or less, the vehicle stops when the shift lever is moved to the P range.
 - With the P range, the vehicle does not move on a slight slope or when pushed by hands.
- Drain the fluid remaining in the oil cooler before installing the transaxle assembly.
- Do not refill the fluid when replacing the transaxle assembly with a new one.

NOTE:


- The new transaxle assembly is filled with 7.6 dm³ (8.0 qt) of the fluid (including the oil cooler).
- The transaxle assembly has a sealed structure, and the fluid does not drain out from parts other than the oil cooler hose.

Pre-removal Operation

- Engine Room Under Cover Front B and Engine Room Side Cover Removal (Refer to GROUP 51 –Under Cover P.51-20.)
- Engine Upper Cover Removal (Refer to GROUP 16 –Ignition Coil P.16-50.)
- Air Cleaner Assembly and Air Cleaner Bracket Removal (Refer to GROUP 15 –Air Cleaner P.15-9.)
- Headlight Support Panel Cover Removal (Refer to GROUP 51 –Front Bumper Assembly and Radiator Grille P.51-5.)
- Battery Removal (Refer to GROUP 54A –Battery P.54A-10.)
- Radiator Cap Assembly Mounting Bolt, Radiator Condenser Tank, and Radiator Condenser Tank Bracket Removal (Refer to GROUP 14 –Radiator P.14-50.)
- Relay Box Mounting Bolt Removal
- Water Pump Pulley Removal (Refer to GROUP 14 –Water Pump P.14-39.)

Post-installation Operation

- Water Pump Pulley Installation (Refer to GROUP 14 –Water Pump P.14-39.)
- Relay Box Mounting Bolt Installation
- Radiator Cap Assembly Mounting Bolt, Radiator Condenser Tank, and Radiator Condenser Tank Bracket Installation (Refer to GROUP 14 –Radiator P.14-50.)
- Battery Installation (Refer to GROUP 54A –Battery P.54A-10.)
- Headlight Support Panel Cover Installation (Refer to GROUP 51 –Front Bumper Assembly and Radiator Grille P.51-5.)
- Air Cleaner Assembly and Air Cleaner Bracket Installation (Refer to GROUP 15 –Air Cleaner P.15-9.)
- Engine Upper Cover Installation (Refer to GROUP 16 –Ignition Coil P.16-50.)
- Engine Room Under Cover Front B and Engine Room Side Cover Installation (Refer to GROUP 51 –Under Cover P.51-20.)

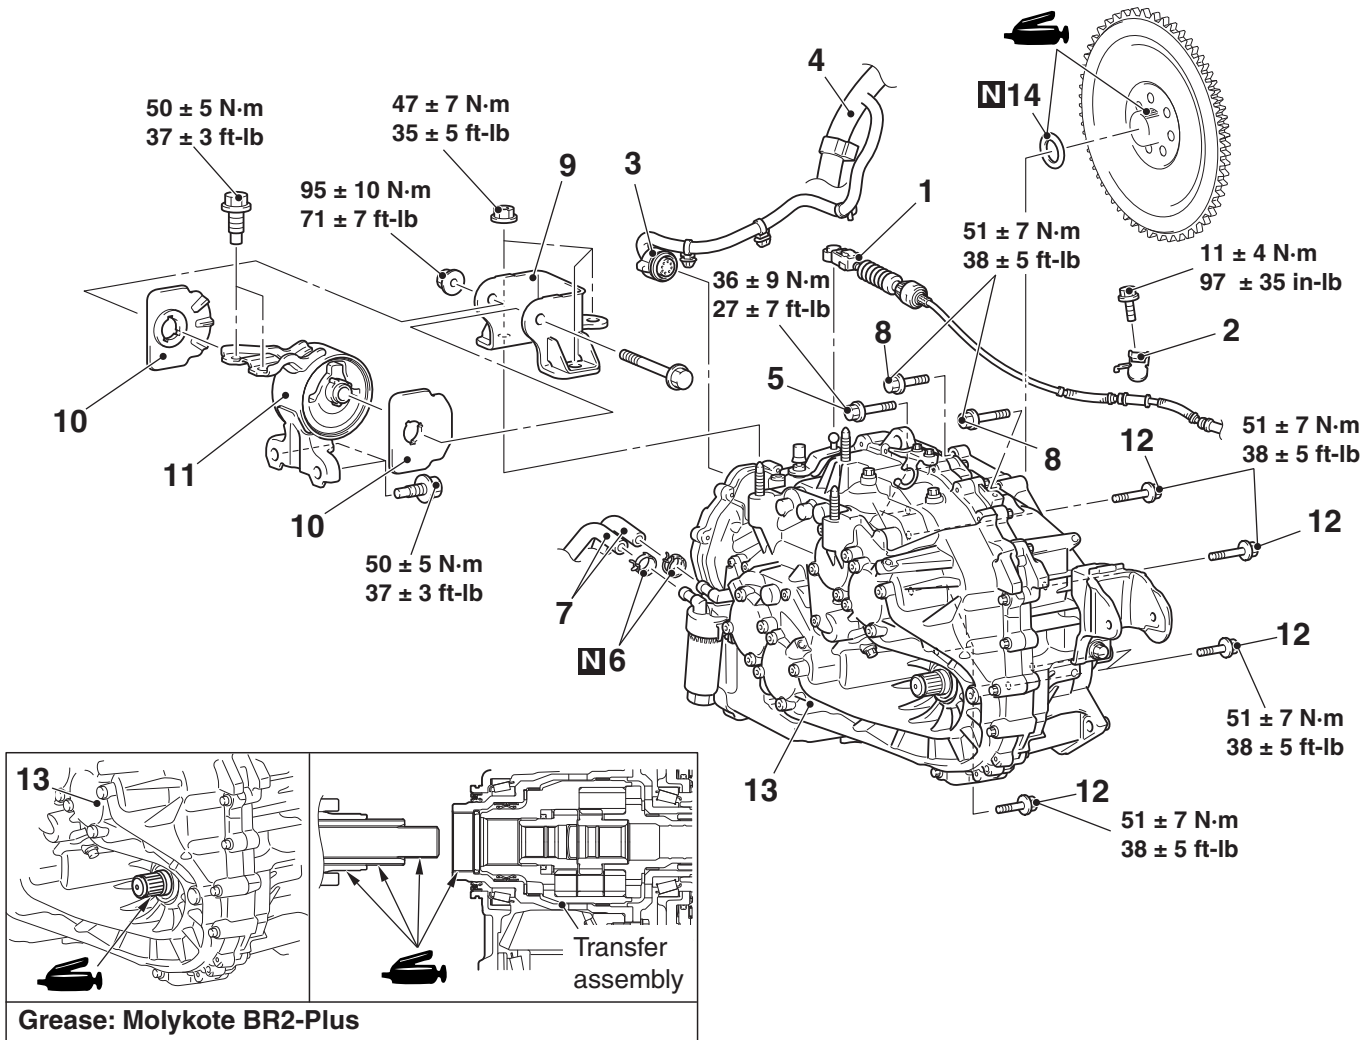

AC901629AC

	Removal steps		Removal steps
>>D<<	<ul style="list-style-type: none"> • Transmission fluid draining and refilling (Refer to P.22C-479.) 		<ul style="list-style-type: none"> • Front axle crossmember assembly (Refer to GROUP 32 –Crossmember P.32-15.)
<<A>>	<ul style="list-style-type: none"> • Strut tower bar (Refer to GROUP 42A –Strut Tower Bar P.42A-15.) 	<<D>>	<ul style="list-style-type: none"> • Transfer assembly (Refer to P.22C-495.)
>>C<<	<ol style="list-style-type: none"> 1. Transaxle control cable connection 	<<E>>	<ol style="list-style-type: none"> 8. Transaxle assembly upper part coupling bolt
<>	<ol style="list-style-type: none"> 2. Transaxle control cable bracket 	>>B<<	<ol style="list-style-type: none"> 9. Transaxle mounting bracket 10. Transaxle mounting insulator stopper
<<C>>	<ol style="list-style-type: none"> 3. Transaxle assembly connector connection 	<<F>>	<ol style="list-style-type: none"> 11. Transaxle mounting insulator
	<ol style="list-style-type: none"> 4. Control wiring harness connection 	>>A<<	<ul style="list-style-type: none"> • Engine assembly support
	<ol style="list-style-type: none"> 5. Starter mounting bolt 	>>A<<	<ol style="list-style-type: none"> 12. Transaxle assembly lower part coupling bolt
	<ol style="list-style-type: none"> 6. Hose clip 		<ol style="list-style-type: none"> 13. Transaxle assembly
	<ol style="list-style-type: none"> 7. Oil cooler hose assembly connection 		<ol style="list-style-type: none"> 14. O-ring

Required Special Tools:

- MB991895: Engine Hanger
- MB991928: Engine Hanger
- MB991930: Joint (90)
- MB991932: Foot (standard)
- MB992201: Engine hanger plate


REMOVAL SERVICE POINTS

<<A>> STRUT TOWER BAR REMOVAL

After removing the strut tower bar, temporarily install the strut assembly.

<> TRANSAXLE ASSEMBLY CONNECTOR REMOVAL

Rotate the section A of the connector 90° to the direction of the arrow to disconnect the connector.

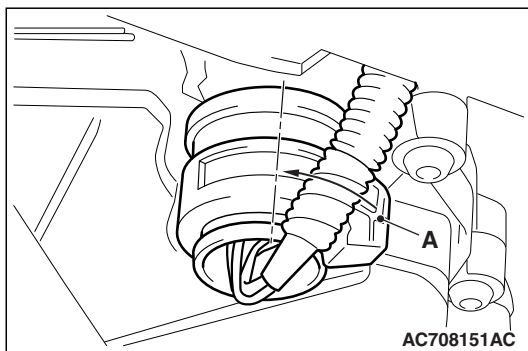

<<C>> STARTER MOUNTING BOLT REMOVAL

Remove the starter with its connector connected. Keep the starter fixed to the engine side.

**<<D>> TRANSAXLE ASSEMBLY UPPER PART
COUPLING BOLT REMOVAL**

Only loosen the bolts from the engine and transaxle assembly (do not remove).

**<<E>> TRANSAXLE MOUNTING BRACKET
REMOVAL**

1. Place a garage jack against the transaxle case with a piece of wood in between to support the engine and transaxle assembly.
2. Operate the garage jack so that the engine and transaxle assembly weight is not applied to the transaxle mounting insulator, and remove the transaxle mounting bracket.

<<F>> ENGINE ASSEMBLY SUPPORTING

1. Remove the vacuum pipe assembly (refer to GROUP 14 – Water Hose and Water Pipe P.14-41), and install the engine hanger plate (Special tool: MB992201), then tighten the bolts to the specified torque.




Tightening torque: 11 ± 1 N·m (97 ± 9 in-lb)

2. <When engine hanger (special tool MB991928) is used>
 - (1) Assemble the engine hanger (special tool MB991928).
(Set following parts to the base hanger.)

- Slide bracket (HI)
- Foot x 4 (standard) (MB991932)
- Joint x 2 (90) (MB991930)

- (2) Set the feet of the special tool as shown in the figure.



NOTE: Adjust the engine hanger balance by sliding the slide bracket (HI).

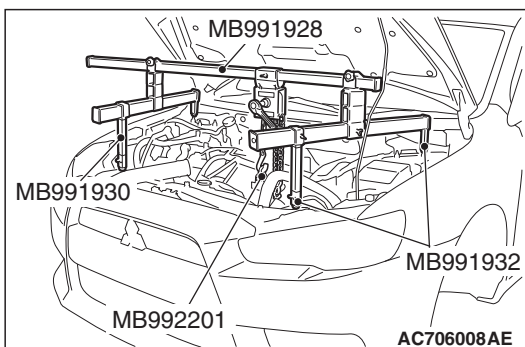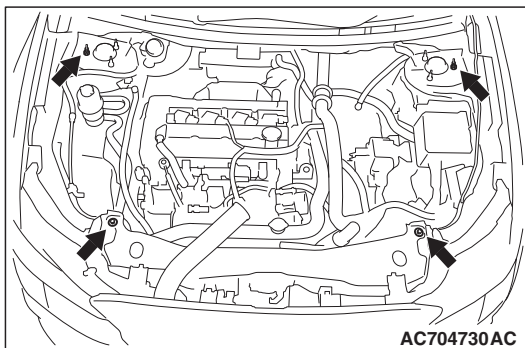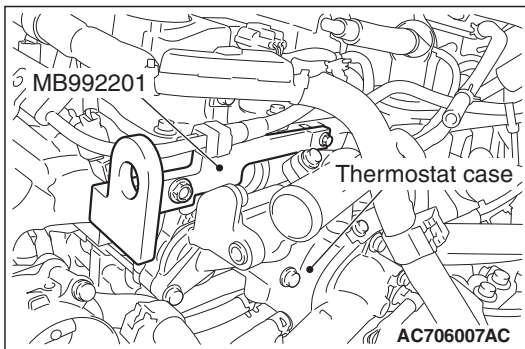

- (3) Set the chain to the engine hanger plate (Special tool: MB992201) to support the engine and transaxle assembly. Remove the garage jack, and then remove the transaxle assembly upper part coupling bolts that have been loosened previously.

3. <Engine mechanical hanger (special tool MB991895) is used>
(1) Set the feet of the engine mechanical hanger (special tool MB991895) as shown in the figure.

NOTE: Slide the front foot of the engine mechanical hanger (Special tool: MB991895) to balance the engine hanger.

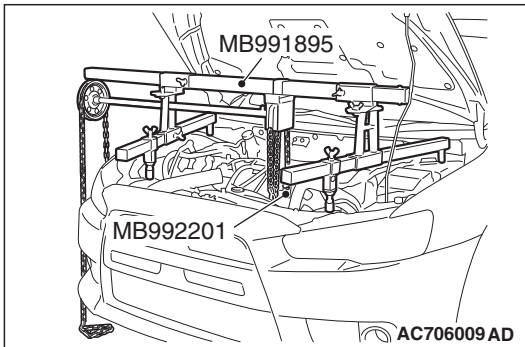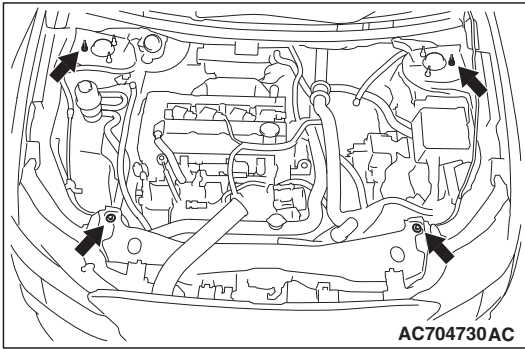

- (2) Set the chain to the engine hanger plate (Special tool: MB992201) to support the engine and transaxle assembly. Remove the garage jack, and then remove the transaxle assembly upper part coupling bolts that have been loosened previously.


INSTALLATION SERVICE POINTS

>>A<< O-RING/TRANSAXLE ASSEMBLY INSTALLATION

Apply the specified grease to the flywheel spline section, O-ring, and spline section of transaxle assembly input shaft.


Grease


Brand name: Molykote BR2-Plus

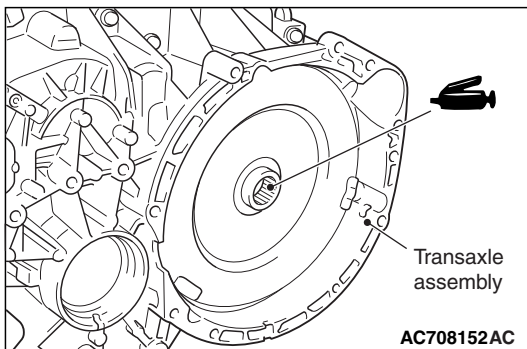


>>B<< TRANSAXLE MOUNTING INSULATOR STOPPER INSTALLATION

Install the transaxle mounting insulator stopper as shown in the figure.

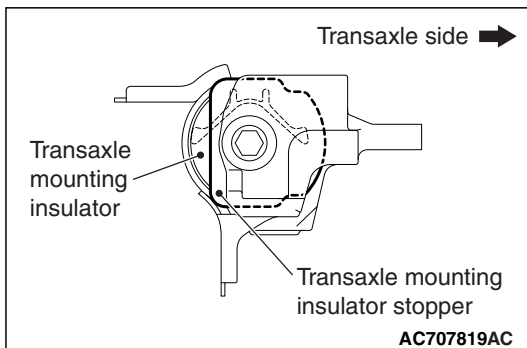


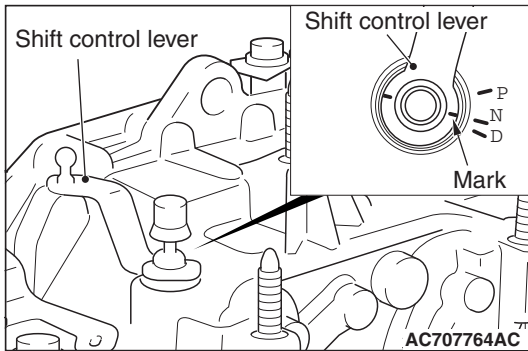**>>C<< TRANSAXLE CONTROL CABLE
INSTALLATION**

1. Operate the lever so that the shift control lever positioning mark is set to the N position.

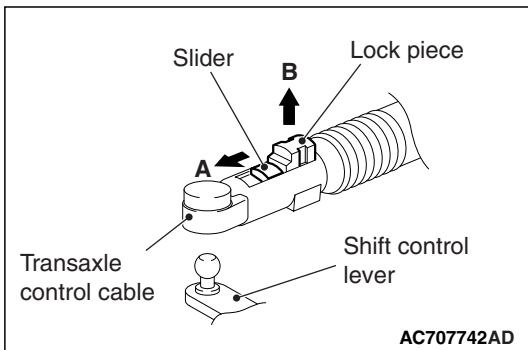

2. Move the slider of the transaxle control cable (transaxle side) tip to the direction A to pull up the lock piece to the direction B.
3. Install the transaxle control cable (transaxle side) in the transaxle control cable bracket at the top of transaxle.
4. Move the shift lever to the N⇌D position three times or more, and shift to the N position.

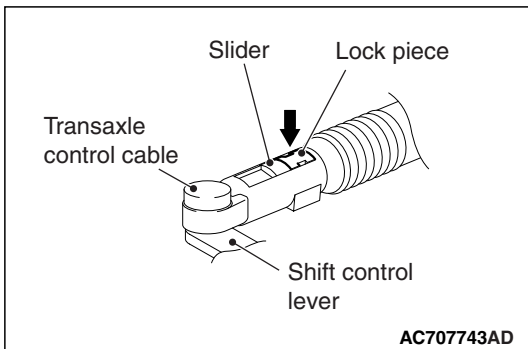

5. Connect the transaxle control cable to the shift control lever, and firmly push down the lock piece of transaxle control cable to lock it.

NOTE:

- The slider automatically returns to the fixed position by the spring.
- The lock position of transaxle control cable is automatically adjusted by a spring.

>>D<< TRANSMISSION FLUID REFILLING**⚠ CAUTION**

Refill 6.1 dm³ (6.4 qt) of the transmission fluid.

NOTE: The fluid capacity of the oil cooler assembly and the oil cooler hose is 0.6 dm³ (0.6 qt).

⚠ CAUTION

- If the transaxle assembly is repaired, fill new fluid and check the transmission fluid level. (Refer to P.22C-478.)
- When the transaxle assembly is not repaired, the drained fluid can be reused if it is between the replacement intervals.

OIL PAN


REMOVAL AND INSTALLATION

M1225028800209

CAUTION

If a fluid leakage is present in the area around the oil pan, clean around the oil pan. After cleaning, warm up the engine. Only if a fluid leakage is present in the area around the oil pan again, replace the oil pan assembly.

Pre-removal and Post-installation Operation
Turbocharger By-pass Valve Hose and Charge Air Cooler Outlet Air Hose E Removal and Installation (Refer to GROUP 15 -Charge Air Cooler P.15-11.)

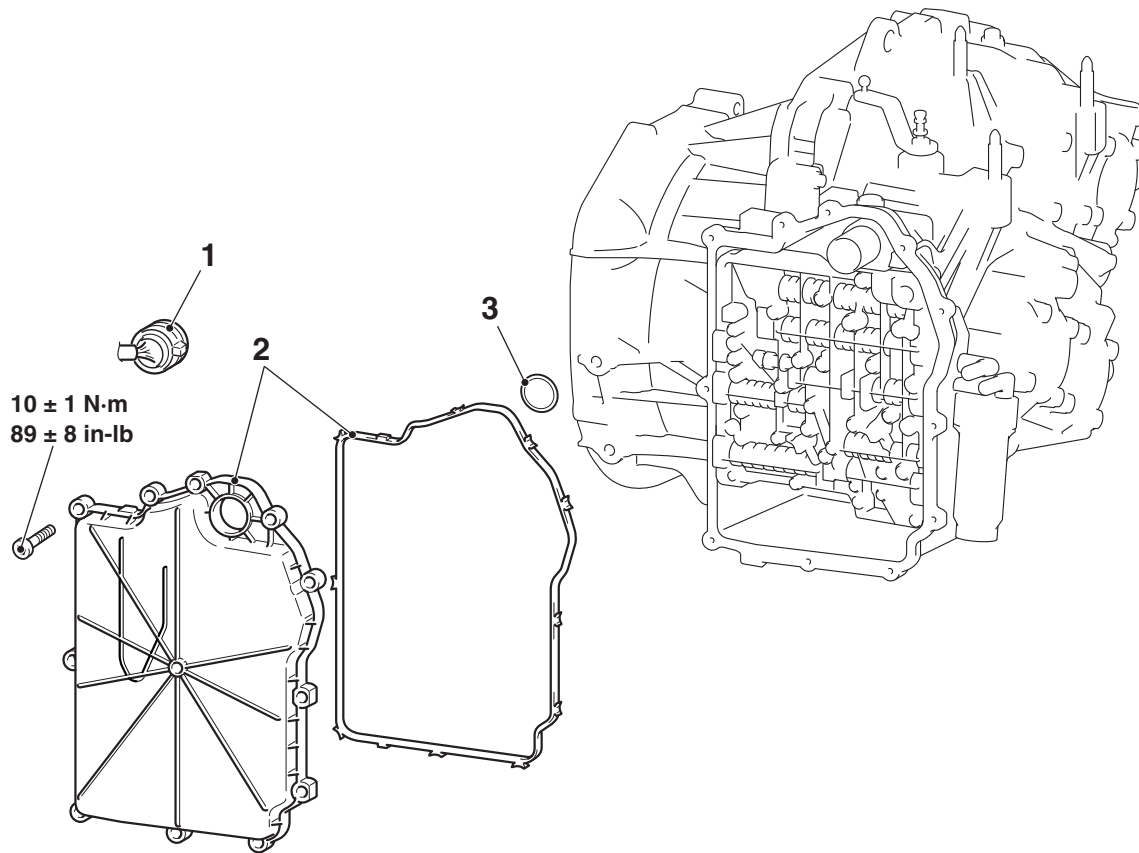

AC901761AC

Removal steps

- Transmission Fluid Draining and Refilling (Refer to P.22C-479.)
1. Transaxle assembly connector connection

Removal steps (Continued)

2. Oil pan assembly
3. O-ring

<<A>>


>>B<<

<>

>>A<<

REMOVAL SERVICE POINTS**<<A>> TRANSAXLE ASSEMBLY CONNECTOR DISCONNECTION**

Rotate the section A of the connector 90° to the direction of the arrow to disconnect the connector.

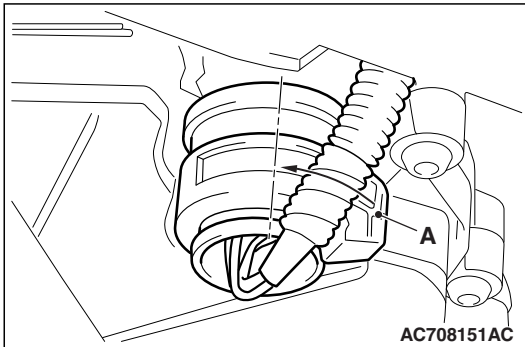**<> OIL PAN ASSEMBLY REMOVAL****⚠ CAUTION**

When removing the oil pan assembly, pay attention to avoid damage to the connector and the O-ring between the oil pan assembly and the connector.

INSTALLATION SERVICE POINTS**>>A<< OIL PAN ASSEMBLY INSTALLATION**

1. Completely degrease the oil pan assembly installation surface on the transaxle side.
2. Remove the gasket from the oil pan assembly, and completely degrease the groove of the oil pan assembly (gasket installation area) and the gasket. Then, install the gasket to the groove of the oil pan assembly.

⚠ CAUTION


When installing the oil pan assembly, pay attention to avoid damage to the connector and the O-ring installed to the connector.

3. Tighten the screws to the specified torque in the order shown in the figure.

Tightening torque: $10 \pm 1 \text{ N} \cdot \text{m}$ ($89 \pm 8 \text{ in} \cdot \text{lb}$)

>>B<< TRANSMISSION FLUID REFILLING**⚠ CAUTION**

- If the oil pan assembly and the internal components are repaired, fill new fluid and check the transmission fluid level. (Refer to [P.22C-478.](#))
- If the oil pan assembly and the internal components are not repaired, the drained fluid can be reused if it is between the replacement intervals.

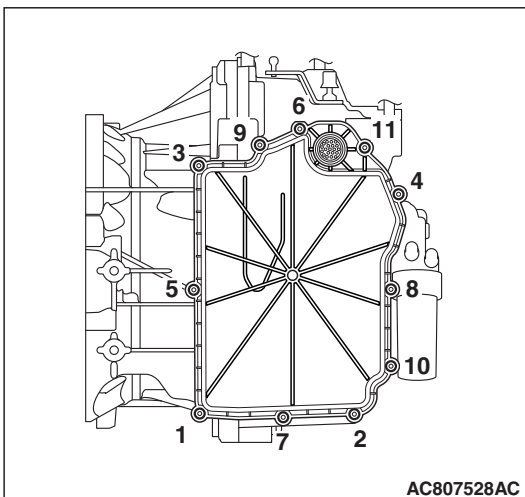

MECHATRONIC ASSEMBLY, MANUAL CONTROL LEVER

REMOVAL AND INSTALLATION


M1225029600026

CAUTION

When the mechatronic assembly is replaced, reprogram the ECU and carry out the following Teach-In (Refer to P.22C-8).

Pre-removal and Post-installation Operation

Oil Pan Removal and Installation (Refer to P.22C-503.)

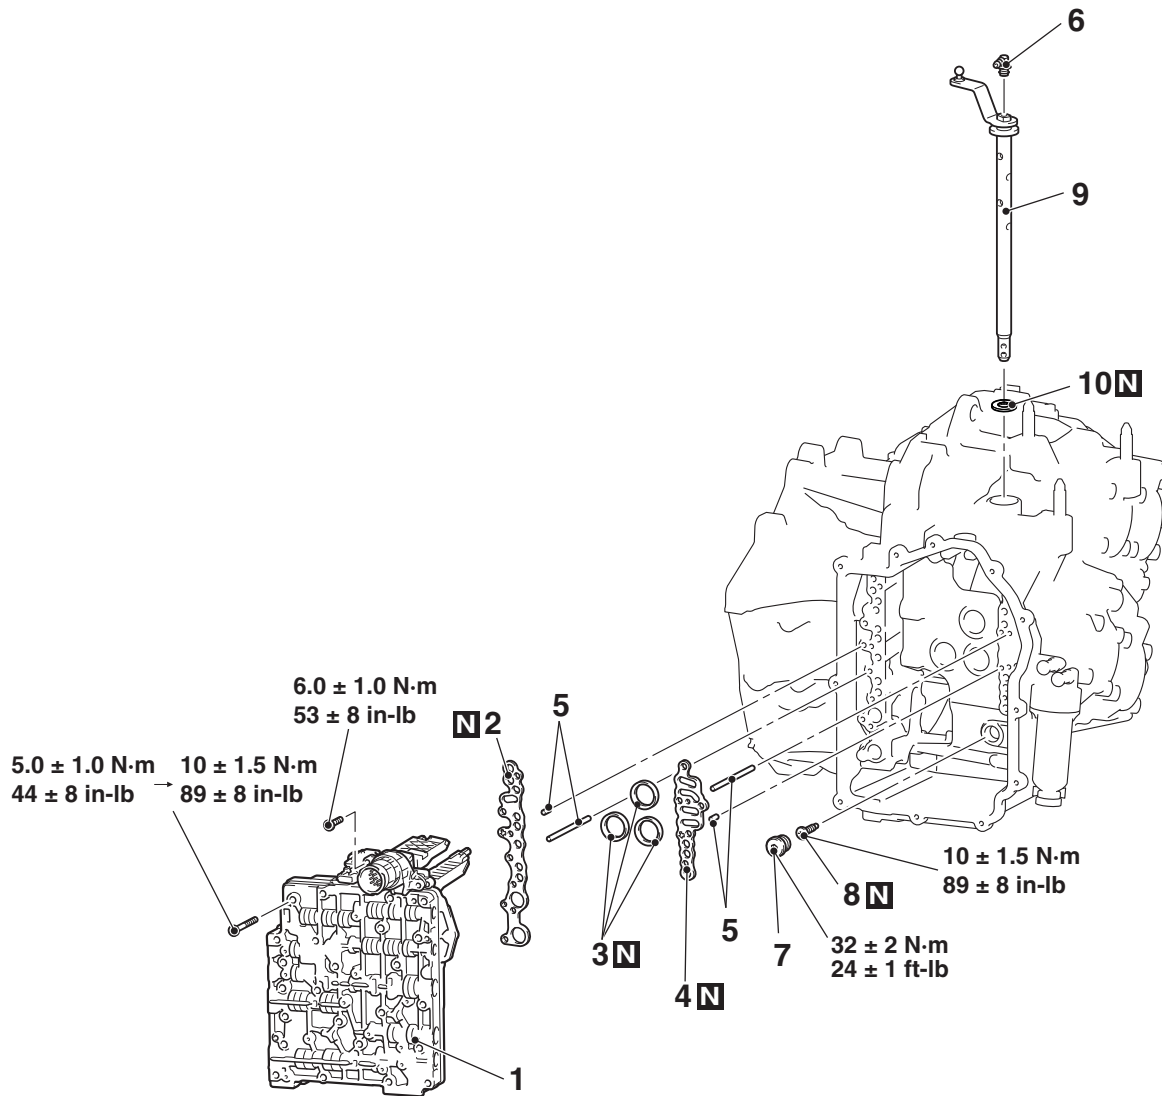

AC900881AB


- Removal steps**
- <<A>> >>B<< 1. Mechatronic assembly
 - >>B<< 2. Gasket A
 - >>B<< 3. Gasket B
 - >>B<< 4. Gasket C
 - >>B<< 5. Pin

- Removal steps (Continued)**
- <> >>A<< 6. Breather nipple
 - <> >>A<< 7. Plug
 - <> >>A<< 8. Bolt
 - <> 9. Manual control shaft
 - <> 10. Oil seal

REMOVAL SERVICE POINTS

<<A>> MECHATRONIC ASSEMBLY REMOVAL


1. Remove the connector carefully.

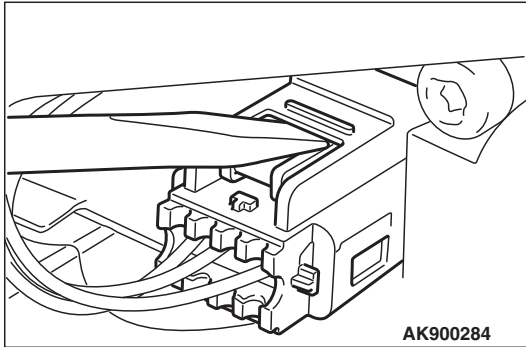


⚠ CAUTION

When removing bolt, use magnetic tools to prevent them from falling out.


2. Remove the three bolts.

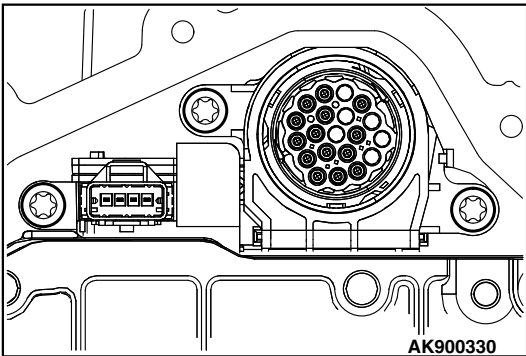


3. Pull carefully at the connector to loose by approx. 2 - 3 mm (0.08 - 0.1 inch).

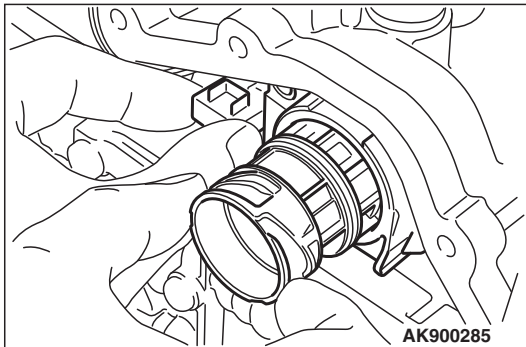


4. Remove the bolts in the order shown and remove the mechatronic assembly carefully.

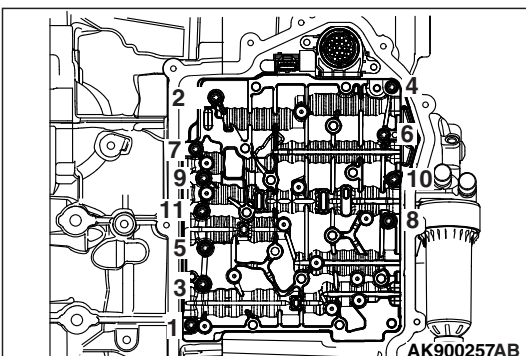


<> PLUG/BOLT/MANUAL CONTROL SHAFT REMOVAL

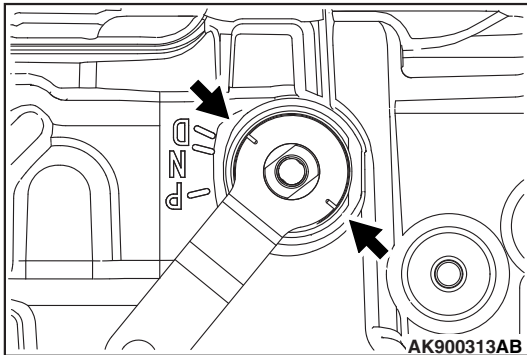

1. Move the lever from D in clock direction to the service position as shown.

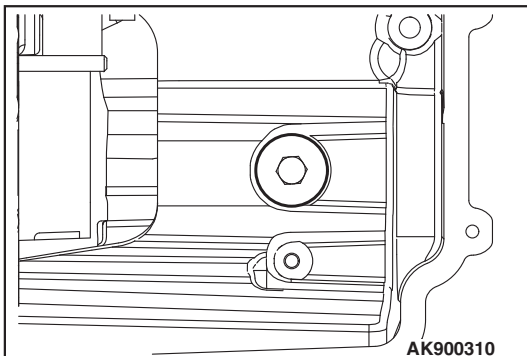

2. Remove the plug.

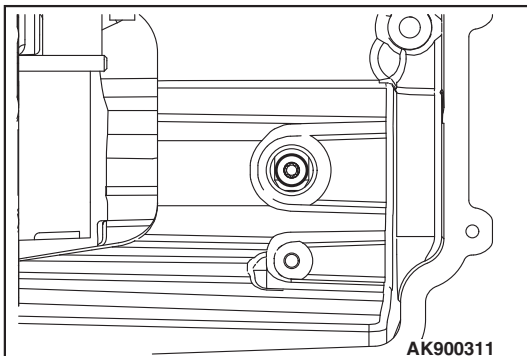

CAUTION

When removing bolt, use magnetic tools to prevent them from falling out.

3. When removing the bolt located behind the plug, pay attention to the bolt not to fall in the transaxle case.
4. Remove the manual control shaft carefully.

INSTALLATION SERVICE POINTS


>>A<< MANUAL CONTROL SHAFT/PLUG/BOLT


CAUTION

When installing bolt, use magnetic tools to prevent them from falling out.

1. Install the manual control shaft carefully and tighten the bolt to the specified torque.


Tightening torque: 10 ± 1.5 N·m (89 ± 8 in-lb)

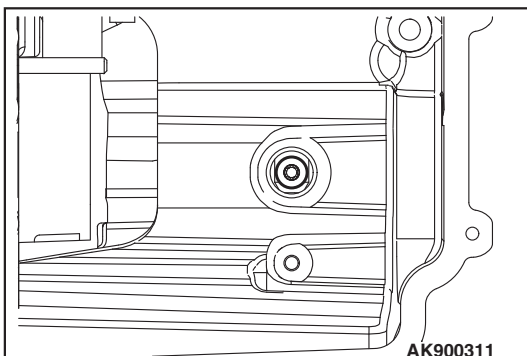


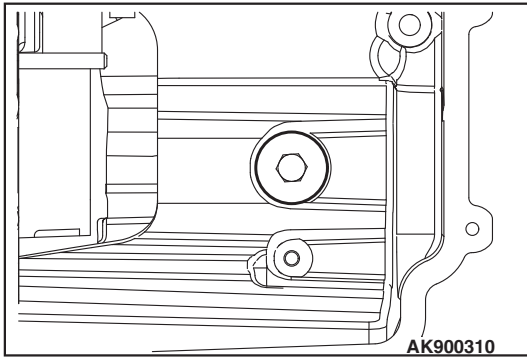


2. Tighten the plug to the specified torque.
Tightening torque: 32 ± 2 N· m (24 ± 1 ft-lb)

>>B<< GASKET A/GASKET C/MECHATRONIC ASSEMBLY INSTALLATION

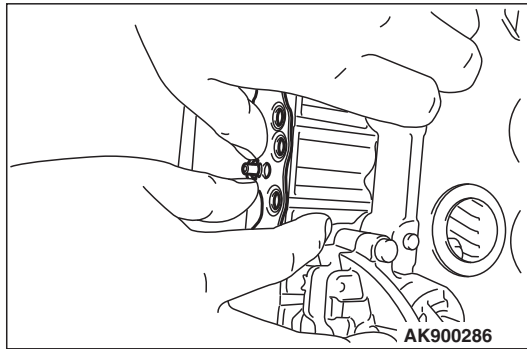

1. As shown in the illustration, fix the gasket to the transaxle case by pushing the gasket at the area to which the gasket dowel pin is inserted.

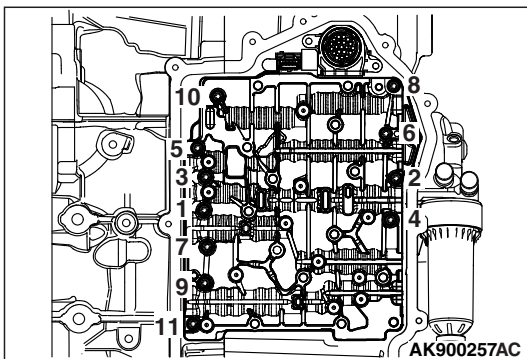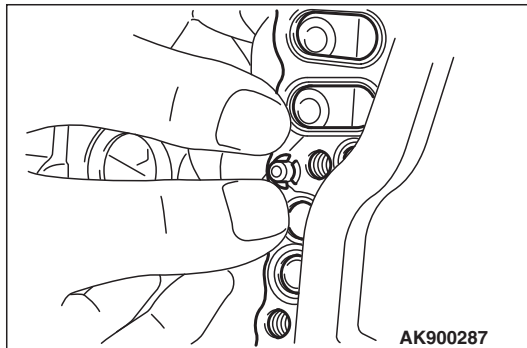

2. Install the mechatronic assembly carefully and tighten the mechatronic assembly mounting bolts to the specified torque in the order of number shown in the figure.
Tightening torque: 5.0 ± 1.0 N· m (44 ± 8 in-lb)
3. Tighten again the mechatronic assembly mounting bolts to the specified torque in the order of number shown in the figure.
Tightening torque: 10 ± 1.5 N· m (89 ± 8 in-lb)

TRANSAXLE CASE OIL SEAL


CAUTION

When installing bolt, use magnetic tools to prevent them from falling out.

4. Tighten the bolts to the specified torque.

Tightening torque: 6.0 ± 1.0 N·m (53 ± 8 in-lb)

5. Install the connector.

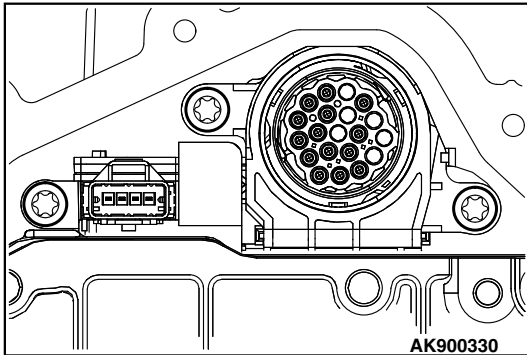

TRANSAXLE CASE OIL SEAL

REMOVAL AND INSTALLATION



M1225029000206

Pre-removal Operation

- Transmission Fluid Draining (Refer to P.22C-479.)

Post-installation Operation

- Transmission Fluid Refilling (Refer to P.22C-479.)
- Transmission Fluid Level Check (Refer to P.22C-478.)

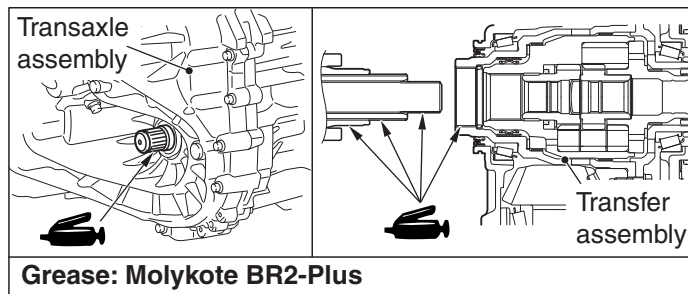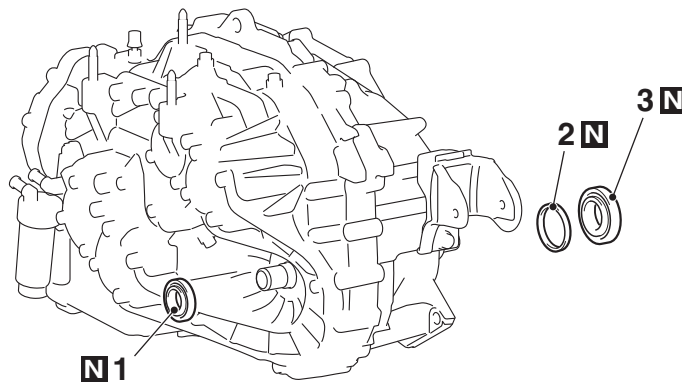

AC901630AC

Transaxle case oil seal (LH) removal steps

- Front driveshaft assembly (LH) (Refer to GROUP 26 – Driveshaft assembly P.26-21.)

<<A>> >>C<< 1. Transaxle case oil seal (LH)

Transaxle case oil seal (RH) removal steps

- Transfer assembly (Refer to P.22C-495.)
- 2. V ring
- 3. Transaxle case oil seal (RH)

<<A>> >>B<<
>>A<<




Required Special Tools:

- MB992310: Oil seal installer
- MB992311: Oil seal guide
- MB992312: Oil seal installer
- MB992313: Oil seal guide
- MB992314: V ring guide


REMOVAL SERVICE POINTS

<<A>> TRANSAXLE CASE OIL SEAL (LH)/TRAN-
SAXLE CASE OIL SEAL (RH) REMOVAL

1. Insert the tapping screw (ϕ 3 mm [0.1 inch]) to one of four hollows (round shape) on the oil seal by turning it 2 or 3 times.

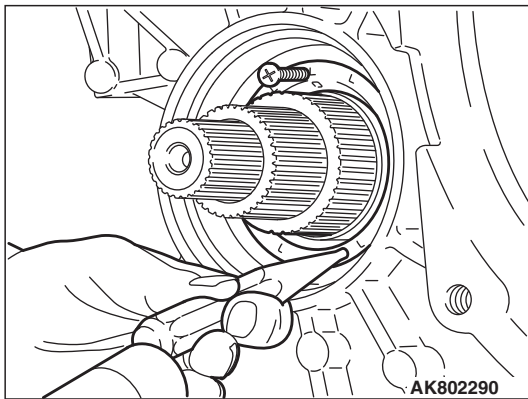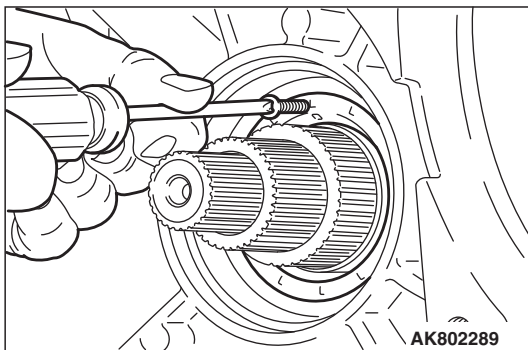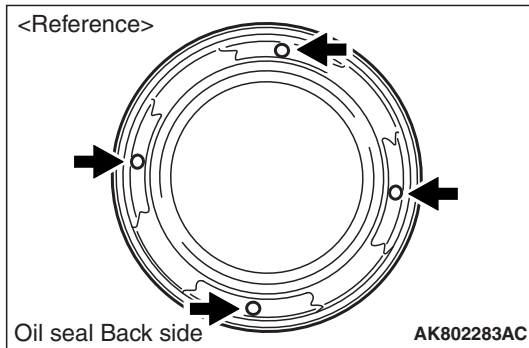

2. Tap the opposite side of the inserted tapping screw using a knock pin punch to press in the oil seal approximately 1 mm (0.04 inch).

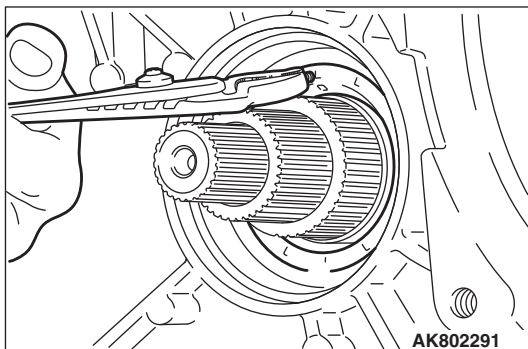


3. Hold the inserted tapping screw with pliers or similar tools, and remove the oil seal.


NOTE: If the transaxle case oil seal (RH) is replaced, the V-ring must also be replaced.

INSTALLATION SERVICE POINTS

>>A<< TRANSAXLE CASE OIL SEAL (RH) INSTALLATION

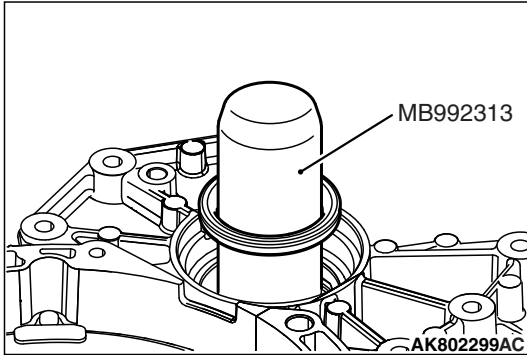


1. Apply the transaxle oil to the oil seal guide (special tool: MB992313). Insert the oil seal to oil seal guide (special tool: MB992313).

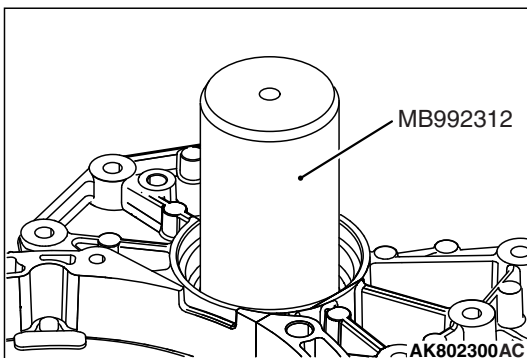


2. Use special tool oil seal installer (special tool: MB992312) to install the oil seal to the transaxle case.


>>B<< V RING INSTALLATION

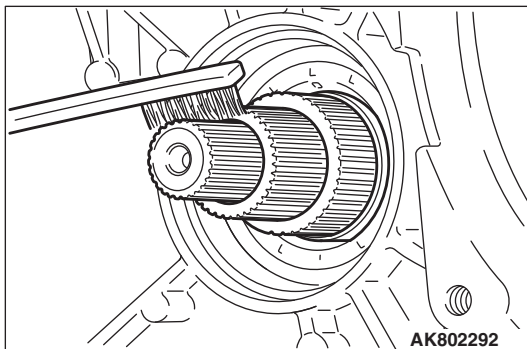


1. Clean the spline with a brush or the like.

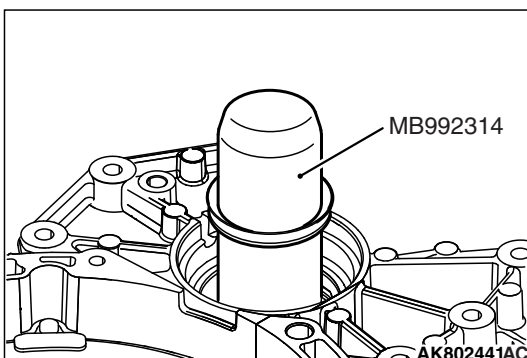

2. Apply the transaxle oil to the V ring guide (special tool: MB992314). Insert the V ring to V ring guide (special tool: MB992314), and install the V ring to the transaxle case.
3. Check that the V ring is installed securely.

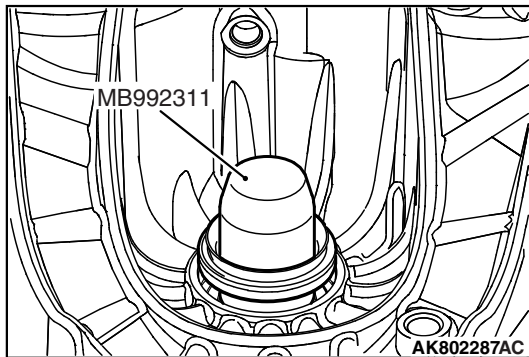**>>C<< TRANSAXLE CASE OIL SEAL (LH)
INSTALLATION**

1. Apply the transaxle oil to the oil seal guide (special tool: MB992311). Insert the oil seal to oil seal guide (special tool: MB992311).

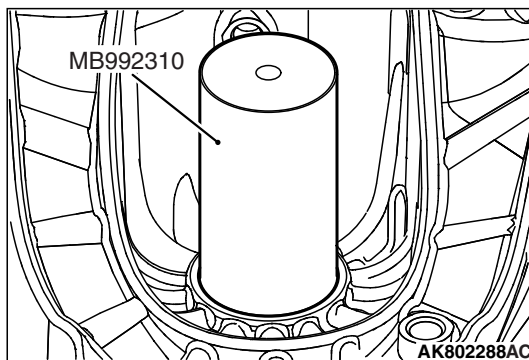

2. Use special tool oil seal installer (special tool: MB992310) to install the oil seal to the transaxle case.

OIL COOLER

REMOVAL AND INSTALLATION

M1225010400336

CAUTION


Do not refill the fluid when replacing the transaxle assembly and the oil cooler with new ones at the same time.

NOTE:

- The new transaxle assembly is filled with 7.6 dm³ (8.0 qt) of the fluid (including the oil cooler).
- The transaxle assembly has a sealed structure, and the fluid does not drain out from parts other than the oil cooler hose.

Pre-removal and Post-installation Operation

Front bumper and radiator grille assembly removal and installation (Refer to GROUP 51 –Front Bumper and Radiator Grille Assembly P.51-5.)

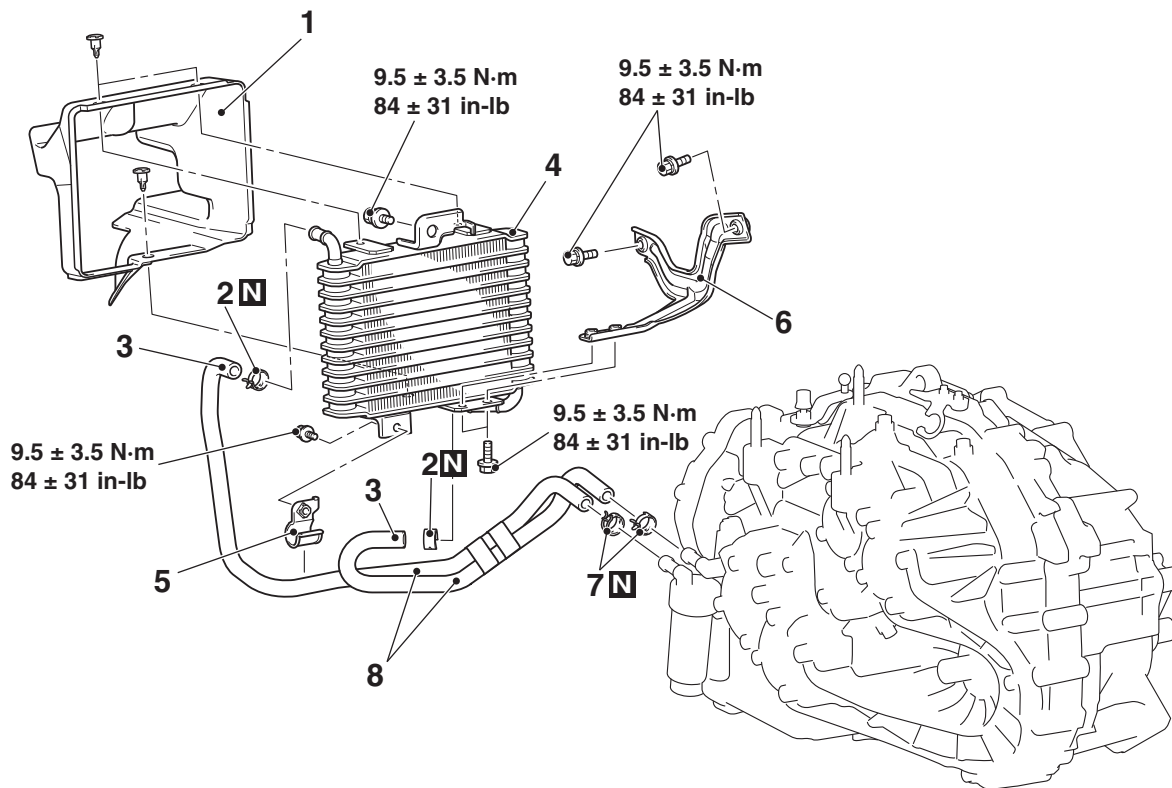

AC705841AJ

Removal steps

- >>A<<
- Transmission fluid draining and refilling (Refer to P.22C-479.)
1. Oil cooler duct
 2. Hose clip
 3. Oil cooler hose assembly connection

Removal steps (Continued)

4. Oil cooler assembly
5. Hose clamp
6. Oil cooler bracket
7. Hose clip
8. Oil cooler hose assembly

INSTALLATION SERVICE POINT**>>A<< TRANSMISSION FLUID REFILLING**** CAUTION**

Refill 6.1 dm³ (6.4 qt) of the transmission fluid.

NOTE: The fluid capacity of the oil cooler assembly and the oil cooler hose assembly is 0.6 dm³ (0.6 qt).

 CAUTION

- If the oil cooler is repaired, fill new fluid and check the transmission fluid level. (Refer to [P.22C-478.](#))
- When the oil cooler is not repaired, the drained fluid can be reused if it is between the replacement intervals.

OIL FILTER

REMOVAL AND INSTALLATION


M1225028600142

CAUTION

If a fluid leakage is present in the area around the oil filter bracket, clean around the oil filter bracket. After cleaning, warm up the engine. Only if a fluid leakage is present in the area around the oil filter bracket again, replace the oil filter bracket assembly.

Pre-removal and Post-installation Operation

Engine Room Side Cover <LH> (Refer to GROUP 51 -Under Cover P.51-20).

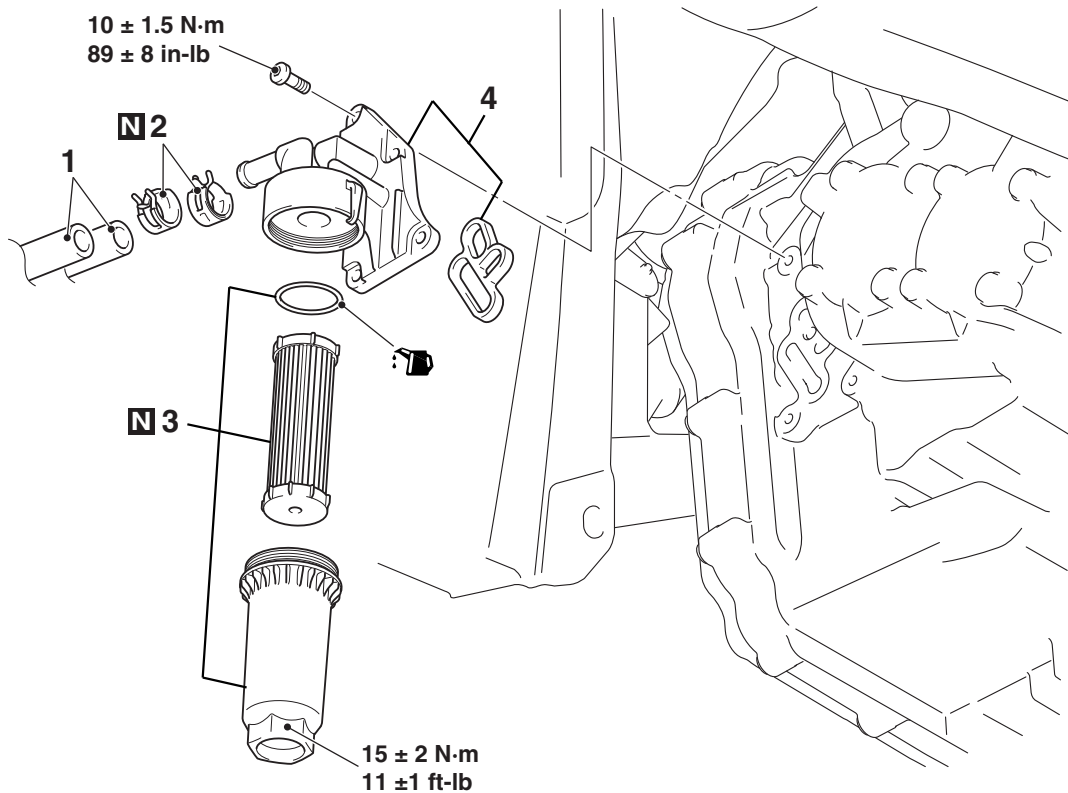

AC807228AK

<<A>> >>B<<

Removal steps

- Transmission fluid draining and refilling (Refer to P.22C-479.)
- 1. Oil cooler hose assembly connection

Removal steps (Continued)

- 2. Hose clip
- 3. Oil filter case assembly
- 4. Oil filter bracket assembly

>>A<<

REMOVAL SERVICE POINT**<<A>> TRANSMISSION FLUID DRAINING**

Drain the fluid in the transaxle assembly and the oil cooler.

INSTALLATION SERVICE POINTS**>>A<< OIL FILTER BRACKET ASSEMBLY
INSTALLATION**

1. Completely degrease the oil filter bracket assembly installation surface on the transaxle side.
2. Remove the gasket from the oil filter bracket assembly, and completely degrease the groove of the oil filter bracket assembly (gasket installation area) and the gasket. Then, install the gasket to the groove of the oil filter bracket assembly.
3. Tighten the screws to the specified torque.

Tightening torque: $10 \pm 1.5 \text{ N} \cdot \text{m}$ ($89 \pm 8 \text{ in-lb}$)

>>B<< TRANSMISSION FLUID REFILLING** CAUTION**

Refill 6.2 dm^3 (6.6 qt) of the transmission fluid.

NOTE: The fluid capacity of the oil cooler assembly and the oil cooler hose is 0.6 dm^3 (0.6 qt), and the fluid capacity of the oil filter case assembly is 0.1 dm^3 (0.1 qt).

 CAUTION

- If the fluid leakage from the oil filter is repaired, fill new fluid and check the transmission fluid level. (Refer to [P.22C-478](#).)
- When the oil filter is replaced, the drained fluid can be reused if it is between the replacement intervals.

PADDLE SHIFT ASSEMBLY

REMOVAL AND INSTALLATION


M1225010600095

Pre-removal Operation

- Steering wheel assembly and driver's air bag module removal (Refer to GROUP 37 –Steering Wheel P.37-32.)
- Steering column lower cover and steering column upper cover removal (Refer to GROUP 37 –Steering Shaft P.37-36.)

Post-installation Operation

- Steering column lower cover and steering column upper cover installation (Refer to GROUP 37 –Steering Shaft P.37-36.)
- Steering wheel assembly and driver's air bag module installation (Refer to GROUP 37 –Steering Wheel P.37-32.)
- Steering wheel at straight-ahead position check.

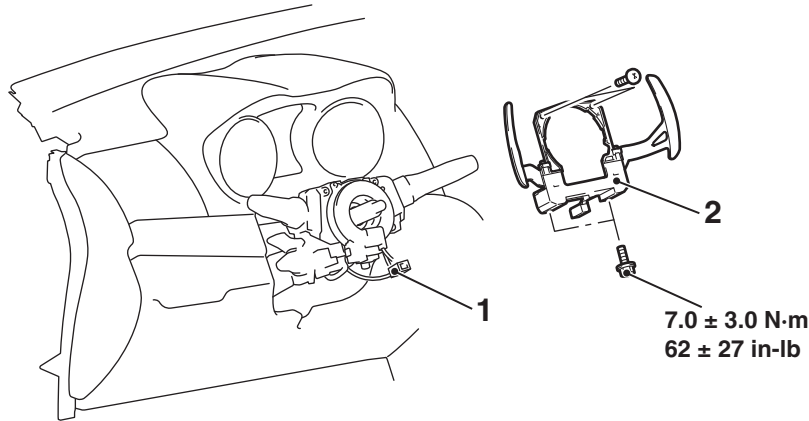

AC710518 AC

Removal steps

1. Paddle shift switch connector connection
2. Paddle shift assembly


INSPECTION

PADDLE SHIFT SWITCH CHECK

M1225011300097

1. Check the continuity between the paddle shift switch connector terminals.

Standard value:

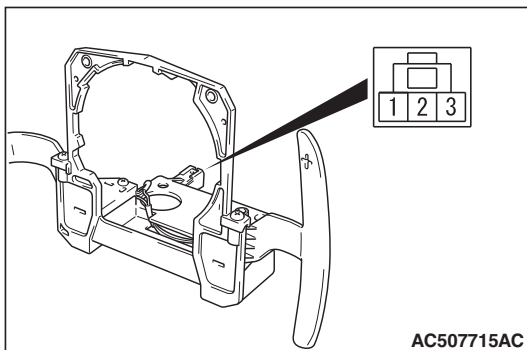

AC507715AC

Paddle shift lever	Terminal number	Resistance value
Upshift and hold the lever.	1 –2	Continuity exists. (2 Ω or less)
Downshift and hold the lever.	2 –3	
No operation	No continuity between the terminals	

2. In the cases other than the above, replace the paddle shift assembly.


AWC-ECU

REMOVAL AND INSTALLATION

M1225010800099

Pre-removal and Post-installation Operation

- Bottom Cover Removal and Installation (Refer to GROUP 52A -Glove box P.52A-6.)

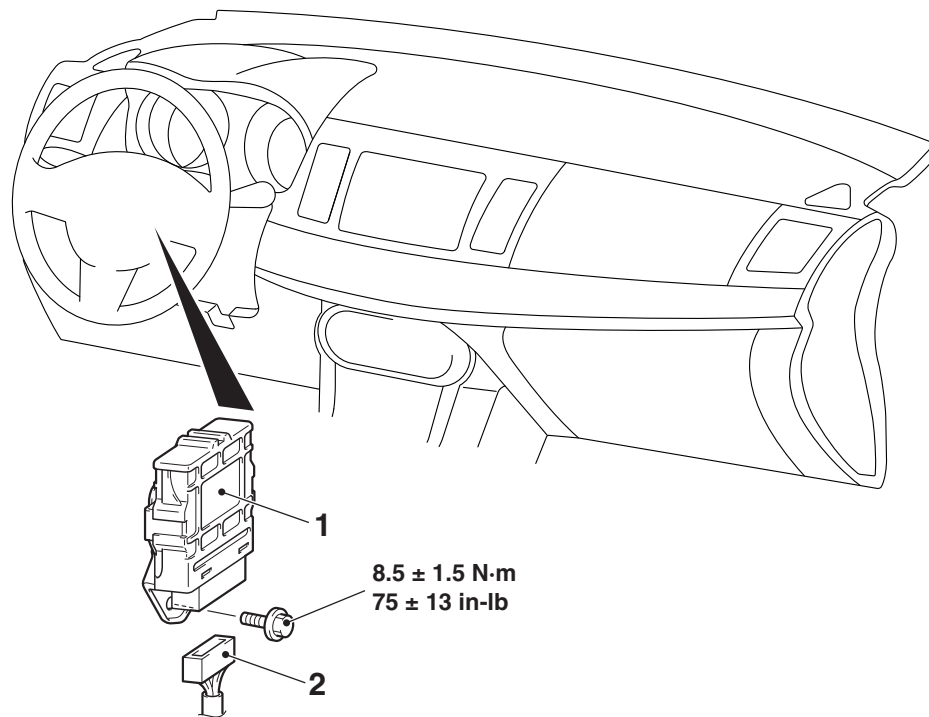

AC710454 AD

Removal steps

1. AWC-ECU
2. AWC-ECU connector connection

SENSOR, SWITCH AND RELAY

REMOVAL AND INSTALLATION

M1225011200120

STEERING WHEEL SENSOR

Refer to GROUP 35C –Steering Wheel Sensor [P.35C-321](#).


G AND YAW RATE SENSOR

Refer to GROUP 35C –G and Yaw Rate Sensor [P.35C-320](#).

WHEEL SPEED SENSOR

Refer to GROUP 35C –Wheel Speed Sensor [P.35C-316](#).

AWC SWITCH

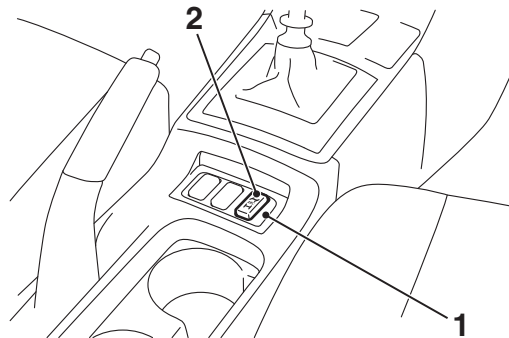


AC802596AC

Removal Steps

1. Floor console switch panel (Refer to GROUP 52A –Floor console assembly [P.52A-9](#))
2. AWC switch


ELECTRIC PUMP RELAY

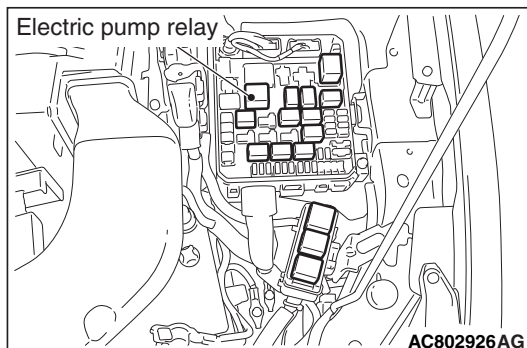

INSPECTION


ELECTRIC PUMP RELAY CHECK

M1221021700083

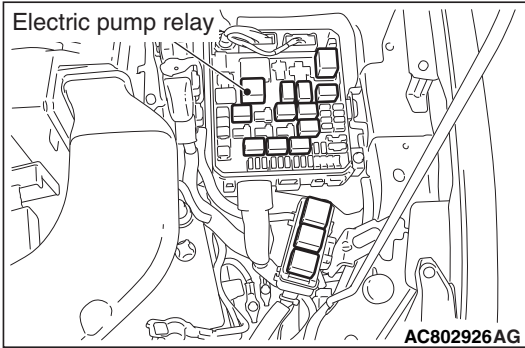

1. Using a jumper wire, connect the positive battery terminal (+) to the electric pump relay terminal No.3, and the negative battery terminal (-) to the terminal No.1.
2. Check for continuity between the electric pump relay terminals No.2 and No.4.

Jumper wire	Continuity between terminals No.2 and No.4
Connect	Yes (2 Ω or less)
Disconnect	No

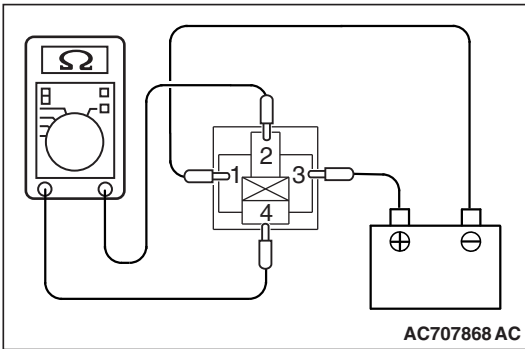


3. If defective, replace the electric pump relay.

AWC SWITCH CHECK

M1221021800080

Check the continuity between the AWC switch connector terminals.

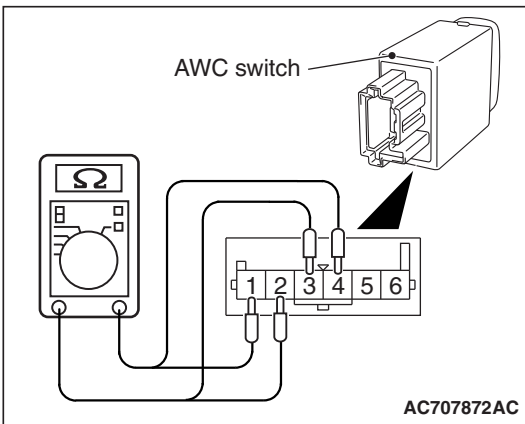

AWC selection switch terminal No.	AWC selection switch	Continuity
1 -2	ON	Yes (2 Ω or less)
	OFF	No
3 -4	-	Present

1. When other than above, replace the AWC switch.

HYDRAULIC UNIT

REMOVAL AND INSTALLATION

M1225011000126

CAUTION


- When inserting the reservoir hose assembly, do not lubricate.
- Perform with care that the foreign objects do not intrude into the hydraulic unit and hose joint.

Pre-removal operation

- Rear wheelhouse splash shield removal (Refer to GROUP 42A –Splash Shield P.42A-13.)
- Quarter trim (RH) removal (Refer to GROUP 52A –Interior Trim P.52A-11.)

Post-installation operation

- Bleeding (Refer to On-vehicle Service –ACD Bleeding P.22C-484.)
- Quarter trim(RH) installation (Refer to GROUP 52A –Interior Trim P.52A-11.)
- Rear wheelhouse splash shield installation (Refer to GROUP 42A –Splash Shield P.42A-13.)

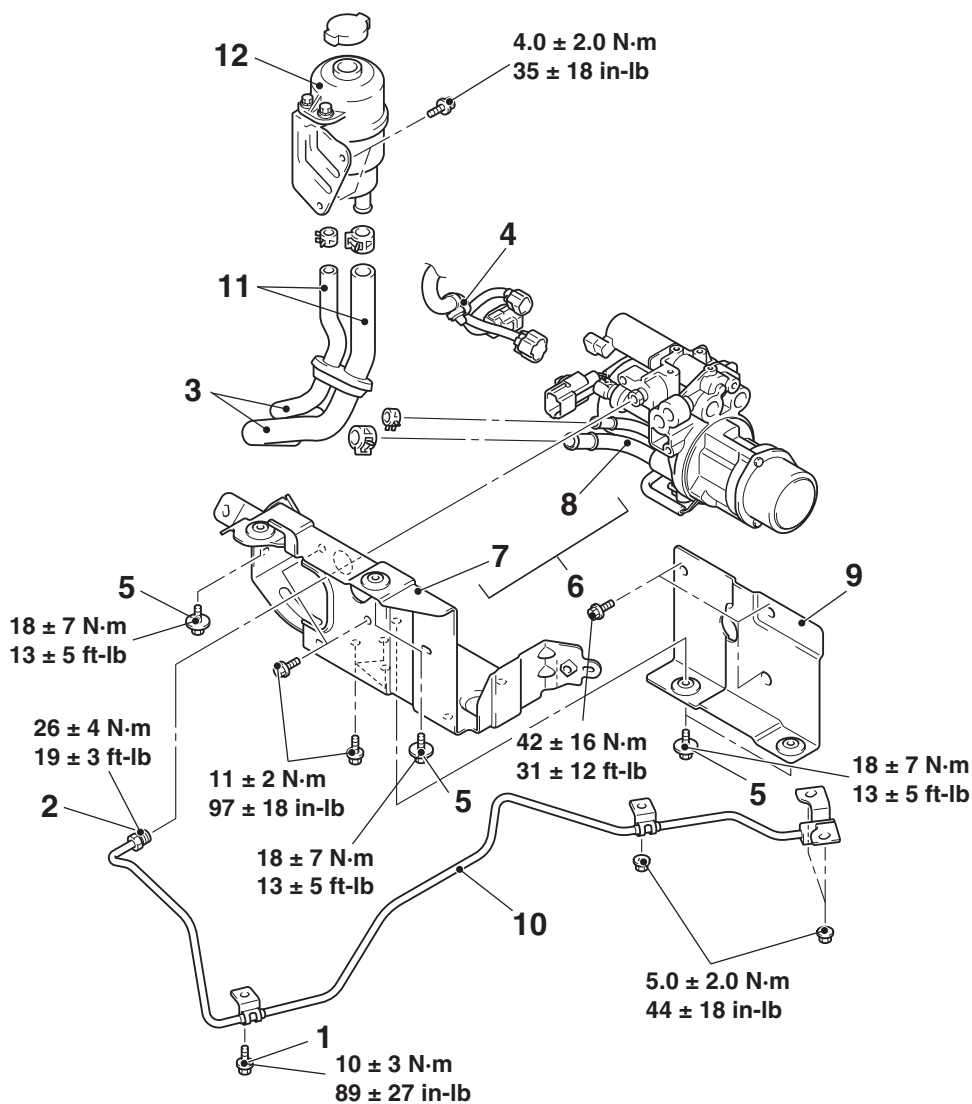

AC802429AD

Removal steps

1. ACD pressure tube assembly mounting bolt
2. ACD pressure tube assembly and hydraulic unit connection
3. Reservoir hose assembly and hydraulic unit connection

Removal steps (Continued)


4. Hydraulic unit connector connection
5. Hydraulic unit bracket A, hydraulic unit, and hydraulic unit bracket B connecting bolt

Removal steps (Continued)

- >>B<< 6. Hydraulic unit and hydraulic unit bracket B
7. Hydraulic unit bracket B
8. Hydraulic unit
9. Hydraulic unit bracket A
10. ACD pressure tube assembly
- >>A<< 11. Reservoir hose assembly
12. Oil reservoir

INSTALLATION SERVICE POINTS**>>A<< RESERVOIR HOSE ASSEMBLY INSTALLATION**

1. On the oil reservoir side, insert the hose to the position shown in the figure.
2. On the hydraulic unit side, insert the hose to the spool shown in the figure.

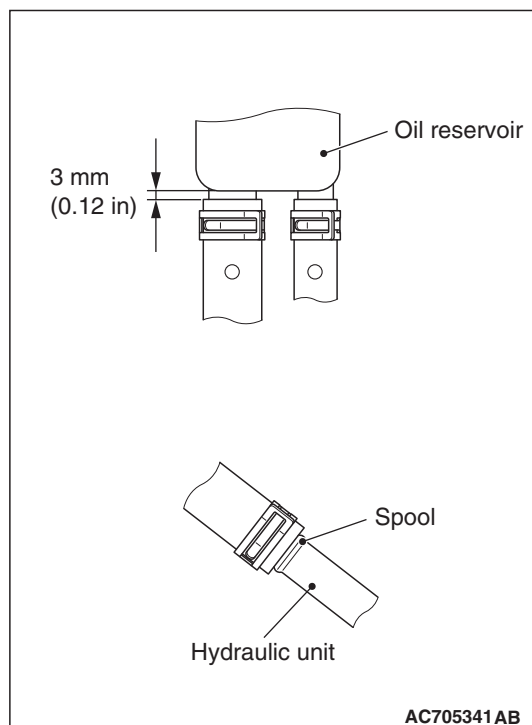**>>B<< HYDRAULIC UNIT AND HYDRAULIC UNIT BRACKET B INSTALLATION**

Insert the hook of hydraulic unit bracket B into the body panel, and tighten the mounting bolt.

